



iTOMA CKS801 Wireless Charge Alarm Clock with LED Display User Manual

[Home](#) » [iTOMA](#) » iTOMA CKS801 Wireless Charge Alarm Clock with LED Display User Manual 



CKS801 Wireless Charge Alarm Clock with LED Display User Manual

Contents

- 1 CKS801 Wireless Charge Alarm Clock with LED Display
- 2 IMPORTANT SAFETY INSTRUCTIONS
- 3 PREPARATION FOR USE
- 4 LOCATION OF CONTENTS AND INDICATORS
- 5 SETTING THE TIME
- 6 USB FOR CHARGING
- 7 CARE AND MAINTENANCE
- 8 Documents / Resources
 - 8.1 References

CKS801 Wireless Charge Alarm Clock with LED Display

It's wg pleasure to help you!



WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED AND THERE IS NO BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

The lightning flash with arrow head symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons



Caution

Risk of electric shock Do not open



WARNING. TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
2. Do not use this apparatus near water.
3. Clean only with dry cloth
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
6. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, ask an electrician for replace the obsolete outlet.
7. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
8. Only use attachments / accessories specified by the manufacturer.
9. Unplug this apparatus during lightning storms or when unused for long periods of time.
10. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been

damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.

11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart I apparatus combination to avoid injury from tip-over.

PREPARATION FOR USE

Unpacking and Set Up

- Remove the clock from the carton and remove all packing material from the clock. Save the packing material, if possible, in case the clock ever needs to be serviced or transported. The original carton and packing material is the only safe way to pack your clock to protect it from damage in transit.
- Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet.
- Note the serial number on the bottom of your clock and write this number in the space provided on the Warranty page of this manual.
- Place your clock on a level surface such as a table, desk or shelf, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity or vibration.
- Unwind the AC adapter and extend it to its full length.

IMPORTANT NOTES


- Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as: electric heaters, on top of other stereo equipment that radiates heat, places lacking ventilation, dusty areas, places subject to instant vibration and/or humid or moist areas.
- Operate controls and switches as descanted in the manual.
- Before turning on the power, make certain that the AC adapter, is connected




LOCATION OF CONTENTS AND INDICATORS

FRONT PANEL

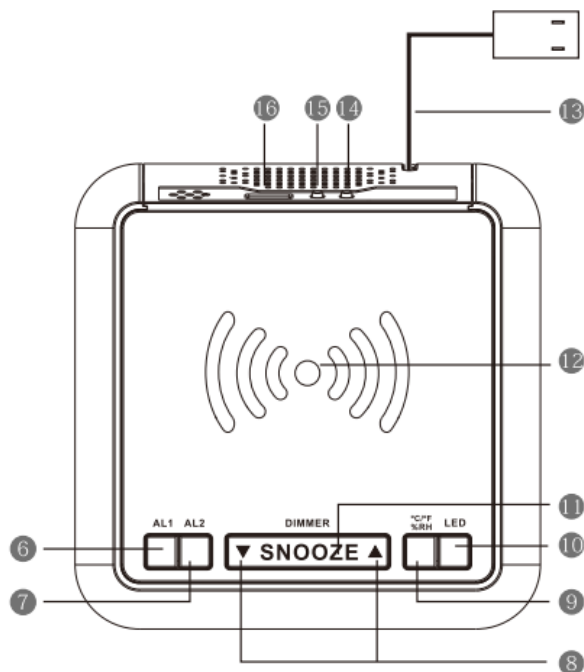


TOP PANEL



1. ALARM 1 Indicator
2. ALARM 2 Indicator
3. PM Indicator ('On'=PM, 'Off'=AM)
4. Humidity (%RH) Indicator
5.  Wireless Charging Indicator ('slow flashing red'=Charging; 'fast flashing red'=Charging error; 'steady green'=Charging complete)
6. ALARM1 Button
7. ALARM2 Button
8. TUNE UP  DOWN  Button
9. Temperature (°F or°C) & Humidity (%RH) Button
10. LED ON/OFF Button
11. SNOOZE/DIMMER Button
12. Wireless Charging Pad
13. AC Adapter (U version is not included)
14. TIME SET Button
15. 12/24H Button
16. USB Charge Out


SETTING THE TIME

Setting the 12/24hours

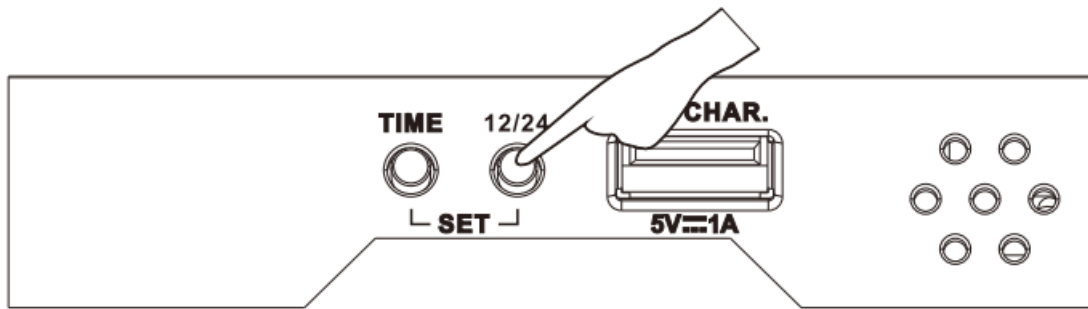

Press the "12/24" button to adjust the 12H or 24H.

Setting the Time

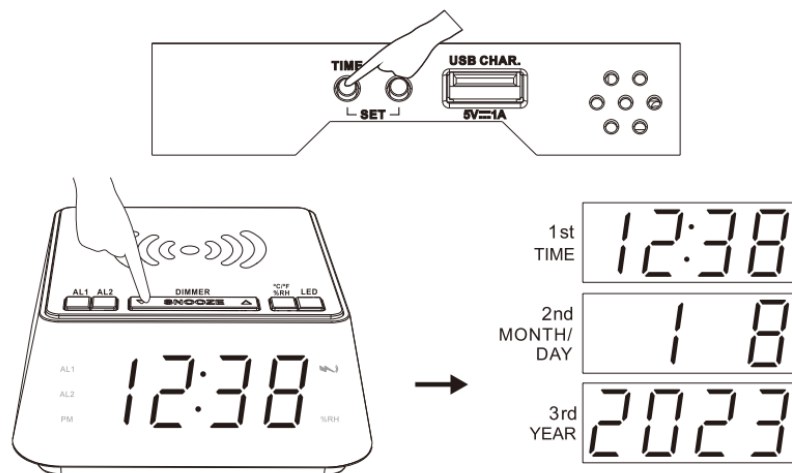


1. Press and hold "TIME SET" until the "HOUR" digits blink.
2. Press "▼" or "▲" to adjust the hour.
3. Press "TIME SET" again, the "MINUTE" digits will blink.
4. Press "▼" or "▲" to adjust the minute.
5. Press "TIME SET" again, the "MONTH" digits will blink.
6. Press "▼" or "▲" to adjust the month.
7. Press "TIME SET" again, the "DAY" digits will blink.
8. Press "▼" or "▲" to adjust the day.
9. Press "TIME SET" again, the "YEAR" digits will blink.
10. Press "▼" or "▲" to adjust the year.
11. Press "TIME SET" again or leave it idle for 40 secs to store all the setting, and resume to clock mode.

SETTING THE ALARM

Adjusting the Wake Up Time I Alarm (Al 1 or Al2)

1. To set alarm AL1 (AL2), press and hold the AL1 (AL2) button until the Hour flashes, then release the button.
Press the y or "▼" or "▲" button to adjust the Hour.
2. Press the ALT" (AL2) button again, the Minutes will flash. Press the "▼" or "▲" button to adjust the Minutes.

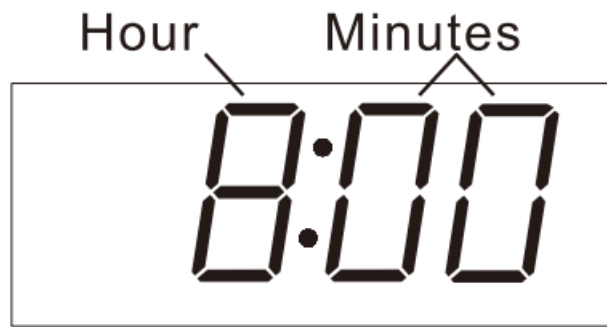


3. Press the AL1 (AL2) button again, it will display 1 of the 3 different Alarm Week Modes:


- 1-7-alarm will turn on all 7 days default



- 1-5 -alarm will only turn on Monday through Friday

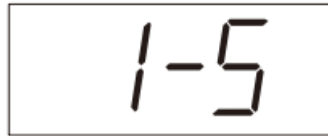

- 6-7 alarm will only turn on Saturday and Sunday

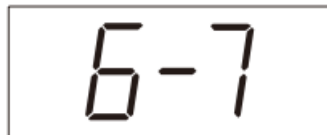

4. press the "▼" or "▲" button to select the desired Alarm Week Mode.

5. Press the AL 1 (AL2) button again to save the Alarm settings and resume clock mode.

Setting the Alarm(AL 1 or AL2) On or Off.

Press the "AL1"("AL2") button to activate the alarm setting for your desired wakeup time adjusted above:


When the AL 1 (AL2) indicator lights On, Wake to Buzzer Alarm for AL 1 (AL2) will be On.

To completely turn off the alarm, press the "AL 1" ("AL2") button repeatedly until the Indicator for the AL 1(AL2) Wake to Buzzer Alarm Is Off.


Snooze Alarm

When the Alarm comes ON, press "SNOOZE" button to pause it for 9 minutes. Alarm indicator will flash during Snooze Alarm mode.

Snooze Alarm will only be active for one hour. To turn off Snooze Alarm mode, press the "AL1"("AL2") button once. The Alarm indicator will then become solid (to be On again same time next day if appropriate Alarm Week Mode is set).

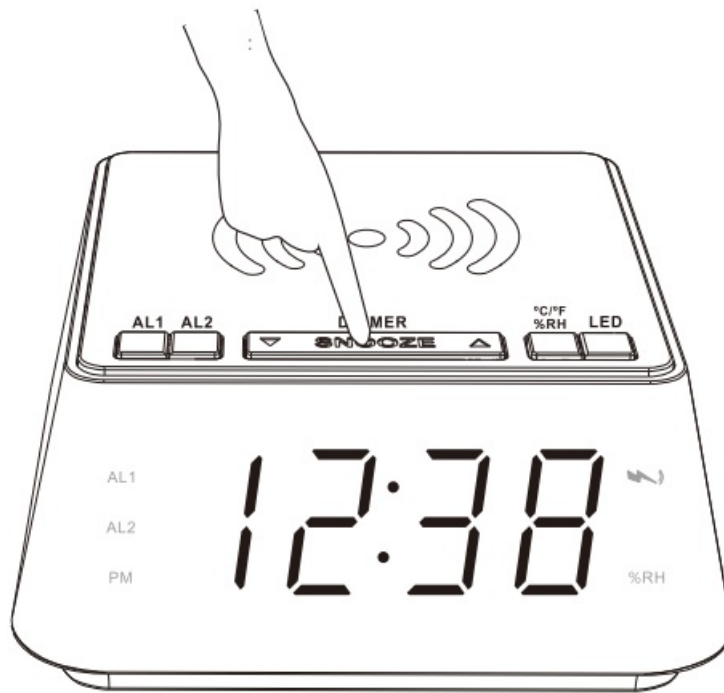

SENSING ROOM TEMPERATURE AND HUMIDITY

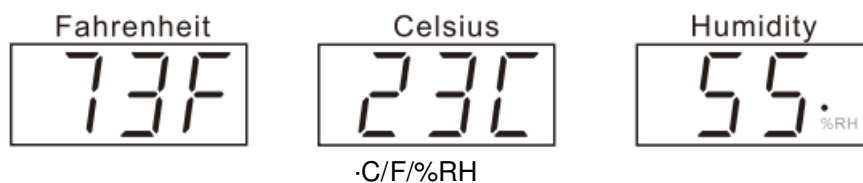

1. Press the $^{\circ}\text{C}/^{\circ}\text{F}$ button to check the room temperature.
2. Press the $^{\circ}\text{C}/^{\circ}\text{F}$ button again to check Humidity
3. Press and hold the $^{\circ}\text{C}/^{\circ}\text{F}$ button, the temperature can be converted between Fahrenheit(F) and Celsius($^{\circ}\text{C}$)

WARNING: DO NOT place the Temperature Sensor in the mouth or any part


2-LEVELS OF NIGHT LIGHT

Press "LED" button to turn the night light ON (high/low level) or OFF when needed.



4-LEVELS OF DIMMER CONTROL


Press the “DIMMER” button to set the clock display at one of the 4 brightness levels.

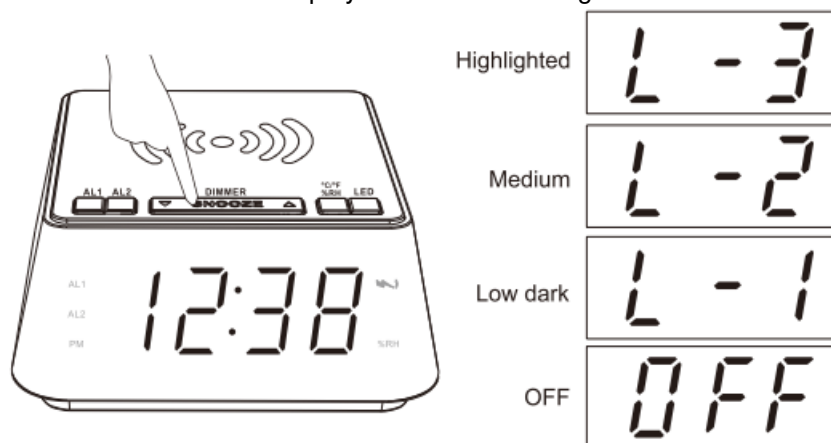


USB FOR CHARGING

Output 5V up to 1 A for charging mobile phone or portable digital audio player.

Note: Charging current drawn from the unit may vary due to different USB charging cable condition.

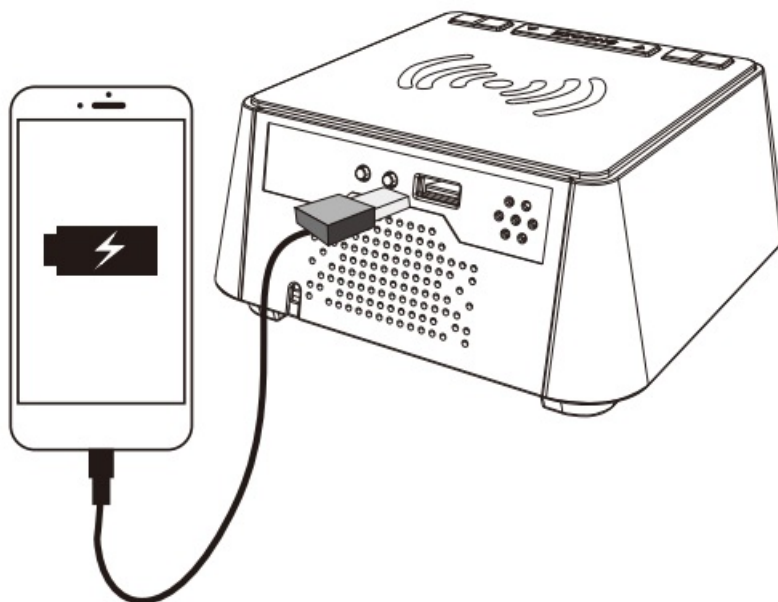

WIRELESS CHARGING

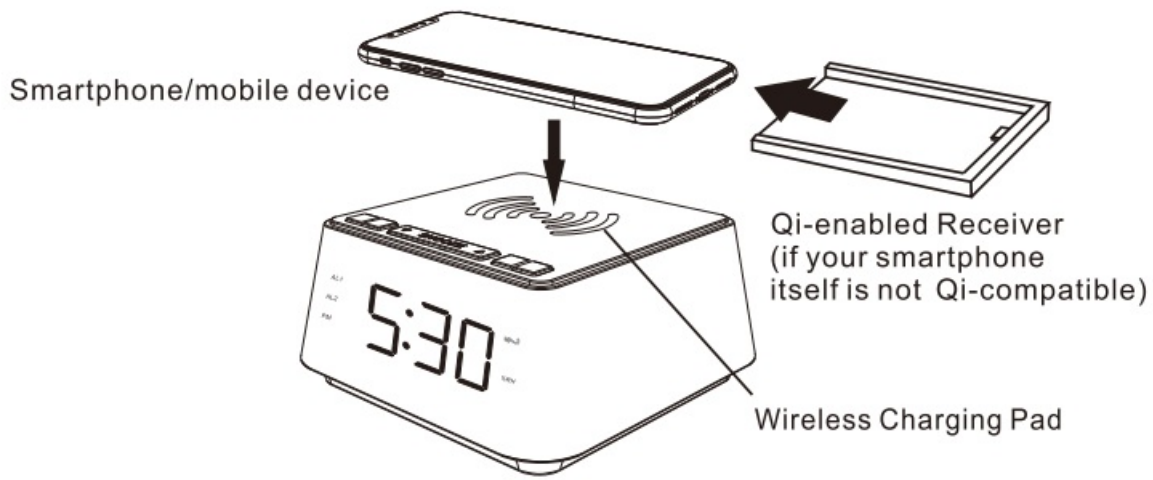

An SW Wireless Charging Pad is built on top of this unit for wireless power transfer to any Qi-compatible Smartphones or Qi-enabled Receivers over a vertical distance of not more than 0.2 inches (5 mm).

1. Place your Qi-compatible Smartphone or Receiver (only one set at a time) on top of the Wireless Charging Pad. The center of your Smartphone or Receiver must be positioned properly right at the middle of this charging pad in order to maximize the charging efficiency.
2. While wireless charging started or detected, the Qi indicator will be flashing Red slowly.
3. While wireless charging error occurred (if metal sheet/substance placed on top of the charging pad), the Qi indicator will be flashing Red rapidly or fishing red and green alternatively to alert user to get the erroneous receiver removed.
4. When your Smartphone is fully charged, the Qi indicator will turn solid Green (except for iPhones).

CARE AND MAINTENANCE


Care of Cabinets

If the cabinet becomes dusty, wipe it with a soft cloth. If the cabinet becomes smudged or dirty, clean it with a soft, slightly dampened cloth. Never allow water or any liquid to get inside the cabinet. Never use any abrasive cleaners or cleaning pads as these will damage the finish of your clock.

iTOMA

Visit our website at www.itoma.com

Documents / Resources

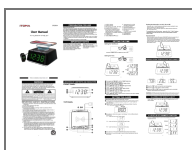

[iTOMA CKS801 Wireless Charge Alarm Clock with LED Display](#) [pdf] User Manual
CKS801 Wireless Charge Alarm Clock with LED Display, CKS801, Wireless Charge Alarm Clock with LED Display, Alarm Clock with LED Display, Clock with LED Display, LED Display

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)