



# IVAR NORTH IV270 Ice Cube Maker User Manual

 
[Home](#) » [IVAR NORTH](#) » IVAR NORTH IV270 Ice Cube Maker User Manual 

IVAR NORTH IV270 Ice Cube  
Maker User Manual

# IVÅR NORTH

User Manual – Ice Cube Machine with Self-cleaning (P. 12-21)

MODEL: IV270 & IV271

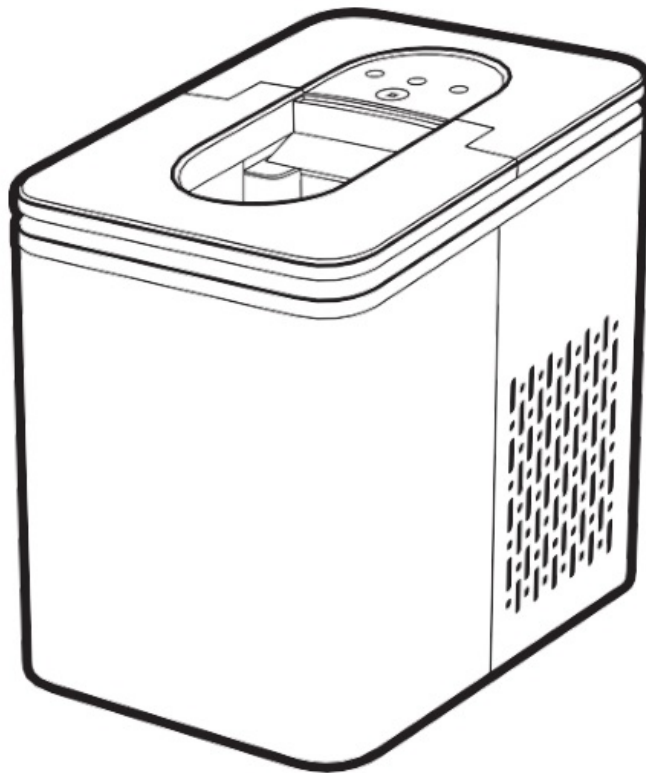

Please read the manual before using.



**RoHS**



Made in China

## Contents

- 1 Check on receipt
- 2 Instructions before using
- 3 Safety instructions
- 4 Maintenance and cleaning
- 5 Storage
- 6 Recycle or dispose of machine
- 7 Problem – Cause – Solution
- 8 Warranty & Service
- 9 Disclaimer
- 10 Documents / Resources
  - 10.1 References

## Check on receipt

If the equipment appears damaged, contact the logistics carrier and give the supplier a clear description of the damage. Keep the damaged packaging, take photos of it and share these photos with the carrier and supplier for substantiation. If parts are missing from the packaging, please contact the supplier.

Contact the supplier by e-mail at: [info@olavnorth.nl](mailto:info@olavnorth.nl)

Package contents:

- IVÅR NORTH Ice cube maker Self-cleaning – Silver/Black
- IVÅR NORTH Ice cream scoop
- IVÅR NORTH Ice cream basket
- IVÅR NORTH Manual

## Instructions before using

### IMPORTANT!

- After receiving the machine, do not turn it on for a period of 24 hours. This is because the coolant needs time to settle down.
- Once water is added to the water tank, make sure the silicone plug under the machine is tight.
- Use pure water only. Do not use contaminated water or where solid parts are present.
- This product is intended only for the purposes described in the user manual.
- Do not plug the power cord into the socket with wet hands. If used incorrectly, this could cause an electric shock.
- The machine must use reliable and safe earthing and is intended for use in dry indoor areas only. The machine must not be used outdoors. The machine must only be used with the original accessories.
- The supplier is released from liability for any injury or damage caused by using the machine beyond its intended use.
- The machine must not be used by children without supervision.

Opening the package

1. Remove all external and internal packaging and check that all contents mentioned in point 1 are in the packaging.
2. Remove and clean the ice cream basket and ice cream scoop.
3. Keep the machine away from direct sunlight, heat or other radiation. Place the machine horizontally and ensure that the back and sides of the machine have free space for ventilation.

#### Install

 
1. The product must be properly earthed for its own safety.
2. Connect the product to a correctly installed, earthed socket to which no other machines are connected.

#### Use

1. Only use the machine after 24 hours of rest!
2. Put the plug in the socket.
3. Open the lid, remove the ice basket and pour water into the water tank. Make sure the water does not exceed the maximum water line.
4. Clean the scoop and ice basket. Make sure there is no dust in the machine. After this, place the ice basket back in the machine.
5. Press the on/off button on the control panel to switch on the machine. Initial productions may take longer.
6. Change the water every 24 hours, this will prevent blockages in the machine.
7. After use, drain the water from the machine and dry the machine with a clean cloth.

**CAUTION:** The machine makes more noise than usual when it is used for the first time because of the initial start-up. This is because water is being pumped for the first time.

#### Control panel

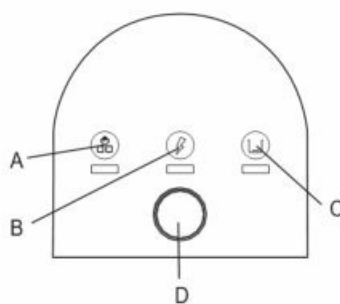

- A Ice basket is full
- B Connected to electricity
- C Refilling water
- D On/off button

#### Safety instructions

Read the safety instructions carefully before use and use it correctly. The safety precautions listed here are important safety issues, please follow them.

## IMPORTANT!

- Properly store the packaging material so that it does not get into the hands of children. Children can choke on it!
- Read the instructions carefully before use!
- Always observe the following precautions when using "The ice cube machine" hereinafter referred to as "the machine"

## GENERAL

- Do not disassemble, repair or reassemble the machine, otherwise it may cause fire, electric shock or accidents, contact your supplier for repair.
- Unplug the power cord before performing daily maintenance, otherwise it may cause electric shock and short circuit.
- Hold the insulated part of the plug at the front and pull the plug out. Do not pull the wire, otherwise the power cord may break or catch fire.
- Safely wipe the dust on the plug regularly, otherwise fire may occur due to poor insulation. Unplug the plug and wipe it clean with a dry cloth.
- Do not use wet hands to unplug it, or it may cause electric shock, burns or other injuries.
- If you do not use the machine for a long time, unplug it and drain the remaining water from the drain.
- Do not immerse the appliance in water or use it in the bathroom or in places where the appliance can be splashed with water. This may cause short circuits or an electric shock.
- When the machine starts or stops, the relay, thermal protector and other electrical parts will have clicking noise due to the actions, when the refrigerant flows into the pipe, there will be flowing noise, during making ice, when the machine releases the ice, the system will have clicking noise, these noises are normal during operation.
- If there is any doubt about the safety of the machine because it is not working properly and other than indicated in the operating instructions, stop using the machine immediately. This may cause smoke, fire and electric shock. Disconnect the power supply and unplug the machine. Then contact the supplier. Immediately interrupt the power supply to the machine and unplug the power cord, then contact the supplier.
- When placing the appliance, leave enough space, otherwise the refrigerant may leak. This may lead to fire or serious accidents.
- Do not use the machine in unstable positions. This can cause injuries and malfunctions and is considered improper use.
- Do not damage the power cord or plug (do not scratch, damage the power cord and plug, damage the heater, bend, twist, pull hard or put weight on it).
- Using a damaged power cord and plug may result in electric shock, short circuit and fire.
- Do not use a damaged plug or loose socket. This could result in electric shock, fire or overheating.
- Do not exceed the rated voltage standard. The maximum voltage is between 187V -242V. The frequency is 50Hz. Please ensure the earthing is reliable and safe to use.
- If the voltage exceeds the limit, it may cause heat, fire and/or electric shock.
- Use a separate socket for the machine, do not share a socket for multiple electrical appliances. This may result in electric shock, short circuit and fire.
- Fully insert the plug into the socket otherwise it may result in electric shock or fire due to heat.
- Do not damage the cooling circuit. If the refrigerant leaks, it may cause a fire or serious accidents. It may also

cause the machine to stop functioning properly.

 
- Do not allow children under 8 years of age to use the machine. Children 8 years and older can use the machine with supervision. Do not use the machine in places where children can reach it. This may result in burns, electric shock and injury.
- Do not put your hands into the mechanical parts at the back of the machine.  
This may result in burns or injuries caused by heat or electric shock.
- Do not use the machine in places with hot objects or dirty air. Store the machine in a well-ventilated, cool and dry place where the height of the water level can be ensured. To ensure air circulation, the machine will have sufficient distance from walls and furniture.
- Wash the water tank and ice basket regularly before using the machine.
- To ensure ice quality, it is wise to check the water and the machine regularly.  
Wash the machine regularly before using it. Change the machine regularly with clean water.
- Do not add more water than the maximum line. The maximum line is indicated in the water tank and this line should not be exceeded.
- Do not come into contact with the ice-making components when the machine is in operation. Do not open the lid before use, this may cause strangulation due to leakage of the refrigerant reducing ice-making capacity or mixing with dust.
- Do not remove internal sensors during daily use and/or maintenance

## **OTHER**

- Do not use water or other liquids with impurities or solid particles.
- The product is not dishwasher safe.
- It takes +/- 8 minutes to make the ice cubes. This mainly depends on the water temperature and the temperature of the environment.
- Ice cubes cannot be kept in the machine for a long time. To prevent the ice from melting, the ice will have to be placed in the freezer.
- The temperature of the water added to the machine will have to be cold. If hot water is added, it will take longer for the ice to be ready.
- Use pure or distilled water for personal hygiene and transparent ice cubes.
- When the lid is closed or shut, the machine is not protected.
- If the machine has not been used for a long time, unplug it after the power supply has been interrupted and drain any remaining water.
- Change the water regularly to ensure ice quality. Use a soft clean cloth or sponge to clean the inside and outside of the product.
- The ice cream may have an odour due to water quality. The ice from the first production after purchase, may have an odour. After using the machine several times, the smell will disappear. If the smell remains, it is useful to thoroughly clean the machine itself and remove dust. This can be done with citric acid or ice machine cleaner. Please do not consume fragrant ice cream to avoid discomfort or illness.

## **Product features**

Product name	Ice cube maker
Product model	IV270 (BLACK) & IV271 (SILVER)
Tension	220 - 240 V (50 Hz)
EAN	BLACK: 8720299846869 SILVER: 8720299846876
Power	100 W
Content	1.8 L
Weight	7.52 KG
Dimensions	32 x 22 x 31 cm
Colour	Black & Silver
Self-cleaning function	Yes
Cable length	2 M
Ice cubes per 6-8 min	9 units
Storage humidity	< 80%
Storage temperature	0 - 45°C
Operating humidity	< 80%
Operating temperature	10 - 43°C
Material	ABS, Copper, Metal
Max noise level	< 40 dB
Refrigerant	R600a

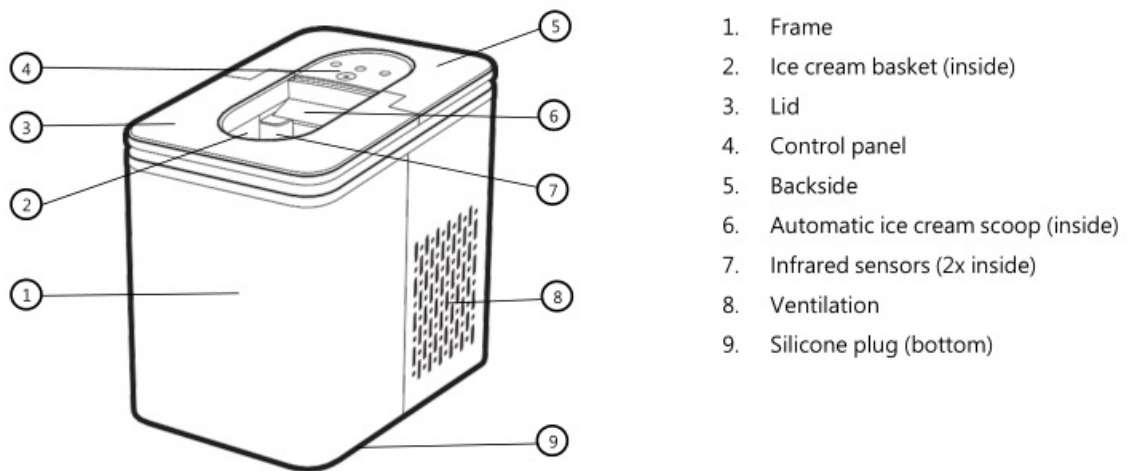

## Maintenance and cleaning

### SELF-CLEANING FUNCTION

The machine has a self-cleaning function. To start the self-cleaning function, the on/off button will have to be held down for 3 seconds. After this, the machine will clean itself. Make sure there is clean water in the water tank.

### SELF-CLEANING

6. Remove the ice cream basket from the machine.
7. Open the silicone plug under the machine and drain the water at a designated location.
8. Clean the inside of the machine with a soft cloth and neutral detergents.
9. Rinse the machine and machine accessories with clean water.
10. Make sure the silicone plug under the machine is properly reattached so that no water can leak out.

## Storage

Store in a dry, safe and clean environment.

## Recycle or dispose of machine

Before disposing of the machine, please consider the environment. If the machine does have to be disposed of, take it to the government designated place for recycling.

## Problem – Cause – Solution

Problem	Cause	Solution
The machine makes a lot of noise	<ol style="list-style-type: none"><li>4. The machine is not stable</li><li>5. The voltage is too low</li><li>6. There is something in the ventilation</li></ol>	<ol style="list-style-type: none"><li>4. Position the machine on a flat surface</li><li>5. Turn off machine and check for voltage problem</li><li>6. Turn off machine and check for anything in the ventilation</li></ol>
Power indicator light (button B) does not light up	The plug is not in the socket properly or there is no electricity available on the mains.	Plug in correctly and check that the power and plug work. If necessary, try it on a different socket.
The ice basket light is on but there is no ice in it	<ol style="list-style-type: none"><li>3. There is dirt on the infrared sensors</li><li>4. Infrared sensor is broken</li></ol>	<ol style="list-style-type: none"><li>3. Turn off machine and remove dirt from infrared sensors</li><li>4. Contact supplier</li></ol>
The light on the control Panel is on but there is enough water in the tank	<ol style="list-style-type: none"><li>3. Water pump blocked by impurities/dirt</li><li>4. The water pump is broken</li></ol>	Stop using the product and contact your supplier. If it is within the warranty period, the supplier will repair the machine.
Ice contains impurities and dirt	There are impurities or dirt in the water tank	Drain the water at a place where it can be done by loosening the plug at the bottom. After this, clean the water tank thoroughly.
The ice cream smells crazy	This is due to poor water quality. A strange smell may also be present during the first few times of use.	After using the machine a few times, the smell will disappear. If this does not happen or if the product has been in use for a while, use lemon juice or other ice cube machine cleaner to clean the machine.
Top up water - lamp is on	<ol style="list-style-type: none"><li>3. Not enough water</li><li>4. The bottom of the water tank is blocked</li></ol>	<ol style="list-style-type: none"><li>3. Turn off the machine and add water</li><li>4. Make sure the water tank is unblocked by removing dirt</li></ol>
Ice cream basket is full - lamp is on	<ol style="list-style-type: none"><li>3. There are too many ice cubes in the basket</li><li>4. The infrared sensor is broken because there is no ice in the basket and the lamp stays on</li></ol>	<ol style="list-style-type: none"><li>3. Remove the ice from the ice basket</li><li>4. Stop using the product and contact the supplier. If it is within the warranty period, the supplier will repair it.</li></ol>
Ice basket full - lamp flashes	The automatic ice cream scoop is stuck	Turn the machine off again and remove possible blockages.
The ice sticks together	<ol style="list-style-type: none"><li>4. Ice cream is made for too long in a row</li><li>5. Too many pieces of ice in the ice basket</li><li>6. The water temperature in the water tank is too low</li></ol>	<ol style="list-style-type: none"><li>4. Stop making ice cream. Make sure the ice melts and restart the machine</li><li>5. Adjust the evaporator</li><li>6. Renew the water in the water tank. Ideal water temperature is between 5 and 32 degrees.</li></ol>
The ice basket is full but the light does not come on	The machine is in a position where there is too much light, this affects the infrared sensor.	Move the machine to a place with less light.
Machine is on but does not make ice cream	Compressor is in start protection or machine leaks	Turn off the machine and check that the plug and socket are OK. If this is fine, the machine can be turned on and wait for 30 minutes. If the machine still does not work after 30 minutes, contact the supplier.

## Warranty & Service



Once the machine needs service, this can be done within the warranty period. Please send an email to [info@olavnorth.nl](mailto:info@olavnorth.nl)

The warranty on this machine is as follows:

- Compressor – 2-year warranty
- Other parts and accessories – 1-year warranty


The customer must be able to show proof of purchase and the warranty must fall within the aforementioned warranty period from the date of purchase. The warranty does not apply: damage caused by improper use or repair; for wear and tear on subject parts; for defects known to the customer at the time of purchase; for defects caused by the customer's own fault; for damage caused by third parties.

## Disclaimer

Changes subject to change; specifications are subject to change without notice.

---

## Documents / Resources

	<p><a href="#">IVAR NORTH IV270 Ice Cube Maker</a> [pdf] User Manual IV270 Ice Cube Maker, IV270, Ice Cube Maker, Cube Maker, Maker</p>
---	---

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.