



## iZEEKER iA200 Action Camera User Manual

[Home](#) » [iZEEKER](#) » iZEEKER iA200 Action Camera User Manual 

### Contents

- [1 iZEEKER iA200 Action Camera](#)
- [2 Introduction of host](#)
- [3 Specification](#)
- [4 Installation Guide](#)
- [5 Indicator Instruction & Button Instruction](#)
- [6 Mode Operation Instructions](#)
- [7 Wi-Fi | PC Connection](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)

# iZEEKER

### iZEEKER iA200 Action Camera



Thank you for your support to the iZEEKER action camera team.

We hope you are satisfied with our products and would appreciate it if you could focus on our social media for the latest news and support of the iZEEKER action camera.

Follow us for more Information:

- **Official website:** [www.izeeker.co](http://www.izeeker.co)
- **Instagram:** iZEEKER Action Camera
- **YouTube:** iZEEKER Action Camera
- **FaceBook:** iZEEKER Action Camera
- **FaceBook Group:** iZEEKER Action Camera Club


If you have any questions about the product or want to extend your product warranty to VIP exclusive 2 years, we are a/ways here!

**Email:** [support.ac@izeeker.co](mailto:support.ac@izeeker.co)

Download "SupCam Pro" App for iZEEKER iA200 action camera.



## Introduction of host

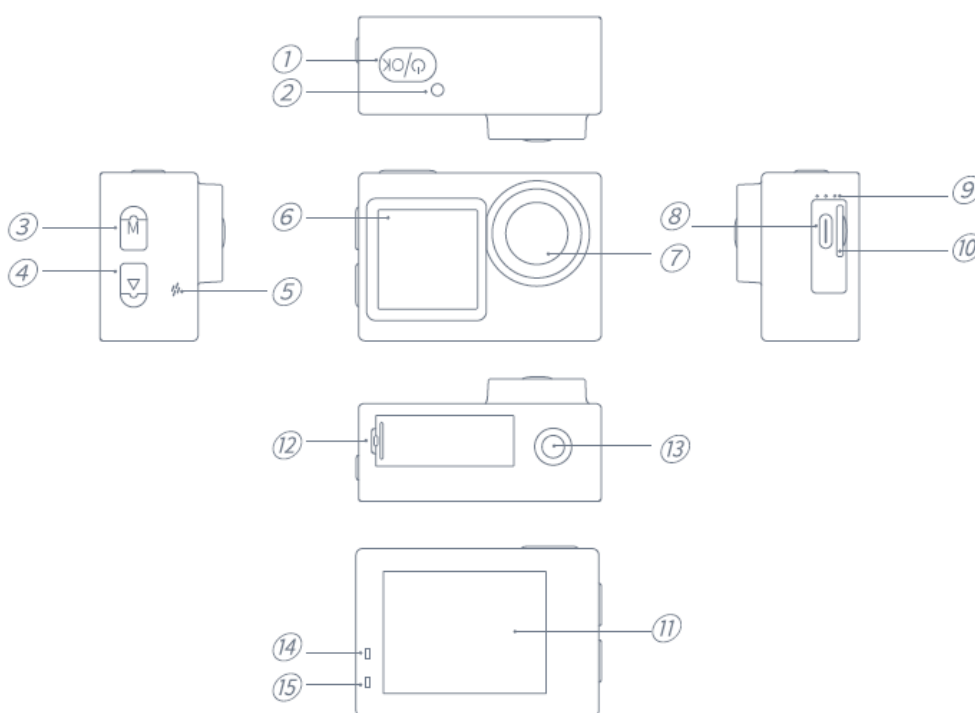

1. Power/OK Button
2. Wi-Fi Indicator
3. UP/Mode Button
4. Down Button
5. Speaker
6. Front Screen

7. Lens
8. USB Port
9. Microphone
10. Micro SO Card Slot
11. Touch Screen
12. Battery Cover
13. Tripod Screw Hole
14. Charging Indicator
15. Working Indicator



## Specification

<i>Model</i>	<i>iA200</i>
<i>Lens</i>	<i>140° HD wide-angle fish-eye lens</i>
<i>APP</i>	<i>SupCam Pro</i>
<i>Screen</i>	<i>2" touch screen &amp; 1.4" front screen</i>
<i>Picture Format</i>	<i>JPG</i>
<i>Video Format</i>	<i>MP4</i>
<i>Memory Card</i>	<i>Support 64-256GB U3 TF card</i>
<i>Video Code</i>	<i>H.264</i>
<i>Battery</i>	<i>2×1350mAh Batteries</i>
<i>Recommend resolution</i>	<i>Video: 4K30fps / Picture: 12MP</i>
<i>Speaker</i>	<i>Built-in</i>
<i>Microphone</i>	<i>Internal &amp; External</i>
<i>Connections</i>	<i>Type-C</i>
<i>Wi-Fi</i>	<i>Built-in 2.4G</i>
<i>Working temperature</i>	<i>-10°C~+50°C</i>
<i>Storage temperature</i>	<i>-10°C~+70°C</i>
<i>Operating system</i>	<i>Windows XP/7/8, SP3/Vista and Mac 10.5 or above</i>


## Installation Guide

### Battery Charging

The battery charging steps are as below:


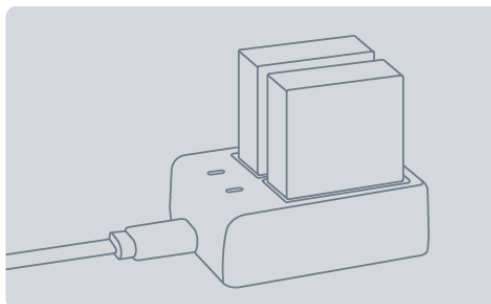
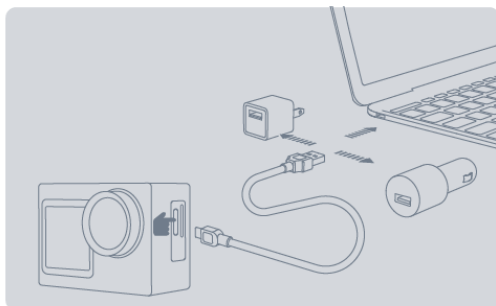


TF Card Installation

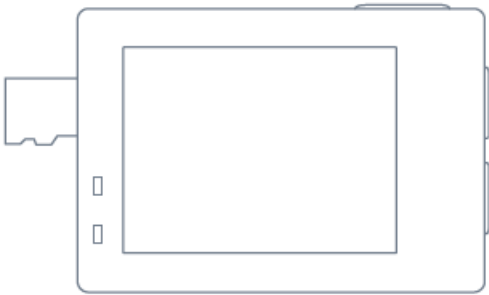

- 1. **TF card recommend:** 64-256 U3 TF card.
- 2. After installing the TF card correctly, please format the TF cardfor first use.

TF Card Formatting

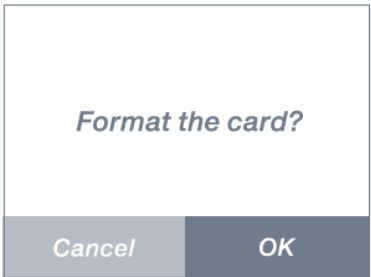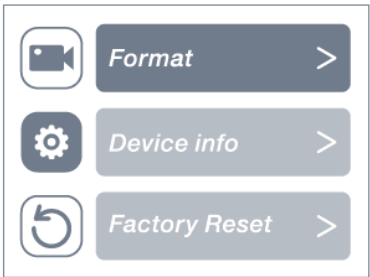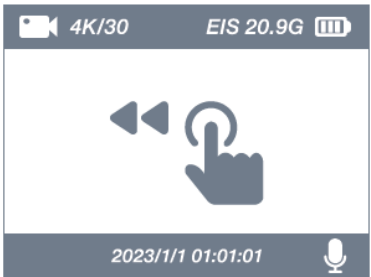

Indicator Instruction & Button Instruction

Indicator Instruction

Working Indicator	<ul style="list-style-type: none"><li>1. While recording a video, the LED continuously flashes</li><li>2. While taking a photo, the LED quickly flashes.</li><li>3. When power on, the LED is on, when power off, the LED is off.</li></ul>
Charging Indicator	<ul style="list-style-type: none"><li>1. While charging, the LED is bright red.</li><li>2. Charge fully, the LED is off</li></ul>
Wi-Fi Indicator	<ul style="list-style-type: none"><li>1. When the Wi-Fi turns on, the LED continuously flashes.</li><li>2. When Wi-Fi is connected and the smartphone enters preview, the LED is bright</li></ul>

Button Instruction

OK/Power Button	<ol style="list-style-type: none"> <li>1. Long press the Power key to turn on/turn off the camera.</li> <li>2. Shutter function in the video/photo mode.</li> </ol>
UP/Mode Button	<ol style="list-style-type: none"> <li>1. In video/photo preview interface, long press to switch touch screen and front screen.</li> <li>2. In photo/video mode, single press to enter modes selection, another single press to switch mode.</li> <li>3. Up function in system setting.</li> <li>4. In video/photo playback, single press to switch into last video/photo.</li> </ol>
Down Button	<ol style="list-style-type: none"> <li>1. In video/photo preview interface, long press to turn on/off the Wi-Fi.</li> <li>2. In modes selection interface, single press to switch mode.</li> <li>3. In video/photo playback, single press to switch into next video/photo.</li> <li>4. In video/photo preview interface, single press to enter system setting.</li> <li>5. Down function in system setting.</li> </ol>

## Mode Operation Instructions

### Video Mode


The camera will automatically display video mode when power on.



1. Video Mode
2. Resolution
3. EIS
4. Storage Capacity
5. Battery Life
6. Date

7. Microphone


Photo Mode

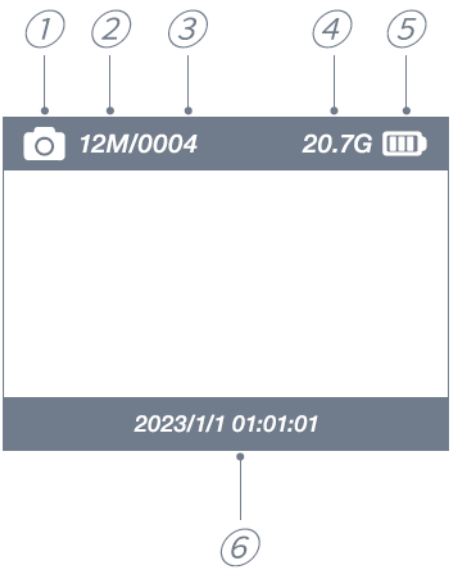


- 1. Photo Mode
- 2. Photo Resolution
- 3. Photo Quantity
- 4. Storage Capacity
- 5. Battery Life
- 6. Date

In video/photo preview interface


Swipe left to enter system setting page

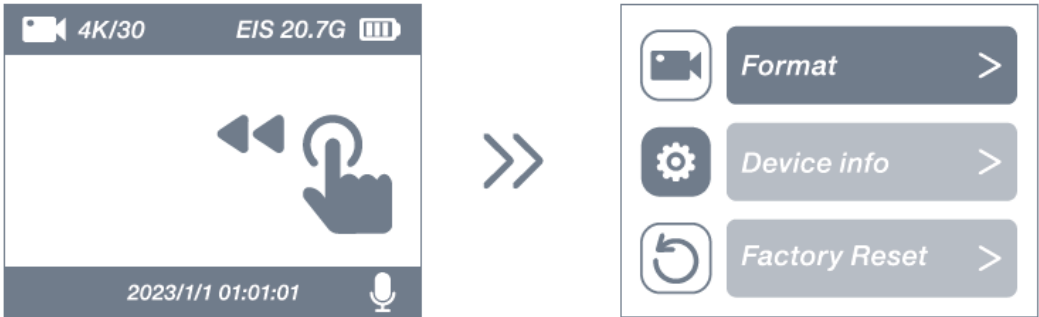


Swipe right to enter video/photo playback page

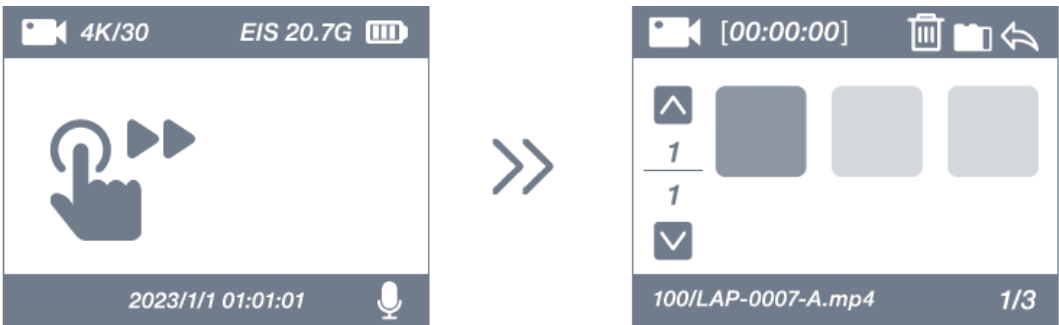

Swipe down to enter shortcut mode

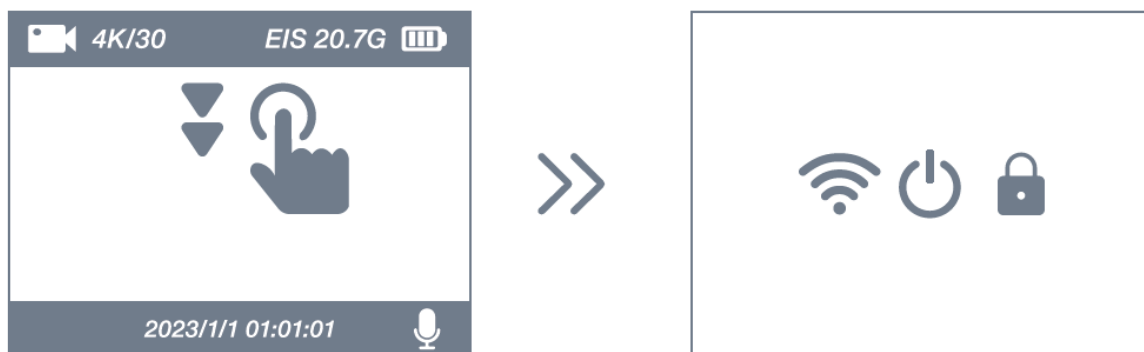

Swipe up to enter modes selection interface

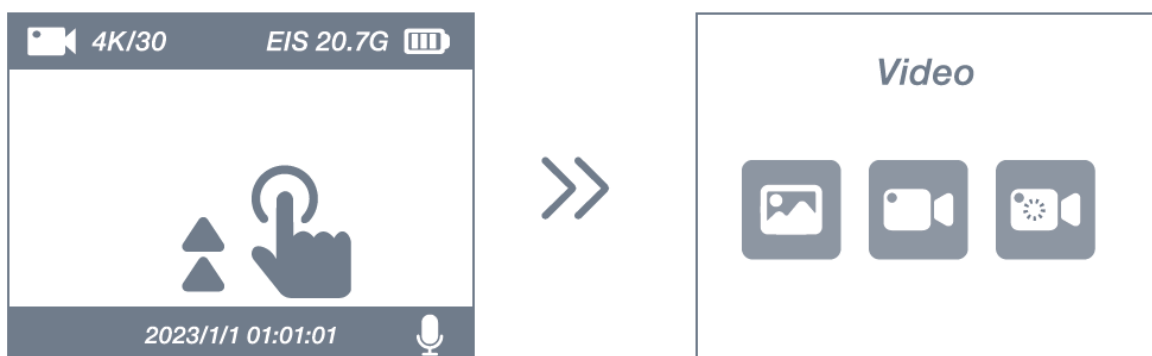

## Wi-Fi | PC Connection

### Wi-Fi Connection

The Wi-Fi App allows you to control your camera remotely on a smartphone or a tablet. You can view the videos and pictures shot on your phone, download them directly to your phone.

**The connecting steps are as follows:**

- Download the SupCam Pro App on your smartphone or tablet in Google Play or Apple App Store.




- Long press the Down Button to turn on Wi-Fi, short press again to exit. The status light on the top of the camera remains flashing while the camera is waiting for Wi-Fi connection and the light stays on when the device enters preview status.
- Find and connect the Wi-Fi in the Wi-Fi list on your phone with the Wi-Fi name and password displayed on the camera.





- Enter the SupCam Pro App on your smartphone or tablet after the Wi-Fi is connected, you'll find the camera is controlled by your phone.

### Connect to a computer

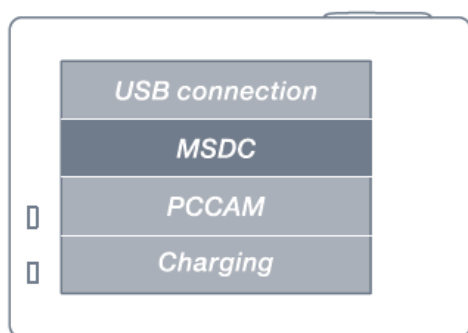When you use the included USB cable to connect to a computer, you can access to the files which are stored in camera's TF card to copy or view them on a computer. This function can also achieve by a TF card reader.



## Documents / Resources

	<p><a href="#">iZEEKER iA200 Action Camera</a> [pdf] User Manual iA200 Action Camera, iA200, Action Camera, Camera</p>
	<p><a href="#">iZEEKER iA200 Action Camera</a> [pdf] User Guide iA200 Action Camera, iA200, Action Camera, Camera</p>

## References

- [User Manual](#)