

J BURROWS JBERGCOMBO Wireless Ergonomic Keyboard And Mouse Combo



# J BURROWS JBERGCOMBO Wireless Ergonomic Keyboard And Mouse Combo Instruction Manual

[Home](#) » [J.burrows](#) » J BURROWS JBERGCOMBO Wireless Ergonomic Keyboard And Mouse Combo Instruction Manual 

## Contents

- [1 J BURROWS JBERGCOMBO Wireless ErgonomicKeyboard And Mouse Combo](#)
- [2 SPECIFICATIONS](#)
- [3 CONTENTS](#)
- [4 MOUSE DESCRIPTION](#)
- [5 KEYBOARD DESCRIPTION](#)
- [6 INSTALLATION](#)
- [7 TROUBLESHOOTING](#)
- [8 HOTKEY DEFINITIONS](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)
- [10 Related Posts](#)

# J.BURROWS



J BURROWS JBERGCOMBO Wireless ErgonomicKeyboard And Mouse Combo



## SPECIFICATIONS

- Keyboard & Mouse Wireless Technology: 2.4GHz RF
- Keyboard & Mouse Working Range: Up to 10 meters
- Keyboard & Mouse Battery Type: (2) AAA Batteries per device
- Keyboard Layout: 122-Key US
- Key Type: Membrane
- Keyboard Hotkeys: 17 Hotkeys (Windows, Internet and Multimedia)
- Keyboard Indicators: Battery Low, Num Lock & Caps Lock
- Keyboard Dimensions: 19.8" x 8.3" x 1" (503 x 212 x 25 mm)
- Mouse Tracking Method: Optical Sensor
- Mouse DPI: 3 Levels – 800, 1200 (Default), 1600
- Mouse Dimensions: 4.5" x 2.9" x 1.5" (115 x 74 x 38mm)

## REQUIREMENTS

- **Operating System:** Windows® 10/8/7/XP, Mac OS X 10.7 or later
- **Connectivity:** Spare USB port for wireless receiver

## CONTENTS



**A**

Wireless Keyboard



**B**

Wireless Mouse



**C**

Wireless Receiver



**D**

 
AAA Batteries (4)




**E**

Instruction Manual

## MOUSE DESCRIPTION

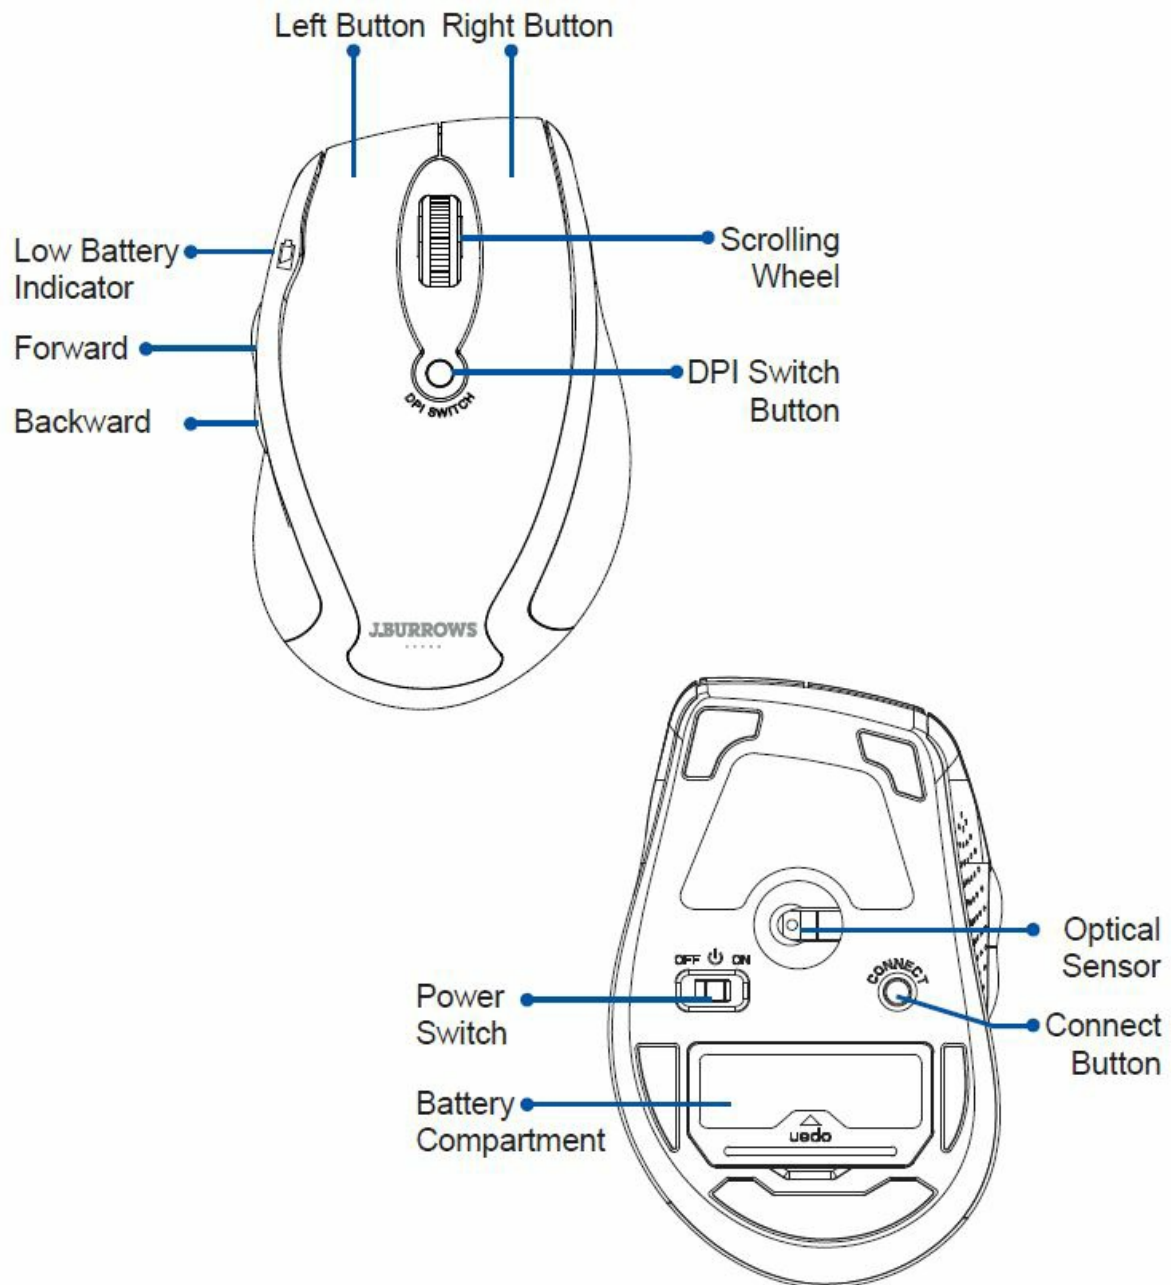

## KEYBOARD DESCRIPTION

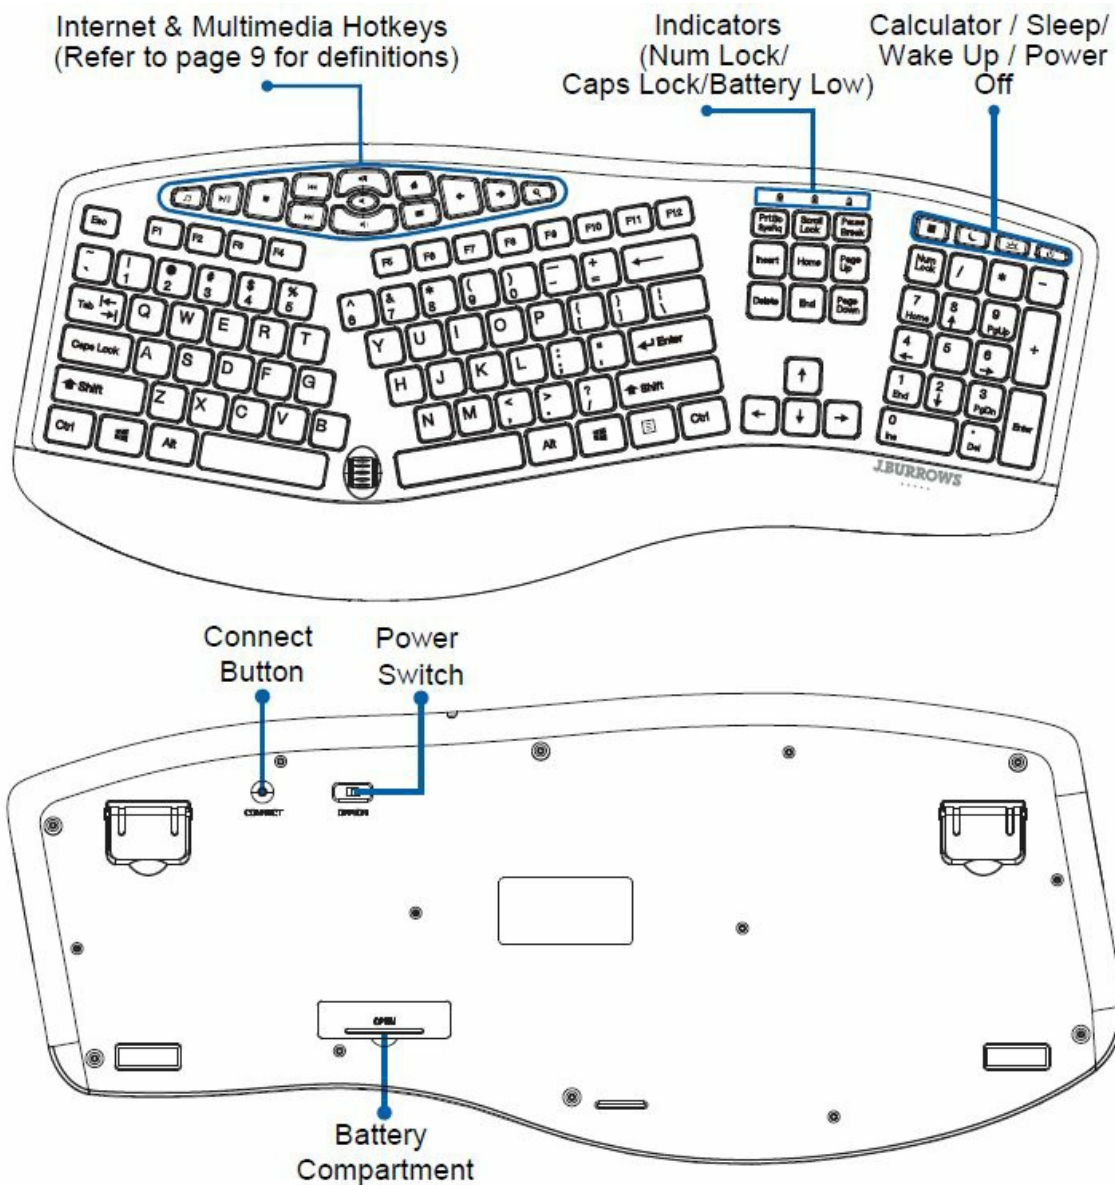 


## INSTALLATION


### 1. Procedure of changing your batteries:

- Remove battery cover from mouse and keyboard battery compartment.
- Insert (2) AAA batteries into each device.
- Close the battery compartment cover.

### 2. Turn both the keyboard & mouse power switch to ON.

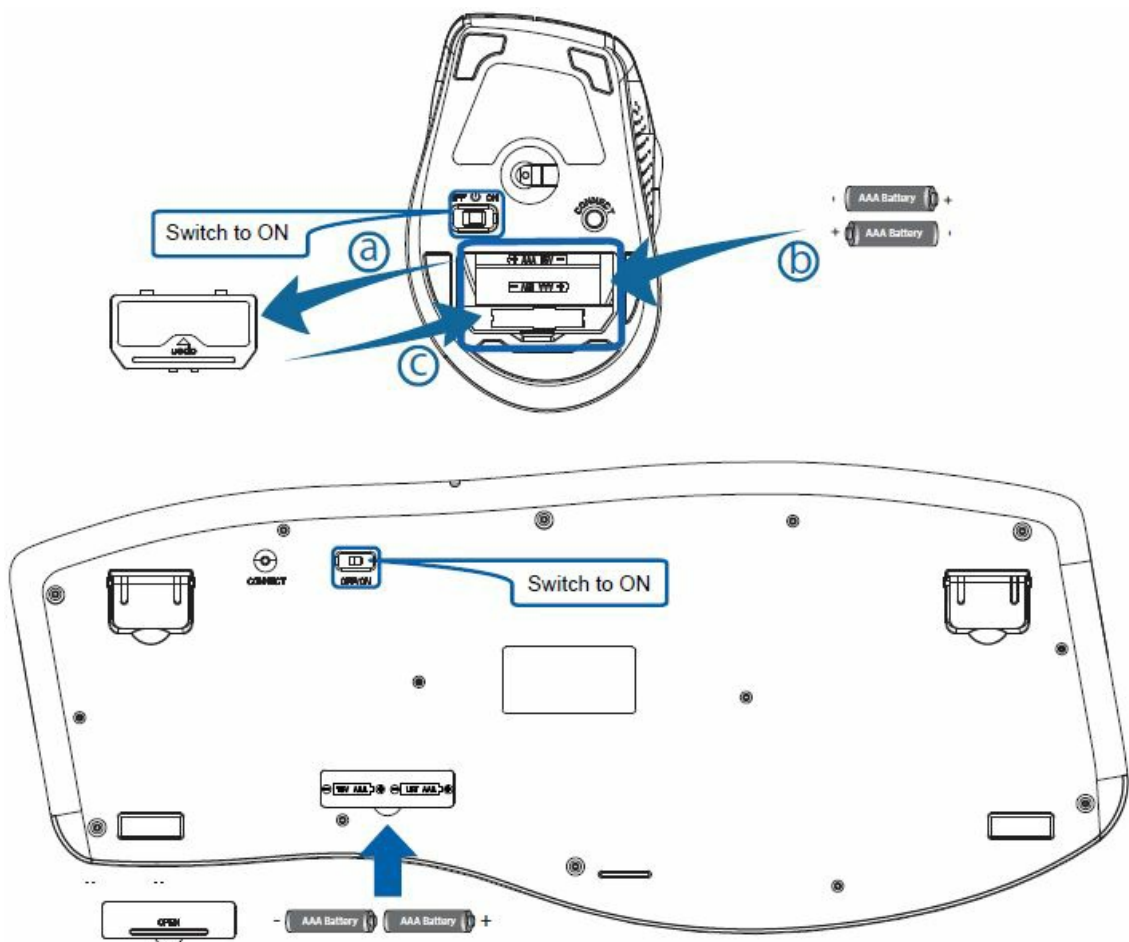

3. Turn on your computer and let computer load completely.
4. Plug the USB wireless receiver into a USB port of your computer.

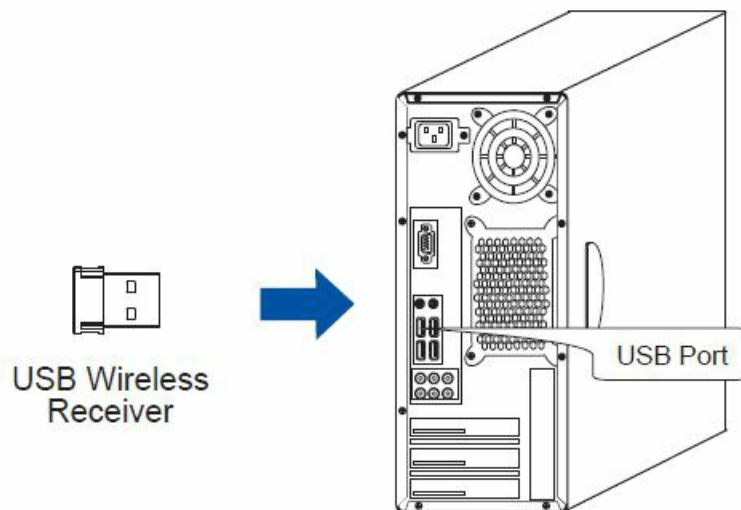

5. Receiver will automatically connect with wireless keyboard and mouse. Now, they are ready to be used.

## NOTE

- Computer will detect the keyboard, mouse and receiver automatically. No drivers are required.
- When devices can not connect efficiently, please press "CONNECT" button on the bottom of the device and repair. Refer to TROUBLESHOOTING Point 3.

## TIPS

- When the low battery LED is on, it means that the device requires new batteries.
- Turn devices off when leaving your desk for more than an hour to save battery life and enable longer battery life.








 



 





## TROUBLESHOOTING

If your keyboard or mouse cannot be operated, please try the following

1. Make sure you have inserted two AAA batteries inside the battery compartment correctly and that the power switch of the keyboard and mouse is ON.
2. Make sure you have connected the USB receiver correctly to the computer USB port. Move other devices 30 cm away from the receiver to avoid interference while pairing/connecting. To reconnect the keyboard or mouse to the USB receiver:
3. Plug-in USB receiver to the computer and press CONNECT on the bottom of the keyboard or mouse within 15 seconds. To connect efficiently, please make sure that the keyboard or mouse is close to the USB receiver and the distance between the USB receiver and the device is no more than 30 cm.
4. For the mouse, hold the middle and right buttons on the mouse together after pressing the CONNECT button.

**Note:** Wireless phones, routers, and other devices that use 2.4GHz frequency, might cause interference with wireless keyboards and mice. Please relocate such wireless appliances away from your keyboard and mouse.


## HOTKEY DEFINITIONS

Key	Action	Description
	Music	Launches default media player application
	Play/Pause	Play or pauses track in multimedia software
	Stop	Stops track from playing in multimedia software
	Previous Track	Takes you to previous track in multimedia software
	Next Track	Takes you to next track in multimedia software
	Volume Down	Decreases computer main volume
	Volume Up	Increases computer main volume
	Mute	Mutes computer main volume
	Home	Accesses Homepage
	Email	Launches default email application
	Back	Back to the previously viewed webpage
	Forward	Go to the next viewed webpage
	Search	Launches search bar
	Calculator	Launches calculator
	Sleep	Sets computer to sleep mode
	Wake Up	Wakes computer up
	Power Off	Shuts down computer

- Hotkey functions based on the Windows operating system. When used on Mac these may vary or not function.

---

## Documents / Resources

	<p><a href="#">J BURROWS JBERGCOMBO Wireless Ergonomic Keyboard And Mouse Combo</a> [pdf] Instruction Manual</p> <p>JBERGCOMBO Wireless Ergonomic Keyboard And Mouse Combo, JBERGCOMBO, Wireless Ergonomic Keyboard And Mouse Combo, Ergonomic Keyboard And Mouse Combo, Keyboard And Mouse Combo, Mouse Combo</p>
---	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.