

# J-TECH DIGITAL JTD-P6 6 Button Control Panel Wall Plate User Manual

## Contents

- [1 JTD-P6 6 Button Control Panel Wall Plate](#)
- [2 User Manual](#)
  - [2.1 6 Button IP Control Panel Wall-Plate](#)
  - [2.2 Safety Precautions](#)
  - [2.3 Table of Contents:](#)
  - [2.4 Product Information](#)
  - [2.5 Product Usage Instructions](#)
    - [2.5.1 Documents / Resources](#)
      - [2.5.1.1 References](#)

## JTD-P6 6 Button Control Panel Wall Plate

---

# User Manual

---

## 6 Button IP Control Panel Wall-Plate

JTD ID: 2984 | Model: JTD-P6

J-TECH DIGITAL INC. 9807 EMILY LANE

STAFFORD, TX 77477 TEL: 1-888-610-2818 E-MAIL:  
SUPPORT@JTECHDIGITAL.COM

---

## Safety Precautions

Please read the following safety precautions before using the product.

---

## Table of Contents:

- 1. Introduction
  - 1.1 Introduction to JTD-P6
  - 1.2 Features
  - 1.3 Package List

- 2. Panel Description
  - 3. System Connection
  - 4. GUI Control
    - 4.1 Log In
    - 4.2 Home
    - 4.3 Configuration
      - 4.3.1 Knob
      - 4.3.2 TCP/IP
      - 4.3.3 IR
    - 4.4 Network
    - 4.6 Upgrade
  - 5. Specifications
  - 6. Panel Drawing
  - 7. Maintenance
  - 8. Warranty
  - 9. Mail-In Service
  - 10. Limited Warranty Limits and Exclusions
- 

## **Product Information**

The 6 Button IP Control Panel Wall-Plate, model JTD-P6, is a product manufactured by J-TECH DIGITAL INC. It is designed to provide IP control for various systems and devices.

---

## **Product Usage Instructions**

1. Panel Description:
  - Refer to the user manual for detailed information on the panel description.
2. System Connection:
  - Refer to the user manual for detailed instructions on how to connect the control panel to your system.
3. GUI Control:
  - Log In:
    - Follow the instructions in the user manual to log into the GUI control interface.
  - Home:
    - Once logged in, navigate to the home screen to access the main control options.
  - Configuration:
    - Knob:
      - Configure the knob settings according to your preferences using the instructions provided in the user manual.

- TCP/IP:
    - Configure the TCP/IP settings for network communication as per the instructions in the user manual.
  - IR:
    - Set up and configure the infrared (IR) control features using the instructions provided in the user manual.
  - Network:
    - Access the network settings and configure them according to your network requirements. Refer to the user manual for detailed instructions.
  - Upgrade:
    - Perform firmware upgrades for the control panel following the instructions provided in the user manual.
4. Specifications:
- Refer to the user manual for detailed specifications of the product.
5. Panel Drawing:
- Refer to the user manual for a visual representation and layout of the control panel.
6. Maintenance:
- Follow the maintenance instructions provided in the user manual to ensure proper functioning and longevity of the product.
7. Warranty:
- For warranty information and terms, refer to the user manual or contact J-TECH DIGITAL INC. directly.
8. Mail-In Service:
- If required, follow the instructions in the user manual to avail mail-in service for the product.
9. Limited Warranty Limits and Exclusions:
- Refer to the user manual for details about the limited warranty coverage and any exclusions that may apply.

For more information about the product, visit the official website of J-TECH DIGITAL INC. at [www.jtechdigital.com](http://www.jtechdigital.com).

[View Fullscreen](#)

## USER MANUAL

6 Button IP Control Panel Wall-Plate

JTD ID: 2984 | Model: JTD-P6

J-TECH DIGITAL INC. 9807 EMILY LANE

STAFFORD, TX 77477 TEL: 1-888-610-2818 E-MAIL: [SUPPORT@JTECHDIGITAL.COM](mailto:SUPPORT@JTECHDIGITAL.COM)

## SAFETY PRECAUTIONS

.....

Page 2 of 19

Table of Contents:

Page 3 of 19

1. Introduction

1.1 Introduction to JTD-P6

1.2 Features

.....

1.3 Package List

.....

Page 4 of 19

## 2. Panel Description

Page 5 of 19

## 3. System Connection

Page 6 of 19

Page 7 of 19

## 4. GUI Control

### 4.1 Log In

Page 8 of 19

### 4.2 Home

· ·

### 4.3 Configuration

#### 4.3.1 Knob

Page 9 of 19

#### · · · 4.3.2 Button

· ·

Page 10 of 19

#### 4.3.3 TCP/IP

#### · 4.3.4 RS232

·

Page 11 of 19

#### 4.3.5 IR

#### · · · 4.3.6 Relay

Page 12 of 19

#### · · 4.3.7 LED

#### · · 4.3.8 Delay

Page 13 of 19

· ·

## 4.4 Network

### · 4.5 Setting

Page 14 of 19

·

· ·

### 4.6 Upgrade

## 5. Specifications

Page 15 of 19

## 6. Panel Drawing

Page 16 of 19

## 7. Maintenance 8. Warranty

## 9. Mail-In Service 10. Limited Warranty Limits and Exclusions

Page 17 of 19


Page 18 of 19

WWW.JTECHDIGITAL.COM PUBLISHED BY J-TECH DIGITAL INC.

9807 EMILY LANE STAFFORD, TX 77477 TEL: 1-888-610-2818 E-MAIL: SUPPORT@JTECHDIGITAL.COM

Page 19 of 19

## Documents / Resources

	<p><b><a href="#">J-TECH DIGITAL JTD-P6 6 Button Control Panel Wall Plate</a></b> [pdf] User Manual JTD-P6, JTD ID 2984, JTD-P6 6 Button Control Panel Wall Plate, Control Panel Plate, Wall Plate, Plate, Control Panel, Control Panel Wall Plate, JTD-P6 Control Panel Wall Plate, 6 Button Control Panel Wall Plate</p>
--	--

## References

- **[J-Tech Digital® Official Site | Professional AV Solution Provider](#)**