

[Skip to content](#)

## Manuals+

User Manuals Simplified.

# janitza UMG 20CM Split Core Current Transformers Owner's Manual

[Home](#) » [janitza](#) » janitza UMG 20CM Split Core Current Transformers Owner's Manual

janitza UMG 20CM Split Core Current Transformers



Contents [hide](#)

[1 SPLIT-CORE CURRENT TRANSFORMERS FOR THE UMG 20CM, TYPE SC-CT-20, CLASS 1](#)

[2 SPLIT-CORE CURRENT TRANSFORMER FOR THE UMG 20CM, TYPE SC-CT-20 – TECHNICAL DATA](#)

[3 SPLIT-CORE CURRENT TRANSFORMER FOR THE UMG 20CM, TYPE SC-CT-20 – DIMENSIONAL DRAWINGS](#)

[4 Documents / Resources](#)

[5 Related Posts](#)

## SPLIT-CORE CURRENT TRANSFORMERS FOR THE UMG 20CM, TYPE SC-CT-20, CLASS 1

Split-core current transformers are suitable for quick and safe installation in existing systems and offer transformer ratios from 3000/1 to 6000/1. They are only compatible with the UMG 20CM

## SPLIT-CORE CURRENT TRANSFORMER FOR THE UMG 20CM, TYPE SC-CT-20 – TECHNICAL DATA

SPLIT-CORE CURRENT TRANSFORMER, TYPE SC-CT-20


TYPE	MAX. OPERATING CURRENT in A	RATIO	MAX Ø OF PRIMARY CONDUCTOR in mm	CLASS	DIMENSIONS in mm (W x H x D)	WEIGHT in kg	PART NO.
SC-CT-20*	63	3000/1	10	1	approx. 32 x 41.4 x 32.3	0.04	15.03.092

INDIVIDUAL ACCESSORIES (LOAD IS INCLUDED IN THE SCOPE OF DELIVERY WITH THE SC-CT-20

Load (3.9 Ω) for SC-CT-20 operating current transformers with 1.5 m connection cable and spring terminal

\* Incl. prefabricated connecting cable; 1.5 m with load and spring terminal for operating current measurement

SPLIT-CORE CURRENT TRANSFORMER FOR THE UMG 20CM, TYPE SC-CT-20 – DIMENSIONAL DRAWINGS

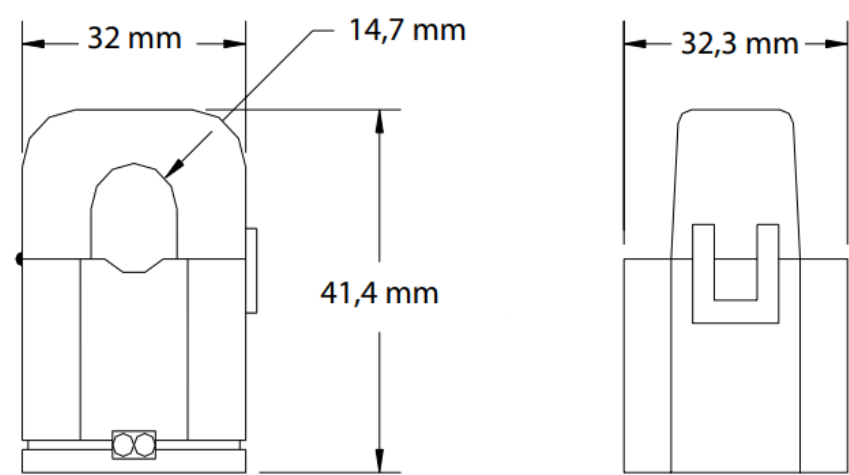

**Janitza**



[janitza UMG 20CM Split Core Current Transformers](#) [pdf] Owner's Manual  
UMG 20CM Split Core Current Transformers, UMG 20CM, Split Core Current Transformers, Current Transformers, Transformers

**Manuals+**,

- [home](#)
- [privacy](#)