



# JANSKA EverGreen Planter Usage Instruction Manual

[Home](#) » [JANSKA](#) » JANSKA EverGreen Planter Usage Instruction Manual 

## Contents

- [1 JANSKA EverGreen Planter Usage](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 DRAINAGE](#)
- [5 STABILITY](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)



**JANSKA EverGreen Planter Usage**



## Product Information

The planter features a removable inner pot that allows for versatile planting. It is designed with four raised nodes on the base that can be pierced or drilled to provide drainage for the plants. The planter is lightweight and easy to transport, clean, and restyle.

### Drainage

To ensure proper drainage for your plants, create holes in the base of the planter based on your plant's drainage requirements. The water will drain through to the larger outer pot and can be easily poured out when needed. Alternatively, you can place a layer of large pebbles or stones at the base of the removable inner pot before adding soil. This will allow water to seep through the soil and remain separated from the roots while still providing moisture.

### Stability

If you plan to place the planter outdoors or in a position of frequent traffic, we recommend adding large stones (up to 4-inch height) inside the base of the outer pot for additional stability. The weight of the stones inside the outer pot will help counterbalance the weight from the soil in the inner pot, so the planter is not top-heavy.

 
## Product Usage Instructions

1. Remove the inner pot from the outer pot.
2. If you want to create drainage holes, pierce or drill holes in the raised nodes on the base of the outer pot.  
Alternatively, add a layer of large pebbles or stones at the base of the inner pot.
3. Add soil to the inner pot.
4. Plant your desired plant in the soil.
5. Place the inner pot back into the outer pot.
6. If placing the planter outdoors or in a position of frequent traffic, add large stones (up to 4-inch height) inside the base of the outer pot for additional stability.
7. Water your plant as needed, and allow excess water to drain through the holes or pebbles at the bottom of the inner pot into the outer pot. Pour out any excess water in the outer pot when necessary.


8. To transport, clean, or restyle your planter, remove the inner pot from the outer pot and proceed with the desired action.

## **DRAINAGE**

The planter's removable inner pot allows for versatile planting. The base features four raised nodes that can be easily pierced or drilled to provide drainage. Create holes based on your plant's drainage requirements. Water will drain through to the larger outer pot and can be easily poured out when needed.

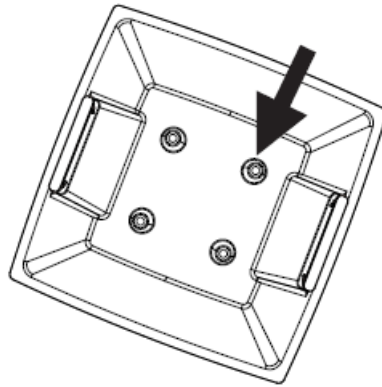


 Alternatively, instead of drilling holes, place a layer of large pebbles or stones at the base of the removable inner pot before adding soil. This will allow water to seep through the soil and remain separated from the roots while still providing moisture.

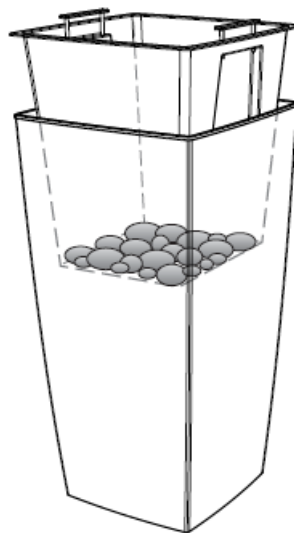

## **STABILITY**

 The lightweight design of the planters allows for easy transporting, convenient cleaning, and regular restyling. However, should the planters be placed outdoors or in a position of frequent traffic, we recommend adding large stones (up to 4-inch height) inside the base of the outer pot for additional stability. The weight of the stones inside the outer pot will help counterbalance the weight from the soil in the inner pot, so the planter is not top-heavy.

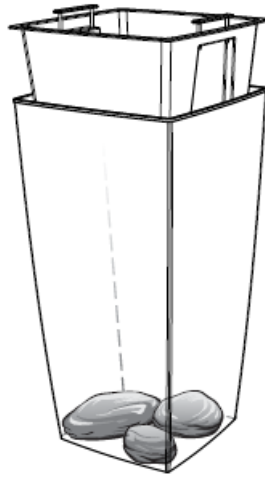

## Documents / Resources

<p><b>PLANTER USAGE</b></p> <p><b>WARNING:</b> The planter is made of plastic and should be used indoors only. Do not use the planter outdoors or in areas with high humidity or direct sunlight. The planter is not intended for use with water or other liquids. Do not use the planter for anything other than its intended purpose. Do not use the planter for anything other than its intended purpose. Do not use the planter for anything other than its intended purpose.</p> <p><b>STABILITY:</b> The planter is designed to be used on a flat, level surface. Do not use the planter on uneven or unstable surfaces. Do not use the planter on surfaces that are slippery or prone to falling. Do not use the planter on surfaces that are not designed to support its weight. Do not use the planter on surfaces that are not designed to support its weight. Do not use the planter on surfaces that are not designed to support its weight.</p>	<p><b><a href="#">JANSKA EverGreen Planter Usage</a></b> [pdf] Instruction Manual JAEG-1800LG, JAEG-1800B, JAEG-1800DG, JAEG-1800M, JAEG-1800WH, JAEG-3400LG, JAEG-3400M, JAEG-3400WH, EverGreen Planter Usage, EverGreen, EverGreen Planter, Planter Usage, Planter</p>
--	--