



## JASCO 59415 Color Changing Llama Squishy Light Instructions

[Home](#) » [JASCO](#) » JASCO 59415 Color Changing Llama Squishy Light Instructions 

**LIGHTS™**  
BY NIGHT

Color-Changing  
Llama Squishy Light



See reverse for easy-to-follow instructions and exclusive deals.

## Contents

[1 BATTERY INSTALLATION](#)

[2 MICRO-USB POWER MODE](#)

[3 OPERATION](#)

[4 Documents / Resources](#)

[5 Related Posts](#)


## BATTERY INSTALLATION

1. Unscrew and remove the battery cover.
2. Insert 3 AAA batteries (not included), noting polarity.
3. Restore the battery cover to its original position and re-insert the screw.
4. While only running on battery power, the light will automatically shut off after 60 minutes of continuous operation.

**NOTE:** Battery replacement must be done by an adult. Dispose of used batteries safely — never in a fire as they may leak and explode. Do not mix old and new batteries.



**FIGURE A**

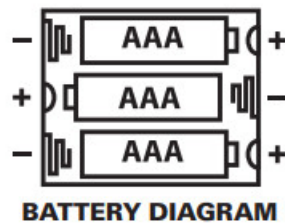

**FIGURE B**



**USB-A**



**MICRO-USB**



**FIGURE C**

## MICRO-USB POWER MODE

1. Insert the micro-USB into the port on the back of the light.
2. Plug the included micro-USB cable into a standard 5V, 0.5A USB-A receptacle or power adapter (not included).
3. A green indicator LED will turn on, showing the light is using USB power. When micro-USB is being used, battery power will be reserved.

**NOTE:** Micro-USB cable does not charge the batteries. If your power ever goes out, the light will still activate using the 3 AAA batteries.

## OPERATION

Press the small power button on the back of the light to turn the light ON/OFF. To change modes, pick up the light and lightly tap the base before gently putting it back down.

1. High/Low White Light: The default mode is High White Light. Tap the base once to transition into Low White Light.
2. Color Strobe: Tap a second time and the light will slowly strobe through all color options.
3. Single Color: Once your preferred color appears in the previous model, tap the base of the light to stop the cycle on that color. Tapping the base after this will turn the light back to High White Light. Color options include Red, Yellow, Pink, Dark Green, Light Blue, Green, Dark Blue, and Purple.

**NOTE:** You must press the power button on the back to fully deactivate the light.

## FCC STATEMENT:

Suppliers Declaration of Conformity | Model #: 59415 | Jasco Products Co.,  
10 E. Memorial Rd., Oklahoma City, OK 73114, [www.byjasco.com](http://www.byjasco.com)

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



## CAUTION

- HAVE AN ADULT REMOVE AND DISPOSE OF ALL PACKAGING, TIES, AND FASTENERS BEFORE USE.
- NOT INTENDED FOR USE BY CHILDREN UNDER THE AGE OF 2 YEARS.



- DO NOT USE WITH EXTENSION CORDS
- USE INDOORS ONLY
- DO NOT USE IN WET LOCATIONS
- PLUG ONLY INTO USB SAFETY CERTIFIED TYPE-A PORT
- REMOVE BATTERIES WHEN NOT IN USE OR DISCHARGED
- DO NOT MIX OLD AND NEW BATTERIES
- DO NOT USE RECHARGEABLE BATTERIES
- DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES

**Thank you** for your purchase!  
Instructions made easy



<https://byjasco.com/59415i>

Read instructions or watch the easy-to-follow videos. Scan code or visit [byjasco.com/59415i](https://byjasco.com/59415i)

*Exclusive deals*



<https://byjasco.com/deals>

For deals, to register your purchase and to tell us how we're doing, simply scan the code or visit [byjasco.com/deals](https://byjasco.com/deals)



Discover innovative lighting solutions at [www.byjasco.com/lighting](http://www.byjasco.com/lighting)



### Like our product?

Leave a review on your favorite retailer website or [amazon.com](http://amazon.com)

### Having problems?

Let us know how we can help.

1-800-654-8483 between 7 AM-8 PM,

M-F, Central Time.



### 100% Recyclable

Separate paper from the plastic before recycling [byjasco.com/recycle](http://byjasco.com/recycle) paper made from 25% post-consumer waste.

### MADE IN CHINA

Distributed by Jasco Products Company LLC,  
10 E. Memorial Rd., Oklahoma City, OK 73114.

This Jasco product comes with a 90-day limited warranty. Visit [www.byjasco.com](http://www.byjasco.com) for warranty details.

Questions? Contact our U.S.-based

Consumer Care at 1-800-654-8483

between 7 AM-8 PM, M-F, Central Time.

## Documents / Resources



[JASCO 59415 Color Changing Llama Squishy Light](#) [pdf] Instructions

59415 Color Changing Llama Squishy Light, 59415, Color Changing Llama Squishy Light