



# Jasco 67204 3 Device Universal Replacement Vizio Remote User Manual

[Home](#) » [JASCO](#) » Jasco 67204 3 Device Universal Replacement Vizio Remote User Manual 

## Contents

- [1 Jasco 67204 3 Device Universal Replacement Vizio Remote](#)
- [2 Setup](#)
- [3 Button Functions](#)
- [4 Direct Code Entry](#)
- [5 Auto Code Search](#)
- [6 Code Identification](#)
- [7 Master Volume Control](#)
- [8 Troubleshooting](#)
- [9 Reset to Factory Setting](#)
- [10 Contact](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)



**Jasco 67204 3 Device Universal Replacement Vizio Remote**



See reverse for easy-to-follow instructions and exclusive deals.

## Setup

Your universal remote requires two AAA batteries (not included). Alkaline batteries are recommended.

### Battery Installation

1. Press arrow on back of remote and slide cover downward to remove.
2. Insert the batteries, making sure to match the(+)(-) polarity inside the compartment.
3. Replace cover and slide it upward until it clicks into place.

**Note:** If your remote is not operating properly, replace the batteries with new ones.

### Battery Precautions

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with local and national regulations.

 
## Battery Saver

Your remote automatically turns off if the buttons are pressed for more than eight seconds. This saves battery life if your remote gets stuck in a place where the buttons remain depressed (e.g. between sofa cushions).

## Code Saver

- You have up to 10 minutes to change the batteries in your remote without losing the programmed codes.

## Button Functions

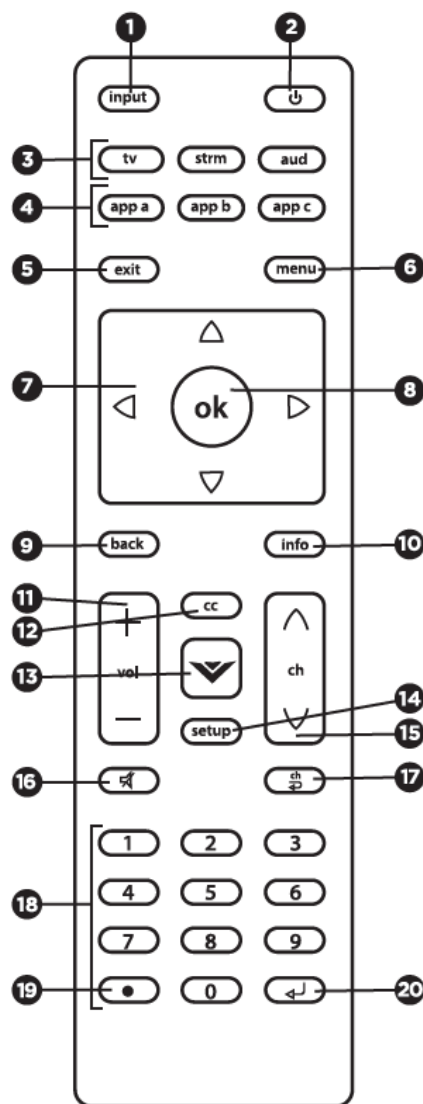


1. Input – Selects video input
2. Power – Turns devices ON/OFF
3. TV, STRM, AUD – Select the device to control
4. App hotkeys – Preprogrammed to accesses your smart TV or streaming device's top three streaming apps, such as Netflix, Hulu or Amazon Prime
5. Exit – Exits on-screen menu
6. Menu – Displays the on-screen menu
7. Up/down/left/right – Menu navigation

8. Ok – Selects menu items for the controlled device
9. Back – Returns to previous screen
10. Info – Displays on-screen show/content information
11. Volume up/down
12. CC – Closed captioning
13. V button – Opens the Vizio Internet Apps Plus® dock
14. Setup – Used to program the remote
15. Channel up/down
16. Mute – Mutes sound
17. Previous channel – Returns to the previously selected channel
18. Numbers – For direct channel selection
19. Dot(.) – Use to select digital channels, e.g., 4.1
20. Enter – For devices that require enter to be pressed after channel selection

## Direct Code Entry

 Direct code entry is recommended for quick and easy programming.

**Note:** The TV device button is preprogrammed for Vizio TVs. and the STRM device button is preprogrammed for Roku boxes.

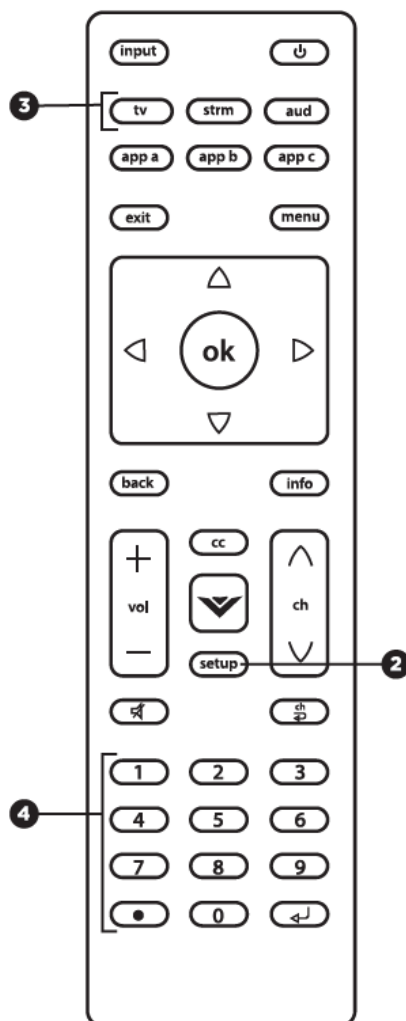

1. In the code list included with your remote, circle the four-digit codes for the type and brand of device you wish

to control.

2. Press and hold down the setup button until the remote's red light turns on. Release the setup button. The red light will remain on.
3. Press and release the chosen device button (TV, STRM, AUD). The red light will blink once and remain on.
4. Enter the first four-digit code drclared in Step 1 The red light will turn off.
5. Point the remote at the device and test the buttons. If they don't work as expected, repeat Steps 2-5 with the next circled code.
6. Repeat the process for each device you wish to control.


### **Programming Notes**

 - Some codes may operate only a few device functions, so test other codes for more functionality.
- Trouble finding a code? Program the remote using t he auto code search method.
- For combination devices, such as a TV/DVD combo or TV/VCR combo, you may have to enter a code for each device.
- Keep your device codes for future reference.

### **Auto Code Search**

Auto code search cycles through all codes in the remote to find one for your device.

Before you begin, read through the steps below to familiarize yourself with the auto code seach process.

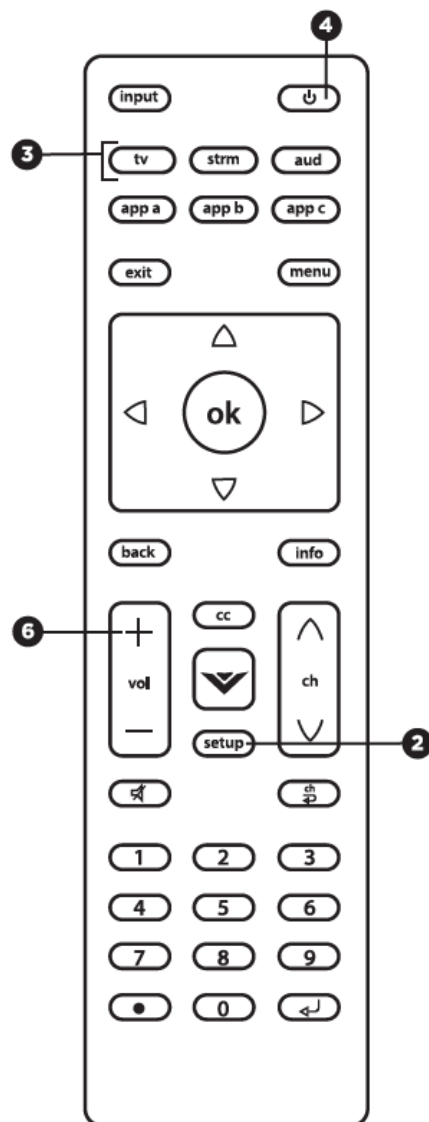

1. Manually turn on the device you wish to control. Use direct code entry method for devices without ON/OFF capability.
2. Press and hold down the setup button until the remote's red light turns on. Release the setup button. The red light will remain on.
3. Press and release the chosen device button (TV, STRM, B-RAY, AUD). The red light will blink once and remain on.
4. Point the remote at the device, then press and release the power button. The red light will blink and then remain on after cycling through 10 codes.
  - Did the device turn off?
    - **YES:** Go to Step 5
    - **NO:** Repeat Step 4 to test the next 10 codes.
5. Manually turn on the device.
6. Point the remote at the device, then press and release vol+. The red light will blink once and remain on.
  - Did the device turn off?
    - **YES:** Press and release the same device button pressed in Step 3. This stores the code in the remote. Go to Step 7.
    - **NO:** Repeat Step 6 until the device turns off. Wait three seconds between each vol+ button press.
7. Use the remote to turn on the device. Test the remote's buttons. If they don't work as expected, repeat Steps 2-7.

8. Repeat the process for each device you wish to control.

## Code Identification

Code identification retrieves the four-digit code used to program each of your device buttons.



 
1. Press and hold down the setup button until the red light turns on. Then, release it. The red light will remain on.
2. Press and release the device button for the code you seek.
3. Press and release enter.
4. On the number pad, press and release #1 and count how many times the red light blinks. This is the first digit in your code. Repeat the process by pressing #2, #3 and #4 for the remaining digits.
5. Press and release enter to exit this mode.

## Combo Devices

Some combo devices (e.g. TV/VCR, DVD/ VCR. etc.) require use of a separate mode button for each part of the combo device. For example, if you have a TV/DVD combo, you might need to set up a TV code under the TV button and a separate DVD code under the DVD button to control each component.

## Master Volume Control

Master volume control selects an audio device to control the volume no matter which component you're operating.

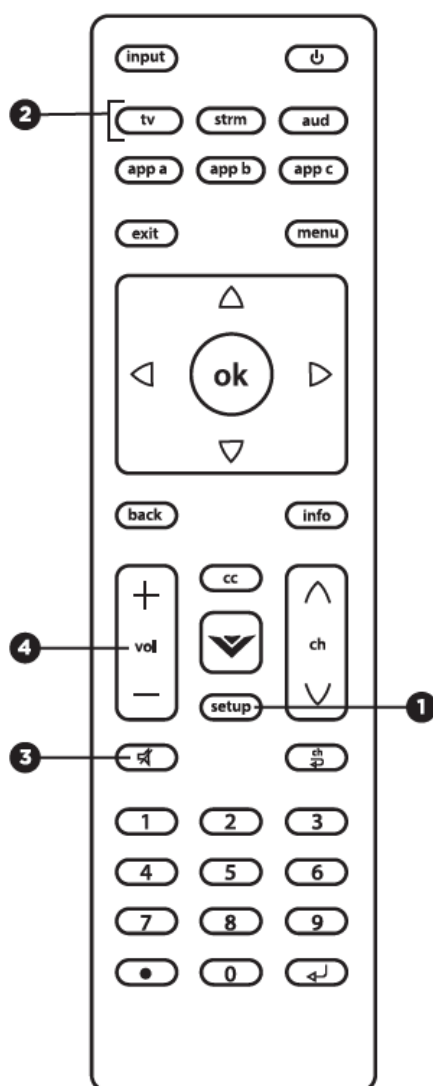

### Enabling Master Volume Control

1. Press and hold the setup button until the red light remains on, then release it. The red light will remain on.
2. Press and release the device button for the audio component you wish to use.
3. Press and release the mute button.
4. Press and release vol+. The red light will blink twice and turn off.

### Disabling Master Volume Control

1. Press and hold the setup button until the red light remains on, then release it. The red light will remain on.
2. Press and release the device button previously programmed for master volume control.
3. Press and release the mute button.
4. Press and release vol-. The red light will blink twice and turn off.

## Troubleshooting



## Remote does not operate your device

- Make sure the batteries are fresh and installed correctly.
- Aim the remote directly at your device and make sure there are no obstructions between the remote and the device.
- Make sure you select the appropriate device on the remote you wish to control (TV for TV, STRM for streaming media players, 8-RAY for Blu-ray™ and AUD for audio equipment).
- Try programming the remote with a different code. See Direct Code Entry section.
- Remote may not be compatible with your device.

## Remote does not operate some features of your device

- Sometimes a particular code might operate a few features but not all. Try programming the remote with a different code from the Code List. See Direct Code Entry section.
- Remote may not be able to operate all features of your device or button names may be different than that of your original remotes.

## Reset to Factory Setting

1. Press and hold setup until the red light stays on, then release it. The red light will remain on.
2. Press and release the mute button.
3. Press and release 0 (zero). The red light will blink twice.

## Contact

MADE IN CHINA

- Distributed by Jasco Products Company LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114.
- This Jasco product comes with a limited-lifetime warranty Visit [www.byjasco.com](http://www.byjasco.com) for warranty details.
- **Questions?** Contact our U.S.-based Consumer Care at 1-800-654-8483 between 7 AM-8PM M-F, Central Time.

For product patent information, visit: [www.byjasco.com/patents](http://www.byjasco.com/patents).

Thank you for your purchase!

**Instructions made easy**



- Read instructions or watch easy-to-follow video.
- Scan code or visit [byjasco.com/67204i](https://byjasco.com/67204i)

### Register your product



- Receive exclusive deals and register your product.
- Scan code or visit [byjasco.com/jdeals](https://byjasco.com/jdeals)

Enhance your home entertainment experience at [byjasco.com/ce](https://byjasco.com/ce)

 
### Like our product?

- Leave a review on [amazon.com](https://amazon.com)

### Having problems?

- Let us know how we can help.
- Call 1-800-654-8483 between 7AM-8PM, M-F, Central Time.

### Documents / Resources

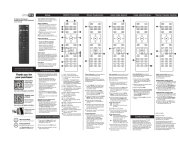

[Jasco 67204 3 Device Universal Replacement Vizio Remote](#) [pdf] User Manual  
67204 3 Device Universal Replacement Vizio Remote, 67204, 3 Device Universal Replacement  
Vizio Remote, Replacement Vizio Remote, Vizio Remote, Remote