




JAXJOX JJ07632 Ultimate 360 Interactive Studio User Manual

[Home](#) » [JAXJOX](#) » JAXJOX JJ07632 Ultimate 360 Interactive Studio User Manual 

JAXJOX[®]

Interactive Studio

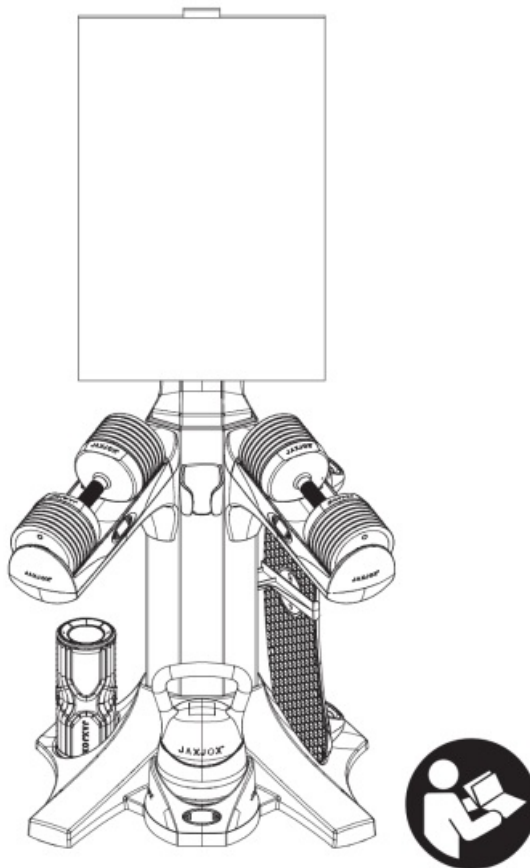

User Manual

Contents

1 Specifications:

1.1 Setting Up Your Interactive Studio

1.2 Assembly:

2 MAINTENANCE AND CARE


3 SAFETY WARNINGS

4 FCC STATEMENT

5 Documents / Resources

6 Related Posts

Specifications:

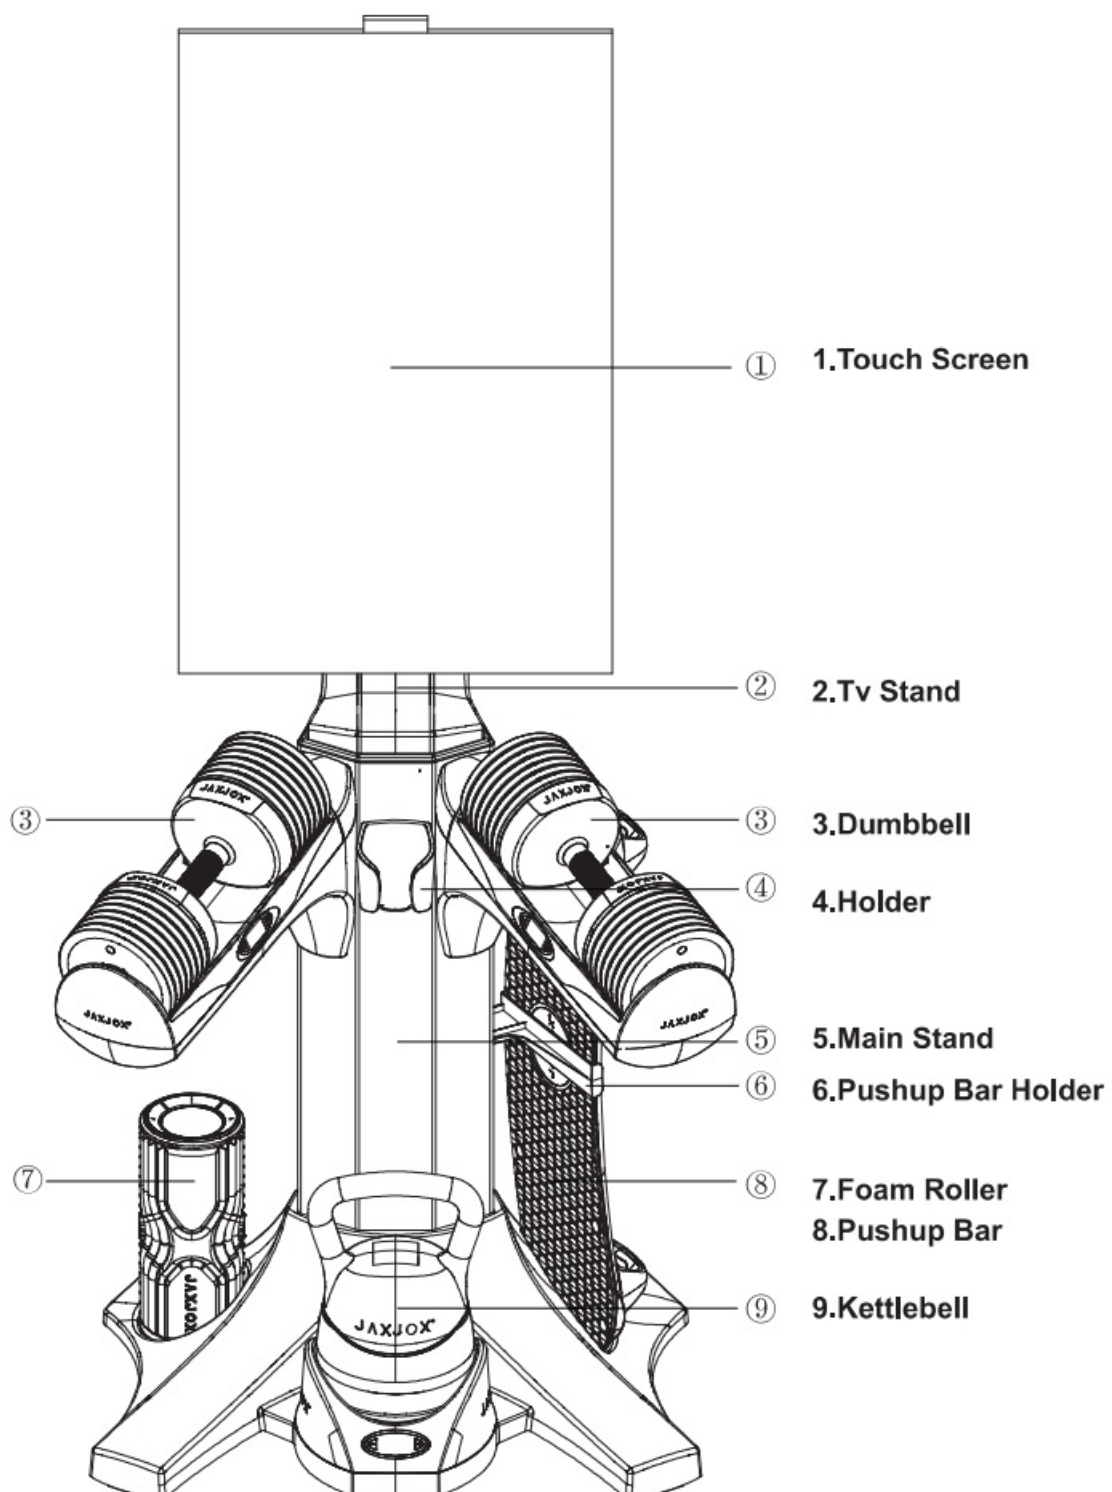

INTERACTIVE SPECIFICATIONS

Product Size: L980mmx W711mmx H1900mm
Power Consumption:
TV on: Max 100w
Chargeable port: Max 10W
Standby mode: Max 2.5W




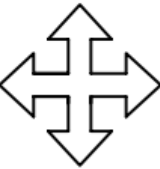


TOUCHSCREEN SPECII
43" 4K Touchscreen
WIFI, Bluetooth4.2
32GB Memory
LED Backlight





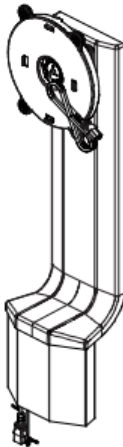
 







 

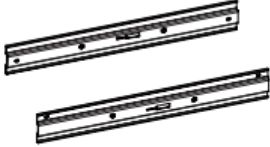


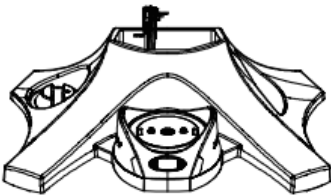

Setting Up Your Interactive Studio

LOCATION REQUIREMENTS.

- 1. Place the equipment on a solid, level surface.
- 2. Use a mat to avoid damaging the equipment and floor.
- 3. Do not use extension cords or adaptors. The included power cord must be able to reach an outlet


Assembly:

					
Tightening direction	Unscrew direction	+ Tightening - Unscrew	Adjust	Allen wrench	screwdriver


<div>Main Base 1X</div> <div></div>		<div>Left Dumbbell Base 1X</div> <div></div>		<div>Right Dumbbell Base 1X</div> <div></div>	
<div>Main Stand 1X</div> <div></div>	<div>TV Stand 1X</div> <div></div>	<div>Dumbbell 2X</div> <div></div>		<div>Dumbbell Weight 2X</div> <div></div>	
		<div>Kettle Bell 1X</div> <div></div>	<div>Kettlebell Weight 1X</div> <div></div>	<div>Foam Roller 1X</div> <div></div>	
<div>Pushup Bar 1X</div> <div></div>					
<div>Touch Screen 1X</div> <div></div>		<div>Waterbottle Holder 1X</div> <div></div>	<div>Pushup Bar Holder 1X</div> <div></div>	<div>Manual 1X</div> <div></div>	
		<div>TV Holder 1X</div> <div></div>		<div>Power Cord 1X</div> <div></div>	
		<div>Screw M5*15 4X</div> <div></div>	<div>Screw PWM6*25 4X</div> <div></div>	<div>Wrench M5</div> <div></div>	

1. Install the interactive studio base and main stand.

1.1 Insert the plug according to the instruction, make sure the male and female plugs connect well, not loosen.

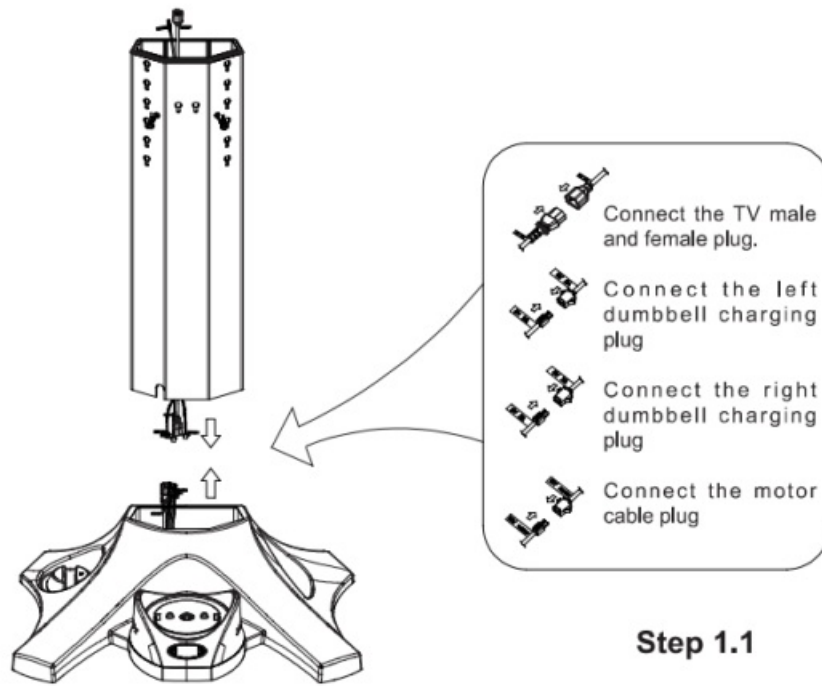


1.2 Put the notched end of the main stand down and insert it into the main base. Note: Do not rush the cable at the bottom of the main stand.

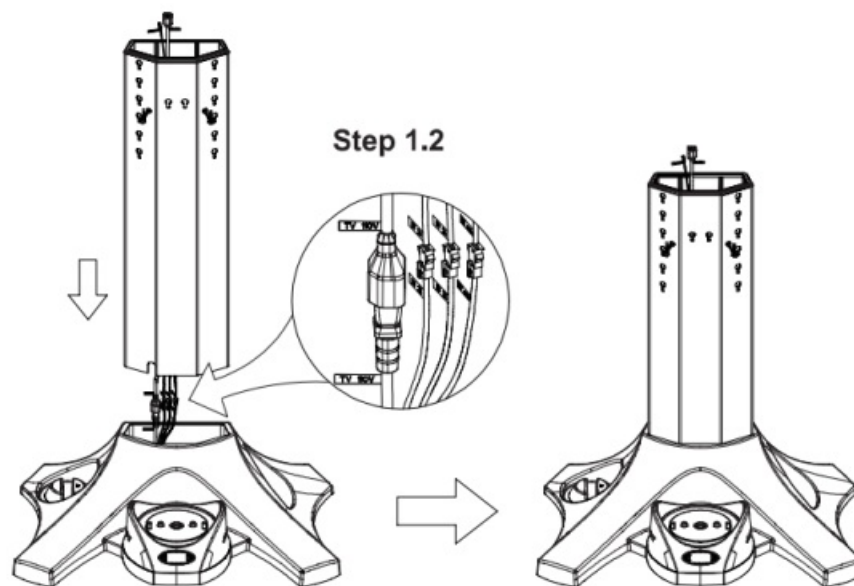


2. Install Dumbbell.

2.1.1 Assemble the left dumbbell. Connect the charging plug, make sure the male and female plugs connect well, not loosen.

2.1.2: Hang the left dumbbell base into the gourd hole on the top of the main stand. Note: Do not crush the cable.

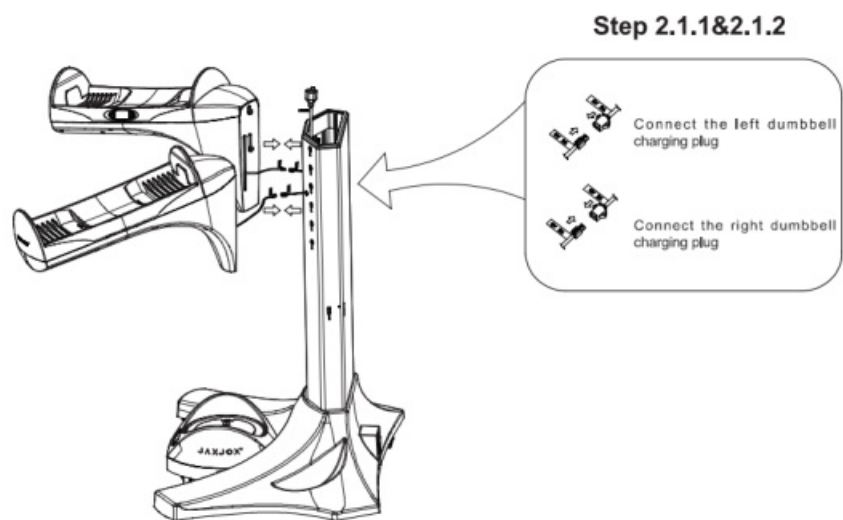


2.2.1 Install the right dumbbell. Connect the charging plug, make sure the male and female plugs connect well, not loosen. 2.2.2 Hang the right dumbbell base into the gourd hole on the top of the main stand. Note: Do not crush the cable.

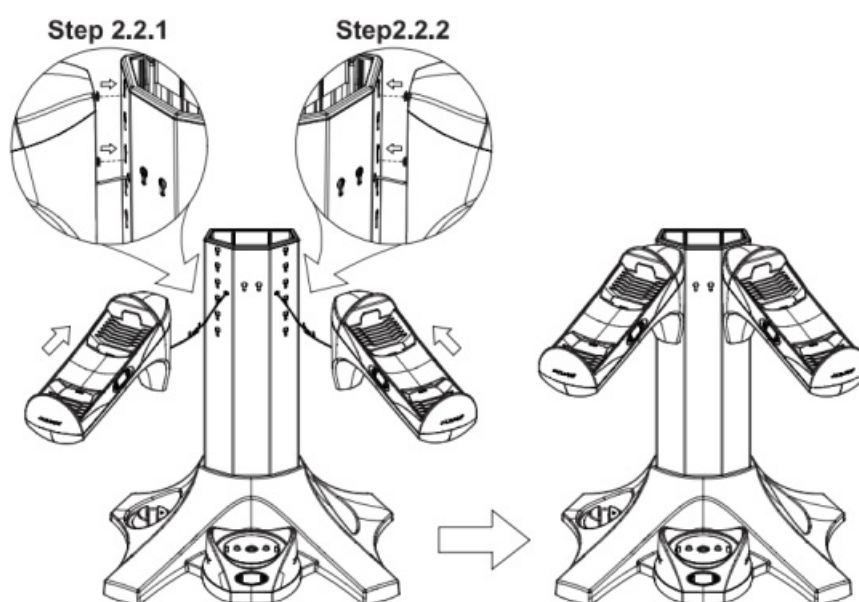

3. Install TV to the stand.


3.1 Install the TV holder. Using 4 screws(PWM6*25) to fix the TV upper and lower holder with a wrench, lock the screw. Note: Protect the TV camera and avoid damage to the TV during installation.

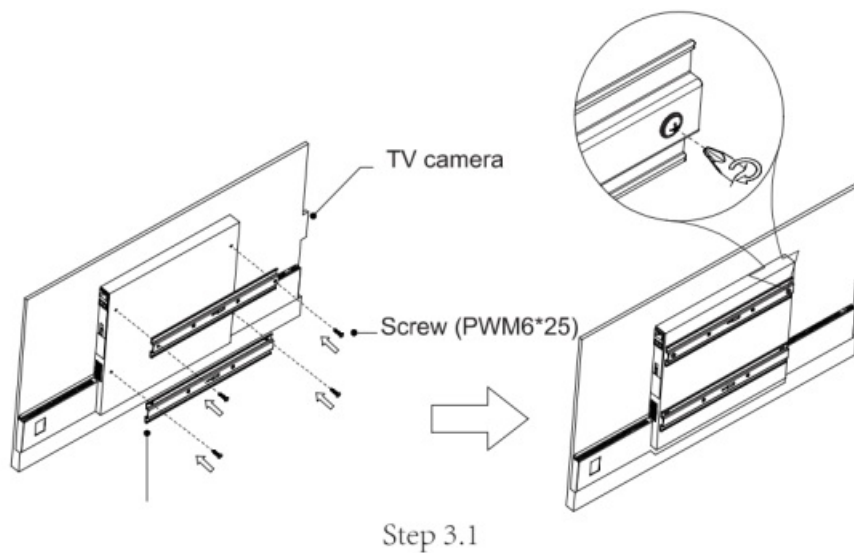

3.2 Install the TV stand.


Using 4 screws(PM5.10) to fix the turntable, lack the screw.

3.3 Plug the TV power cord into the power jack at the side of the TV.

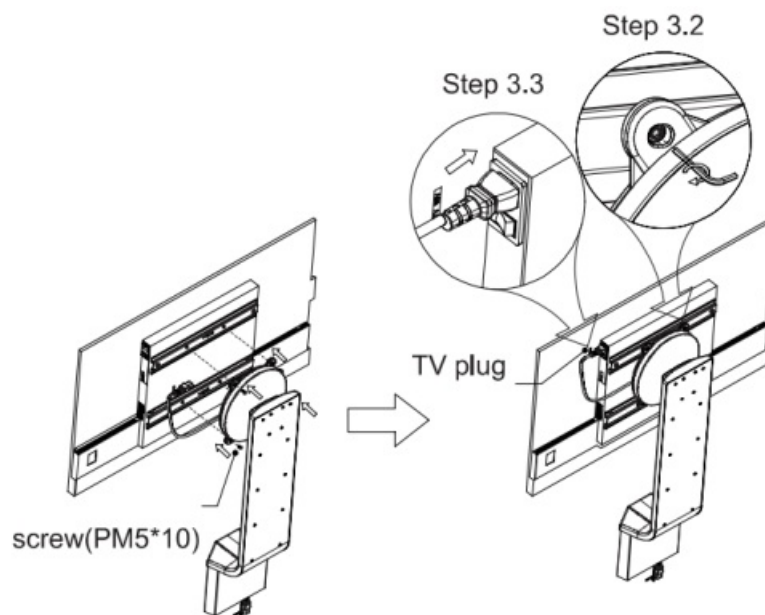


4. Install the main stand and TV stand.

4.1 Connect the TV and motor plug, make sure the male and female plugs connect well, not loosen.

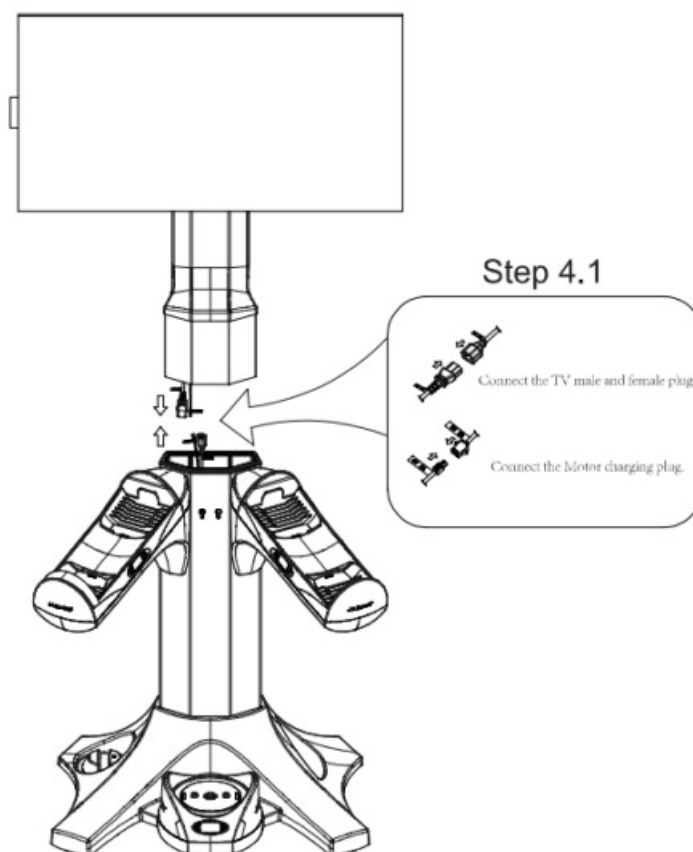


4.2 Put the TV stand into the main stand. Note: Do not crush the cable.

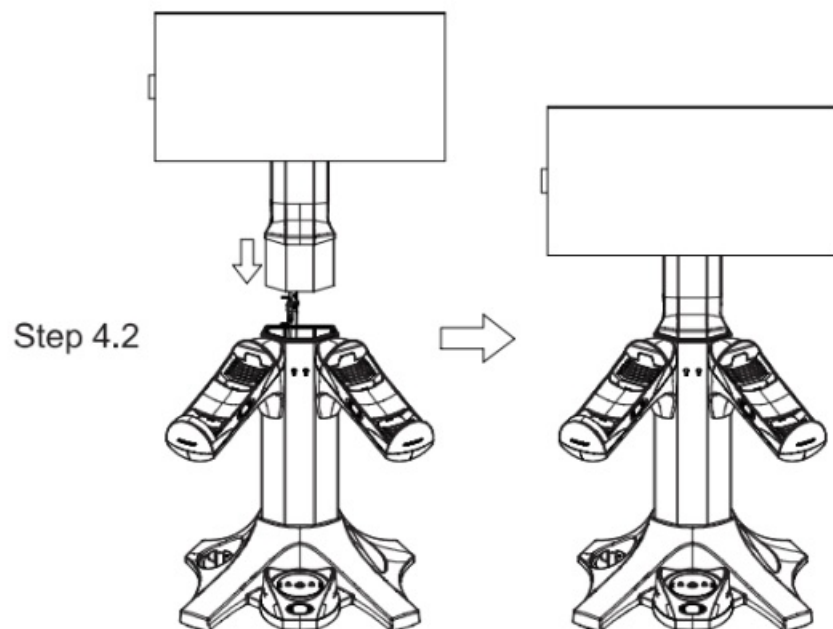


5. Install Push up Bar Holder

5.1 Put the push-up bar holder into the gourd hole on the main stand

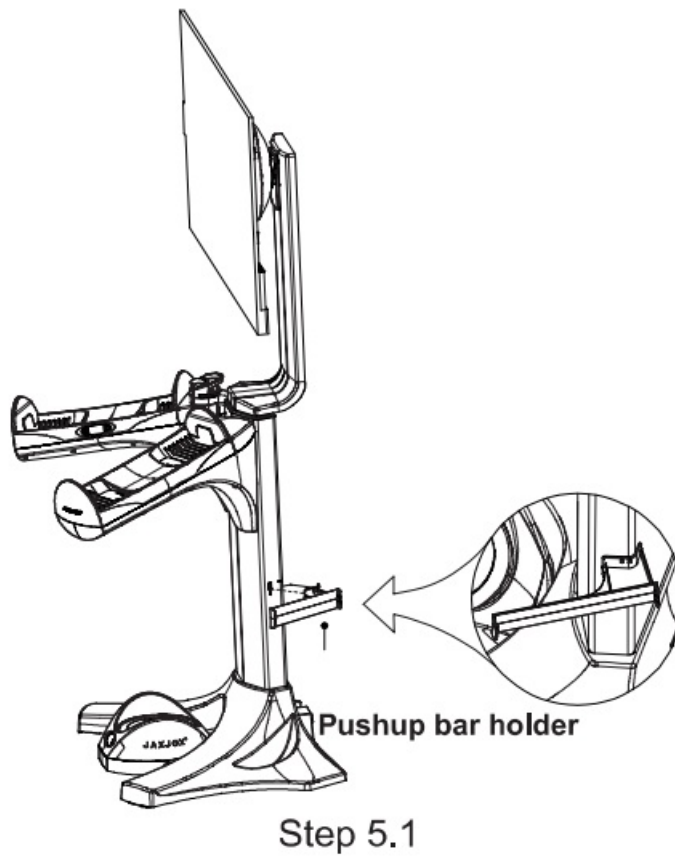

6. Plug-In.


6.1 After installation, check all the components are ready and plug the power cord into the power jack at the bottom of the base.

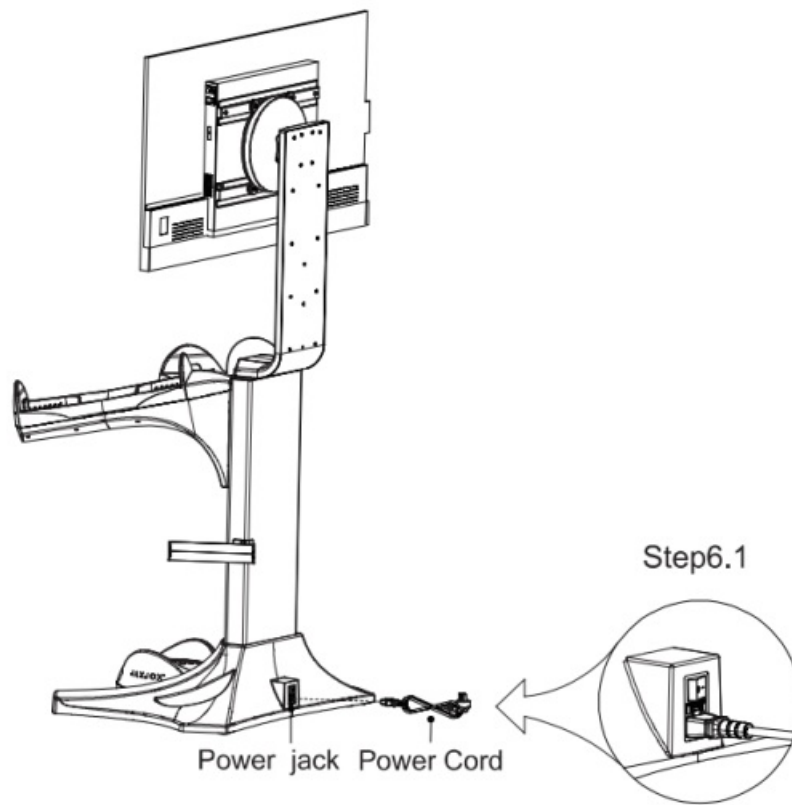


7. Charge and use the fitness device. (Foam roller, Kettlebell, Pushup bar, Dumbbell).

- (1). Left dumbbell
- (2). Right dumbbell
- (3). Foam Roller
- (4). Pushup Bar
- (5). Kettlebell


7.1 Foam Roller charging.

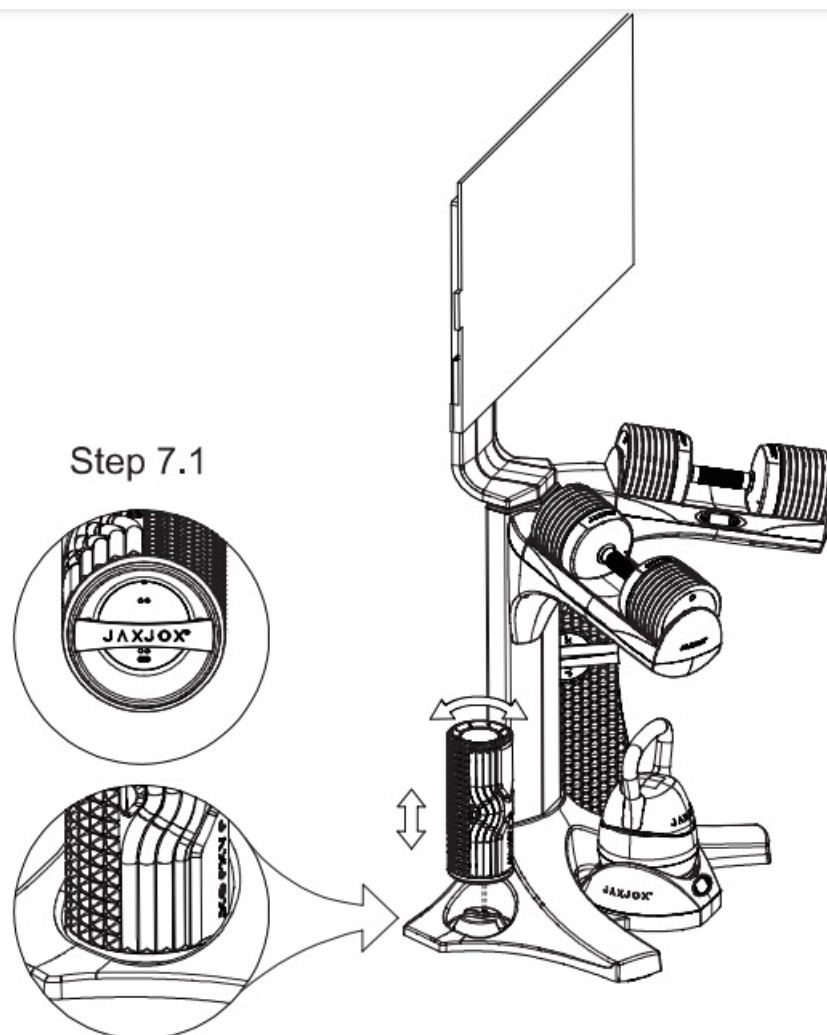

7.2 Kettlebell charging.

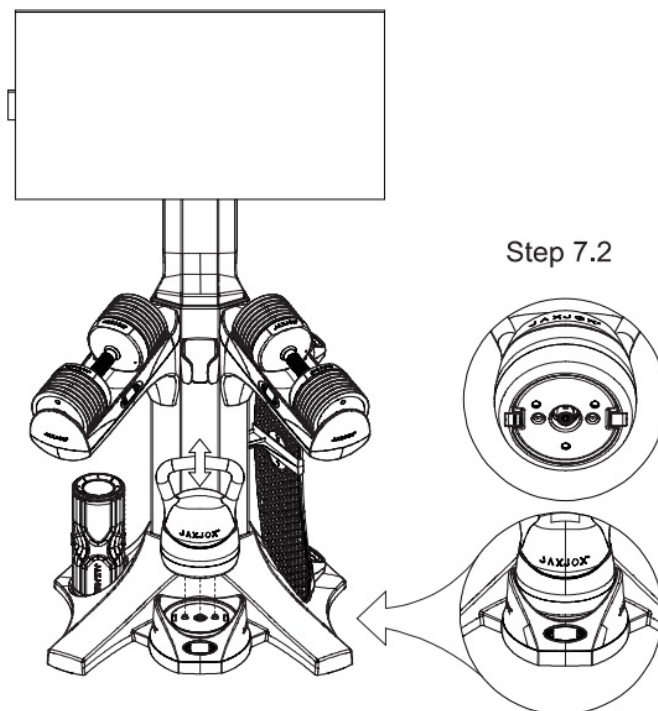


7.3 Pushup Bar charging, put the pushup bar into the main stand according to the instruction.

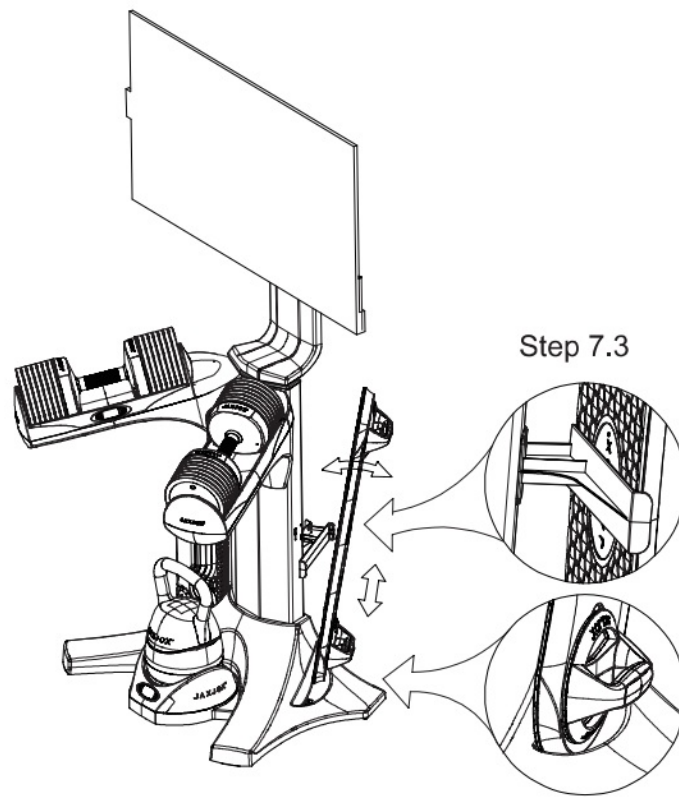


7.4 Dumbbell charging,

7.4.1 Put back the dumbbell weight into the dumbbell base.

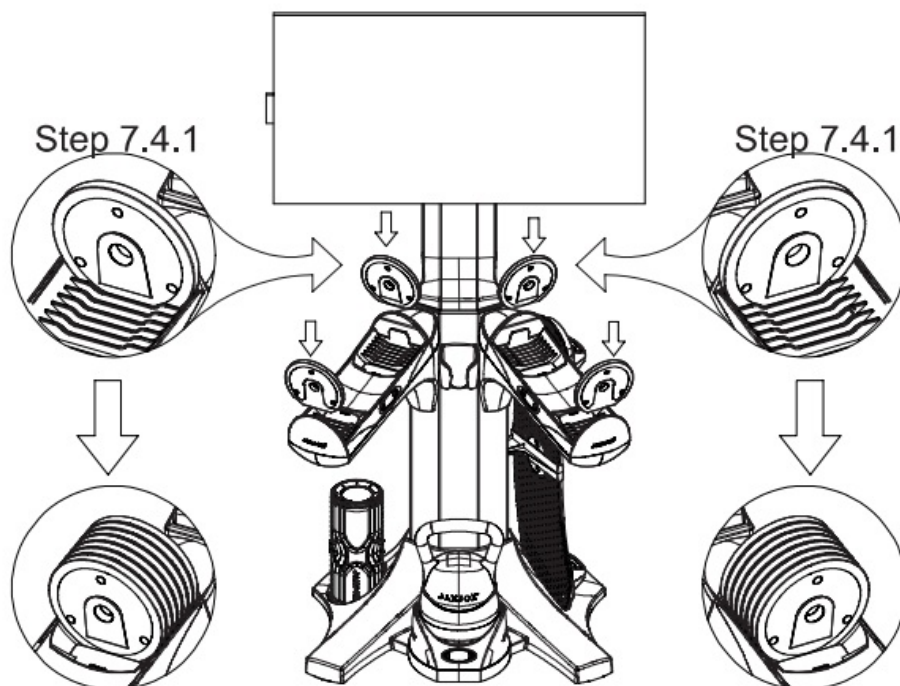


7.4.2 Put back the dumbbell handle into the dumbbell base, then charge and use.

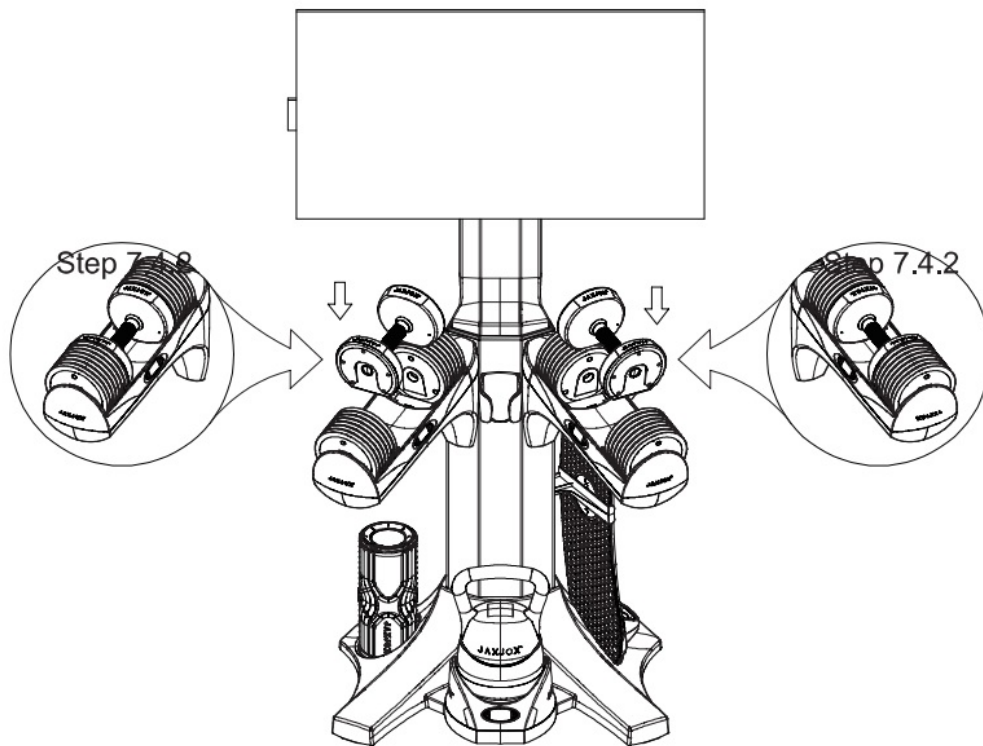

7.5 Rotating the touch screen.

Using the app to adjust the TV to display horizontal or vertical screen state automatically.

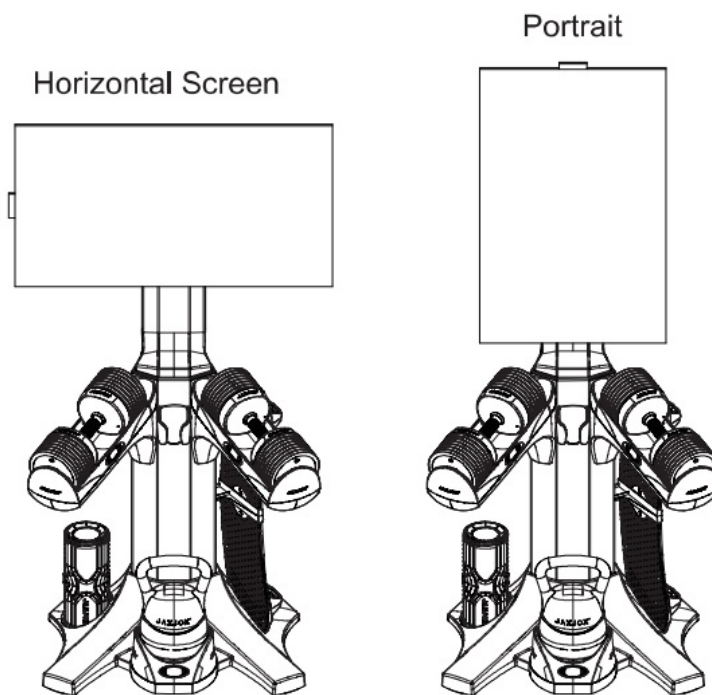

Step 7.5

MAINTENANCE AND CARE

CAUTION: To ensure safe operation and optimal performance, check for wear and damage and perform maintenance on a regular basis. Replace any damaged or defective parts immediately. Do not use the studio until the repair is performed. Only use original parts from the manufacturer. Changes or modifications to this until not expressly approved by JAXJOX could void and warranty.

CAUTION: Always unplug the studio immediately after use and before cleaning or performing maintenance. Service other than the procedures described here must be performed by an authorized technician.

CAUTION:

1. If you have any problems with installation, pls contact the local installer.
2. If the product and accessories are damaged or missing, please do not assemble or install them. If you need to replace parts, please contact your local dealer for help.
3. Except for the purpose-designed by the product itself, please do not use the product in other
4. The manufacturer hereby declares that it will not bear any legal responsibility for the damage or damage caused by the following situations: the product is modified by itself, installed improperly, or installed beyond the load-bearing range of this product, or improper use causes the product to wear or damage.

AFTER USING:

1. **Sort** out: Put back all the exercise devices to the base.
2. Cleaning: Wipe down the device using a damp cloth.

WARNING: To reduce your risk of injury, read all precautions and instructions in this manual before using this equipment. Improper use or maintenance can void the warranty. Keep this manual for future reference. Access the latest user manual, at jaxjox.com

SAFETY WARNINGS

The JAXJOX Interactive studio is very heavy — we recommend placing it on the floor to minimize the risk of injury. Before starting your workout, ensure your environment is free of anything that may interfere with your movements. When moving the device, disassemble all of the parts and reassemble them in the new location. Do not attempt to move the entire unit at one time.

Consult your physician before starting a workout plan. If you experience faintness, pain, or shortness of breath, stop exercising immediately, and consult a physician. Select a weight and perform a workout that is appropriate for your fitness level. Before exercising, please carefully evaluate your own state and do warmup exercises.

The studio is not a toy. Do not allow children or pets to play with or around the device. Supervise and provide instruction to anyone under the age of 18 using the device.

Do not drop the kettlebell or use excessive force when using the kettlebell. Do not move the studio is for indoor use only. Avoid using it near water, or in high humidity areas such as a sauna or steam room.

Prior to cleaning, unplug the studio. To clean the device, use a dry or slightly damp cloth. Avoid using detergents. Avoid water coming in contact with the base, as it contains sensitive electronics.

Use only original parts from the manufacturer. Changes or modifications to this unit not expressly approved by JAXJOX could void the warranty.

Notices:

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. **WARNING:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device,

pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful

interference in a residential installation.

 
This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.

Responsible Party (Contact for FCC matters only): JAXJOX Inc.
8720 148th Ave NE Redmond,
WA 98052
USA
www.jaxjox.com/contact

Documents / Resources

	<p>JAXJOX JJ07632 Ultimate 360 Interactive Studio [pdf] User Manual JJ07632, 2ATPZJJ07632, JJ07632 Ultimate 360 Interactive Studio, Ultimate 360 Interactive Studio</p>
---	---