 


Jaycer Handheld Game Console User Manual

[Home](#) » [Jaycer](#) » Jaycer Handheld Game Console User Manual 

Jaycer Handheld Game Console

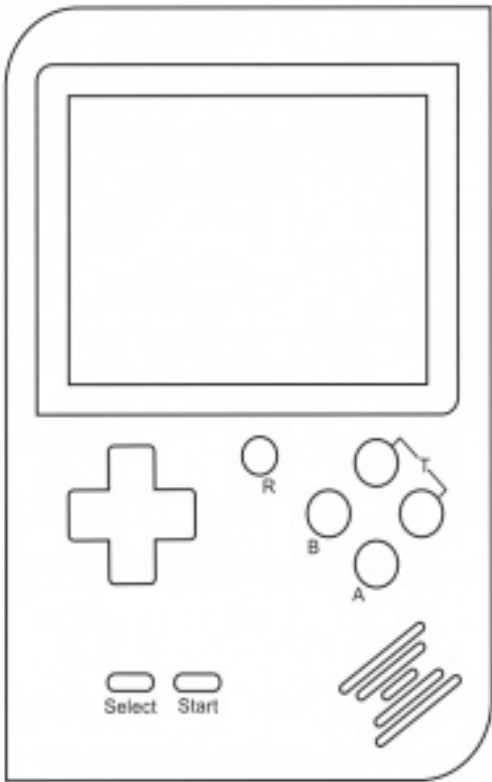

 
Contents

 
- [1 Box Contents](#)
- [2 Product Diagram](#)
- [3 Operation](#)
- [4 Charging](#)
- [5 TV Out](#)
- [6 Troubleshooting](#)
- [7 Safety](#)
- [8 Specifications](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

Box Contents

- 1 x Handheld Game Console
- 1 x Rechargeable Lithium Battery
- 1 x 3.5mm to RCA TV Cable
- 1 x USB Charging Cable

Product Diagram

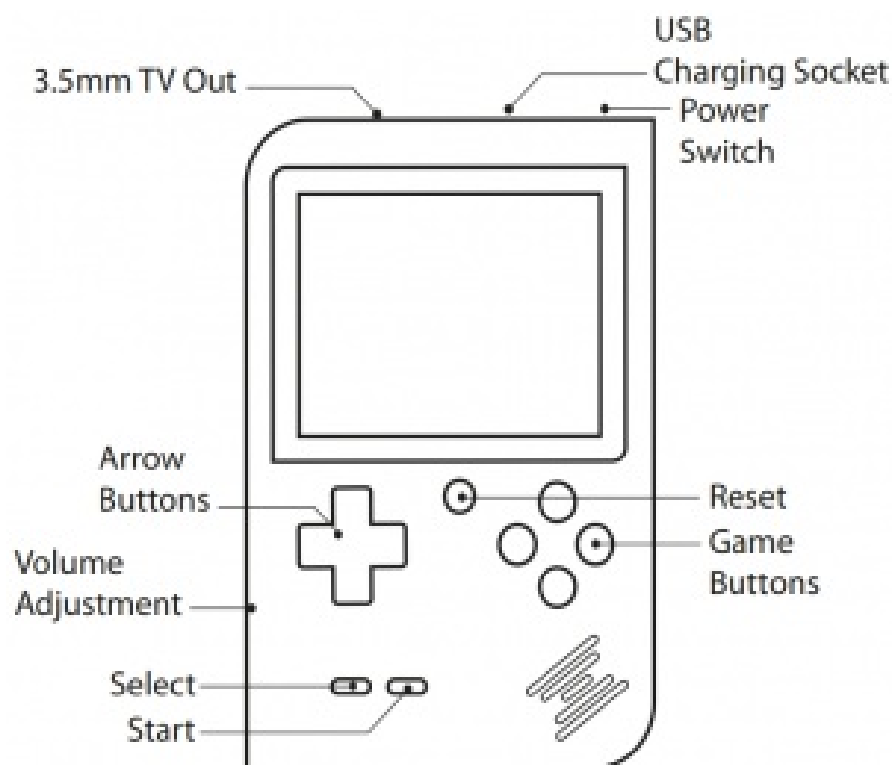

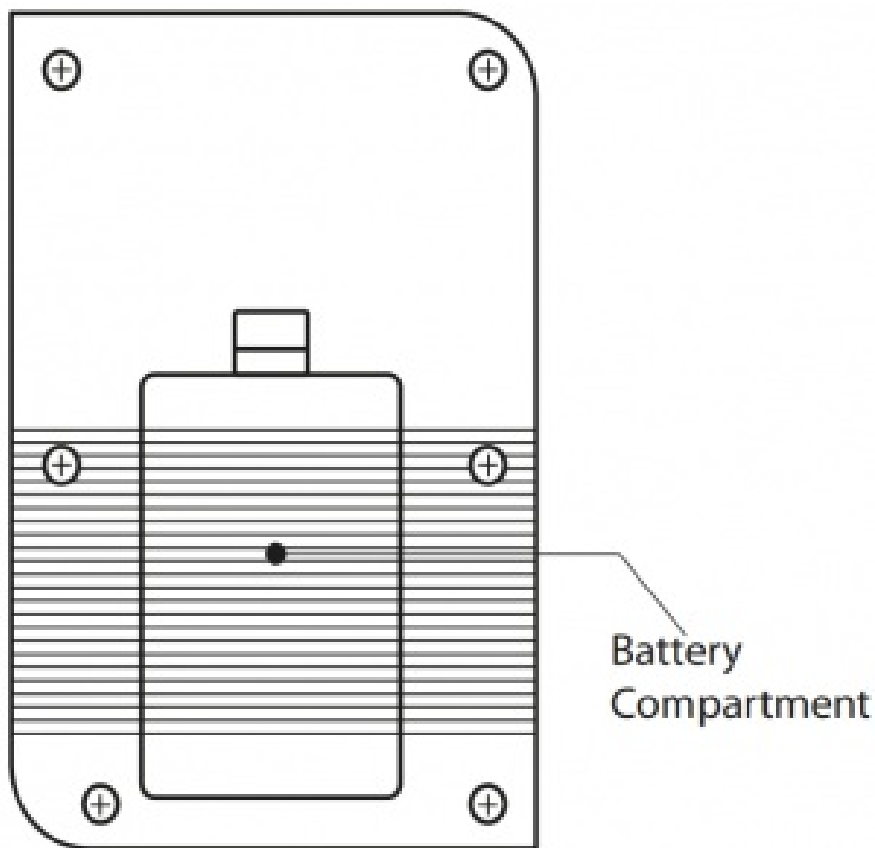

Operation

1. Press the power switch located at the top of the unit to on.
2. You will not see the list of 256 games display. Press the up and down arrow to cycle through the games or press the right or left arrow to turn to the next or previous page of games.
3. Press the A button to select a game you want to play.
4. Depending on the game you're playing, press the start button to proceed to the game.
5. You can now use the arrow and game buttons to start playing the game.
6. Press the start button to pause the game, press it again to unpause.
7. Press the reset button to reset back to the main screen to select another game.
8. The volume can be adjusted by the adjustment dial on the left hand side of the unit.

Charging

1. Plug the USB mini B cable into the USB charging socket located on the top of the unit.
2. Plug the opposite end of the USB cable to a USB mains power adaptor or USB port on a computer to start charging.
3. The charging will be completed after 2 hours.

TV Out

1. Connect the 3.5mm RCA cable to the 3.5mm socket located on the top of the unit.
2. Connect the opposite end to the yellow and red RCA sockets on the back of your TV.
3. It will now start displaying on your TV

Troubleshooting

Problem: Sound or video is distorted.

Answer: The battery is running low; start charging the game console

Problem: The game console won't start.

Answer: The battery is too low; start charging the game console.

Safety

1. Do not open the case of the game console to avoid damage and injury.
2. Keep the game console away from high temperatures as it may cause damage to the battery.
3. Do not expose the game console to water, moisture or liquids to prevent the unit from damage.

Specifications

- **CD:** 2.8"
- **Play Time:** 3-4 Hours
- **Charge Time:** Up to 2 Hours
- **Battery:** 3.7V Li-ion, 800mAh (BL-5C)
- **Power:** 5VDC, 500mA (Mini B USB)
- **Dimensions:**116(H) x 79(W) x 22(D)mm

Distributed by:

Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere NSW 2116 Australia

Ph: 1300 738 555

Int'l: +61 2 8832 3200

Fax: 1300 738 500

www.techbrands.com

HANDHELD GAME CONSOLE

Documents / Resources

	Jaycer Handheld Game Console [pdf] User Manual Jaycar, GT-4280, Game Console
---	---

References

- [Electus Distribution - Home](#)