



JEGS 52-44410 AccuTech Stepper Motor Tachometer Filter Instructions

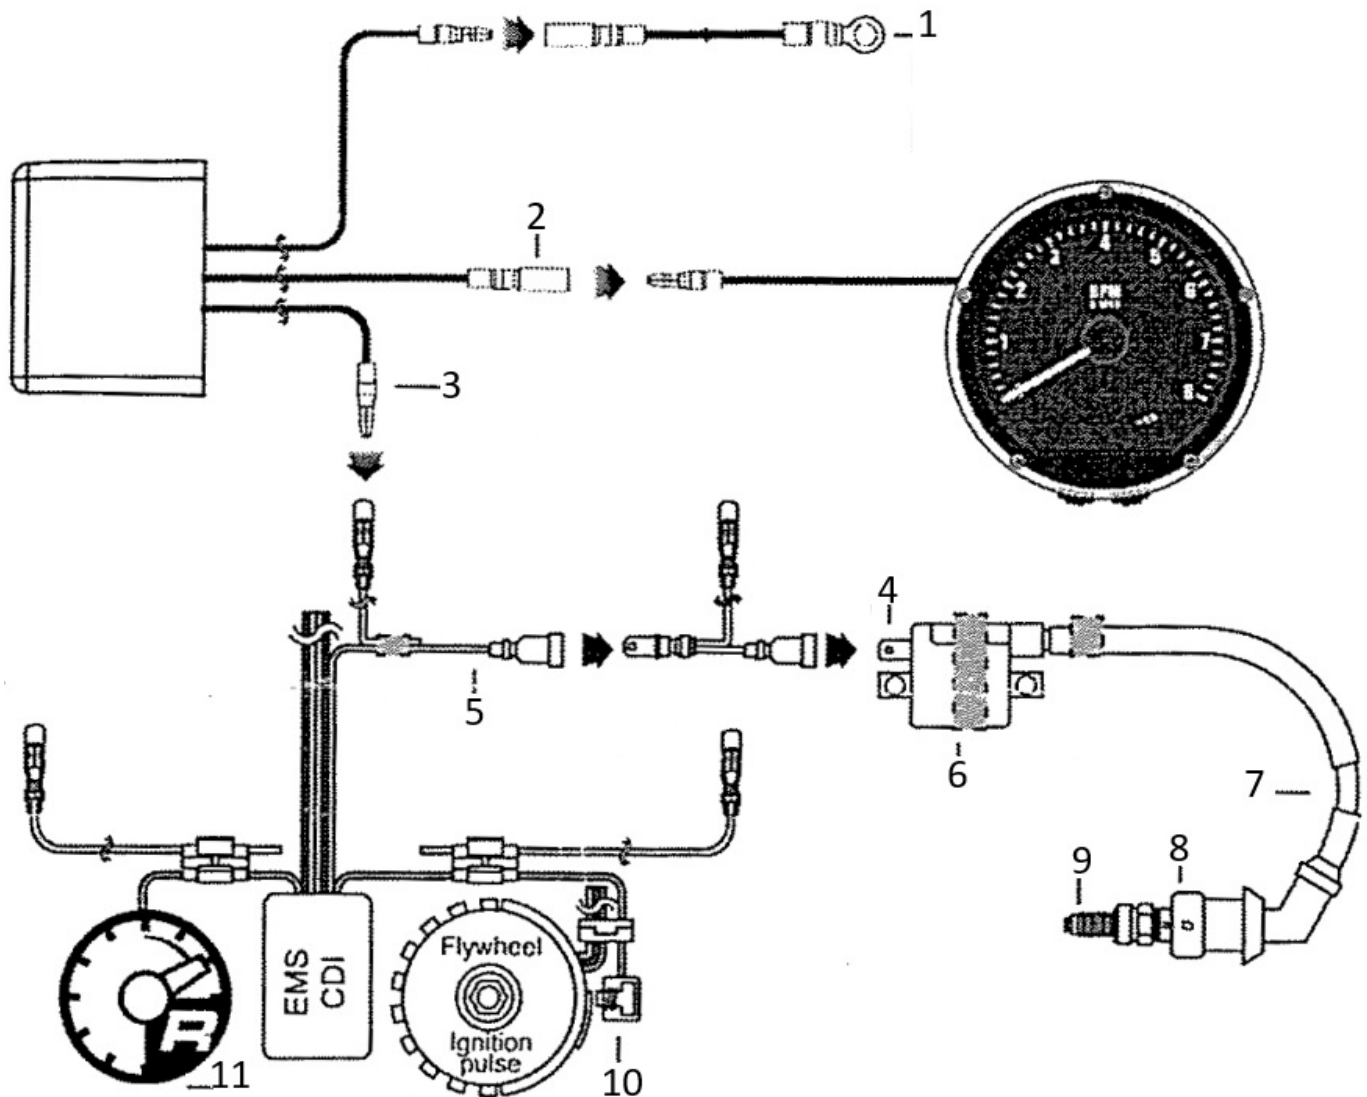

1. Black / Ground wire connects to the engine or to the negative pole of the battery.
2. Brown / Red Wire connect to RPM signal input on the meter side.
3. Brown / RPM Wire connect to one of the options below.
4. Ignition Coil positive
5. Ignition coil positive
6. Coil
7. Spark plug wire
8. Spark plug cap
9. Spark plug
10. Pick up sensor
11. Tachometer

NOTE

When connecting the RPM wire, follow the instruction above. If you connect the red & brown wires in parallel this may damage the instrument.

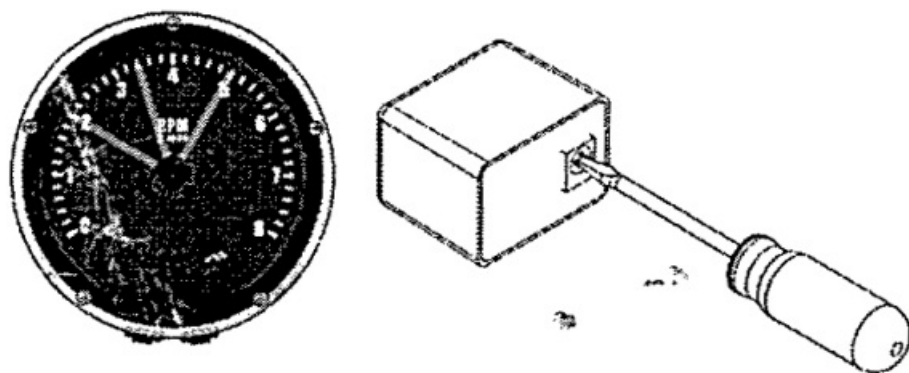

CAUTION!


If the meter needle is unstable at idle RPM, connect the signal filter according to the above diagram in order to solve the problem. Using a screw driver, gently turn the adjustment clock wise or counter clock wise until the meter needle stop to bounce.

Contents

[1 Documents / Resources](#)

[2 Related Posts](#)

Documents / Resources

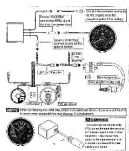

[JEGS 52-44410 AccuTech Stepper Motor Tachometer Filter](#) [pdf] Instructions
52-44410, 52-44410 AccuTech Stepper Motor Tachometer Filter, AccuTech Stepper Motor Tachometer Filter, Stepper Motor Tachometer Filter, Motor Tachometer Filter, Tachometer Filter, Filter