



JENSEN Mobile MPR210RGB Mechless Receiver with Bluetooth Owner's Manual

[Home](#) » [Jensen Mobile](#) » JENSEN Mobile MPR210RGB Mechless Receiver with Bluetooth Owner's Manual 

Contents

- 1 JENSEN Mobile MPR210RGB Mechless Receiver with Bluetooth
- 2 Preparation
- 3 Wiring Diagram
- 4 Control Locations
- 5 General Operation
- 6 AM/FM Tuner Operation
- 7 USB Operation
- 8 RGB Color Operation
- 9 Bluetooth Operation
- 10 Jensen J-Link P2 App Operation
- 11 Voice Activation
- 12 Front 3.5mm Aux Input
- 13 Limited One Year (Or Two Year*) Warranty
- 14 Warranty Coverage
- 15 Specifications
- 16 Troubleshooting
- 17 Specifications:
- 18 FCC Compliance
- 19 Frequently Asked Questions (FAQ):
 - 19.1 Q: How do I reset the unit back to factory settings?
 - 19.2 Q: How do I store radio presets?
- 20 Documents / Resources
 - 20.1 References
- 21 Related Posts

JENSEN Mobile MPR210RGB Mechless Receiver with Bluetooth



OWNER'S MANUAL

MODEL: MPR210RGB
AM/FM Receiver with Bluetooth and RGB Color Control

Preparation


Please read entire manual before installation.

Before You Start


- Disconnect negative battery terminal. Consult a qualified technician for instructions.
- Avoid installing the unit where it would be subject to high temperatures, such as from direct sunlight, or where it would be subject to dust, dirt or excessive vibration.

Mounting the Head Unit: Typical DIN mounting


Step 1:
Insert the mounting sleeve into the
installation kit or dashboard.

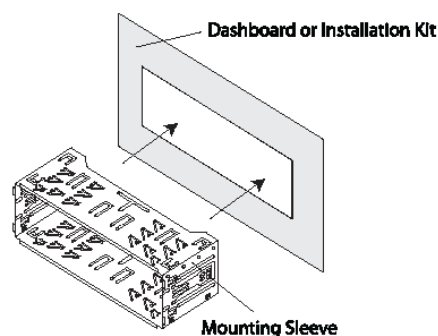


Step 2:
Bend multiple mounting tabs around
the mounting sleeve until the mounting
sleeve is secure.

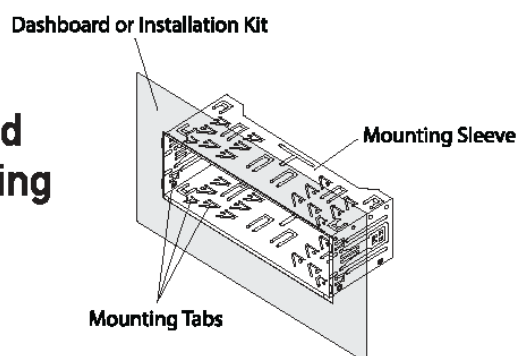

Step 3:
Connect all wiring harnesses
and slide the head unit into the
mounting sleeve until
it clicks into place.

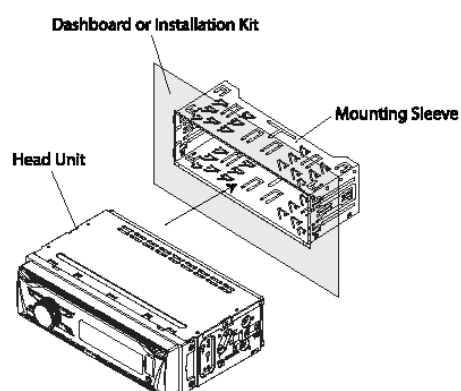


Step 4:
Use the removal keys
to remove the unit.

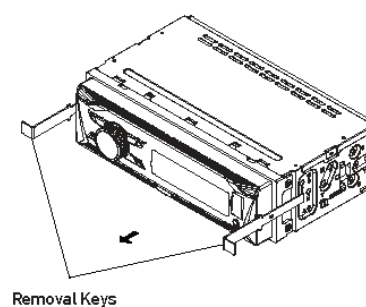

Wiring Diagram

Wiring Diagram

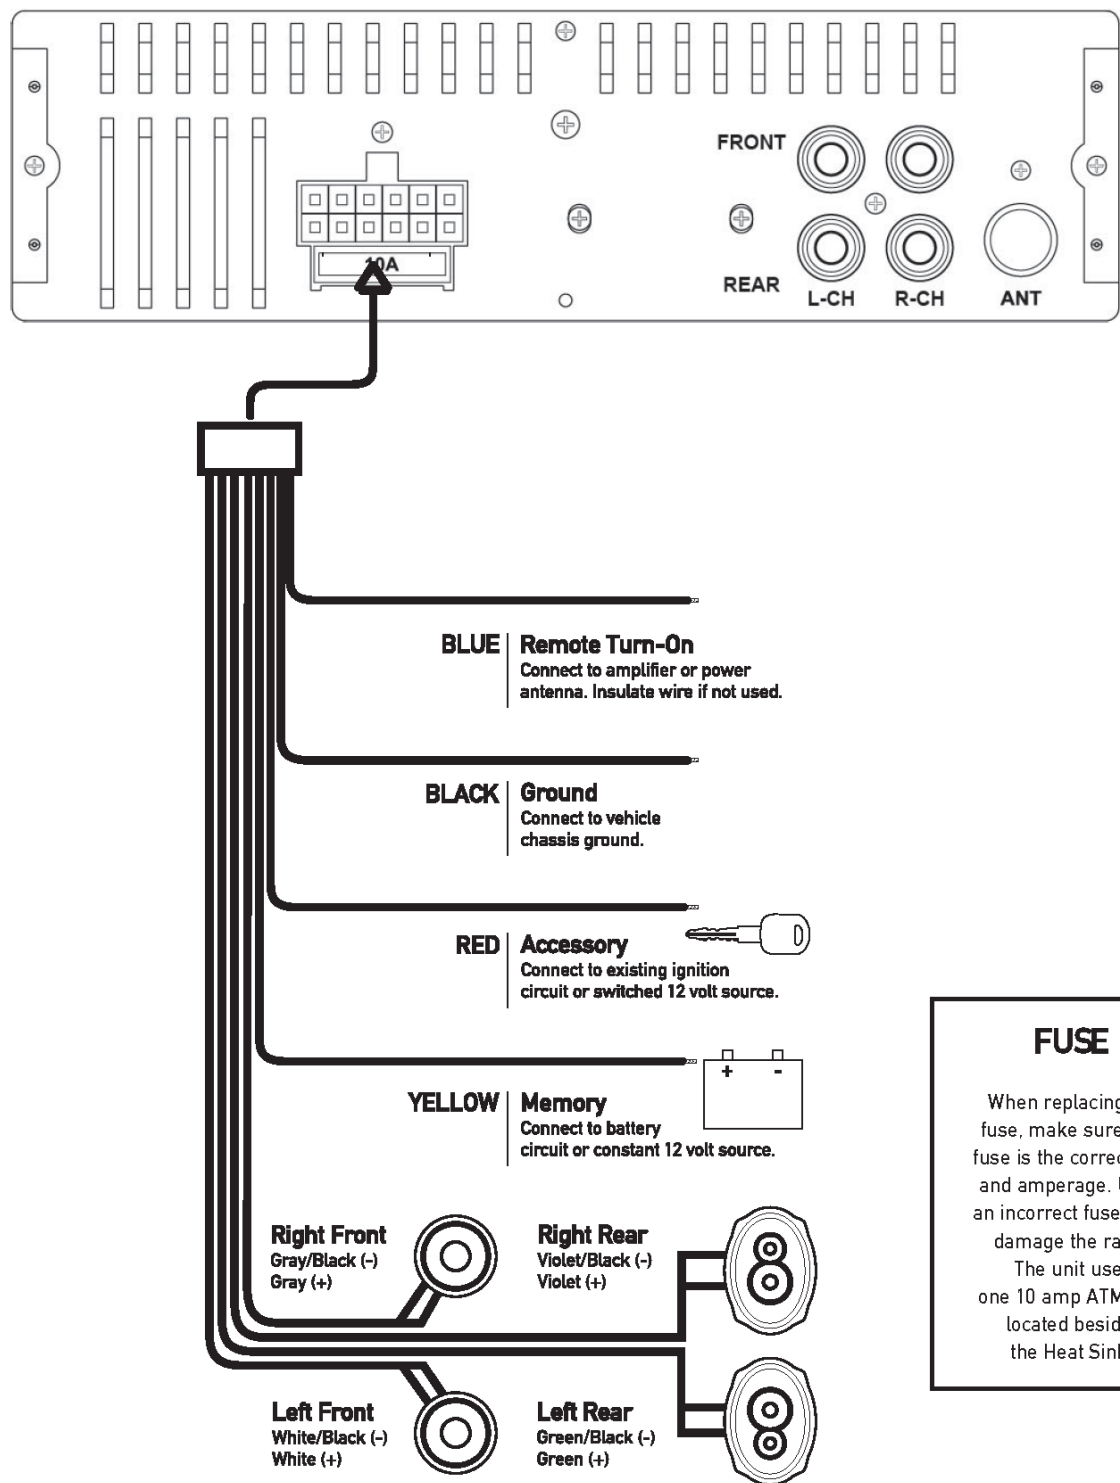



Control Locations

Control Locations



- | | | |
|-------------------|--------------------------|-------------------------|
| ① Power / Mute | ⑧ Display | ⑮ Source |
| ② Voice Control | ⑨ Auxiliary Input | ⑯ Preset 3 / Repeat |
| ③ Tune/Track Down | ⑩ Reset | ⑰ Preset 2 / Intro |
| ④ Volume Knob | ⑪ Dimmer | ⑱ Preset 1 / Play/Pause |
| ⑤ Bluetooth Talk | ⑫ Preset 6 / Folder Up | ⑲ Band / Go Back |
| ⑥ Tune/Track Up | ⑬ Preset 5 / Folder Down | ⑳ Microphone |
| ⑦ USB Port | ⑭ Preset 4 / Random | |

General Operation

Power On/Off : Press the  button to turn the unit on. Press  again to turn the unit off.

Changing Sources : Press **SOURCE** to select between Radio, USB, Auxiliary Input and Bluetooth. Modes of operation are shown in the display.

Volume : Adjust volume using the volume knob (00-40).

Mute : Press to silence the audio. Press again to resume listening at the previously selected volume.

Auxiliary Input : Press the **RESET** button to reset the unit back to the factory settings if abnormal operation occurs. The reset button is located on the front panel.






 
Setting the Clock : With the unit on, press **DISP** to display clock time. Press and hold **DISP** until the hours begins to flash, then release. Rotate the volume knob to adjust the time. Press and hold DISP to finish the clock setting.

Display: Press DISP to toggle display between various displayed information.

Audio / Menu: Press the **volume knob** momentarily to select between audio functions. Press and hold the **volume knob** for more than two seconds to select between the menu functions. Rotate the **volume knob** left/right to adjust or activate the desired function/audio.

AM/FM Tuner Operation

Seek Tuning: Press TUNE  or TUNE  to seek to the previous or next strong station.

Manual Tuning: Press and hold TUNE  or TUNE  to enter manual tuning mode, then press TUNE  or TUNE  momentarily to change radio frequency up or down one step at a time. Press and hold TUNE  or TUNE  to advance quickly.

Band: Press **BAND** to select between FM1, FM2, FM3, AM1 and AM2 bands. Up to six presets can be programmed for each band, enabling up to 18 FM stations and 12 AM stations to be stored in memory.

Storing Presets: Up to 18 FM and 12 AM stations can be stored. To store a station, select the desired band and station. Press and hold the desired preset button (1-6) for more than two seconds. When stored, the preset number will appear in the display.



Recalling Presets: Preset stations can be recalled any time by pressing the corresponding preset button.

Automatically Store: Press and hold MENU for more than 2 seconds, then press DISP to store 18 FM stations and 12 AM stations automatically.

Preset Scan: Touch PS to recall each preset station that has been stored in memory for each band. (Available with the Jensen Smart Remote App only)

USB Operation


Playing MP3 & FLAC Files: To play MP3 files, insert a USB device containing MP3 or FLAC files.

Track Select: Press TUNE  to skip to the beginning of the next track. Press TUNE  to skip to the beginning of the previous track.

Fast Forward and Reverse: Press and hold TUNE  or TUNE  to fast forward or reverse a track.

Pause:

Press  to temporarily stop USB playback.

Press  again to resume playback.

Folder Access: Folders can be found by pressing Folder Up or Folder Down. About one second after the folder name is displayed, the first file under the selected folder will be displayed and playback will begin.

Repeat: Press **RPT** to toggle between the following options:

- **RPT ALL** – Plays all tracks on USB device.
- **RPT ONE** – Continuously repeats selected track.
- **RPT FOLDER** – Repeats all tracks in selected folder.

Random: Press **RDM** to play tracks in random order; press again to cancel the RDM function.

Intro: Press **INT** to play the first 10 seconds of each track; press again to cancel the INT function.

RGB Color Operation

Dimmer: Press **DIM** to adjust the dimmer level for the buttons and LCD, and turn the volume knob left or right to select HIGH (default)/MID/LOW.

Quick Preset Color: Press the volume knob while the dimmer level is being displayed to select one of 7 preset colors.

Setting the Color Mode: Press and hold the volume knob for more than two seconds to enter the color setting menu. Turn the volume knob left and right to select Color Auto (default)/volume knob for more than 2 seconds again to enter each color mode.

Auto Color: Set the unit to rotate between all illumination colors automatically.

Preset Color: Select one of the 7 colors (Blue/Green/Red/Yellow/Violet/Cyan/White).

Custom Color: Adjust each red, green and blue in the range of 0-32 to customize your colors for over 32K combination.

Note: Adjusting each red, green and blue level to 0 will turn off all the lights on the LCD and buttons. To turn the lights back, press DIM and change the color again in the color setting.

Flash Color: Select one out of six different color and flash effect lights or turn it off. Flash lights will be demonstrated for about 30 seconds, and back to setting mode. The adjusted color will be flashed when there is an incoming Bluetooth call.

Bluetooth Operation

Preparation: Before using a Bluetooth device, it must be paired and connected. Ensure that Bluetooth is activated on your device before beginning the pairing process.

Pairing a New Device: The head unit broadcasts the pairing signal constantly when no devices are connected. Complete the pairing sequence from your Bluetooth device. Refer to the owner's manual for your device for more details.

The device name is "Jensen Media Player".
The Bluetooth passcode is "1234".

Note: The head unit can be in any mode of operation when pairing is performed.

Streaming Audio Troubleshooting: The head unit supports A2DP wireless streaming audio from a Bluetooth mobile device directly to your head unit. The following functions can be used to control the music:

- Press ►► to skip to the next available audio track.
- Press ►◄ to skip to the previous audio track.
- Press ►/|| to toggle between play and pause during playback.

Jensen J-Link P2 App Operation

The Jensen J-Link P2 Smart App is the ultimate remote control for your receiver. Change the mode, station, song, volume, and settings directly from your smartphone without being in the receiver's line of sight.

Download the Jensen J-Link P2 Smart App from Apple App Store or Google Play Store and install it on your smartphone or tablet (QR code download link on the right).



Voice Activation

Bluetooth should be paired between your smartphone and the receiver. Press the voice activation button, and the receiver will switch into Bluetooth mode. This will activate Siri® or Google Assistant™ on your smartphone. You will need to manually switch back to the previous or desired mode once this operation is terminated.

Front 3.5mm Aux Input

Connect an optional audio source into the 3.5mm (front panel) input. Select Auxiliary input from the Main Menu to listen to audio. Adjust volume on the external audio source as needed (if connected to the headphone output of the device).

Limited One Year (Or Two Year*) Warranty

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

Namsung America Inc warrants this product to the original purchaser to be free from defects in material and workmanship for a period of one year from the date of the original purchase.

Namsung America Inc agrees, at our option, during the warranty period, to repair any defect in material or workmanship or to furnish an equal new, renewed or comparable product (whichever is deemed necessary) in exchange without charges, subject to verification of the defect or malfunction and proof of the date of purchase. Subsequent replacement products are warranted for the balance of the original warranty period.

Who is covered? This warranty is extended to the original retail purchaser for products purchased from an authorized JENSEN dealer and used in the U.S.A.

What is covered? This warranty covers all defects in material and workmanship in this product. The following are not covered: software, installation/removal costs, damage resulting from accident, misuse, abuse, neglect, product modification, improper installation, incorrect line voltage, unauthorized repair or failure to follow instructions supplied with the product, or damage occurring during return shipment of the product. Specific license conditions and copyright notices for the software can be found via www.jensenmobile.com.

Warranty Coverage

Limited 1-year warranty when purchased from an authorized Jensen dealer. or

*Limited 2-year warranty when purchased from and professionally installed by an authorized Jensen dealer.(Proof of purchase and Installation required)

What to do?

1. Before you call for service, check the troubleshooting guide in your owner's manual. A slight adjustment of any custom controls may save you a service call.
2. If you require service during the warranty period, you must carefully pack the product (preferably in the original package) and ship it by prepaid transportation with a copy of the original receipt from the retailer to an authorized service center.
3. Please describe your problem in writing and include your name, a return UPS shipping address (P.O. Box not acceptable), and a daytime phone number with your shipment.
4. For more information and for the location of the nearest authorized service center please contact us by one of the following methods:
 - Call us toll-free at [888-921-4088](tel:888-921-4088)
 - E-mail us at cs@jensenmobile.com

Exclusion of Certain Damages: This warranty is exclusive and in lieu of any and all other warranties, expressed or implied, including without limitation the implied warranties of merchantability and fitness for a particular purpose and any obligation, liability, right, claim or remedy in contract or tort, whether or not arising from the company's negligence, actual or imputed. No person or representative is authorized to assume for the company any other liability in connection with the sale of this product. In no event shall the company be liable for indirect, incidental or consequential damages.

Specifications

FM Tuner

Tuning range: 87.5MHz-107.9MHz

Usable sensitivity: 8.5dBf
50dB quieting sensitivity: 10dBf
Stereo separation @ 1kHz: >30dB
Frequency response: 30Hz-13kHz

AM Tuner

Tuning range: 530kHz-1710kHz
Usable sensitivity: <42dBu
Frequency response: 30Hz-2.2kHz

General

Speaker output impedance: 4~8 ohms
Line output voltage: 2 Volts RMS Dimensions: 7" x 3.8" x 2" (178 x 97 x 50 mm)

Design and specifications subject to change without notice.



CEA-2006 Power Standard Specifications
(reference: 14.4VDC +/- 0.2V, 20Hz~20kHz)
Power Output: 16 Watts RMS x 4 channels at 4 ohms and < 1% THD+N Signal to Noise Ratio: 75dBA (reference:
1 watt into 4 ohms)

Troubleshooting

Problem	Cause	Action
Unit will not turn on (no power)	Yellow wire not connected or incorrect voltage Red wire not connected or incorrect voltage	Check connections for proper voltage [11~16VOC]
	Black wire not connected	Check connection to ground
	Fuse blown	Replace fuse
Unit has power (but no sound)	Speaker wires not connected	Check connections at speakers
	One or more speaker wires touching each other or touching chassis ground	Insulate all bare speaker wires from each other and chassis ground
Unit blows fuses	Yellow or red wire touching chassis ground	Check for pinched wire
	Speaker wires touching chassis ground	Check for pinched wire
	Incorrect fuse rating	Use fuse with correct rating
NO FILE appears on display	No playable MP3 files found on the device	Check the device for valid MP3 files
NO SUPPORT appears on display	An invalid 103 tag version is present	Version 1.0 to 2.0 103 tags are supported.

Specifications:

- Model: MPR210RGB
- Features: AM/FM Receiver, Bluetooth, RGB Color Control
- Fuse: 10 amp ATM fuse
- Display: LCD Display
- Input Ports: USB, Auxiliary, Front AUX Port

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Customer Support

1-[888-921-4088](tel:888-921-4088)

(Monday-Friday, 9AM-5PM EST)

Visit <https://www.jensenmobile.com>

Designed and Engineered in USA

All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, or other electronic or mechanical methods, without the prior written permission of NAMSUNG AMERICA INC.

Namsung America Inc.

©2024 Namsung America Inc.

All rights reserved.

Frequently Asked Questions (FAQ):

Q: How do I reset the unit back to factory settings?

A: Press the RESET button located on the front panel to reset the unit if abnormal operation occurs.

Q: How do I store radio presets?

A: To store a station as a preset, select the desired band and station, then press and hold the desired preset button (1-6) for more than two seconds. The preset number will appear in the display when stored.

Documents / Resources



MPR210RGB
MPR210RGB with
Bluetooth and USB Car Stereo
INSTALLATION &
OWNER'S MANUAL



JENSEN

[JENSEN Mobile MPR210RGB Mechless Receiver with Bluetooth](#) [pdf] Owner's Manual
MPR210RGB, MPR210RGB Mechless Receiver with Bluetooth, MPR210RGB, Mechless
Receiver with Bluetooth, Receiver with Bluetooth, with Bluetooth, Bluetooth

References

- [📱 Car Stereo - Jensen Mobile](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.