



Home » Jensen » JENSEN J5UP7 Multimedia Receiver User Guide 🏗



J5UP7 QUICK START GUIDE Media Receiver with Android Auto™™ and Apple CarPlay® featuring a 7″ digital TFT Display







This Quick Start Guide gives you the basics to start using your J5UP7.


Please visit https://www.jensenmobile.com to download a complete owner's manual or call customer service at 1-888-921-4088 (Monday-Friday, 9AM-5PM EST).

Designed and Engineered in USA

Contents [hide]

- 1 Wiring Diagram Inputs/Outputs
- 2 Installation
- 3 Control Locations
- 4 Main Menu
- 5 Tuner Operation
- 6 Adjusting Front and Rear Camera Screen Image
- 7 Wired & Wireless Apple CarPlay Operation
- 8 Limited Three Year* Warranty
- 9 FCC Compliance
- 10 Documents / Resources
 - 10.1 References

Wiring Diagram – Inputs/Outputs

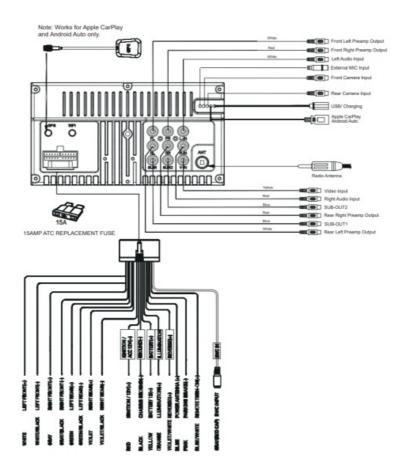

Note:


When replacing a fuse, make sure to use the correct type and amperage. Using an

incorrect fuse could cause damage. The unit uses (1) 15 amp ATC mini style fuse located on the power connector.


Installation

Before You Start

Disconnect negative battery terminal. Consult a qualified technician for instructions. Avoid installing the unit where it would be subject to high temperatures, such as from direct sunlight, or where it would be subject to dust, dirt or excessive vibration.

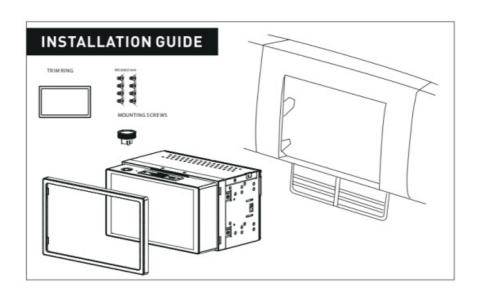

How to attach and remove the Trim ring

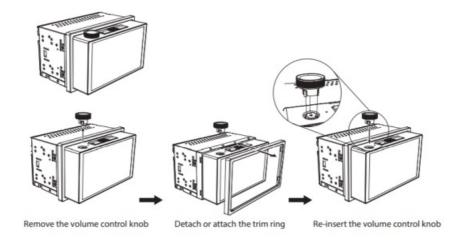

Control Locations

The radio display features the following functions and displays:





- 1. Power/Volume Up/Down
- 2. Reset
- 3. Push Voice Activation

Main Menu

In main menu, press the desired icon to enter the corresponding mode: AM/FM/Bluetooth Phone/Bluetooth Audio/Apple CarPlay/Android Auto/USB/Camera/EQ/AV In/Settings



Tuner Operation



- 1. Main Menu
- 2. Dimmer
- 3. Local/Distance
- 4. Seek Tune Up
- 5. Seek Tune Down
- 6. Preset Stations
- 7. EQ
- 8. Settings

USB Operation

From the main menu, touch the USB icon on the main screen.



- 1. Main Menu
- 2. Current Mode Indicator
- 3. Repeat
- 4. Random
- 5. List
- 6. ID3 Tag Display Area
- 7. Track Down
- 8. Play/Pause
- 9. Track Up
- 10. Album Art

Audio Operation

Select from the below 3 icons in the Settings menu to select between Balance, Fader and Time Alignment Settings, EQ Presets and 10-Band EQ Settings or Surround Settings.






Screen Operation

Press the Monitor icon in the Settings menu to access the Brightness, Contrast, Button Illumination Colors and Wallpaper Settings.



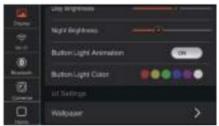


General Operation

Press the Function icon in the Settings menu to access the Time Zone, Date and Time and other radio Settings.



Adjusting Front and Rear Camera Screen Image

if your front or rear cameras appear to have a reversed image on the radio's display, go into the Camera section in the Settings menu to reverse the image of the camera. To do this, toggle the "Rear Camera View Reverse" or "Front Camera View Reverse" function to correct the viewing angle of the camera(s)

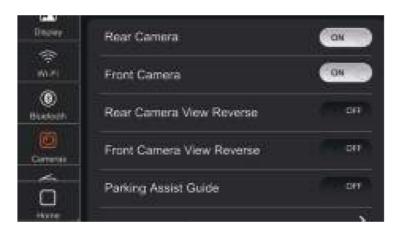

Wired & Wireless Apple CarPlay Operation

Wired connection

- 1. Connect an Apple CarPlay compatible device to this unit via USB.
- 2. Press the Apple CarPlay icon. The Apple CarPlay home screen appears.



Wireless connection

Before using Apple CarPlay wirelessly, turn on the Bluetooth/Wifi function on the Phone.

- 1. Press icon on the main menu:
- 2. Press" ✓" to confirm to use wireless Apple CarPlay:
- 3. Press" (icon to search phone device. The available devices appear on the list:
- 4. Find the desired device on the screen and press "Pair":
- 5. A pass key will be displayed on the screen:
- 6. The same key appears on the iPhone, press "Pair" and then press "Allow" for the popups:
- 7. Press"
 on the screen to confirm to connect;
- 8. Press "Use CarPlay" on the iPhone. The unit configures the connection then starts the application.

Wired & Wireless Android Auto™ Operation

Wired connection

- 1. Connect an Android Auto™™ compatible device to this unit via USB.
- 2. Press the Android Auto icon.

The Android Auto home screen appears.



Wireless connection

Before using Android Auto wirelessly, turn on the Bluetooth/Wifi function on the Android device.

- 1. Press icon on the main menu:
- 2. Press"

 to confirm to use wireless Android Auto:
- 3. Press "Q"icon to search phone device. The available devices appear on the list:
- 4. Find the desired device on the screen and press "Pair":
- 5. A pass key will be displayed on the screen:

- 6. The same key appears on the Android device, press "Pair" and then press "Allow" for the popups:
- 7. Press" on the screen to confirm to connect;

 The unit configures the connection then starts the application.

Bluetooth Operation

Before using Bluetooth

Before you can use a Bluetooth device to make hands-free calls or stream audio. it must be authenti cated. This is also referred to as "pairing" a device.

Pairing a New Device

The unit broadcasts the pairing signal constantly when no devices are currently connected. Complete the pairing sequence from your Bluetooth device. Refer to the owner's manual for your device for more details. The device name is "J5UP7". The unit can be in any mode of operation when pairing is per formed. On certain phones, pairing may need to be done more than once.

Connect

The head unit will automatically connect to the last connected device when the connect feature is set to Auto Connect On. If the connect feature is set to Auto Connect Off, the head unit will not automatically connect to any device.

Bluetooth Phone

From the main menu. Touch the Bluetooth on the screen. Bluetooth icon will appear anytime a Bluetooth device is con-nected.



Dialing a Number

Press to display keypad and dial a number.

Making and Ending a Call

Press \(\script{to connect a call, and press \(\script{\script{n}} \) to end a call.

Transferring Audio

Press to transfer andio between the head unit and mobile phone.

Streaming Audio

Press ▶ to play or pause the music.

Press **◄** to skip to the previous track.

Press ► to advance to the next track.

Limited Three Year* Warranty

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

Jensen warrants this product to the original purchaser to be free from defects in material and workmanship for a period of three years from the date of the original purchase.

Jensen agrees, at our option, during the warranty period, to repair any defect in material or workmanship or to furnish an equal new, renewed, or comparable product (whichever is deemed necessary) in exchange without charges, subject to verification of the defect

or malfunction and proof of the date of purchase. Subsequent replacement products are warranted for the balance of the original warranty period.

What is covered? This warranty covers all defects in the material and workmanship in this product.

The following are not covered: software, installation/removal costs, damage resulting from accident, misuse, abuse, neglect, product modification, improper installation, incorrect line voltage, unautho-rized repair, or failure to follow instructions supplied with the product, or damage occurring during return shipment of the product. Specific license conditions and copyright notices for the software can be found via www.jensenmobile.com.

Warranty Coverage

* Limited 3-year warranty. (Proof of purchase required)

Extend your warranty from 3 years to 5 years when installed by the selling dealer and you register online at www.jensenmobile.com.

What to do?

- 1. Before you call for service, check the troubleshooting guide in your owner's manual. A slight adjustment of any custom controls may save you a service call.
- 2. If you require service during the warranty period, you must carefully pack the product (preferably in the original package) and ship it by prepaid transportation with a copy of the original receipt from the retailer to an authorized service center.
- 3. Please describe your problem in writing and include your name, a return UPS shipping address (P.O. Box not acceptable), and a daytime phone number with your shipment.
- 4. For more information and for the location of the nearest authorized service center please contact us by one of the following methods:

Call us toll-free at <u>888-921-4088</u>

(Monday-Friday, 9:00 am, to 5:00 pm, EST) E-mail us at cs@jensenmobile.com Exclusion of Certain Damages: This warranty is exclusive and in lieu of any and all other warranties, expressed or implied, including without limitation the implied warranties of merchantability and fitness for a particular purpose and any obligation, liability, right, claim or remedy in contract or tort, whether or not arising from the

company's negligence, actual or imputed. No person or representa-tive is authorized

to assume for the company any other liability in connection with the sale of this product. In no event shall the company be liable for indirect, incidental, or consequential damages.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

www.jensenmobile.com

2025 Namsung America Inc. All rights reserved. NSC0125-V01

Documents / Resources



JENSEN J5UP7 Multimedia Receiver [pdf] User Guide

24CHZ214, J5UP7 Multimedia Receiver, J5UP7, Multimedia Receiver, Receiver

References

• [Iser I	M	lan	ual
-----	--------	---	-----	-----

▶ 24CHZ214, J5UP7, J5UP7 Multimedia Receiver, Jensen, Multimedia Receiver,

■ Jensen Receiver

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Nieman	
Name	
Email	
Email	
NAZ 1 . 11	
Website	

 $\hfill \square$ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.