

# Jetec ELECTRONICS JTC-X40A-WL Remote Parameter Setting Temperature Humidity or CO2 Large Display User Manual


[Home](#) » [Jetec ELECTRONICS](#) » Jetec ELECTRONICS JTC-X40A-WL Remote Parameter Setting Temperature Humidity or CO2 Large Display User Manual 

## Contents

- [1 Jetec ELECTRONICS JTC-X40A-WL Remote Parameter Setting Temperature Humidity or CO2 Large Display](#)
- [2 Instrument Description](#)
- [3 Parameter Setting Dscription](#)
- [4 iOS APP Operating instructions](#)
  - [4.1 Function List](#)
  - [4.2 Andriod APP Operating instruction](#)
- [5 Report picture](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)



**Jetec ELECTRONICS JTC-X40A-WL Remote Parameter Setting Temperature Humidity or CO2 Large Display**

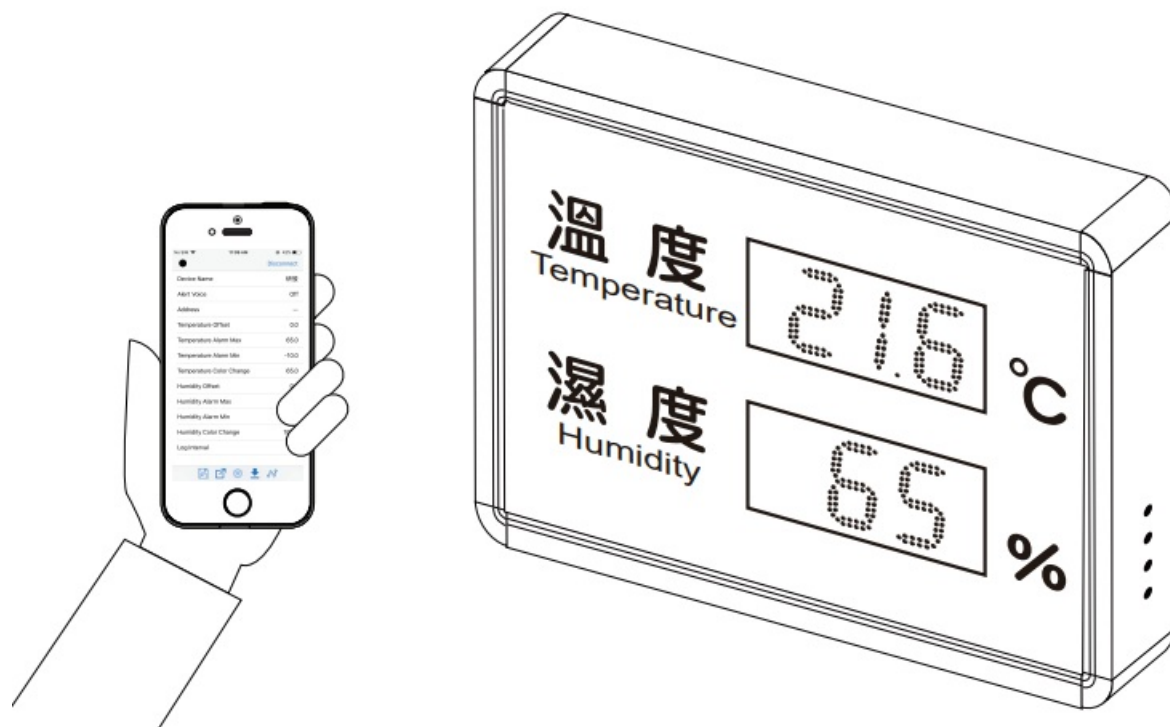


Thank you for purchasing JTC-X40A-WL remote configuration version-LED temperature and humidity display, please read the instruction manual before use and follow precautions to ensure the most optimal performance and to avoid unnecessary damage. Damage caused by man-made improper use will not be warranted.

Warning	<p>Don't disassemble, repair or modify display or sensor by yourself</p> <p>For maintenance matters, please contact the sales store or the company.</p>
Warning	<p>Do not let this product be dropped, or subjected to an impact force</p> <p>It may cause screen damage, breakage and failure.</p>
Warning	<p>When wiring, follow the label on the wiring terminals</p> <p>It may cause electric shock or malfunction.</p>

In order to improve the contents of the operating manual, the company has authority to amend it without notice. Shipment is subject to physical


## Instrument Description

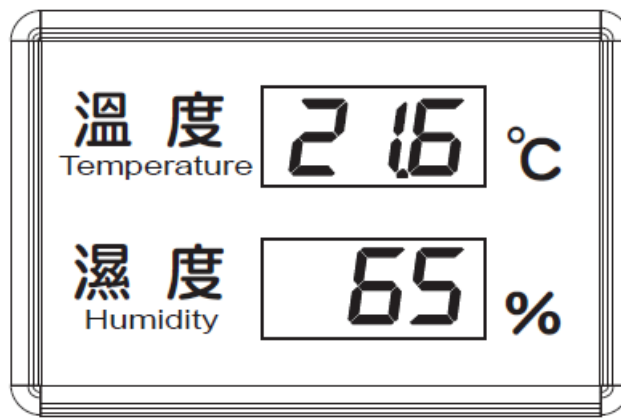

## Display instructions

Normal Mode	3-digit Display(Humidity does not contain decimal points)
Setting Function	3-digit or 4-digit display
RED LED	Display value reach the color conversion upper limit
GREEN LED	Normal display value
Red and Green Alternation	The display value has reached the upper / lower alarm

## Wiring Instructions

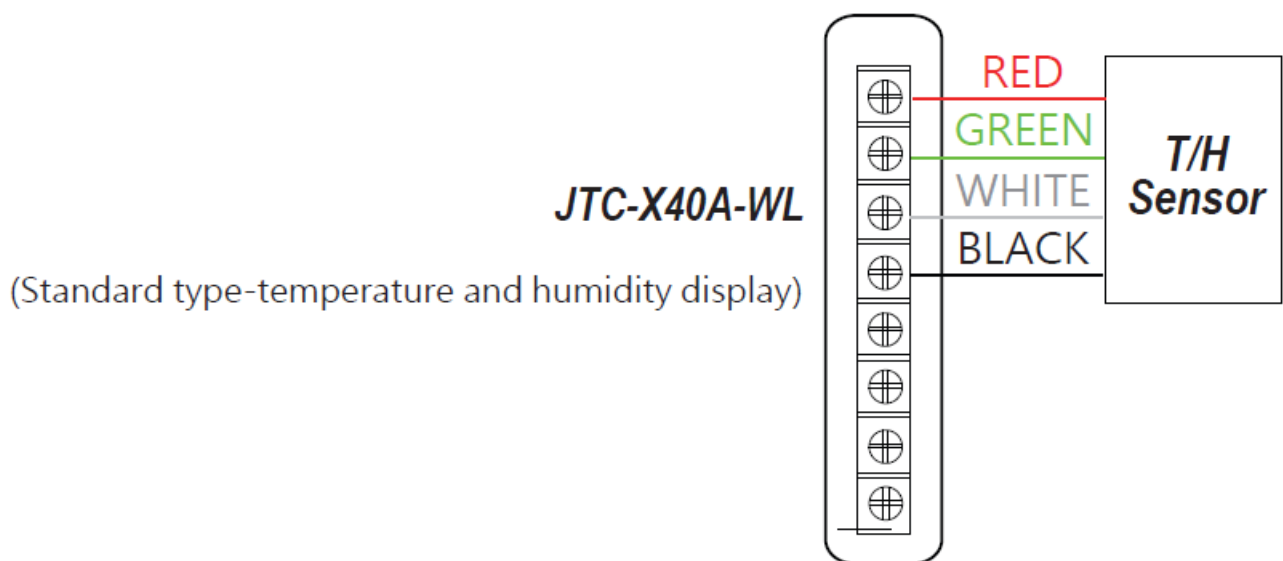

## Parameter Setting Dscription

Item	Set values	Explanation
Device Name		Can define Chinese/English name of the device
Alarm	<i>ON / OFF</i>	Only for buzzer models
First row decimal point	<i>ON / OFF</i>	Only 4 ~ 20mA, 0 ~ 5V, 0 ~ 10V Output Sensor models ※ If the decimal point is changed, the maximum and minimum range should be reset.
First row maximum range	<i>-999.0 ~ 999.0</i>	
First row minimum range	<i>-999.0 ~ 999.0</i>	
First row correction	<i>-999.0 ~ 999.0</i>	Standard models (JTC-X40A) Correction value, upper and lower alarm setting and color conversion value refer to table 1
First row upper limit	<i>-999.0 ~ 999.0</i>	
First row lower limit	<i>-999.0 ~ 999.0</i>	
First row color conversion	<i>-999.0 ~ 999.0</i>	
Second row decimal point	<i>ON / OFF</i>	Only 4~20mA, 0~5V and 0~10V Output Sensor models ※ If the decimal point is changed, the maximum and minimum range should be reset
Second row maximum range	<i>-999.0 ~ 999.0</i>	
Second row minimum range	<i>-999.0 ~ 999.0</i>	
Second row correction	<i>-999.0 ~ 999.0</i>	Standard models (JTC-X40A) Correction value, upper and lower alarm setting and color conversion value refer to table 1
Second row upper limit	<i>-999.0 ~ 999.0</i>	
Second row lower limit	<i>-999.0 ~ 999.0</i>	
Second row color conversion	<i>-999.0 ~ 999.0</i>	
Third row decimal point	<i>ON / OFF</i>	Only 4~20mA, 0~5V and 0~10V Output Sensor models ※ If the decimal point is changed, the maximum and minimum range should be reset
Third row maximum range	<i>-999.0 ~ 999.0</i>	
Third row minimum range	<i>-999.0 ~ 999.0</i>	
Third row corrections	<i>-999.0 ~ 999.0</i>	Standard models (JTC-X40A) Correction value, upper and lower alarm setting and color conversion value refer to table 1
Third row upper limit	<i>-999.0 ~ 999.0</i>	
Third row lower limit	<i>-999.0 ~ 999.0</i>	
Third row color conversion	<i>-999.0 ~ 999.0</i>	
Recording interval	Hours/Min/sec	30 seconds to 1 hours

**Table I . JTC-X40A-WL Standard models**

<b>JTC-X40A-WL</b>	Temperature	Humidity	CO2
Correction value	-5.0~5.0°C	-10~10%RH	-100 ~ 100
High alarm	-10~65°C	0~99%RH	0 ~ 5000
Low Alarm	-10~65°C	0~99%RH	0 ~ 5000
LED color conversion values	-10~65°C	0~100%RH	0 ~ 5000

When recording, if parameter is changed, the record will be stopped.

When recording, if the “record interval” is modified, record will stop and previous data will be cleared, but the downloaded data will not be affected.

## iOS APP Operating instructions


### Connection mode

Go to the app Store, search for Jetec remote or scan QR code to install app

- Before starting the APP setting, please turn on the Bluetooth function and confirm that the large display device has been powered on and displayed normally.

### Step 1

Open APP and click “search device”

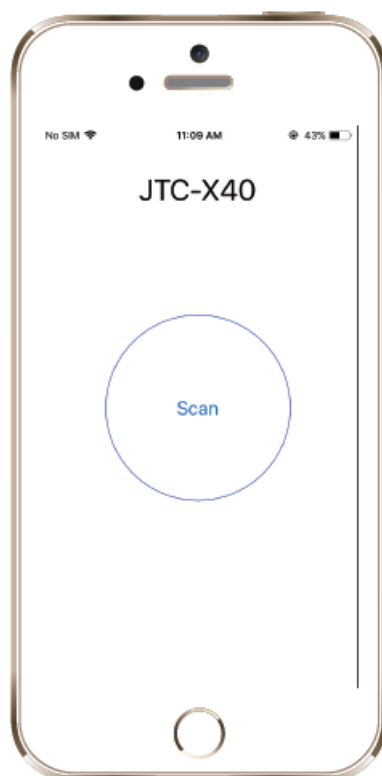


### Step 2

From the device list, click the device name you want to set


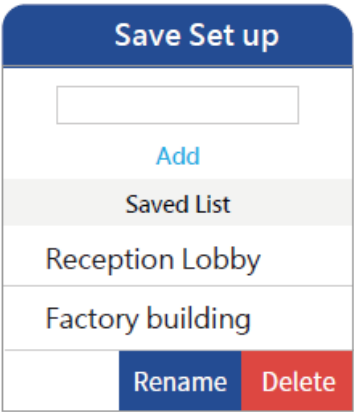





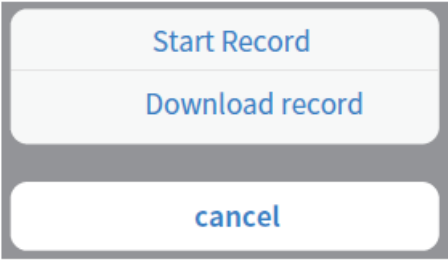
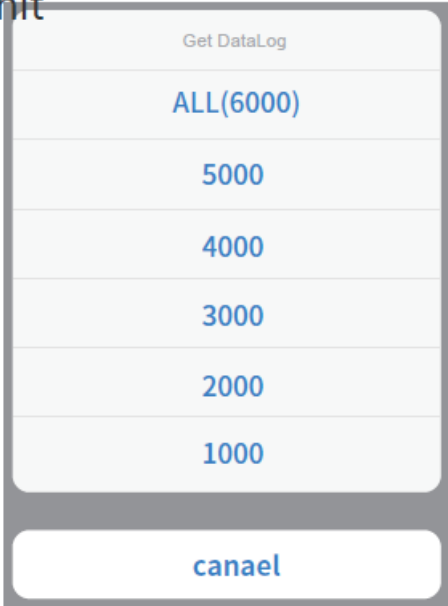
### Step 3

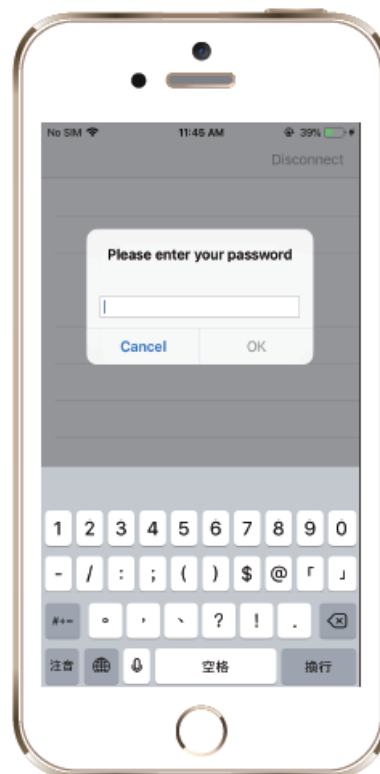When the administrator first login, please input default password 000000, which can be revised during “modifying the password” function



### Function List


	Storage List	<p>1. Store current set value, different settings can be stored to a different list</p> <p>2. Slide the stored list to left can rename or delete</p> <p><b>Save Set up</b></p> <div data-bbox="810 286 1165 696"></div>
	Import settings	<p>When the stored values are applied, the current settings will be overwritten</p> <p>※ When recording, import setting will make recording stop</p>
	Modify password	<p>When first time change administrator password, default password is 000000</p>

	Download record	<p>1. Click this key to “start recording”, “End record”, if there is a record file can “download record”      <u>Start Record</u></p> <p>Download record</p> <p><b>cancel</b></p> <p>※ Pressing the start record clears the current record data, but the downloaded data is not affected</p> <p>※ Press the download record to overwrite the “downloaded log file”.</p> <p>Once it is overwritten, it will not be able to recover. Please export the file and back up in advance</p> <p>※ When downloading files, avoid obstacle between your phone and your device so as not to affect connection quality and cause file errors or download failures</p>  <p>2. The maximum number of records is 6000. You can download the data based on per 1000 unit Get DataLog</p>  <p>※ When recording number up to 6000, recording will stop automatically</p>
--	-----------------	--






After downloading the record, click this button to view the graph, below can choose “Select graph”, “Table” and “Export log”

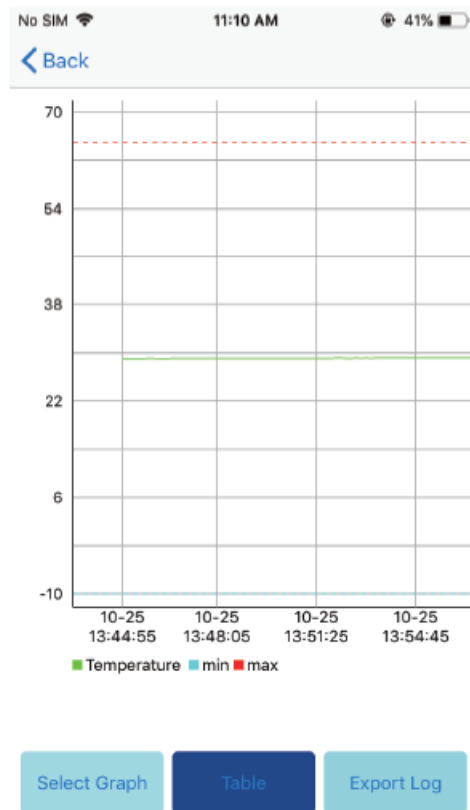

- Select Graph You can view the graph and choose to display the first row, second row, third row, individually or simultaneously

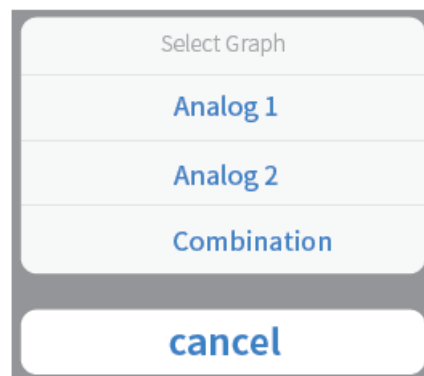

Select Graph

Analog 1 Analog 2 Combination

**cancel**


Record  
chart

\*

- Table Display detailed record data


Date and time, record number, data of each row, and can do condition screening

Open the app and click “Search Device”

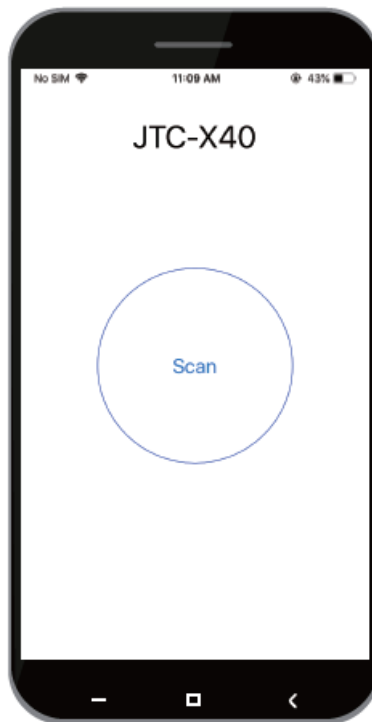


### Step 2

You will be asked to turn on positioning to allow app entering, please click OK

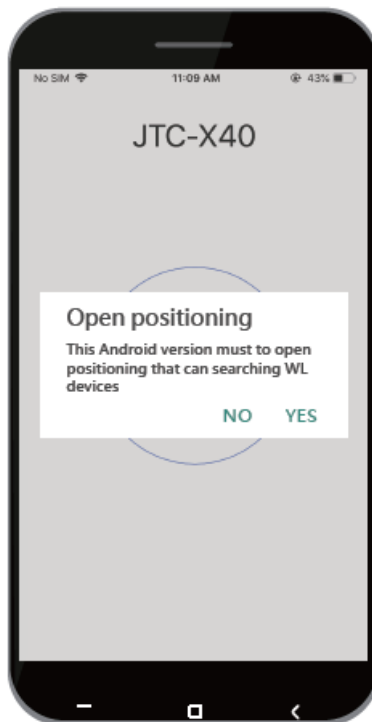

### Step 3

The first time you use the Jetec Remote APP, you will be asked to turn on the Bluetooth , please click “Allow”  
As long as the Bluetooth function turned on, the inquiry will not appear for subsequent use.

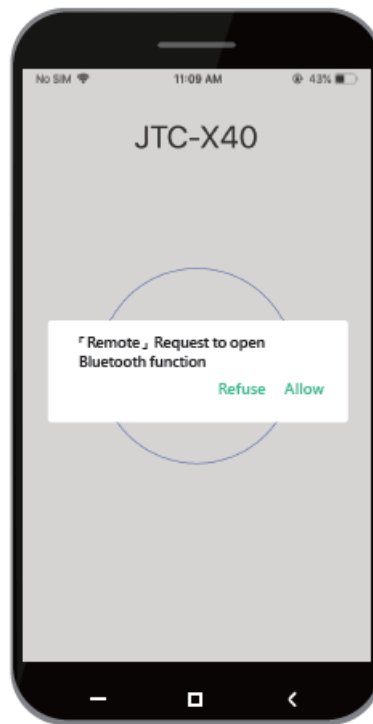

#### Step 4

From the device list, click the device name you want to set




#### Step 5

When the administrator first login, please input default password 000000, which can be revised during “modifying the password” function

User default password is 111111

(This password can only for parameter reading, can not set)

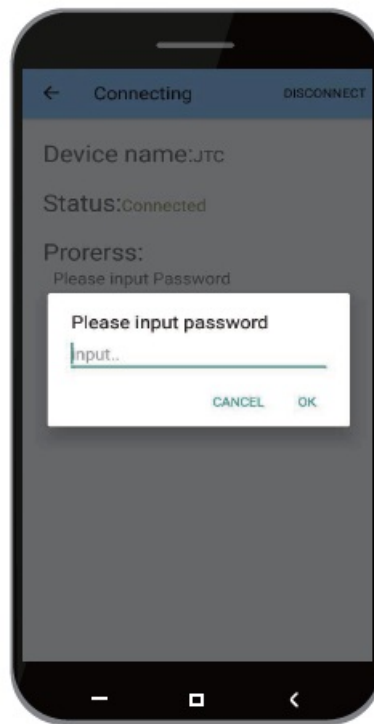

## Function List

JTC

DISCONNECT



Jetec Remote

www.jetec.com.tw

一般功能:

SAVE

EXPORT

PASSWORD  
MODIFY

記錄功能:

RECORD START

DOWNLOAD

CHART

JTC

0.0

0.0

65.0

-10.0



99.0



0.0

65.0

99.0

on

	Storage settings	<p>Store current set value , different settings can be stored to a different list</p> <div data-bbox="764 161 1200 831"><table><tr><th colspan="3">Save Set up</th></tr><tr><td colspan="2">Data name</td><td>Add</td></tr><tr><th colspan="3">Data List</th></tr><tr><td colspan="3">Reception Lobby</td></tr><tr><td colspan="3">Factory building</td></tr><tr><td colspan="3"></td></tr><tr><td>CLOSE</td><td>DELETE</td><td>MODIFY</td></tr></table></div>	Save Set up			Data name		Add	Data List			Reception Lobby			Factory building						CLOSE	DELETE	MODIFY
Save Set up																							
Data name		Add																					
Data List																							
Reception Lobby																							
Factory building																							
CLOSE	DELETE	MODIFY																					
	Import settings	<p>When the stored values are applied, the current settings will be overwritten.</p> <p>※ When recording, import settings will sopt the recording</p>																					


	* Data download	<p>Click this button to download the record data and view it in the “display chart”</p> <div data-bbox="801 159 1145 324"><p>Warning ! It will stop the record and start downloading.</p><p>CANCEL OK</p></div> <p>※ Press the data download will overwrite the downloaded log file, once it is covered, it will not be able to recover. Please export the record files you want in advance</p> <p>Warning    It will stop the record and start downloading.</p> <p>CANCEL OK</p> <p>※ When downloading files, if the number of downloads is not the same as the total number of records, it means that the download is incomplete.</p> <p>Please press YES and download it again</p> <div data-bbox="786 813 1160 1207"><p>Download data</p><p>warning ! It must cost a lot of times</p><p>40 / 127</p><p>NO YES</p></div>
---	-----------------	--






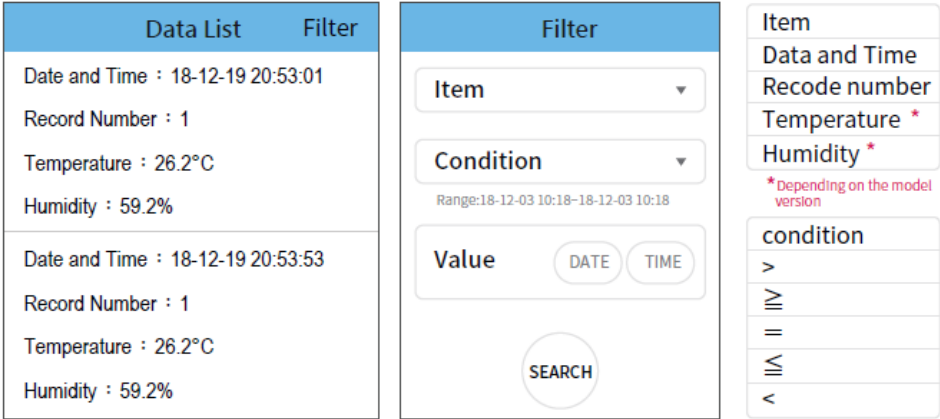
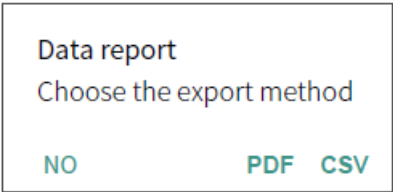

\* Display charts

After downloading the record, click this button to view the graph, below can choose “Select graph”, “Table”, “Export log” and “Report”

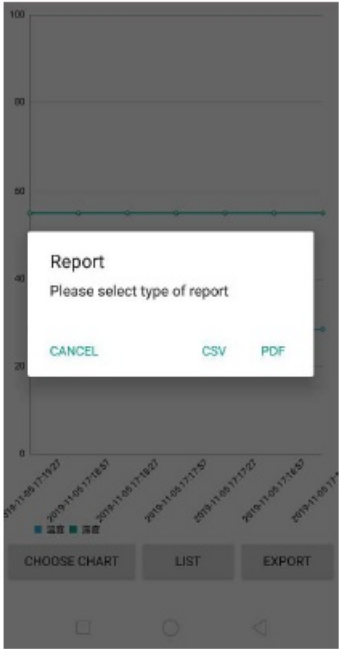

●Dialog Graph can be display individually as first/second/third row or display simultaneously

Choose chart	
Combination chart	
1st data	
2nd data	
CANAEL	OK

		<ul style="list-style-type: none"> <li>List Data Detailed record data can be displayed: date and time, record number , row of data, and condition screening</li> </ul> <div data-bbox="513 192 1458 609">  </div> <ul style="list-style-type: none"> <li>Export      Record files can be downloaded as . csv or PDF file</li> </ul> <div data-bbox="796 723 1190 913">  </div> <p>Data report</p> <p>Choose the export method</p> <p><b>NO PDF CSV</b></p> <p>Records can be sent and shared by various means, such as message, mail, etc. , or can be wirelessly connected to printer to print PDF files</p> <div data-bbox="821 1243 1153 1608">  </div> <ul style="list-style-type: none"> <li>Report      PDF report can be viewed online</li> </ul>
	Modify password	When first time change administrator password, default password is 000000
	Start ording      rec	Pressing the start record will clears the current record data, but the downloaded data is not affected.

## PDF Report

2018/11/30	26.9	60.7	2018/11/30	26.9	60.7	2018/11/30	26.9	60.7	2018/11/30	26.9	59.5	2018/11/30	26.8	59.5
10:37:20	26.9	60.7	10:38:50	26.9	60.7	10:40:20	26.9	60.7	10:41:50	26.9	59.5	10:43:20	26.8	59.5
10:37:21	26.9	60.7	10:38:51	26.9	60.7	10:40:21	26.9	60.7	10:41:51	26.9	59.5	10:43:21	26.8	59.5
10:37:22	26.9	60.7	10:38:52	26.9	60.7	10:40:22	26.9	60.7	10:41:52	26.9	59.5	10:43:22	26.7	59.5
10:37:23	26.9	60.7	10:38:53	26.9	60.7	10:40:23	27.0	60.7	10:41:53	27.0	59.5	10:43:23	26.7	59.5
10:37:24	26.9	60.7	10:38:54	26.9	60.7	10:40:24	27.0	60.7	10:41:54	27.0	59.5	10:43:24	26.8	59.5
10:37:25	26.9	60.7	10:38:55	26.9	60.7	10:40:25	27.0	60.7	10:41:55	27.0	59.5	10:43:25	26.8	59.5
10:37:26	26.9	60.7	10:38:56	26.9	60.7	10:40:26	27.0	59.7	10:41:56	26.9	59.5	10:43:26	26.8	59.5
10:37:27	26.9	60.7	10:38:57	26.9	60.7	10:40:27	27.0	59.6	10:41:57	26.9	59.5	10:43:27	26.8	59.5
10:37:28	26.9	60.7	10:38:58	26.9	60.7	10:40:28	27.0	59.6	10:41:58	26.9	59.5	10:43:28	26.8	59.5
10:37:29	26.9	60.7	10:38:59	26.9	60.7	10:40:29	27.0	59.6	10:41:59	26.9	59.5	10:43:29	26.8	59.5
10:37:30	26.9	60.7	10:39:00	26.9	60.7	10:40:30	27.0	59.6	10:42:00	26.9	59.5	10:43:30	26.7	59.5
10:37:31	26.9	60.7	10:39:01	26.9	60.7	10:40:31	27.0	59.6	10:42:01	26.9	59.5	10:43:31	26.8	59.5
10:37:32	26.9	60.7	10:39:02	26.9	60.7	10:40:32	27.0	59.6	10:42:02	26.9	59.5	10:43:32	26.8	59.5
10:37:33	26.9	60.7	10:39:03	26.9	60.7	10:40:33	27.0	59.6	10:42:03	26.9	59.5	10:43:33	26.7	59.5
10:37:34	26.9	60.7	10:39:04	26.9	60.7	10:40:34	27.0	59.6	10:42:04	26.9	59.5	10:43:34	26.8	59.5
10:37:35	26.9	60.7	10:39:05	26.9	60.7	10:40:35	27.0	59.6	10:42:05	26.9	59.5	10:43:35	26.7	59.5
10:37:36	26.9	60.7	10:39:06	26.9	60.7	10:40:36	27.0	59.6	10:42:06	26.9	59.5	10:43:36	26.8	59.5
10:37:37	26.9	60.7	10:39:07	26.9	60.7	10:40:37	27.0	59.6	10:42:07	26.9	59.5	10:43:37	26.8	59.5
10:37:38	26.9	60.7	10:39:08	26.9	60.7	10:40:38	27.0	59.6	10:42:08	26.9	59.5	10:43:38	26.8	59.5
10:37:39	26.9	60.7	10:39:09	26.9	60.7	10:40:39	27.0	59.6	10:42:09	26.9	59.5	10:43:39	26.8	59.5
10:37:40	26.9	60.7	10:39:10	26.9	60.7	10:40:40	27.0	59.6	10:42:10	26.9	59.5	10:43:40	26.8	59.5
10:37:41	26.9	60.7	10:39:11	26.9	60.7	10:40:41	27.0	59.5	10:42:11	26.9	59.5	10:43:41	26.7	59.5
10:37:42	26.9	60.7	10:39:12	26.9	60.7	10:40:42	27.0	59.5	10:42:12	26.9	59.5	10:43:42	26.7	59.5
10:37:43	26.9	60.7	10:39:13	26.9	60.7	10:40:43	27.0	59.5	10:42:13	26.9	59.5	10:43:43	26.7	59.5
10:37:44	26.9	60.7	10:39:14	26.9	60.7	10:40:44	27.0	59.5	10:42:14	26.9	59.5	10:43:44	26.8	59.5
10:37:45	26.9	60.7	10:39:15	26.9	60.7	10:40:45	27.0	59.5	10:42:15	26.9	59.5	10:43:45	26.7	59.5
10:37:46	26.9	60.7	10:39:16	26.9	60.7	10:40:46	27.0	59.5	10:42:16	26.9	59.5	10:43:46	26.7	59.5
10:37:47	26.9	60.7	10:39:17	26.9	60.7	10:40:47	27.0	59.5	10:42:17	26.9	59.5	10:43:47	26.7	59.5
10:37:48	26.9	60.7	10:39:18	26.9	60.7	10:40:48	27.0	59.5	10:42:18	26.9	59.5	10:43:48	26.8	59.5
10:37:49	26.9	60.7	10:39:19	26.9	60.7	10:40:49	27.0	59.5	10:42:19	26.9	59.5	10:43:49	26.7	59.5
10:37:50	26.9	60.7	10:39:20	26.9	60.7	10:40:50	26.9	59.5	10:42:20	26.9	59.5	10:43:50	26.8	59.5
10:37:51	26.9	60.7	10:39:21	26.9	60.7	10:40:51	26.9	59.5	10:42:21	26.9	59.5	10:43:51	26.8	59.5
10:37:52	26.9	60.7	10:39:22	26.9	60.7	10:40:52	26.9	59.5	10:42:22	26.9	59.5	10:43:52	26.7	59.5
10:37:53	26.9	60.7	10:39:23	26.9	60.7	10:40:53	26.9	59.5	10:42:23	26.9	59.5	10:43:53	26.8	59.5
10:37:54	26.9	60.7	10:39:24	26.9	60.7	10:40:54	27.0	59.5	10:42:24	26.9	59.5	10:43:54	26.8	59.5
10:37:55	26.9	60.7	10:39:25	26.9	60.7	10:40:55	27.0	59.5	10:42:25	26.9	59.5	10:43:55	26.7	59.5
10:37:56	26.9	60.7	10:39:26	26.9	60.7	10:40:56	27.0	59.5	10:42:26	26.9	59.5	10:43:56	26.7	59.5
10:37:57	26.9	60.7	10:39:27	26.9	60.7	10:40:57	27.0	59.5	10:42:27	26.9	59.5	10:43:57	26.7	59.5
10:37:58	26.9	60.7	10:39:28	26.9	60.7	10:40:58	27.0	59.5	10:42:28	26.9	59.5	10:43:58	26.8	59.5
10:37:59	26.9	60.7	10:39:29	26.9	60.7	10:40:59	27.0	59.5	10:42:29	26.9	59.5	10:43:59	26.8	59.5
10:38:00	26.9	60.7	10:39:30	26.9	60.7	10:41:00	27.0	59.5	10:42:30	26.9	59.5	10:44:00	26.7	59.5
10:38:01	26.9	60.7	10:39:31	26.9	60.7	10:41:01	27.0	59.5	10:42:31	26.9	59.5	10:44:01	26.8	59.5
10:38:02	26.9	60.7	10:39:32	26.9	60.7	10:41:02	27.0	59.5	10:42:32	26.9	59.5	10:44:02	26.8	59.5
10:38:03	26.9	60.7	10:39:33	26.9	60.7	10:41:03	27.0	59.5	10:42:33	26.9	59.5	10:44:03	26.8	59.5
10:38:04	26.9	60.7	10:39:34	26.9	60.7	10:41:04	27.0	59.5	10:42:34	26.9	59.5	10:44:04	26.7	59.5
10:38:05	26.9	60.7	10:39:35	26.9	60.7	10:41:05	26.9	59.5	10:42:35	26.9	59.5	10:44:05	26.8	59.5
10:38:06	26.9	60.7	10:39:36	26.9	60.7	10:41:06	26.9	59.5	10:42:36	26.9	59.5	10:44:06	26.8	59.5
10:38:07	26.9	60.7	10:39:37	26.9	60.7	10:41:07	26.9	59.5	10:42:37	26.9	59.5	10:44:07	26.7	59.5
10:38:08	26.9	60.7	10:39:38	26.9	60.7	10:41:08	26.9	59.5	10:42:38	26.9	59.5	10:44:08	26.7	59.5
10:38:09	26.9	60.7	10:39:39	26.9	60.7	10:41:09	26.9	59.5	10:42:39	26.9	59.5	10:44:09	26.7	59.5
10:38:10	26.9	60.7	10:39:40	26.9	60.7	10:41:10	26.9	59.5	10:42:40	26.9	59.5	10:44:10	26.8	59.5
10:38:11	26.9	60.7	10:39:41	26.9	60.7	10:41:11	26.9	59.5	10:42:41	26.9	59.5	10:44:11	26.8	59.5
10:38:12	26.9	60.7	10:39:42	26.9	60.7	10:41:12	26.9	59.5	10:42:42	26.9	59.5	10:44:12	26.8	59.5
10:38:13	26.9	60.7	10:39:43	26.9	60.7	10:41:13	26.9	59.5	10:42:43	26.9	59.5	10:44:13	26.7	59.5
10:38:14	26.9	60.7	10:39:44	26.9	60.7	10:41:14	26.9	59.5	10:42:44	26.9	59.5	10:44:14	26.7	59.5
10:38:15	26.9	60.7	10:39:45	26.9	60.7	10:41:15	26.9	59.5	10:42:45	26.9	59.5	10:44:15	26.7	59.5
10:38:16	26.9	60.7	10:39:46	26.9	60.7	10:41:16	26.9	59.5	10:42:46	26.9	59.5	10:44:16	26.8	59.5
10:38:17	26.9	60.7	10:39:47	26.9	60.7	10:41:17	27.0	59.5	10:42:47	26.9	59.5	10:44:17	26.7	59.5
10:38:18	26.9	60.7	10:39:48	26.9	60.7	10:41:18	27.0	59.5	10:42:48	26.9	59.5	10:44:18	26.7	59.5
10:38:19	26.9	60.7	10:39:49	26.9	60.7	10:41:19	27.0	59.5	10:42:49	26.9	59.5	10:44:19	26.8	59.5
10:38:20	26.9	60.7	10:39:50	26.9	60.7	10:41:20	27.0	59.5	10:42:50	26.9	59.5	10:44:20	26.8	59.5
10:38:21	26.9	60.7	10:39:51	26.9	60.7	10:41:21	27.0	59.5	10:42:51	26.9	59.5	10:44:21	26.8	59.5
10:38:22	26.9	60.7	10:39:52	26.9	60.7	10:41:22	27.0	59.5	10:42:52	26.9	59.5	10:44:22	26.7	59.5
10:38:23	26.9	60.7	10:39:53	26.9	60.7	10:41:23	27.0	59.5	10:42:53	26.9	59.5	10:44:23	26.7	59.5
10:38:24	26.9	60.7	10:39:54	26.9	60.7	10:41:24	27.0	59.5	10:42:54	26.9	59.5	10:44:24	26.7	59.5
10:38:25	26.9	60.7	10:39:55	26.9	60.7	10:41:25	27.0	59.5	10:42:55	26.9	59.5	10:44:25	26.8	59.5
10:38:26	26.9	60.7	10:39:56	26.9	60.7	10:41:26	27.0	59.5	10:42:56	26.9	59.5	10:44:26	26.8	59.5
10:38:27	26.9	60.7	10:39:57	26.9	60.7	10:41:27	27.0	59.5	10:42:57	26.9	59.5	10:44:27	26.7	59.5
10:38:28	26.9	60.7	10:39:58	26.9	60.7	10:41:28	27.0	59.5	10:42:58	26.9	59.5	10:44:28	26.7	59.5
10:38:29	26.9	60.7	10:39:59	26.9	60.7	10:41:29	26.9	59.5	10:42:59	26.9	59.5	10:44:29	26.8	59.5
10:38:30	26.9	60.7	10:40:00	26.9	60.7	10:41:30	26.9	59.5	10:43:00	26.9	59.5	10:44:30	26.8	59.5
10:38:31	26.9	60.7	10:40:01	26.9	60.7	10:41:31	26.9	59.5	10:43:01	26.9	59.5	10:44:31	26.7	59.5
10:38:32	26.9	60.7	10:40:02	26.9	60.7	10:41:32	26.9	59.5	10:43:02	26.9	59.5	10:44:32	26.7	59.5
10:38:33	26.9	60.7	10:40:03	26.9	60.7	10:41:33	26.9	59.5	10:43:03	26.9	59.5	10:44:33	26.7	59.5
10:38:34	26.9	60.7	10:40:04	26.9	60.7	10:41:34	26.9	59.5	10:43:04	26.9	59.5	10:44:34	26.7	59.5
10:38:35	26.9	60.7	10:40:05	26.9	60.7	10:41:35	26.9	59.5	10:43:05	26.9	59.5	10:44:35	26.7	59.5
10:38:36	26.9	60.7	10:40:06	26.9	60.7	10:41:36	26.9	59.5	10:43:06	26.9	59.5	1		

## CSV Report


	A	B	C	D
1	id	dateTime	Analog1	Analog2
2	1	2018/11/30 10:37	26.9	60.7
3	2	2018/11/30 10:37	26.9	60.7
4	3	2018/11/30 10:37	26.9	60.7
5	4	2018/11/30 10:37	26.9	60.7
6	5	2018/11/30 10:37	26.9	60.7
7	6	2018/11/30 10:37	26.9	60.7
8	7	2018/11/30 10:37	26.9	60.7
9	8	2018/11/30 10:37	26.9	60.7
10	9	2018/11/30 10:37	26.9	60.7
11	10	2018/11/30 10:37	26.9	60.7
12	11	2018/11/30 10:37	26.9	60.7
13	12	2018/11/30 10:37	26.9	60.7
14	13	2018/11/30 10:37	26.9	60.7
15	14	2018/11/30 10:37	26.9	60.7
16	15	2018/11/30 10:37	26.9	60.7
17	16	2018/11/30 10:37	26.9	60.7
18	17	2018/11/30 10:37	26.9	60.7
19	18	2018/11/30 10:37	26.9	60.7
20	19	2018/11/30 10:37	26.9	60.7
21	20	2018/11/30 10:37	26.9	60.7
22	21	2018/11/30 10:37	26.9	60.7
23	22	2018/11/30 10:37	26.9	60.7
24	23	2018/11/30 10:37	26.9	60.7
25	24	2018/11/30 10:37	26.9	60.7
26	25	2018/11/30 10:37	26.9	60.7
27	26	2018/11/30 10:37	26.9	60.7
28	27	2018/11/30 10:37	26.9	60.7
29	28	2018/11/30 10:37	26.9	60.7
30	29	2018/11/30 10:37	26.9	60.7

TEL:+886-4-23729418

FAX:+886-4-23724011

[www.jetec.com.tw](http://www.jetec.com.tw)

## Documents / Resources

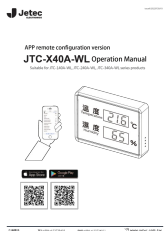	<p><b><a href="#">Jetec ELECTRONICS JTC-X40A-WL Remote Parameter Setting Temperature Humidity or CO2 Large Display</a> [pdf] User Manual</b></p> <p>JTC-X40A-WL, Remote Parameter Setting Temperature Humidity or CO2 Large Display, JTC-X40A-WL Remote Parameter Setting Temperature Humidity or CO2 Large Display</p>
---	---

## References

