

JETPRIME
JETPRIME
JPPLS056 Left
Handlebar Switch



JETPRIME JPPLS056 Left Handlebar Switch Instruction Manual

[Home](#) » [JETPRIME](#) » JETPRIME JPPLS056 Left Handlebar Switch Instruction Manual 

Contents

- [1 JETPRIME JPPLS056 Left Handlebar Switch](#)
- [2 TECHNICAL FEATURES](#)
- [3 INSTALLATION](#)
- [4 FUNCTIONS](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



JETPRIME JPPLS056 Left Handlebar Switch



Specifications

- Product Name: LEFT HANDLEBAR SWITCH
- Model: JP PLS 056
- Material: S1125 resin

Important Note

All JETPRIME products are designed for racing use only and should be installed by an expert. Warranty is limited to defects recognized by the technical department and normal use. Avoid improper installation, operation, modification, or racing use to maintain warranty validity.

Frequently Asked Questions (FAQ)

Q: Can this handlebar switch be used on any motorcycle?

A: Do not install the product on a motorcycle for which it was not designed or tested by JETPRIME to ensure proper functionality and safety.

TECHNICAL FEATURES

- CNC-machined anodized aluminum body
- stronger and lighter than the original part
- IP69K protection
- laser engraving wired with RAYCHEM 105° cable and sealed with RAYCHEM S1125 resin

INSTALLATION


This product is plug-and-play, no modification is required on the bike:


1. make sure the ignition is turned off
2. disconnect and remove the original handlebar switch (refer to the manufacturer's workshop manual)

3. install the JETPRIME handlebar switch on the handlebar using the provided bolts, and tighten to 10 Nm
4. connect the wiring to the original connectors

FUNCTIONS

1. HIGH BEAMS/PASS (see note)
2. UP
3. LEFT TURN INDICATOR (see note)
4. DOWN
5. ENTER
6. RIGHT TURN INDICATOR (see note)
7. HORN
8. MODE
9. DOWN (PARAMETER MENU)
10. UP (PARAMETER MENU)
11. SELECT (PARAMETER MENU)
12. HAZARD

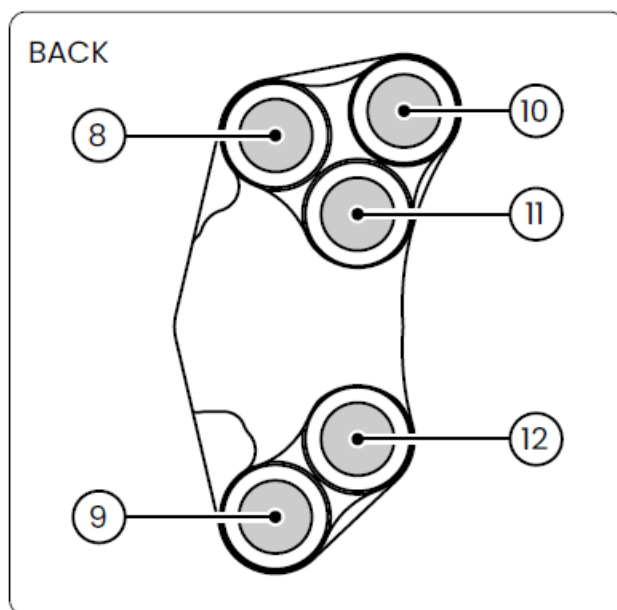

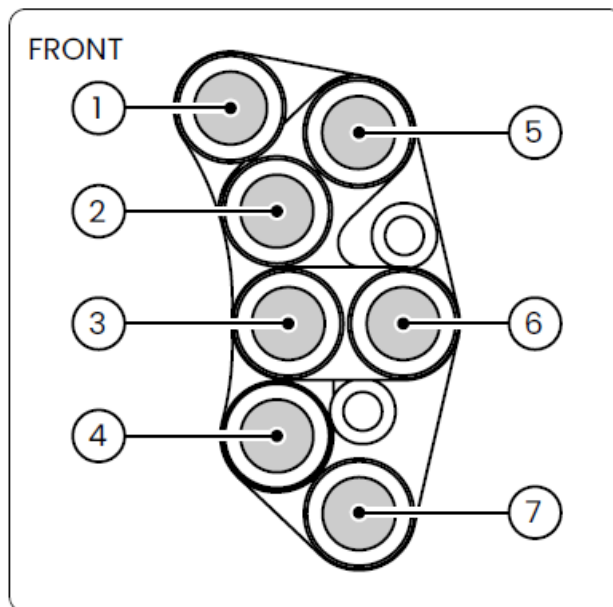

NOTE

The following buttons work differently from those on the original handlebar switch:

- Button 1
 - press shortly to activate pass light (flashing)
 - keep pressed for more than 1 second to turn on high beams
 - press again shortly to turn them off
- Button 3 and 6
 - press once to activate the turn indicator
 - press again to deactivate it

JETPRIME S.R.L.

Via Eugenio Montale, 1

41016 Novi di Modena – Rovereto sulla Secchia (MO)

Phone: +39 059 672223 – Email: info@jetprime.it www.jetprimeshop.it

- All JETPRIME products are designed for racing use only and should be installed by an expert.
- The manufacturer, importer, or dealer shall not be liable for any damage caused by improper installation or operation of the JETPRIME product.
- The warranty is limited to defects recognized by our technical department and to normal use. The warranty is void in case of accident, modification, improper or racing use.
- Do not install the product on a motorcycle for which it was not designed or tested by JETPRIME.
- The technical specifications of JETPRIME products and related products are subject to change without notice.

Documents / Resources



[JETPRIME JPPLS056 Left Handlebar Switch](#) [pdf] Instruction Manual
JPPLS056 Left Handlebar Switch, JPPLS056, Left Handlebar Switch, Handlebar Switch, Switch

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.