



## JETSON Stereofly Hoverboard User Guide

[Home](#) » [Jetson](#) » JETSON Stereofly Hoverboard User Guide 

# JETSON

### Contents

- [1 JETSON Stereofly Hoverboard User Guide](#)
- [2 Safety Warnings](#)
- [3 Warranty Coverage](#)
- [4 Specs & Features](#)
- [5 Product Overview](#)
- [6 Online Resources](#)
- [7 1. Getting Started](#)
- [8 2. Making Moves](#)
- [9 Care & Maintenance](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)

**JETSON Stereofly Hoverboard User Guide**



Jetson's top two riding rules:  
Be safe. Have fun!

**Stereofly**  
Hoverboard.

**A guide for your ride.**

IMPORTANT: READ CAREFULLY AND RETAIN FOR FUTURE REFERENCE.

MODEL: JSTFLY-TEL

## **Safety Warnings**

- Before use, please read the user manual and safety warnings carefully, and make sure you understand and accept all the safety instructions. The user will be responsible for any loss or damage caused by improper use.
- Before each cycle of operation, the operator shall perform the preoperation checks specified by the manufacturer: That all guards and pads originally supplied by the manufacturer are in proper place and in serviceable condition; That the braking system is functioning properly; That any and all axle guards, chain guards, or other covers or guards supplied by the manufacturer are in place and in serviceable condition; That tires are in good condition, inflated properly, and have sufficient tread remaining; The area that the product is to be operated should be safe and suitable for safe operation.
- Components shall be maintained and repaired in accordance with the manufacturer's specifications and using only the manufacturer's authorized replacement parts with installation performed by dealers or other skilled persons.
- Warning against recharging non-rechargeable batteries.
- Don't allow hands, feet, hair, body parts, clothing, or similar articles to come in contact with moving parts, wheels, or drive train, while the motor is running.

- This product should not be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction (IEC 60335-1/A2:2006).
- Unsupervised children should not play with the product (IEC 60335-1/A2:2006).
- Adult supervision is required.
- The rider should not exceed 220 lb.
- Units shall not be operated to perform racing, stunt riding, or other maneuvers, which may cause loss of control, or may cause uncontrolled operator/passenger actions or reactions.
- Never use near motor vehicles.
- Avoid sharp bumps, drainage grates, and sudden surface changes. Scooter may suddenly stop.
- Avoid streets and surfaces with water, sand, gravel, dirt, leaves, and other debris. Wet weather impairs traction, braking, and visibility.
- Avoid riding around flammable gas, steam, liquid, or dust that could cause fire.
- Operators shall adhere to all of the manufacturer's recommendations and instructions, as well as comply with all laws and ordinances: Units without headlights shall be operated only with adequate daylight conditions of visibility, and; Owners shall be encouraged to highlight (for conspicuity) using lighting, reflectors, and for low-riding units, signal flags on flexible poles.
- Persons with the following conditions shall be cautioned not to operate: Those with heart conditions; Pregnant women; Persons with head, back, or neck ailments, or prior surgeries to those areas of the body; and persons with any mental or physical conditions that may make them susceptible to injury or impair their physical dexterity or mental capabilities to recognize, understand, and perform all of the safety instructions and to be able to assume the hazards inherent in unit use.
- Do not ride at night.
- Do not ride after drinking or taking prescription medication.
- Do not carry items when riding.
- Never operate the product barefooted.
- Always wear shoes and keep shoelaces tied.
- Make sure your feet are always placed securely on the deck.
- Operators always shall use appropriate protective clothing, including but not limited to a helmet, with appropriate certification, and any other equipment recommended by the manufacturer: Always wear protective equipment such as helmet, knee pads, and elbow pads.
- Always give way to pedestrians.
- Be alert to things in front and far away from you.
- Do not allow distractions when riding, such as answering the phone or engaging in any other activities.
- The product cannot be ridden by more than one person.
- When you ride the product along with other riders, always keep a safe distance to avoid a collision.
- When turning, be sure to maintain your balance.
- Riding with improperly adjusted brakes is dangerous and can result in serious injury or death.
- The brake may become hot while operating, do not touch the brake with your bare skin.
- Applying brakes too hard or too suddenly can lock up a wheel, which could cause you to lose control and fall. Sudden or excessive application of the brake may result in injury or death.
- If the brake loosens, please adjust with the hexagon wrench, or please contact Jetson Customer Care.
- Replace worn or broken parts immediately.
- Check whether all safety labels are in place and understood before riding.

- The owner shall allow the use and operation of the unit after a demonstration that such operators can understand and operate all components of the unit before use.
- Do not ride without proper training. Do not ride at high speeds, on uneven terrain, or on slopes. Do not perform stunts or turn abruptly.
- Recommended for indoor use.
- Prolonged exposure to UV rays, rain and the elements may damage the enclosure materials, store indoors when not in use.
- Personal e-mobility devices are not intended for use at elevations greater than 2000 m above sea level.

## **MODIFICATIONS**

Do not attempt to disassemble, modify, repair, or replace the unit or any components of the unit without instruction from Jetson Customer Care. This will void any warranty, and can lead to malfunctions which may cause injury.

## **ADDITIONAL OPERATION PRECAUTIONS**

Do not lift the product off the ground while it is on and the wheels are in motion. This can result in freely spinning wheels, which may cause injury to yourself or others nearby. Do not jump on or off the product, and do not jump while using it. Always keep your feet firmly planted on the foot rest while in operation. Always check the battery charge before using.

## **NOTICE OF COMPLIANCE**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

## **DISPOSAL OF USED BATTERY**

Battery may contain hazardous substances which could endanger the environment and human health. This symbol marked on the battery and/ or packaging indicates that used battery shall not be treated as municipal waste. Batteries should be disposed of at an appropriate collection point for recycling. By ensuring the used batteries are disposed of correctly, you will help preventing potential negative consequences for the environment and human health. The recycling of materials will help to conserve natural resources. For more information about recycling of used batteries, please contact your local municipality waste disposal service.

**WARNING:**

This product can expose you to chemicals including Cadmium, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**Warranty Coverage****GENERAL LIMITED WARRANTY**

Your new Jetson product is warranted against defects in materials and workmanship as indicated on [ridejetson.com/warranty](http://ridejetson.com/warranty) for a period of time from the date of original retail purchase when used in accordance with Jetson's user manuals (refer to [ridejetson.com/support](http://ridejetson.com/support)). Under this warranty, you will be able to direct your claims to Jetson even in situations where you purchased the Jetson Product from one of our authorized retailers. To read the full terms of our warranty, visit [ridejetson.com/warranty](http://ridejetson.com/warranty).

**Specs & Features**

- WEIGHT LIMIT: 220 LBS
- PRODUCT WEIGHT: 15.20 LBS
- WHEEL SIZE: 6.5"
- PRODUCT DIMENSIONS: 25.2" (L) X 7.7" (W) X 7.1" (H)
- MAX SPEED: 12 MPH
- MAX RUN TIME: 60 MINUTES\*
- BATTERY: 25.2V 4.0AH LITHIUM-ION
- MOTOR: 360W\*\*
- CHARGER: 100-240V
- CHARGING TIME: ABOUT 5 HOURS
- MAX CLIMBING ANGLE: 10°
- RECOMMENDED AGE: 12+
- PRODUCT UL CERTIFICATION: 2272

\*WHEN TESTED CARRYING 220 LBS, AT 77°F, AND MOVING AT A SPEED OF 8.6 MPH. SEE SECTION 2.8 FOR MORE DETAILS ON CONDITIONS THAT CAN AFFECT RUN TIME.

 
\*\*PEAK POWER

**Product Overview**

1. HEADLIGHTS
2. STATUS INDICATOR LIGHTS
3. BATTERY INDICATOR LIGHTS
4. FOOTPADS
5. WHEELS
6. POWER BUTTON
7. CHARGING PORT


## 8. CHARGER

\*ADULTS MUST ASSIST CHILDREN IN THE INITIAL ADJUSTMENT PROCEDURES OF THE PRODUCT.

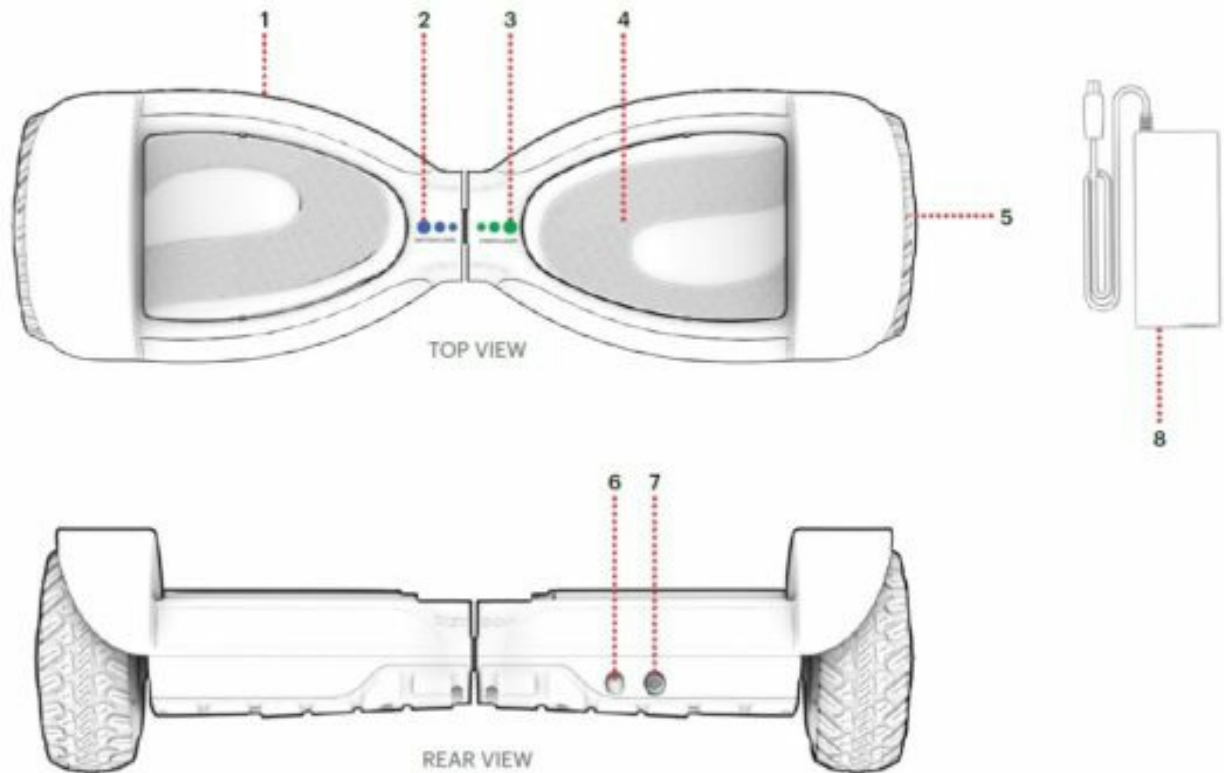

**NOTE:** IMAGES MAY NOT REFLECT EXACT APPEARANCE OF ACTUAL PRODUCT.

## Online Resources

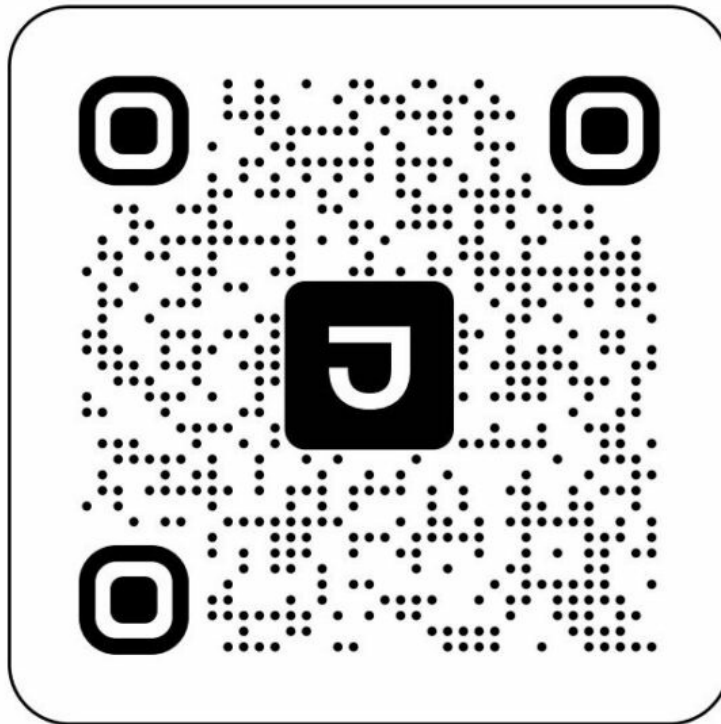 

Scan for our most updated Stereofly onboarding materials and support resources.



**WARNING:**

FAILURE TO COMPLY WITH THE FOLLOWING INSTRUCTIONS MAY RESULT IN INJURY TO THE CHILD OR OTHERS.

 
- KEEP SMALL PARTS AWAY FROM CHILDREN DURING ASSEMBLY.
  - ACCESSORY MUST BE ASSEMBLED AND REMOVED BY AN ADULT.
  - FREQUENTLY INSPECT THE PRODUCT FOR DAMAGE.
- \* ADULTS MUST ASSIST CHILDREN IN THE ASSEMBLY AND INITIAL ADJUSTMENT PROCEDURES OF THE PRODUCT.

## **1. Getting Started**

### **1.1 Charging the Battery**


- ONLY USE THE INCLUDED CHARGER.
- PLUG THE CHARGER INTO THE WALL OUTLET BEFORE PLUGGING INTO THE CHARGING PORT ON THE HOVERBOARD.
- NEVER TURN ON THE HOVERBOARD WHILE IT IS CHARGING.
- CHARGE THE BATTERY UNTIL IT IS FULLY CHARGED—ABOUT 5 HOURS.
- NEVER LEAVE THE HOVERBOARD CHARGING OVERNIGHT OR FOR EXTENDED PERIODS OF TIME.

#### **CHARGER INDICATOR LIGHT ON THE CHARGER:**

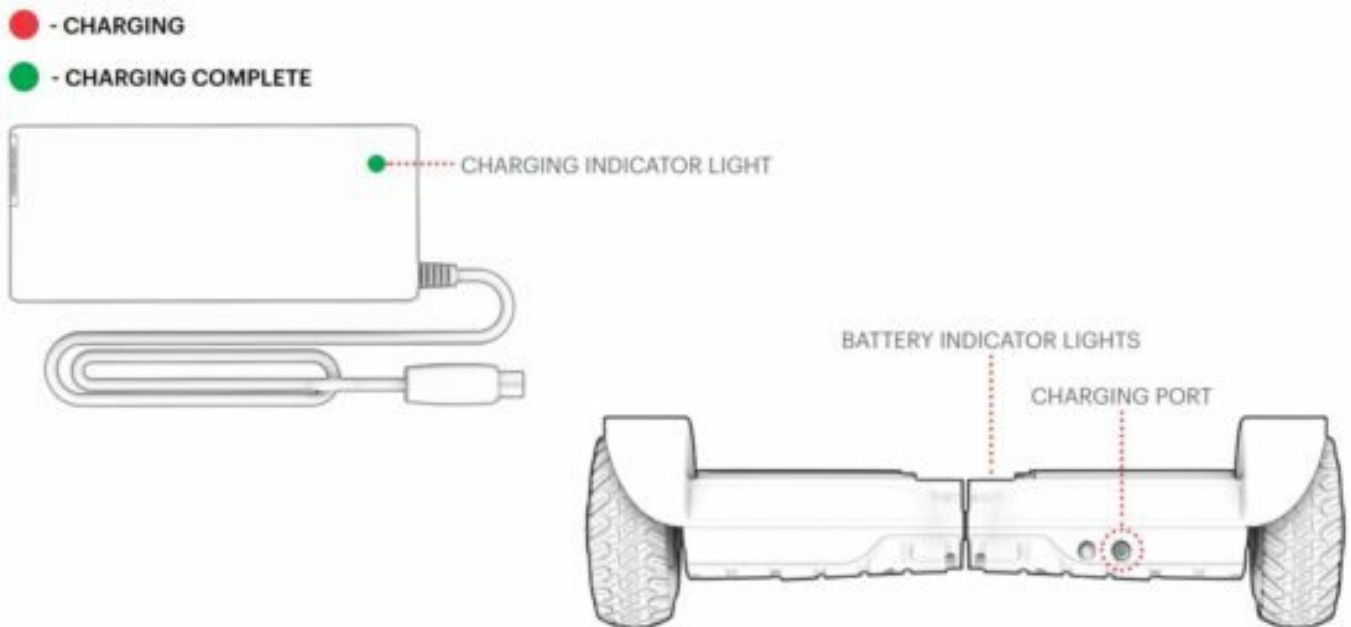


## 1.2 Powering On & Off

 TO POWER ON OR OFF: QUICK-PRESS THE POWER BUTTON.

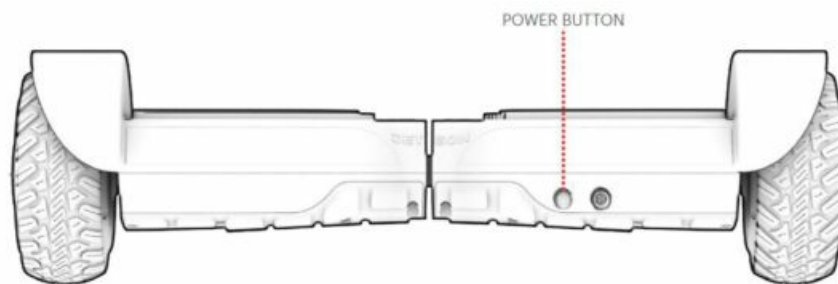

 THE HOVERBOARD WILL AUTOMATICALLY SHUT OFF AFTER STANDING IDLE FOR 10 MINUTES.



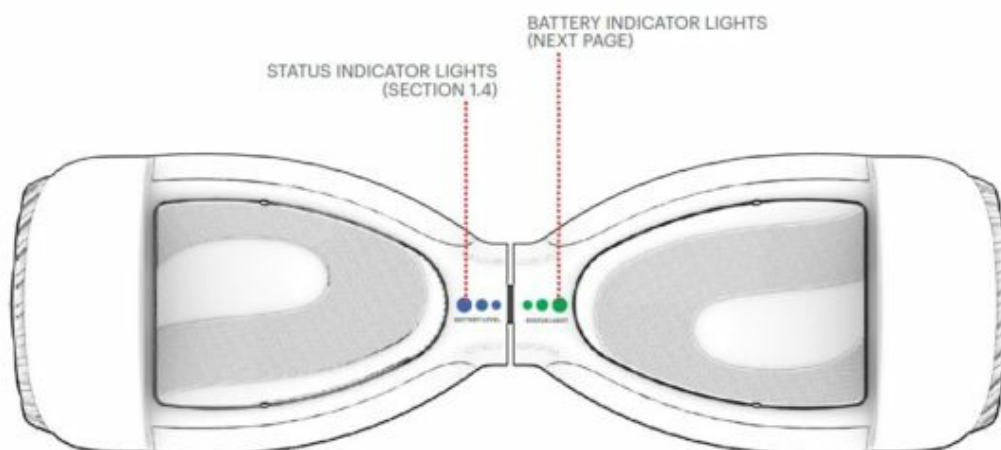


## 1.3 Understanding the Battery Indicator Lights



WHEN POWERED ON FOR USE, BATTERY INDICATOR LIGHTS WILL ILLUMINATE TO INDICATE CHARGE PERCENTAGES AS INDICATED IN THE TABLE BELOW.



IMPORTANT: WHEN THE BATTERY CHARGE DEPLETES TO 0%, THE HOVERBOARD WILL POWER OFF. CHARGE THE HOVERBOARD TO FULL POWER (SEE SECTION 1.1) PRIOR TO YOUR NEXT RIDE.

BATTERY INDICATOR LIGHTS	CHARGE PERCENTAGE
 3 SOLID LIGHTS	75 - 100% CHARGED
 2 SOLID LIGHTS	30 - 74% CHARGED
 ONE SOLID LIGHT	10 - 29% CHARGED (CHARGE YOUR HOVERBOARD NOW!)
 1 FLASHING LIGHT & LOW BATTERY CHARGE ANNOUNCEMENT FROM SPEAKER	5 - 9% CHARGED (REALLY. IT'S TIME TO CHARGE!)
 1 FLASHING LIGHT, LOW BATTERY CHARGE ANNOUNCEMENT FROM SPEAKER, & CONTINUOUS BEEPING	1 - 4% (STOP RIDING AND CHARGE YOUR HOVERBOARD!)

WARNING: AS A SAFETY PRECAUTION, THE FRONT OF THE HOVERBOARD WILL AUTOMATICALLY TILT UP AND THE HOVERBOARD WILL SLOW DOWN WHEN THE BATTERY CHARGE DIPS BELOW 10%.

 
1.4 Understanding the Status Indicator Lights

STATUS LIGHT		
STATUS	YOUR STEREOFLY IS ALL SET.	RECALIBRATE YOUR STEREOFLY! (SEE SECTION 1.5)

1.5 How to Recalibrate

SOMETIMES THE INTERNAL BALANCE MECHANISMS ON A HOVERBOARD NEED TO BE RESET, OR “RECALIBRATED.”

IMPORTANT: RECALIBRATE YOUR HOVERBOARD STRAIGHT OUT OF THE BOX. THEN, RECALIBRATE AS NECESSARY. SIGNS YOUR HOVERBOARD MIGHT NEED RECALIBRATING INCLUDE CONSTANT BEEPING AND/OR SPINNING OF THE WHEELS.

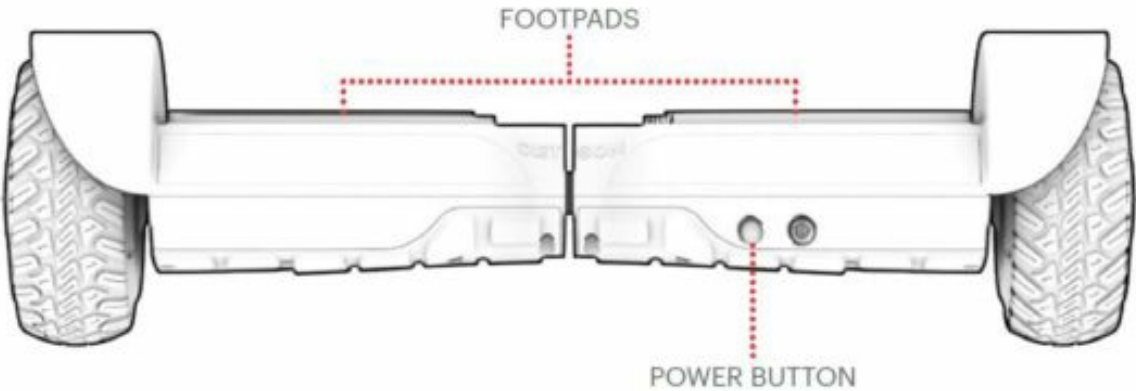


TO RECALIBRATE:

1. POWER OFF YOUR HOVERBOARD.
2. PLACE YOUR HOVERBOARD ON A FLAT SURFACE AND LEVEL THE FOOTPADS SO THEY ARE EVENLY ALIGNED AND PARALLEL TO THE GROUND.
3. PRESS AND HOLD THE POWER BUTTON FOR ABOUT 5 SECONDS, AND YOU WILL HEAR THE START OF A MUSICAL TUNE.
4. CONTINUE TO HOLD THE BUTTON UNTIL YOU HEAR THE WORDS “CALIBRATION SUCCESSFUL.”
5. RELEASE THE POWER BUTTON, AND THEN PRESS AND HOLD THE POWER BUTTON FOR 3 SECONDS TO TURN OFF THE HOVERBOARD.
6. PRESS AND HOLD THE POWER BUTTON FOR 1 SECOND TO TURN THE HOVERBOARD BACK ON. RECALIBRATION IS NOW COMPLETE.

**IMPORTANT:** DO NOT LEAN OR APPLY ANY WEIGHT ON THE HOVERBOARD DURING THE RECALIBRATION PROCESS.

NOTE: IT MAY TAKE A FEW RECALIBRATION ATTEMPTS TO FULLY RESET THE HOVERBOARD’S INTERNAL BALANCE MECHANISMS. STILL WAITING ON LIGHTING FUNCTIONALITY.

## 1.6 Connecting your Stereofly to the Ride Jetson App

1. DOWNLOAD THE RIDE JETSON APP ON YOUR HANDHELD DEVICE AND CREATE AN ACCOUNT.
2. QUICK-PRESS THE POWER BUTTON FOR 1 SECOND TO POWER ON YOUR STEREOFLY.
3. OPEN THE RIDE JETSON APP ON YOUR HANDHELD DEVICE.
4. TAP THE BLUETOOTH® SYMBOL (  ) IN THE TOP LEFT CORNER OF THE APP.
5. LOOK FOR YOUR STEREOFLY IN THE LIST OF DETECTED DEVICES AND SELECT IT.
6. ENTER YOUR PASSWORD. (IF THIS IS YOUR FIRST TIME CONNECTING OR YOU HAVE RECENTLY RECALIBRATED YOUR HOVERBOARD, YOUR PASSWORD WILL BE THE DEFAULT PASSWORD: 000000.)
7. YOUR PRODUCT SHOULD NOW BE CONNECTED.

## 2. Making Moves

### 2.1 Starting Notes

- WHEN IT COMES TO RIDING, THERE IS NO TECHNICAL FRONT OR BACK OF THE HOVERBOARD. THE RIDER CAN STEP ON FROM EITHER SIDE.
- THE DIRECTIONS GIVEN IN THIS MANUAL—RIGHT, LEFT, FRONT/FORWARD, AND REAR/BACK—ARE ORIENTED AS THE RIDER WOULD SEE THEM WHEN STANDING ON THE HOVERBOARD. THE “RIGHT SIDE” OF THE HOVERBOARD, FOR EXAMPLE, IS THE SIDE WHERE THE RIDER’S RIGHT FOOT WILL BE.
- THE HOVERBOARD CAN BE USED WITHOUT CONNECTION TO THE RIDE JETSON APP, BUT CERTAIN FEATURES, INCLUDING SWITCHING TO A HIGHER SPEED AND CHANGING THE LIGHTING, CAN ONLY BE ACCESSED THROUGH THE APP.

 
### 2.2 Mounting the Hoverboard

**IMPORTANT:** NEVER TRY TO MOUNT A HOVERBOARD THAT IS POWERED OFF. THE INTERNAL BALANCE MECHANISMS ONLY ACTIVATE WHEN THE HOVERBOARD IS POWERED ON.


#### **TO MOUNT THE HOVERBOARD:**

1. POWER ON YOUR HOVERBOARD.
2. POSITION IT ON THE GROUND IN FRONT OF YOU AND PLACE ONE FOOT IN THE CENTER OF THE FOOTPAD IN FRONT OF IT.
3. LIFT YOUR OTHER FOOT ONTO THE OTHER FOOTPAD, AND QUICKLY SHIFT YOUR WEIGHT TO THE CENTER OF YOUR BODY.
4. STAND STRAIGHT, KEEPING A SLIGHT BEND IN THE KNEES.

#### **2.3 Riding the Hoverboard**

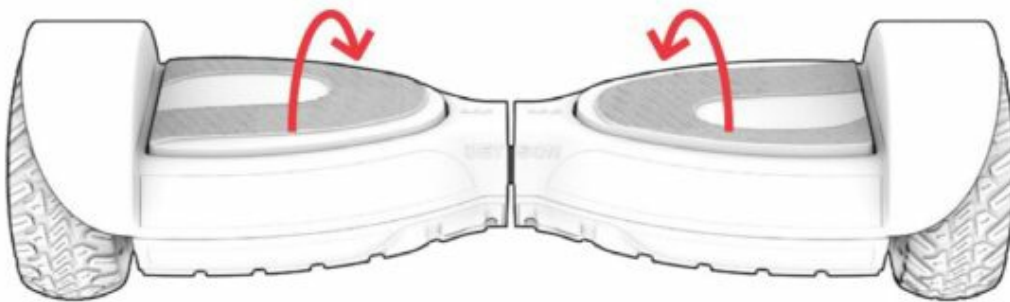

 **TO MOVE FORWARD:** APPLY EQUAL PRESSURE TO THE FRONT OF EACH FOOTPAD WITH YOUR TOES.

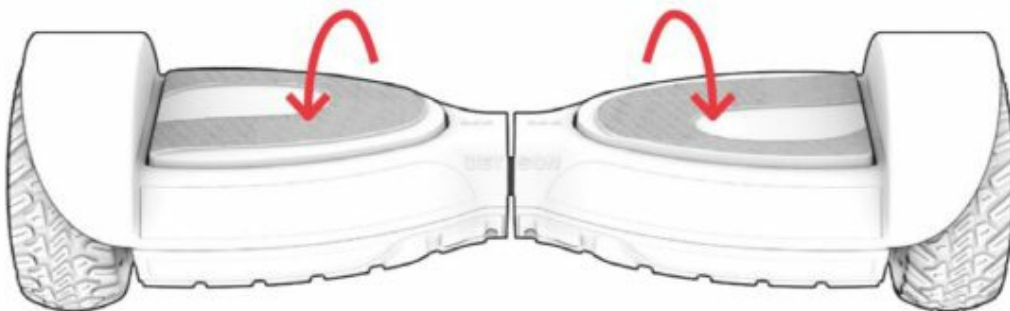

**TO MOVE BACKWARDS:** APPLY EQUAL PRESSURE TO THE BACK OF EACH FOOTPAD WITH YOUR HEELS.

**IMPORTANT:** WHEN THE HOVERBOARD IS TRAVELING NEAR OR AT MAX SPEED, IT WILL START BEEPING CONTINUOUSLY AS A WARNING TO SLOW DOWN.




**IMPORTANT:** WHEN THE HOVERBOARD IS PUSHED BEYOND ITS INTENDED CAPACITY, THE MOTORS ARE SUSCEPTIBLE TO OVERLOADING. IF APPROACHING MOTOR OVERLOAD, THE HOVERBOARD MAY START BEEPING AS AN ALERT, AND ONE OR BOTH SIDES OF THE HOVERBOARD MAY ENTER PROTECTION MODE AND AUTOMATICALLY POWER OFF. IN CASES OF OVERLOAD, LET THE MOTOR COOL OFF FOR 30 – 60 MINUTES BEFORE RIDING AGAIN.

TO AVOID OVERLOADING THE MOTOR, REFRAIN FROM RIDING:


- ON HIGH-RESISTANCE SURFACES SUCH AS CARPET OR ROUGH, ROCKY TERRAIN.
- UP STEEP SLOPES.
- WITH A CARRYING WEIGHT EXCEEDING 200 LB.
- OVER BUMPS, STEPS/CURBS, OR UNEVEN GROUND.

## 2.4 Making Turns

 THE MORE PRESSURE YOU APPLY TO A FOOTPAD, THE FASTER THE WHEEL ON THAT SIDE WILL ROTATE.

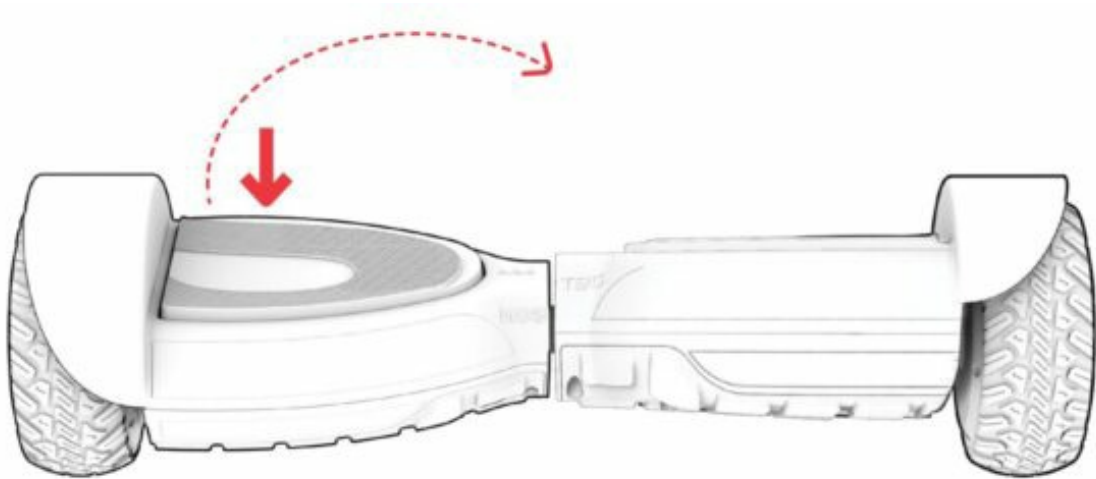

 **TO TURN RIGHT:** APPLY EXTRA PRESSURE TO THE FRONT OF THE LEFT FOOTPAD WITH THE TOES ON YOUR LEFT FOOT.

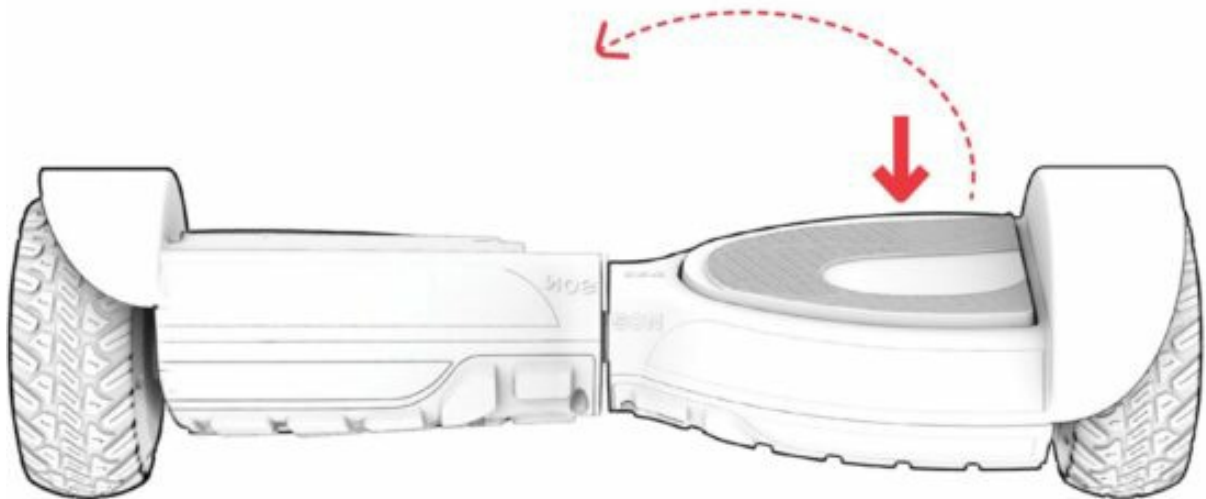

**TO TURN LEFT:** APPLY EXTRA PRESSURE TO THE FRONT OF THE RIGHT FOOTPAD WITH YOUR RIGHT FOOT.

## 2.5 Slowing Down & Stopping

TO SLOW DOWN WHILE RIDING FORWARDS, EASE UP ON THE PRESSURE BEING APPLIED TO THE FRONT OF THE FOOTPADS. BRING YOUR BODY WEIGHT OVER THE CENTER OF EACH FOOTPAD TO COME TO A STOP.

## 2.6 Dismounting the Hoverboard

ONCE THE BOARD HAS COME TO A STOP, DISMOUNT IT BY STEPPING OFF BEHIND IT ONE FOOT AT A TIME.

IMPORTANT: FOR SAFETY, NEVER DISMOUNT THE HOVERBOARD BY STEPPING OFF IN FRONT OF IT.

## 2.7 Understanding & Changing Speed Modes


YOU CAN SET YOUR HOVERBOARD IN 3 DIFFERENT SPEED MODES, EACH OF WHICH HAVE DIFFERENT SPEEDS AT WHICH THE HOVERBOARD WILL RIDE.\*

(\*DEPENDENT ON THE AMOUNT OF PRESSURE BEING APPLIED TO THE FOOTPADS AND RIDING CONDITIONS.)

BEGINNER	INTERMEDIATE	ADVANCED
4 - 7 MPH	7 - 9 MPH	10 - 12 MPH

**IMPORTANT:** YOUR HOVERBOARD'S DEFAULT SPEED MODE IS "BEGINNER." IN ORDER TO ACHIEVE HIGHER SPEEDS, YOU WILL NEED TO SELECT ANOTHER SPEED MODE. AFTER RE-SETTING, YOUR HOVERBOARD WILL REMAIN IN THAT SPEED MODE UNTIL YOU CHANGE IT TO ANOTHER, EVEN AFTER IT HAS BEEN POWERED OFF.

### TO CHANGE SPEED MODES:

1. OPEN THE RIDE JETSON APP AND PAIR IT WITH YOUR HOVERBOARD (SEE SECTION 1.6)
2. TAP THE SETTINGS (  ) ICON IN THE TOP RIGHT CORNER OF THE APP.
3. SELECT THE "QUICK SETTING" OF YOUR CHOICE: BEGINNER, INTERMEDIATE, OR ADVANCED.

## 2.8 Maximizing Speed & Run Time

THE MAXIMUM RUN TIME PER BATTERY CHARGE IS UP TO 60 MINUTES AND THE MAXIMUM ACHIEVABLE SPEED IS 12 MPH.

HOWEVER, MANY FACTORS WILL AFFECT HOW FAR YOU CAN GO PER CHARGE AND HOW FAST YOU CAN RIDE.

- RIDING SURFACE: A SMOOTH, FLAT SURFACE WILL INCREASE SPEED AND RUN TIME.
- WEIGHT: MORE WEIGHT COULD RESULT IN LESS DISTANCE AND SLOWER SPEEDS.
- TEMPERATURE: RIDE, CHARGE, AND STORE THE HOVERBOARD ABOVE 50°F.
- RIDING STYLE: FREQUENT STARTING AND STOPPING WILL REDUCE RUN TIME.

## 2.9 Using the Bluetooth® Speaker

THE STEREOFly COMES EQUIPPED WITH A BLUETOOTH® SPEAKER.

### STREAMING MUSIC THROUGH YOUR HOVERBOARD

YOU CAN CONNECT YOUR HANDHELD DEVICE TO THE HOVERBOARD'S BUILT-IN BLUETOOTH® SPEAKER TO STREAM MUSIC DURING YOUR RIDE. ONCE THE MUSIC STARTS PLAYING, THE LIGHTS ON YOUR HOVERBOARD WILL AUTOMATICALLY SYNC WITH THE MUSIC AND FLASH TO ITS BEAT.

### TO CONNECT YOUR HANDHELD DEVICE TO THE HOVERBOARD'S BLUETOOTH® SPEAKER:

1. POWER ON THE HOVERBOARD.
2. IN THE SETTINGS SECTION ON YOUR HANDHELD DEVICE, ENABLE BLUETOOTH AND LOOK FOR “STEREOFLY” IN THE LIST OF OPTIONS. SELECT IT.
3. PLAY MUSIC THROUGH YOUR FAVORITE APP, AND IT WILL STREAM THROUGH THE HOVERBOARD’S SPEAKERS.

### **TROUBLESHOOTING CONNECTIVITY ISSUES**

IF YOU ARE HAVING TROUBLE CONNECTING WITH THE SPEAKER, TRY:

1. POWERING THE STEREOFLY OFF AND THEN BACK ON.
2. POWERING YOUR PERSONAL DEVICE OFF AND THEN BACK ON.
3. CLICKING THE SCAN BUTTON TO REFRESH THE LIST OF DETECTED PRODUCTS.

### **2.10 Using the Lights**

LIGHTS ARE CONTROLLED THROUGH THE RIDE JETSON APP. THERE ARE 3 DIFFERENT LIGHTING EFFECTS THAT YOU CAN CHOOSE FROM : SOLID ILLUMINATION IN EITHER RED, PURPLE, OR GREEN, AND TWO DIFFERENT MULTICOLORED LIGHTING PATTERNS, “STEALTH” AND “FLOW.” WHENEVER MUSIC IS PLAYING THROUGH THE BLUETOOTH SPEAKER, THE LIGHTS WILL PULSE IN SYNC TO THE BEAT OF THE MUSIC.

- TO CHANGE LIGHTING PATTERNS, CLICK THE ICON IN THE RIDE JETSON APP.

### **2.11 Other In-App Features**

AMONG THE OTHER FEATURES THAT CAN BE CONTROLLED IN THE APP ARE:

- SYSTEM OFF – TURN OFF THE MOTOR WITHOUT POWERING OFF THE HOVERBOARD, SO YOU CAN STILL UTILIZE ITS SPEAKER AND ILLUMINATION.
- RIDE TRACKING – MAP AND MEASURE THE DISTANCE OF EACH RIDE, AND VIEW A LOG OF PAST RIDES.
- PERSONAL ACHIEVEMENTS – VIEW STATS AND PERSONAL RECORDS.
- CHANGING YOUR BLUETOOTH® PASSWORD – SWITCH FROM THE DEFAULT “000000.”
- CHANGE UNIT OF MEASUREMENTS – FROM MILES TO KILOMETERS.
- CHANGE DRIVING FORCE & STEERING SENSITIVITY – CONTROL THE FEEL OF YOUR RIDE.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, inc. And any use of such marks by Jetson Electric Bike LLC. is under license. Other trademarks and trade names are those of their respective owners.

### **2.12 Helmet Safety**

A HELMET SHOULD BE WORN AT ALL TIMES.





\* WEAR A HELMET, APPROPRIATE CLOTHING, SHOES, AND SAFETY GEAR. AVOID CLOTHING THAT CAN GET CAUGHT INTO OR UNDER THE WHEELS. CLOSED-TOE, FLAT SHOES ARE RECOMMENDED. WEAR AN ASTM F1492 APPROVED HELMET AND PROTECTIVE GEAR TO PREVENT INJURY IN THE EVENT OF AN ACCIDENT.

## Care & Maintenance

### HANDLING THE STEREOFLY

· DO NOT LIFT THE HOVERBOARD OFF OF THE GROUND WHEN IT IS POWERED ON. AS A REMINDER TO PUT THE HOVERBOARD BACK ON A SOLID SURFACE, THE WHEELS WILL DO A QUICK SPIN AND THEN THE HOVERBOARD WILL START BEEPING CONTINUOUSLY. TO STOP THE BEEPING, TURN THE HOVERBOARD OFF BY QUICK-PRESSING THE POWER BUTTON.

### CLEANING THE STEREOFLY

· TO CLEAN THE HOVERBOARD, CAREFULLY WIPE WITH A DAMP CLOTH AND THEN DRY WITH A DRY CLOTH. DO NOT APPLY WATER DIRECTLY TO THE HOVERBOARD, AS THE ELECTRICAL AND ELECTRONIC SYSTEMS MAY GET WET, WHICH COULD LEAD TO A MALFUNCTION THAT PUTS RIDER SAFETY AT RISK.  
· IF THE ELECTRIC PARTS OR BATTERY GET WET, DO NOT POWER ON THE HOVERBOARD. CONTACT THE JETSON CARE TEAM FOR ASSISTANCE.

### BATTERY CARE AND PRECAUTIONS

- KEEP AWAY FROM FIRE AND EXCESSIVE HEAT.
- TIMELY BATTERY CHARGING AFTER EVERY RIDE WILL PROLONG BATTERY LIFE.
- AVOID INTENSE PHYSICAL IMPACT AND/OR SEVERE VIBRATION.
- PROTECT FROM WATER AND MOISTURE.
- DO NOT DISASSEMBLE THE HOVERBOARD OR ITS BATTERY.
- CONTACT THE JETSON CARE TEAM IF THERE ARE ANY ISSUES WITH THE BATTERY.

### STORING THE STEREOFLY

- FULLY CHARGE THE BATTERY BEFORE STORING THE HOVERBOARD FOR EXTENDED PERIODS OF

TIME.

- WHEN IN STORAGE FOR EXTENDED PERIODS OF TIME, FULLY CHARGE THE BATTERY ONCE A MONTH.
- COVER THE HOVERBOARD TO PROTECT IT AGAINST DUST.
- STORE THE HOVERBOARD INDOORS AND IN A DRY PLACE.

### Stay connected.

Be sure to follow @ridejetson

on social media to learn about fantastic offers, giveaways, and all the latest Jetson news.

### Loving your ride?

Then be sure to leave a review at [ridejetson.com/reviews](https://ridejetson.com/reviews).

We can't wait to hear from you!

# JETSON

### Questions? Let us help.

[ridejetson.com/support](https://ridejetson.com/support)

[ridejetson.com/chat](https://ridejetson.com/chat)

To exercise your product's warranty or inquire about warranty coverage, contact us directly.

1-888-976-9904

Manufactured in Dongguan, China

Imported by Jetson Electric Bikes LLC.

P.O. Box 320149, 775 4th Ave #2,

Brooklyn, NY 11232

[www.ridejetson.com](https://www.ridejetson.com)



**Made in China**

Date Code: 03/2024

Document Edition: v1.2

© 2024, JETSON. ALL RIGHTS RESERVED. Manufactured by JETSON ELECTRIC BIKES LLC.

 
No portion of this document, including shape, copy, graphics, and design, may be reproduced or transmitted in any form or by any means.

**Read More About This Manual & Download PDF:**



---

## Documents / Resources

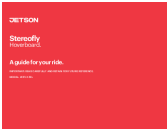	<a href="#">JETSON Stereofly Hoverboard</a> [pdf] User Guide Stereofly Hoverboard, Stereofly, Hoverboard
---	---

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.