



JHS Kodiak Analog Tremolo with Tap Tempo Instructions

[Home](#) » [jhs](#) » JHS Kodiak Analog Tremolo with Tap Tempo Instructions 

JHS PEDALS

Kodiak Analog Tremolo with Tap Tempo Instructions

Contents

- [1 Kodiak Analog Tremolo with Tap Tempo](#)
- [2 CONTROLS](#)
- [3 JACKS](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

Kodiak Analog Tremolo with Tap Tempo



A beast of a tremolo with all the modern amenities you could want in a small package. The Kodiak will give your tone a bear hug!

CONTROLS

VOLUME – Controls the output volume. Can be set at unity or a slight boost.

SPEED – Controls the speed of the tremolo. Left is slower, right is faster.

RATIO – Controls the ratio of the tapped in speed for faster speeds with fewer taps. Select quarter notes, eighth notes, “triplets,” or sixteenth notes.


MIX – Controls the mix/depth of the tremolo. Left is less, right is more.
WAVE – Select between four different wave types: Sine, Rhythmic, Square, or Ramp.
TAP/EXP SWITCH – Switch on the left side of the pedal to select either tap in/out or expression out for the Tap/Exp jack.

JACKS

INPUT – 1/4" jack on the top right side of the pedal.
OUTPUT – 1/4" jack on the top left side of the pedal.
TAP/EXP – 1/4" jack on the right side of the pedal. Select either tap or expression with the switch on the left side of the pedal. Control the speed with an expression pedal, an external tap tempo pedal, or slave another tap tempo pedal with the Kodiak.
POWER – Uses 9V DC Negative Center. Do not use more than 9V DC. Your warranty will be voided. 10mA consumption.

JHS PEDALS

Documents / Resources

	<p>JHS Kodiak Analog Tremolo with Tap Tempo [pdf] Instructions</p> <p>Kodiak Analog Tremolo with Tap Tempo, Analog Tremolo with Tap Tempo, Tremolo with Tap Tempo, Tap Tempo, Tempo</p>
--	---