

JMC System Engineering UB570 PRO UVC User Manual

Home » JMC System Engineering » JMC System Engineering UB570 PRO UVC User Manual

JMC System Engineering UB570 PRO UVC



UB570 PRO UVC

User Manual



Contents [hide

- **1 3. PRODUCT INTRODUCTION**
 - 1.1 3.1. Product Brief
 - 1.2 3.2. Specification
- 2 4. HARDWARE

INSTALLATION

- 2.1 4.1. Package Contents
- 2.2 4.2. Precaution
- 2.3 4.3. USB UVC Dongle
- **3 5. SOFTWARE INSTALLATION**
 - 3.1 5.1. Support OS
- 3.2 5.2. Driver Installation
- 4 Documents / Resources
 - 4.1 References
- **5 Related Posts**

3. PRODUCT INTRODUCTION

3.1. Product Brief

UB570 PRO UVC is a high-quality, high-performance capture device that is specially designed for high-definition video capture applications. It supports up to 1 channel of high-definition, 1920x1200p60 video from HDMI source and alternatively one 3G SDI input.

3.2. Specification

Model	UB570 Pro	
Max. FPS	1920×1080p@60/50fps	
Recording Mode	Software Compression, Real-Time Mode	
Interface	USB3.0 (SuperSpeed) UVC / USB2.0 (High-Speed) UVC	
Video Input	1×SDI, 1×HDMI, 1×DVI-I, 1×YPbPr, 1×CVBS, 1×S- Video	
Video RAW Data Format	YUY2	
Video Input Resolution	USB2.0/3.0 Support Resolution All resolution below 1920×1200p@60fps	
Recording Video Format	YUY2 (USB2.0/3.0)	
UVC Video Output Resolution	USB3.0 Support Resolution 1920×1200p@60/50/30/25/24fps 1920×1080p@60/50/30/25/24fps 1280×1024p@60/50/30/25/24fps 1280×720p@60/50/30/25/24fps 1024×768p@60/50/30/25/24fps 800×600p@60/50/30/25/24fps 640×480p@60/50/30/25/24fps 720×576p@60/50/30/25/24fps USB2.0 Support Resolution 640×480p@30/25/24fps 720×576p@25/24fps	
Audio Input	SDI Embedded Audio HDMI Embedded Audio 2×RCA (Audio L/R Through Component Cable)	
Audio Format	Stereo / 16-bit / 48000Hz	
	System Requirement	
OS Support	Windows 7 / Windows 8.1 / Windows 10 (32-bit and 64-bit) Linux / MAC OS / Android	


4. HARDWARE INSTALLATION

4.1. Package Contents


Item	Amount
UB570 PRO UVC	1
USB3.0 Cable	1
2 x RCA to 3.5mm stereo analog audio cable	1

Signal Source Connection Diagram

Front Side

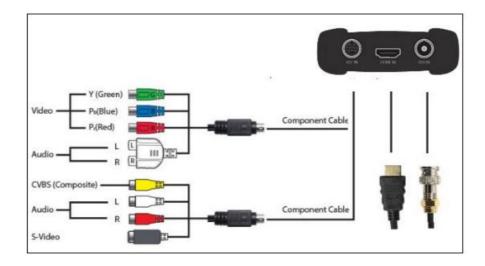

Rear Side

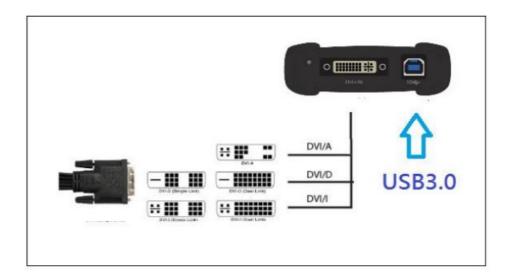


4.2. Precaution

Before proceeding, make sure to touch a safely grounded object or metal object before touching the device. Please follow the below chapter for installation operations

4.3. USB UVC Dongle

• Connect USB3.0 cable to the computer

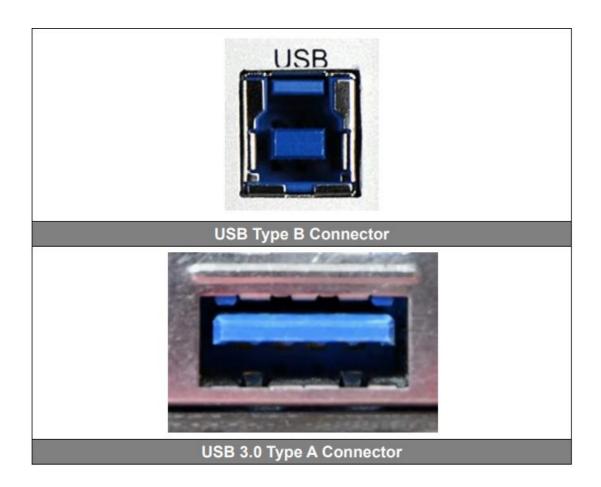

- Connect USB Type B connector to UB570 PRO UVC
- · Connect signal source

5. SOFTWARE INSTALLATION

5.1. Support OS

Windows based system	Windows 7	Support
	Windows 8/8.1	Support
	Windows 10	Support
Andr	Support	
MAC	Support	
Linu	Support	

5.2. Driver Installation

For UVC devices, there is no need to install drivers. The driver will activate automatically when the device is attached.

Utility (Win) for UVC settings can be downloaded from http://jmc.se/Download/2020/UVC.UTILITY.X86_V1.50.EXE

JMC Systems Engineering AB www.jmc.se +46-8-82 82 70 info@jmc.se

Documents / Resources



References

- <u>Mjmc.se/Download/2020/UVC.UTILITY.X86_V1.50.EXE</u>
- Ojmc.se
- Ojmc.se/

Manuals+, home privacy