

Joie Mytrax Flex Signature Stroller



Joie Mytrax Flex Signature Stroller Instruction Manual

[Home](#) » [Joie](#) » Joie Mytrax Flex Signature Stroller Instruction Manual 

Contents

- 1 Joie Mytrax Flex Signature Stroller
- 2 Product Usage Instructions
- 3 FAQ
- 4 Parts List
- 5 WARNING
- 6 Stroller Assembly
- 7 Stroller Operation
- 8 Use Shoulder & Waist Harnesses
- 9 Use Accessories
- 10 Detach & Assemble Soft Goods
- 11 Cleaning and Maintenance
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts



Joie Mytrax Flex Signature Stroller



Specifications

- Brand: Mytrax™ flex
- Product: Stroller
- Weight Limit: Up to 22kg
- Storage Basket Capacity: Up to 4.5kg
- Cupholder Weight Limit: Up to 0.5kg

Product Usage Instructions

Stroller Assembly

Follow the numbered steps in the manual to assemble the stroller correctly. Make sure all parts are available before assembly. No tools are required for assembly.

Stroller Operation

Ensure all locking devices are engaged before use. Only use the stroller with a child weighing less than 22kg. Do not exceed 4.5kg in the storage basket or 0.5kg in the cupholder. Always use the restraint system and keep child in view while in the stroller.

Removing Soft Goods

Refer to the manual for instructions on how to remove soft goods for cleaning or maintenance.

Care and Maintenance

Regularly check for any unusual noise or wear and tear. Engage brakes when parking the stroller. Discontinue using if damaged or broken.

FAQ

Q: Can I use the stroller with a child over 22kg?

A: No, the stroller should only be used with a child weighing less than 22kg for safety reasons.

Q: Are accessories included with the stroller?

A: Accessories such as adapters, armbar covers, and rain covers may be sold separately or not available in all regions.

Q: What should I do in case of an emergency?

A: In case of emergency or accident, ensure your child receives immediate first aid and medical treatment. Contact local authorities if needed.

Welcome to Joie™

Congratulations on becoming part of the Joie family! We are so excited to be part of your journey with your little one. While traveling with the Joie Mytrax™ flex, you are using a high-quality, fully certified stroller, approved to European safety standards EN 1888-2:2018. This product is suitable for children up to 22kg or 4 years whichever comes first. Please carefully read this manual and follow each step to ensure a comfortable ride and best protection for your child.

IMPORTANT – READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Visit us at joiebaby.com to download manuals and see more exciting Joie products! For warranty information, please visit our website at

- joiebaby.com

 
Emergency

In case of emergency or accident, it is most important to have your child taken care of with first aid and medical treatment immediately.

Parts List

Make sure all parts are available before assembly. If any part is missing, please contact local retailer. No tools are required for assembly.


1. Stroller Frame
2. Canopy
3. Front Wheel
4. Rear Wheel
5. Canopy
6. Seat Pad
7. Armbar
8. Calf Support
9. Front Wheel
10. Swivel Lock
11. Storage Basket
12. Shoulder Harness
13. Cupholder
14. Handle
15. Canopy Window
16. Rear Wheel
17. Brake Lever
18. Storage Mount
19. Storage Latch

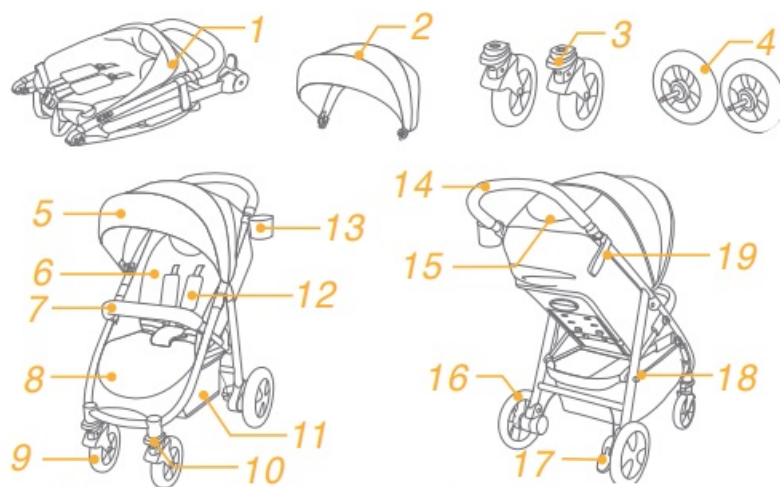

Accessories

(May not be included)

 1. Adapter (on certain models)
2. Armbar Cover (on certain models)
3. Rain cover (on certain models)

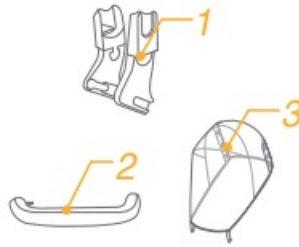

Accessories may be sold separately or may not be available depending on region.

WARNING


- **WARNING** Always use the restraint system. Safety belts and restraint systems must be used correctly.
- **WARNING** Ensure that all the locking devices are engaged before use.
- **WARNING** Do not let the child play with this product.
- **WARNING** Check that the pram body or infant child restraint attachment devices are correctly engaged before use.
- Adult assembly required.
- Use the stroller with a child weighing less than 22kg. It will cause damage to the stroller with an unfitted child.
- To prevent a hazardous, unstable condition, do not place more than 4.5kg in the storage basket.
- The maximum recommended weight in the cupholder is 1lbs (0.5kg).
- **WARNING** Never leave the child unattended. Always keep child in view while in stroller.
- Use the stroller with only one child at a time. Never place purses, shopping bags, parcels or accessory items on the handle or canopy.
- Accessories which are not approved by the manufacturer shall not be used. Only replacement parts supplied or recommended by the manufacturer shall be used.
- Overloading, folding incorrectly, or using component parts from other manufacturers may cause the stroller to be damaged, broken or unsafe. Please read the instruction manual carefully.
- Please read all the instructions in the manual before using the product. Please save the instruction manual for future use. Failure to follow these warnings and instructions may result in serious injury or death.
- To avoid serious injury from falling or sliding out, always use seat belt.
- Make sure your child's body is clear from the moving parts when adjusting the stroller.
- Be sure the stroller is fully open or folded before allowing child near the stroller.
- Child may slip into leg openings and be strangled if the harness is not used.
- Never use stroller on stairs or escalators.
- Keep away from high temperature objects, liquids, and electronics.
- Never allow your child to stand on the stroller or sit in the stroller with head toward front of stroller.
- Never place the stroller on roads, slopes or dangerous areas.
- To avoid strangulation, DO NOT place items with a string around your child's neck, suspend strings from this product, or attach strings to toys.
- Any load attached to the handle and/or on the back of the backrest and/or on the sides of the stroller will affect the stability of the stroller.
- DO NOT lift stroller while child is in stroller.
- DO NOT use storage basket as a child carrier.
- To prevent tipping, never let child climb the stroller. Always lift the child in and out of the stroller.

- To avoid finger entrapment, use care when folding and unfolding the stroller.
- **WARNING** To avoid injury ensure that the child is kept away when unfolding and folding this product.
- To ensure your child's safety, please make sure all parts are assembled and fastened properly before using the stroller.
- To avoid strangulation, do make sure your child is clear from the canopy.
- Always engage the brakes when parking the stroller.
- Discontinue using stroller if it is damaged or broken.
- Stroller to be used only at walking speed. This product is not intended for use while jogging.
- To avoid burns, never put hot liquids in your cupholder.
- To avoid suffocation, remove plastic bag and packaging materials before using this product. The plastic bag and packaging materials should then be kept away from babies and children.
- This product is not suitable for running or skating.
- Pushchair designed to be used from birth shall recommend the use of the most reclined position for new born babies.
- The parking device shall be engaged when placing and removing children.
- For infant child restraints used in conjunction with a chassis, this vehicle does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable pram body, cot or bed.
- The Carry cot shall not be used, as soon as the child is able to sit by himself, roll over and can push itself up on its hands and knees. Maximum weight of the child: 9 kg.
- No additional mattress shall be added unless recommended by the manufacturer.
- Do not attach items to the handle, seat back or sides of the stroller. Any additional load will affect the stability of the stroller and could cause the stroller to tip.
- This product is suitable for children up to 22kg or 4 years whichever comes first.

Stroller Assembly


Please read all the instructions in this manual before assembling and using this product.

Open Stroller

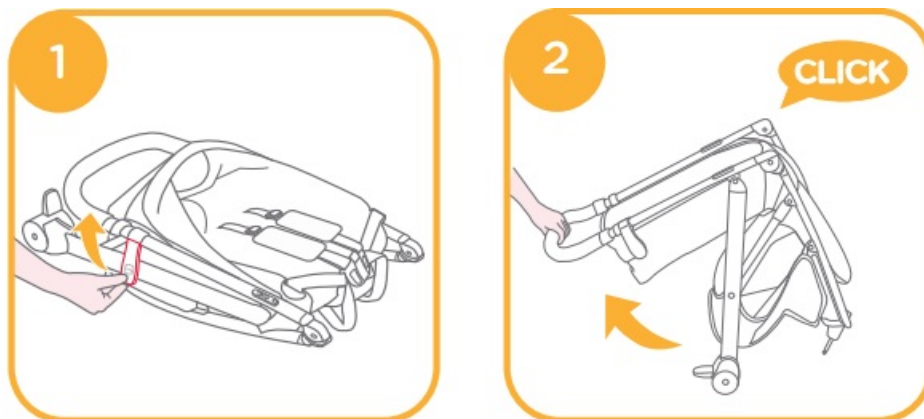


- Separate storage latch from storage mount 1 , and then lift the handle upwards 2 , a click sound means the stroller is open completely.
- Check that the stroller is completely latched before continuing to use.


Assemble & Detach Front Wheel

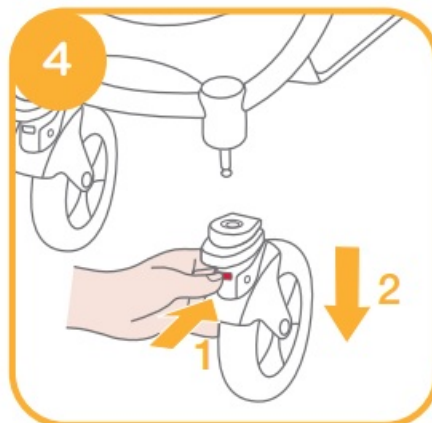


Assemble & Detach Rear Wheel

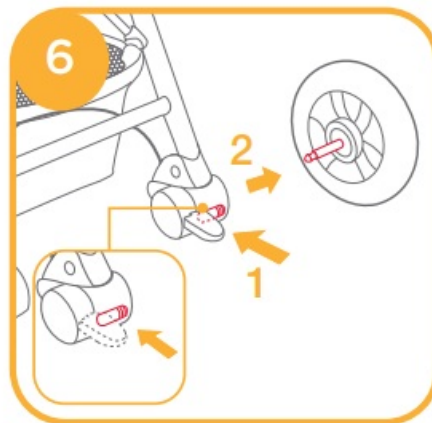

Assemble & Detach Armbar

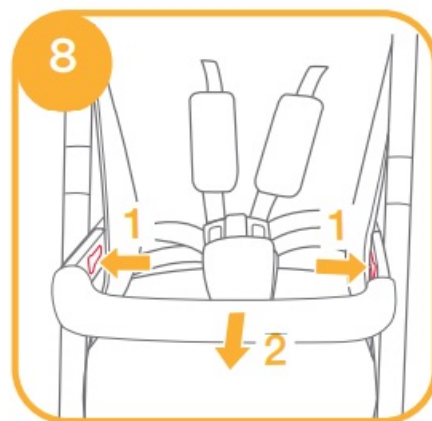


Assemble Canopy

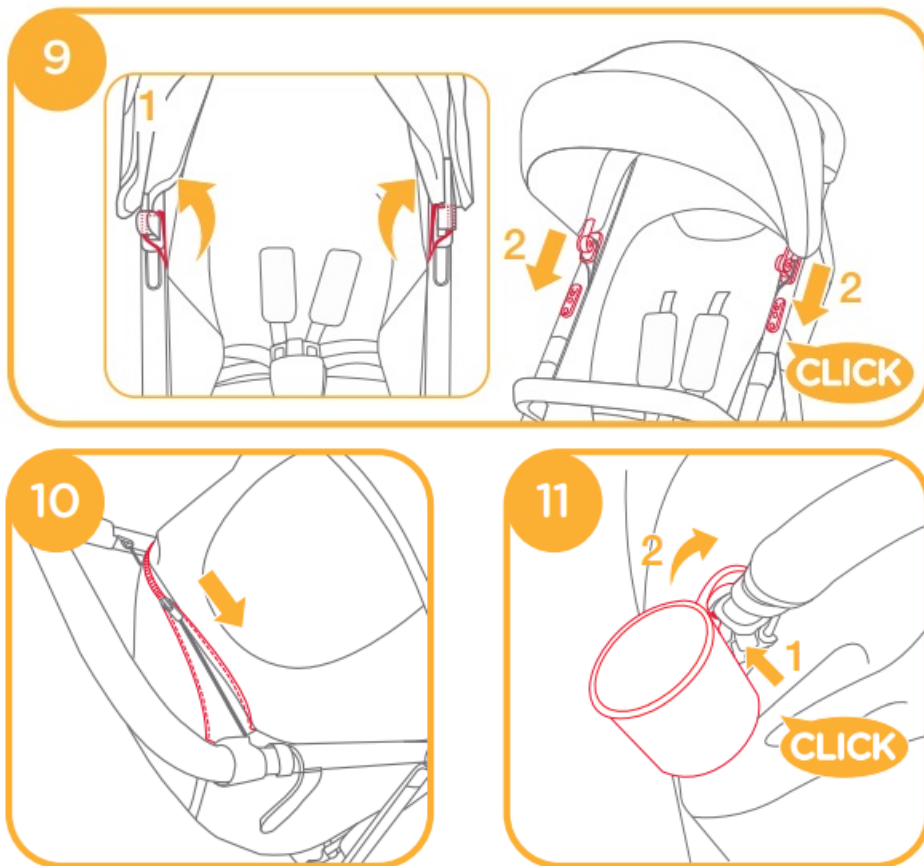

Assemble & Detach Cupholder

- The completely assembled stroller is shown as 13

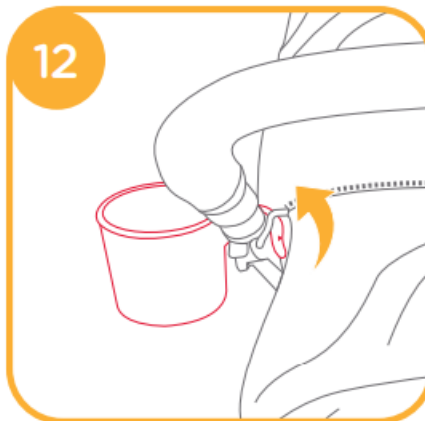

Stroller Operation

Adjust Backrest

see images 14 – 15



There are 4 recline angles for the backrest.

Recline Backrest


- To recline the backrest, squeeze the recline handle on the back of the seat, pull down on the backrest. 14


Raise Backrest

- To raise the backrest, push up. 15
- Make sure the recline is set properly for use.

Use Buckle

see images 16 – 17

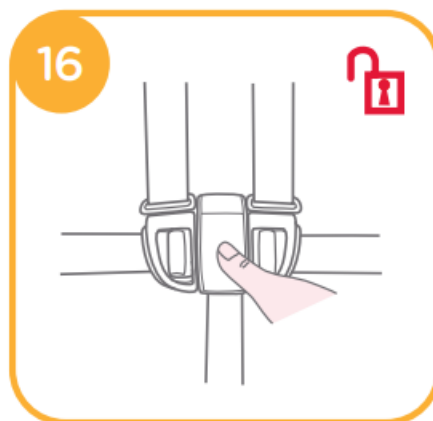

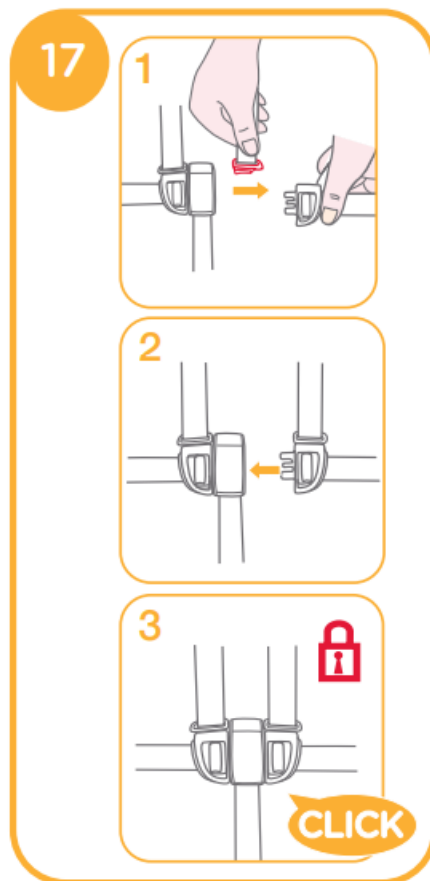



- Release Buckle Press the center button to release the buckle. 16

Lock Buckle

- Match the waist belt buckle with the shoulder buckle 17 – 1, and click into the centre buckle. 17 – 2 A “click” sound means the buckle is locked completely. 17 – 3
- To avoid serious injury from falling or sliding out, always secure your child with harness.
- Make sure your child is snugly secured. The space between the child and the shoulder harness is about the thickness of one hand.
- Do not cross the shoulder belts. This will cause pressure on a child’s neck.

Use Shoulder & Waist Harnesses

see images 18 – 21

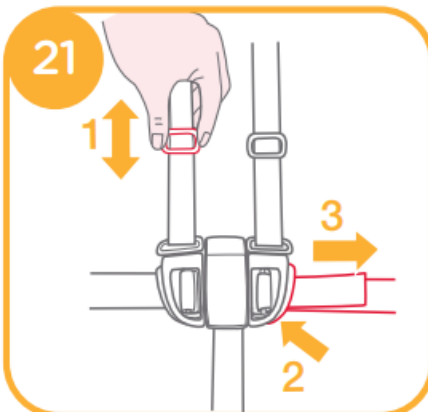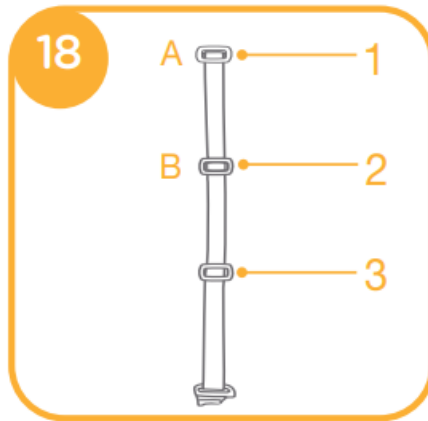

- In order to protect your child from falling out, after your child is placed into the seat, check whether the shoulder and waist harnesses are at proper height and length.
- 18 – 1 Shoulder harness anchor A
- 18 – 2 Shoulder harness anchor B

- 18 – 3 Slide adjuster

For larger child, use shoulder harness anchor A and the highest shoulder slots. For smaller child, use shoulder harness anchor B and the lowest shoulder slots. To adjust the position of the shoulder harness anchor, turn the anchor to be level with the side facing forward. Thread it through the shoulder harness slot from back to front. 19 Rethread it through the slot that is closest to child's shoulder height. 20 Use slide adjuster to change the harness length. 21 – 1 Press the button 21 – 2, while pulling the waist harness to proper length. 21 – 3

Adjust Calf Support


see images 22



The calf support has 2 positions. To raise the calf support, push it upwards. A “click” sound means the calf is locked completely. To lower calf support, press the adjustment buttons on both sides of the calf support 22 – 1, and rotate the calf support downwards. 22 – 2

Use Front Swivel Lock



see images 23

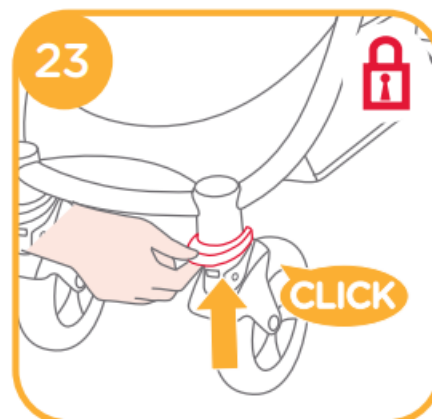

- Push up the front swivel locks to maintain the moving direction. 23
- Tip It is recommended to use swivel locks on uneven surfaces.

Use Brake


see images 24 – 25

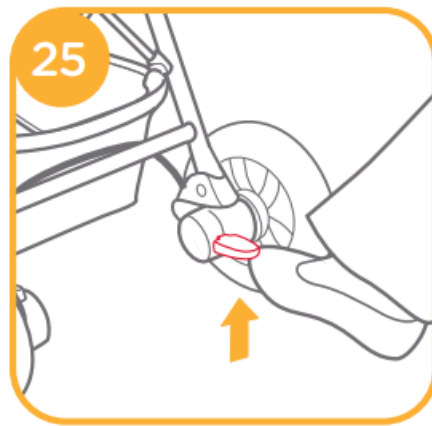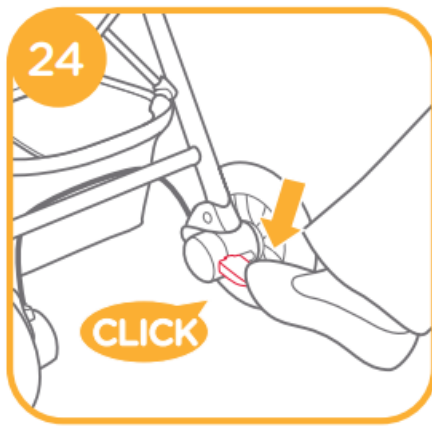

- To lock the wheels, step the brake lever downwards. 24
- To release wheels, just lift the brake lever upwards. 25
- Tip Always set the parking brake when stroller is not moving.

Use Canopy


see images 26

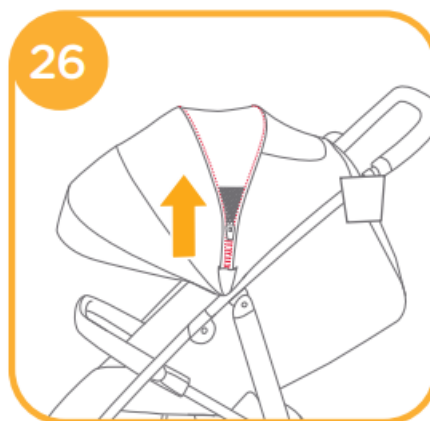

The canopy can be opened or folded, pull it toward front or back. The canopy can be opened completely to protect your child from the sun uttermostly, just unzip the zip 26 , and then pull the canopy toward front. There is a window on the canopy, through which you can view your baby.

Adjust Handle

see images 27


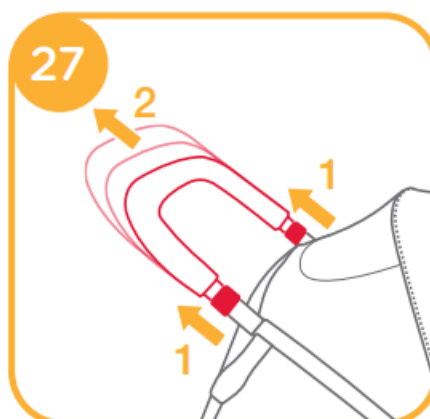


Use Shoulder Harness Cover and Crotch Harness Cover

The shoulder harness cover or crotch harness cover can be removed from the webbing. To assemble shoulder harness cover and crotch harness cover in reverse steps.

Fold Stroller

see images 28 – 31

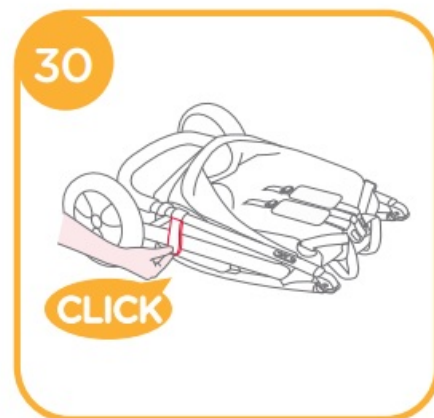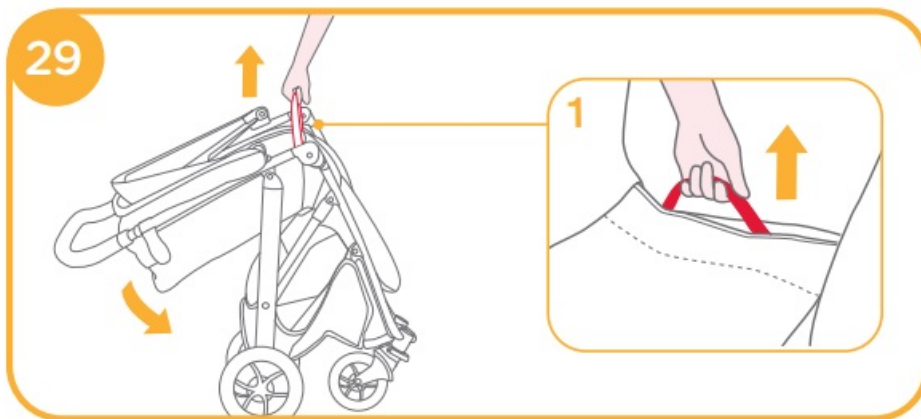

- Please fold the canopy before folding the stroller.


1. Pull the folding webbing upward, the frame will automatically fold backward. 29 – 1
2. The storage latch will automatically hook onto the storage mount, then the stroller is folded and locked completely. 30
3. The stroller can stand when folded. 31

Use Accessories

Accessories may be sold separately or may not be available depending on region.

Use with Infant Child Restraint




see images 32 – 38






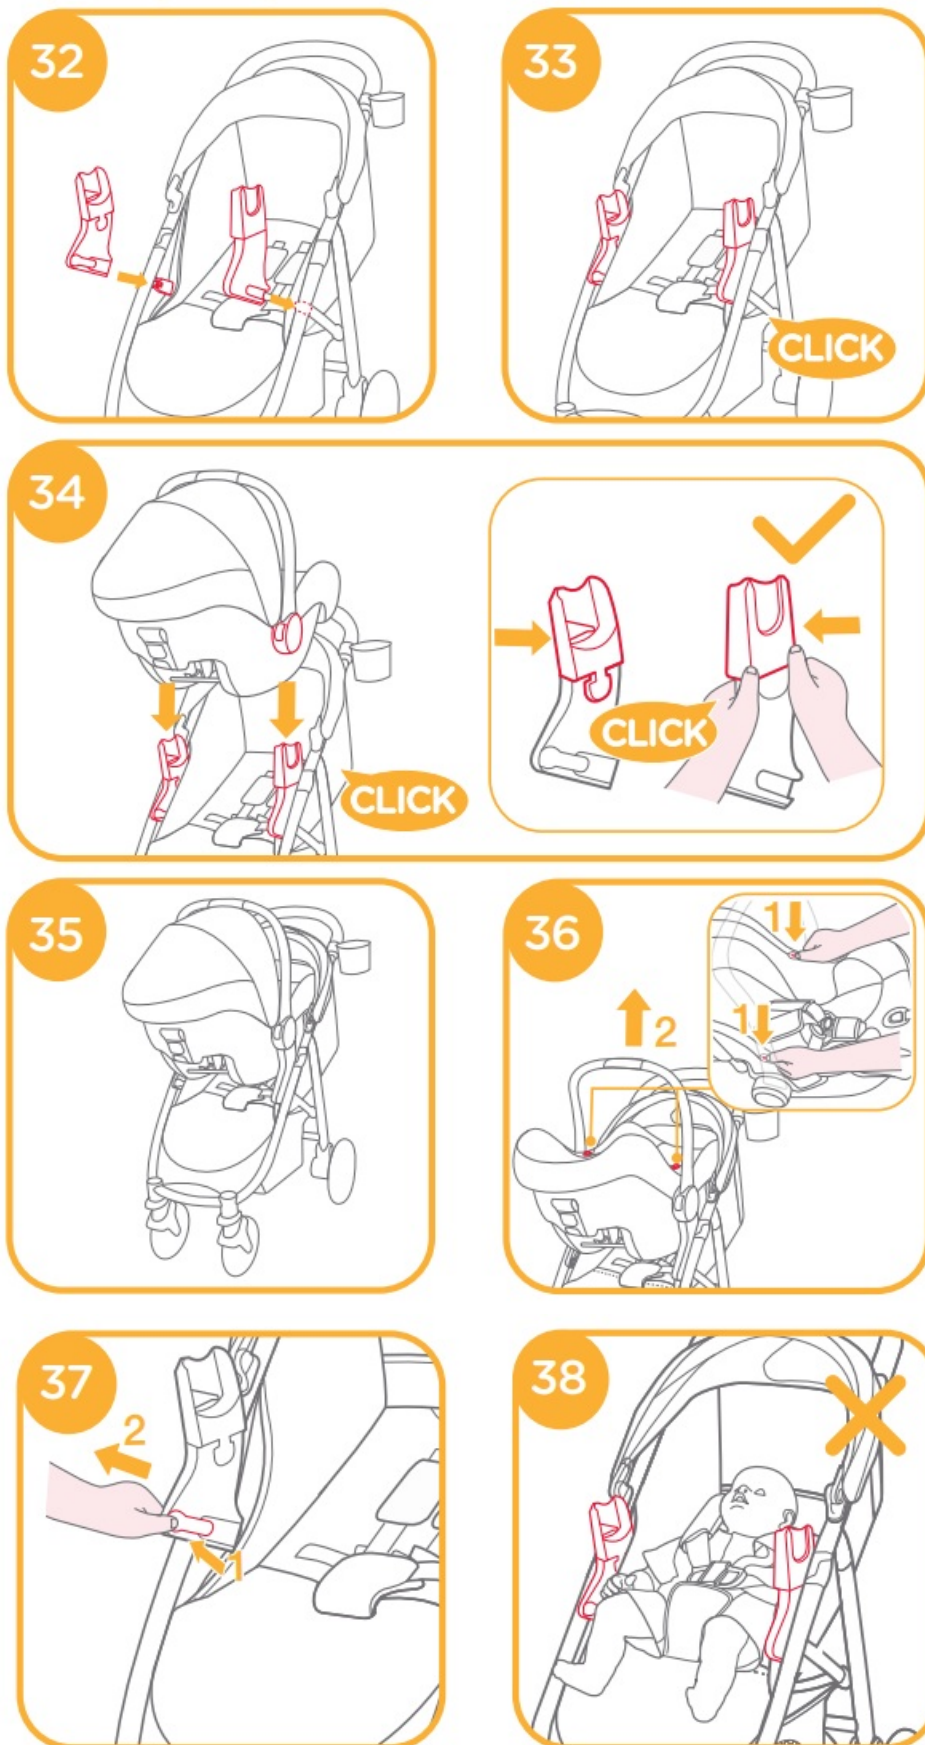


- When using with Joie infant child restraint Gemm, i-Gemm 2, i-Snug & i-Level Recline please refer to the following instructions.
- Before using the infant child restraint, please make sure the backrest has been adjusted to the lowest position and the infant child restraint has been fastened.
- If you have any problems about using the infant child restraint, please refer to their own instruction manuals.
- Please do not fold the stroller when the infant child restraint is still attached.

Detach & Assemble Soft Goods

see images 39 – 50

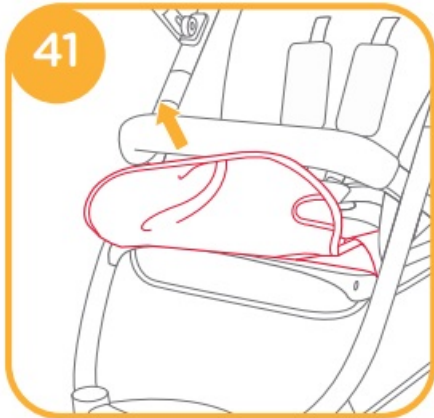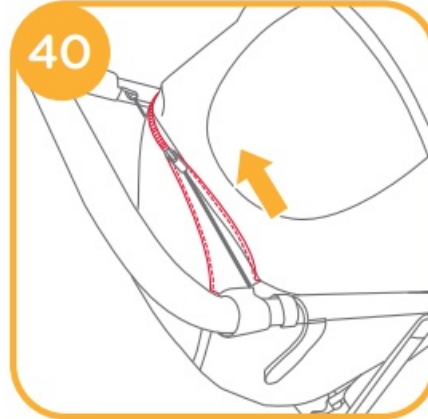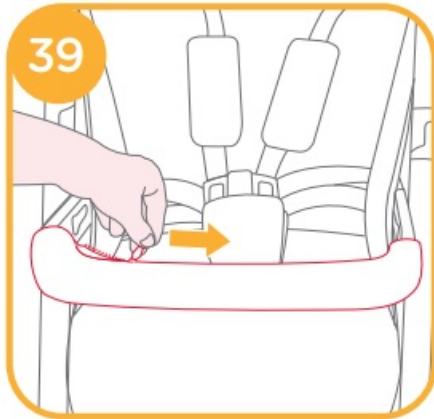


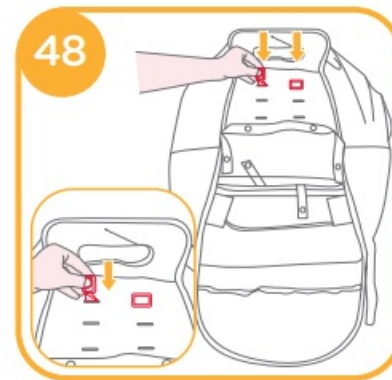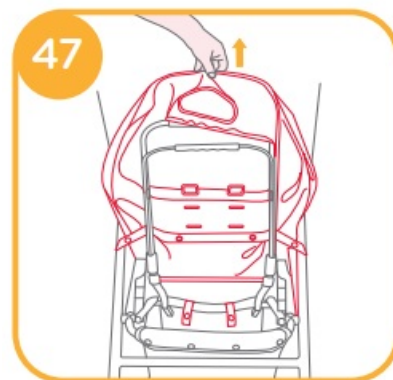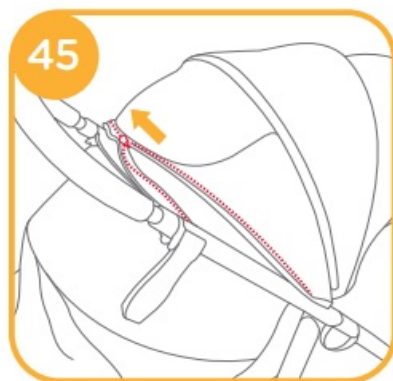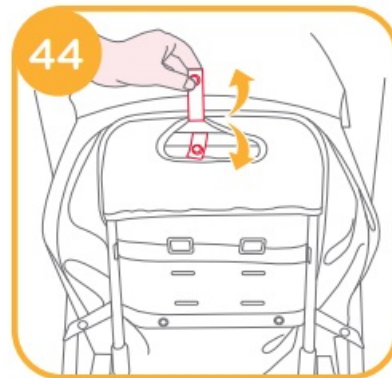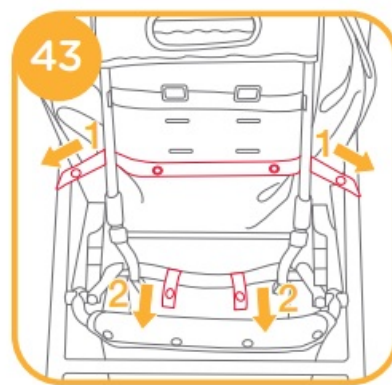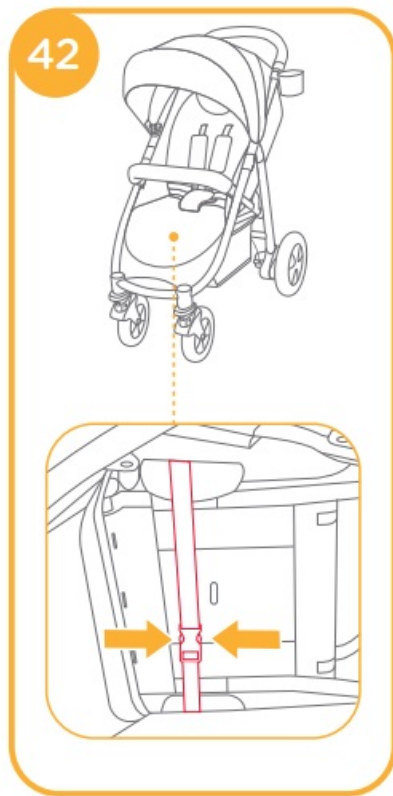

1. Remove armbar cover shown as 39
2. Open the zipper which is on the rear panel of canopy. 40
 - Adjust backrest to the lowest position to be convenient to remove soft goods.
3. Remove calf support cover. 41
4. Open the buckle which is on the bottom of seat. 42
 - Please keep support board well, must assemble support board when assembling soft goods. 49 50To re-assemble seat soft goods, follow the steps above in reverse 50 – 39

Use with Joie Carry Cot

see images 51 – 52

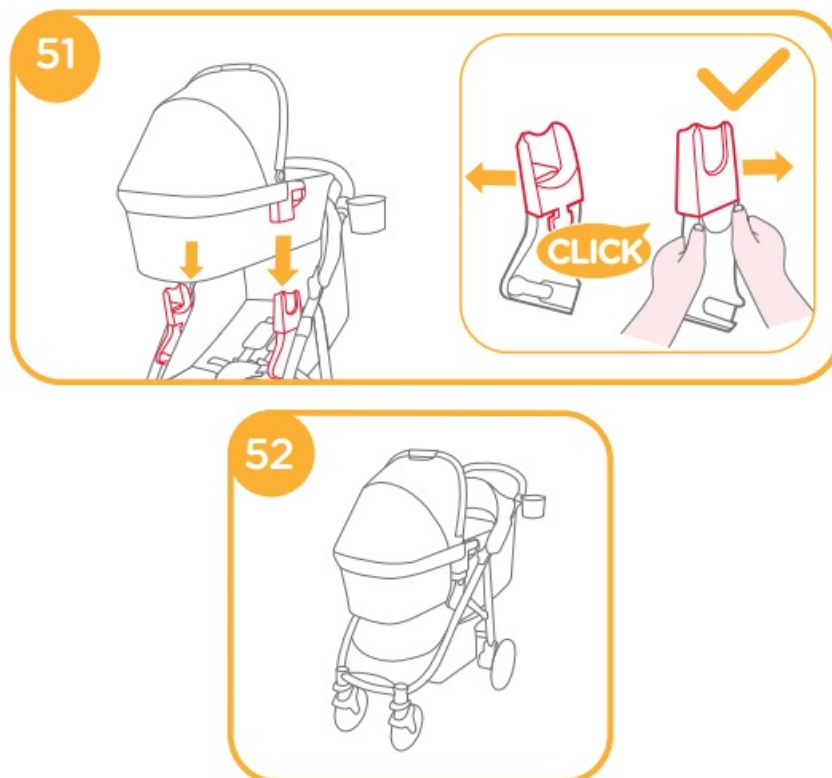

When using with Joie carry cot ramble, ramble xl, please refer to the following instructions.

- If you have any problems about using the carry cot, please refer to their own instruction manuals.
- Always use the mattress when using the carrycot.
- Please don't fold the stroller when attaching the carrycot.

Use Rain Cover

see images 53




To assemble the rain cover, place it over the stroller, and then attach the 8 pairs of hook and loop fasteners on the rain cover. 53

- Before using the rain cover, please make sure the backrest has been adjusted to the lowest position and the infant child restraint has been fastened.
- When using the rain cover, please always check its ventilation.
- When not in use, please check that the rain cover has been cleaned and dried before folding.
- Do not fold the stroller after assembling the rain cover.
- Do not place your child into the stroller assembled with rain cover during hot weather


Cleaning and Maintenance

see images 54

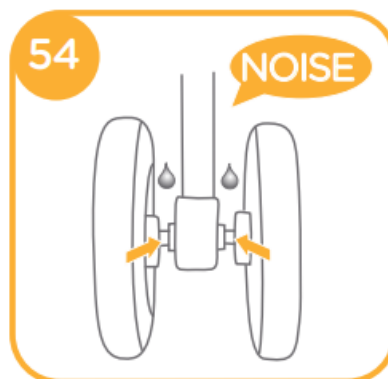

- To clean stroller frame, use only household soap and warm water. No bleach or detergent. Please refer to the care label for instructions on cleaning the fabric parts of the stroller.
- Removable soft goods can be washed by machine. No bleach. Do not twist the seat cover and inner padding to dry with great force. It may leave the seat cover and inner padding with wrinkles.
- From time to time, check your stroller for loose screws, worn parts, torn material or stitching. Replace or repair the parts as needed. Periodically wipe clean plastic parts with a soft damp cloth. Always dry the metal parts to prevent the formation of rust if the stroller has come into contact with water.
- Excessive exposure to sun or heat could cause fading or warping of parts.
- If stroller becomes wet, open canopy and allow to dry thoroughly before storing.
- If wheels squeak, use a light oil (e.g., Silicon Spray, antirust oil, or sewing machine oil). It is important to get the oil into the axle and wheel assembly. 54
- When using your stroller at the beach or other sandy/dusty environments, completely clean your stroller after use to remove sand and salt from mechanisms and wheel assemblies

Documents / Resources

 <p>Joie Mytrax flex stroller</p> <ul style="list-style-type: none">• Instruction Manual• Quick Start Guide• Safety Information• Troubleshooting• Parts List• Warranty• Maintenance• Accessories• Contact Us• Dealer Locator• Joie App• Joie Website• Joie Facebook• Joie Twitter• Joie Instagram• Joie YouTube• Joie LinkedIn• Joie Pinterest• Joie Google Plus• Joie RSS• Joie Newsletter• Joie Privacy Policy	<p>Joie Mytrax Flex Signature Stroller [pdf] Instruction Manual Mytrax Flex Signature Stroller, Mytrax Flex, Signature Stroller, Stroller</p>
--	---

References

- [Baby Gear That Goes Above & Beyond | Joie](#)
- [Baby Gear That Goes Above & Beyond | Joie](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.