



JOK 5487 Integration Fibaro Core Rithum Switch Instruction Manual

Home » JOK » JOK 5487 Integration Fibaro Core Rithum Switch Instruction Manual



Contents

- 1 JOK 5487 Integration Fibaro Core Rithum **Switch**
- **2 Product Information**
- 3 Requirements
- 4 Create user with authorisation
- 5 Documents / Resources
 - **5.1 References**



JOK 5487 Integration Fibaro Core Rithum Switch



Product Information

Specifications:

• Version: 1.2

• Date: 28-11-2023

• Compatible with: FIBARO Home Center 3 / Lite

Integration with Rithum Switch:

This manual provides instructions for pairing the Rithum Switch with the FIBARO PRO smart home system. Please ensure that you meet the following requirements before proceeding:

1. User: VIOLET

2. Password: VIOLET-123!

3. Access to the required scenes

4. Settings saved

Activation of FIBARO Core Plugin:

- 1. Purchase the license and open the URL provided.
- 2. Enter the data of the Rithum Switch (Serial Number & Authorization code).
- 3. Submit the information by tapping on the "Submit" button.
- 4. Reboot the Rithum Switch via Settings > System > Reboot.

Addition of Scenes:

1. Go to Settings > Integrations > Add plugin > FIBARO Core plugin.

- 2. Enter the login details of the FIBARO Home Center.
- 3. Select the desired scenes.
- 4. Tap the check mark to confirm.
- 5. Test the Rithum Switch by activating a scene.

FAQ:

• Q: How do I activate the FIBARO Core plugin for Rithum Switch?

A: To activate the FIBARO Core plugin, you need to purchase a license and follow the instructions provided in the manual. Make sure to enter the correct data of the Rithum Switch and reboot it after activation.

· Q: How do I add scenes to the Rithum Switch?

A: To add scenes, go to Settings > Integrations > Add plugin > FIBARO Core plugin. Enter the login details of the FIBARO Home Center and select the desired scenes. Confirm your selection by tapping the check mark.

Requirements

- FIBARO Home Center 3 (Lite) met FW 5.100 of hoger
- Min. 1 scene(s) in the FIBARO Systeem
- · Rithum Switch
- · Router with internet

Note: If there is no restriction on the scenes via Rithum, you can also use the administrator's login details. Use the following instruction to add a user with restricted access to the system.

Create user with authorisation

- 1. Ga to Access Control
- 2. Create a new user, for example:
 - 1. User: VIOLET
 - 2. Pw: VIOLET-123!
- 3. Give access to the required scenes
- 4. Save the settings

Integration with Rithum Switch

It is necessary to activate the Switch via a licence, follow the instructions below to activate the FIBARO Core plugin for the relevant Rithum Switch.


- 1. Purchase the license and open the URL, enter the data of the Rithum Switch.
- 2. To do this, go to Settings > System > About.








- 3. Fill in the data (Serial Number & Authorisation code) and tap Submit.
- 4. Reboot the Rithum Switch via Settings > System > Reboot.
- 5. To add the scenes go to Settings > Integrations > Add plugin > FIBARO Core plugin.

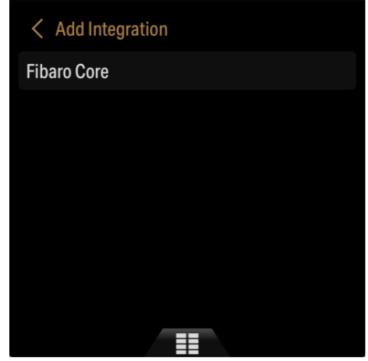

- 6. Enter the login details of the FIBARO Home Center.
- 7. Select the desired scenes.

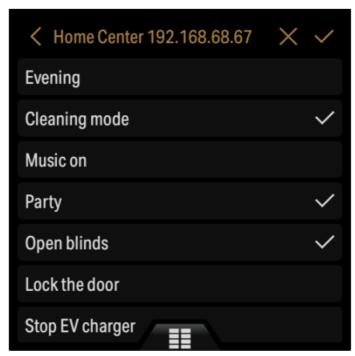

8. Tap the check mark to confirm.

9. Test the Rithum Switch by activating a scene.

jdkbenelux.com

Documents / Resources



JOK 5487 Integration Fibaro Core Rithum Switch [pdf] Instruction Manual 5487 Integration Fibaro Core Rithum Switch, 5487, Integration Fibaro Core Rithum Switch, Fibaro Core Rithum Switch, Rithum Switch, Switch

References

- JNK Home JDK Benelux
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.