



jONSBO CR-3000 ARGB CPU Fan User Manual

[Home](#) » [JONSBO](#) » jONSBO CR-3000 ARGB CPU Fan User Manual 

jONSBO CR-3000 ARGB CPU Fan User Manual



CR-3000 Series User's Manual

Contents

[1 Chapter 1 – Part List](#)





[2 Chapter 2 – Intel
Installation](#)

[3 Chapter 3 – AMD
Installation](#)

[4 Documents / Resources](#)


[4.1 References](#)

Chapter 1 – Part List

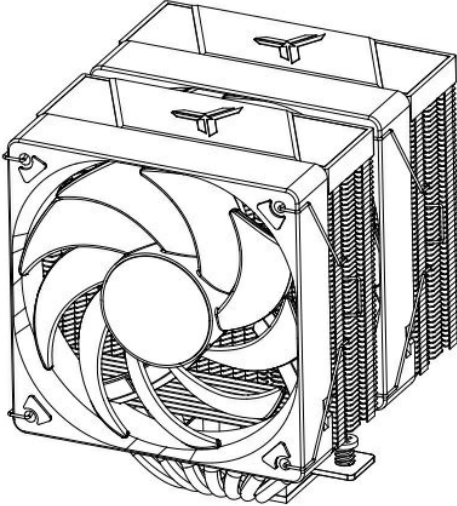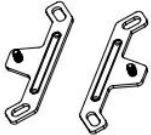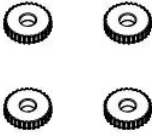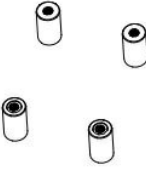A CPU heatsink 			E Fixing Nut -Intel 	F Bracket-Intel 	G Bracket-AMD 
B Washer 	C Position screw 	D Nut set 	H Screw -Intel-AMD 	I Thermal grease 	J Backplate -Intel 
			K Position screw (1700) 	L Intel LGA 2011 Screw -Intel 	


Chapter 2 – Intel Installation

Step 1 Intel LGA1366 / 1200 / 115X / 1700

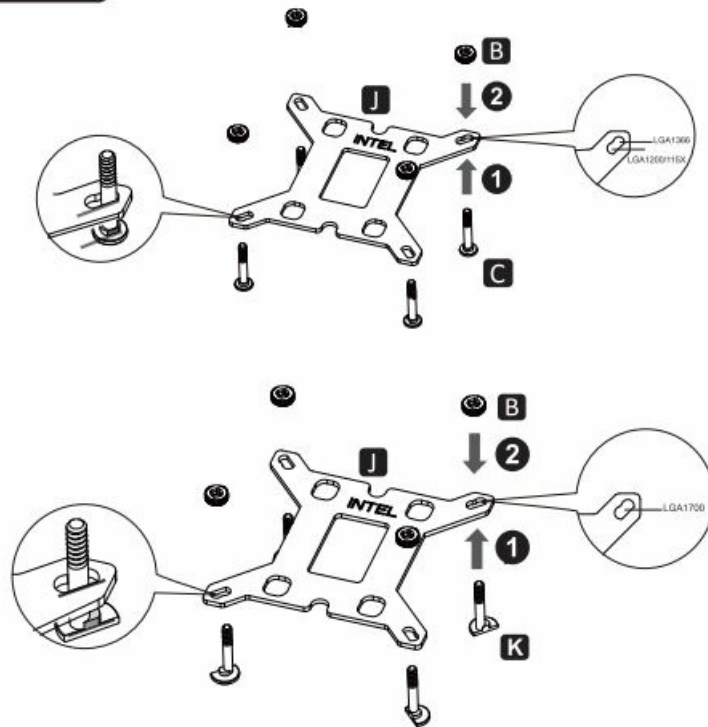


Place the set screw in the corresponding hole position of the Intel bracket, and then insert the gasket

Step 2 Intel LGA1366 / 1200 / 115X / 1700

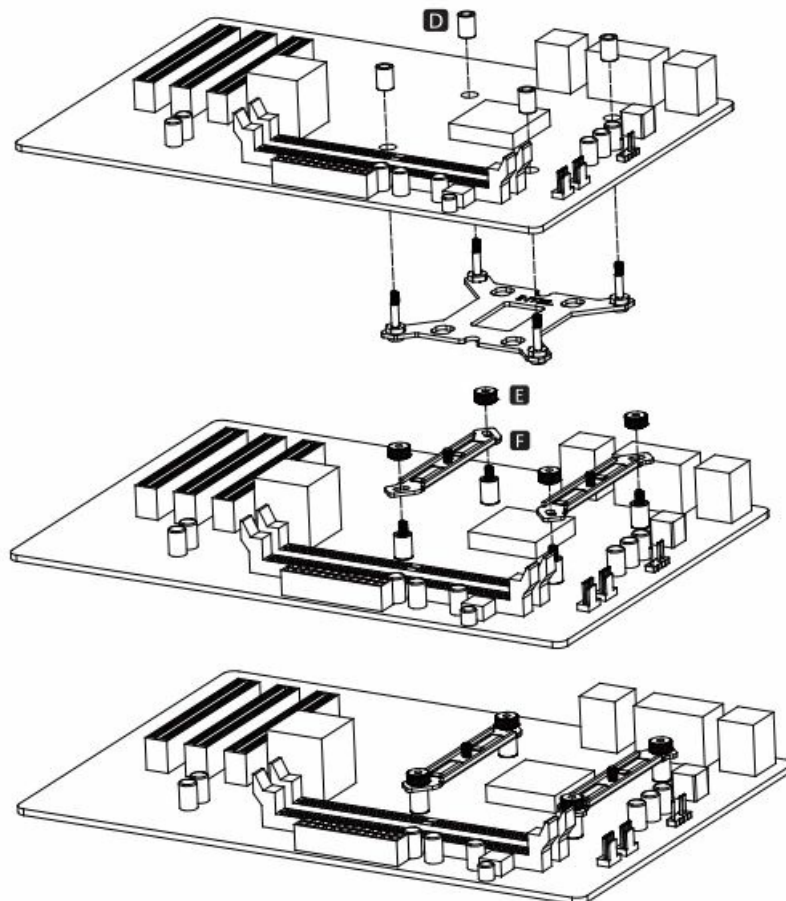


Install the back plate and fastener

Step2.1 Intel LGA 2011 installation

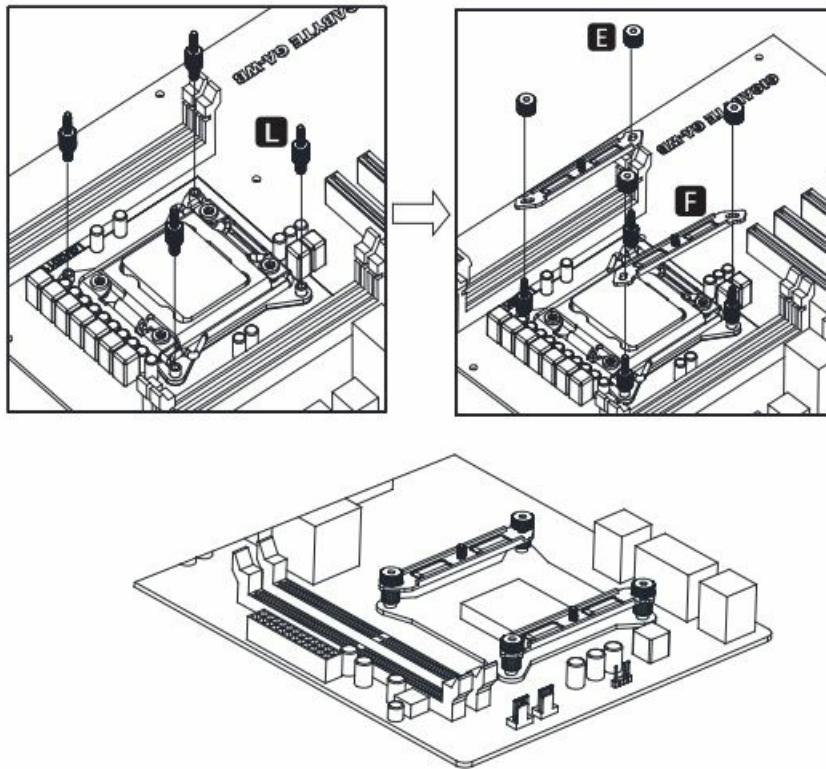


Install the 2011 screw onto the CPU bracket, install the fastener and fix it with nuts

Step 3

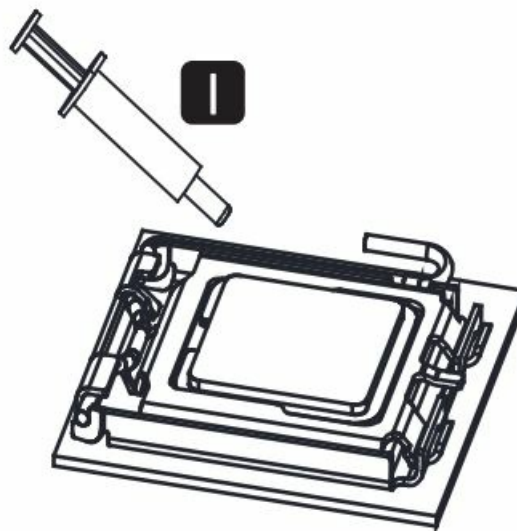


Apply heat conduction paste on the CPU

Step 4

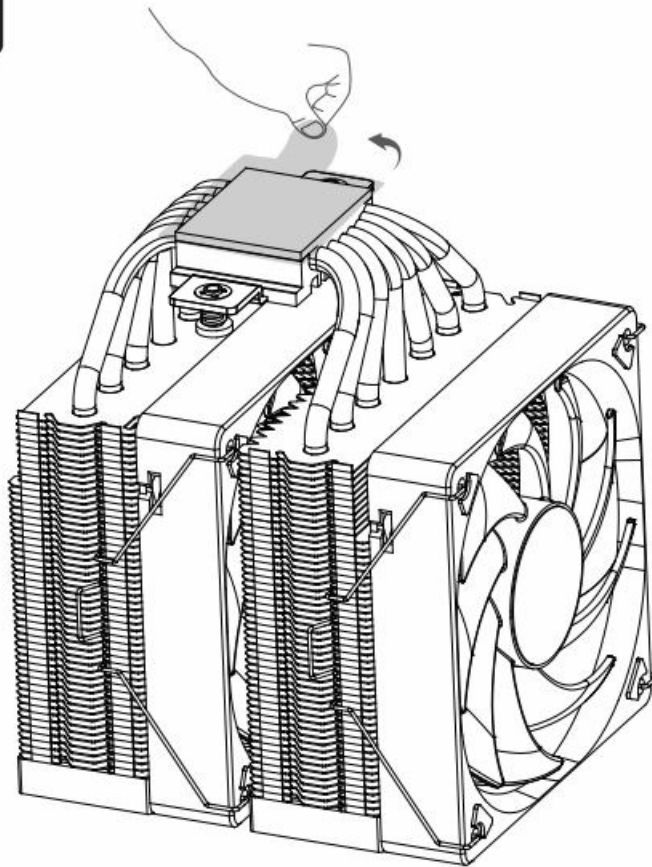


Remove copper bottom protective film

Step 5

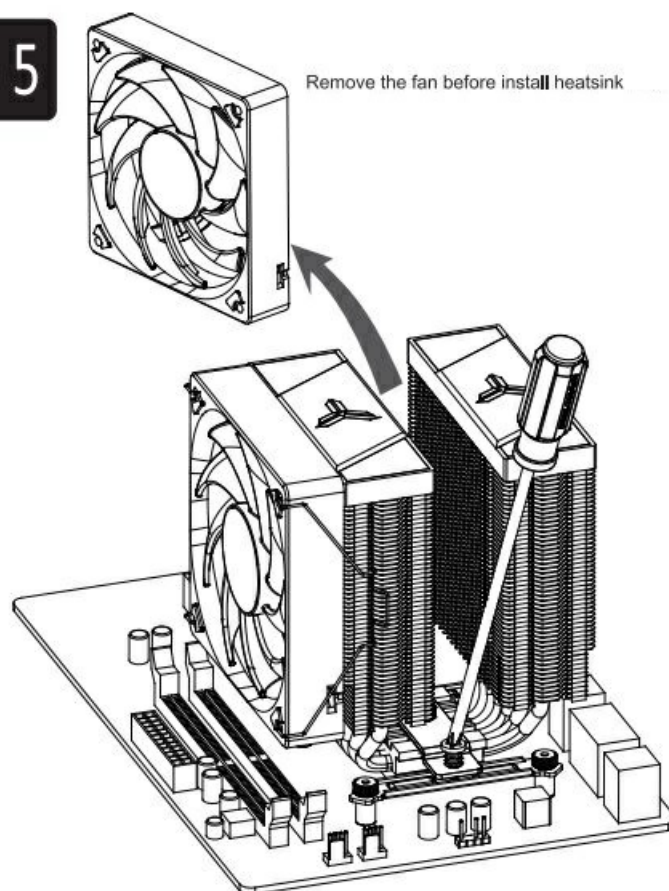

Place the heat sink on the CPU and fix it on the installation fastener


Step 6

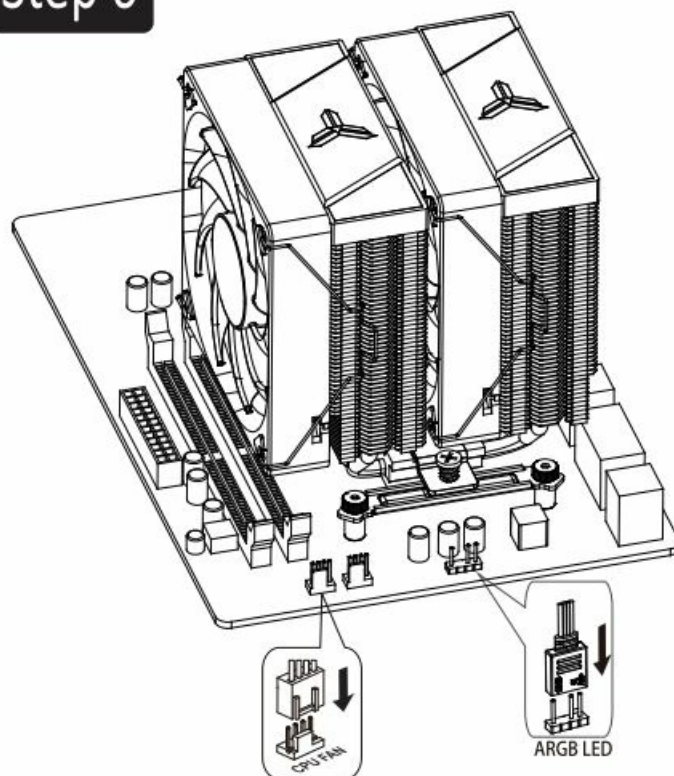

Connect the fan lead to the main board according to the figure above


Chapter 3 – AMD Installation

Step 1

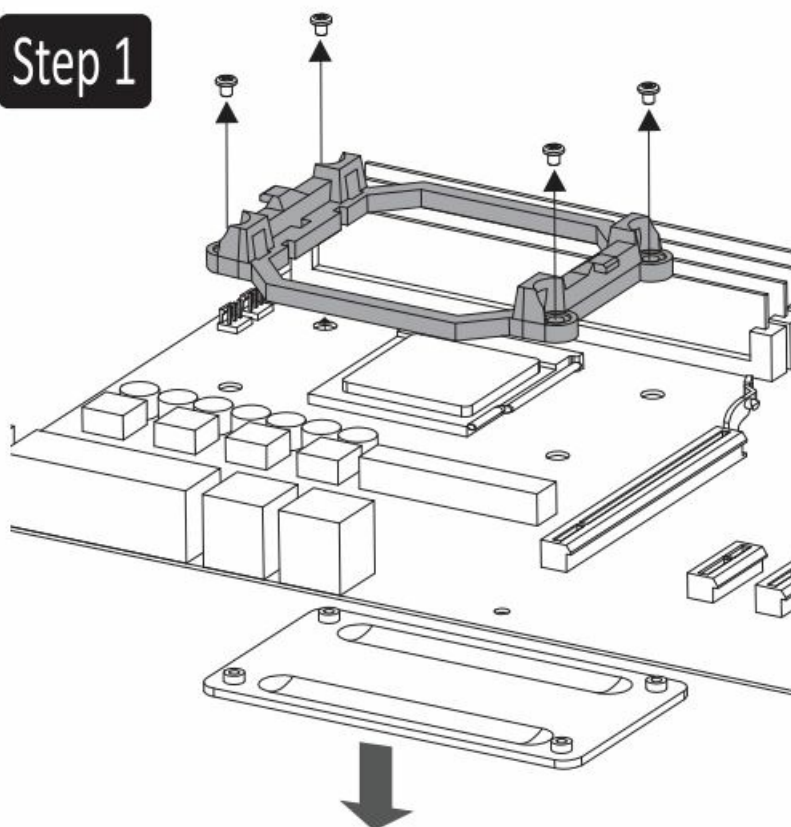


Remove the AMO mounting bracket and keep its original backplane

Step 2

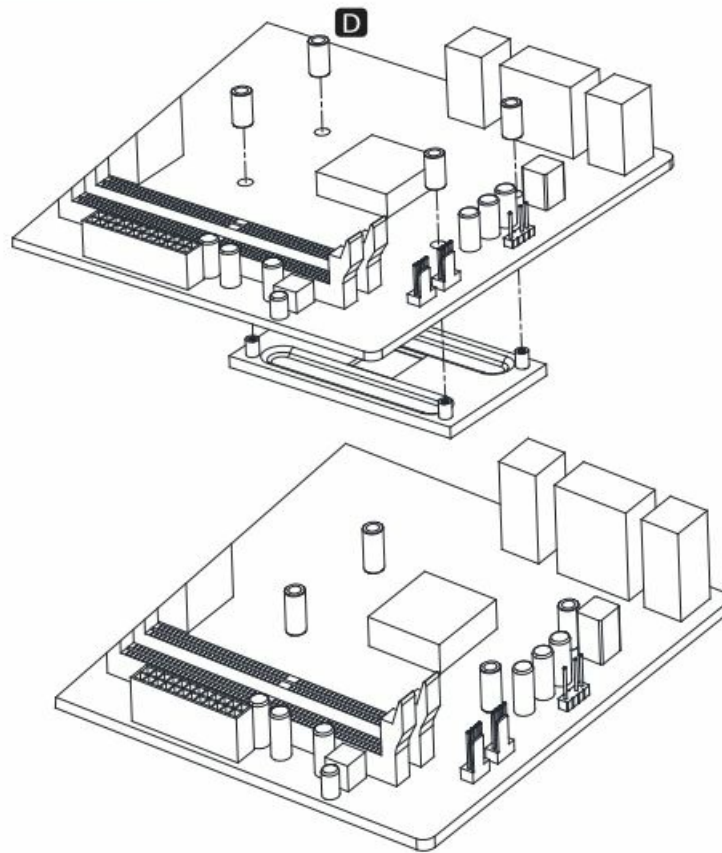


Installing the backplane

Step 3

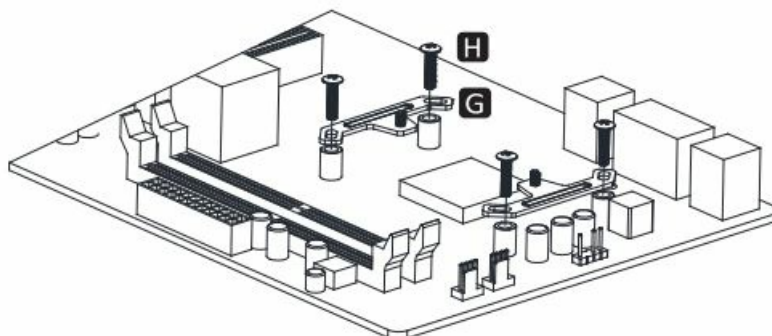


AMD Befestigung installieren

Step 4

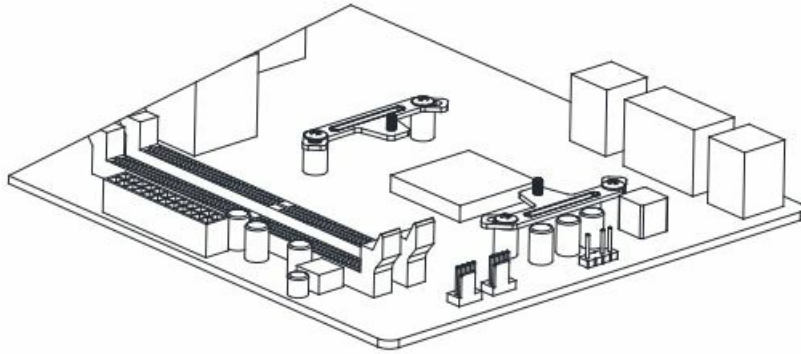


Rendering of installation completion

Step 5

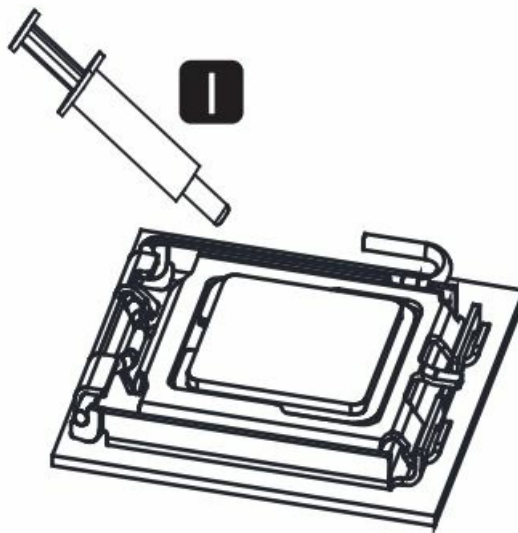


Apply heat conduction paste on the CPU

Step 6

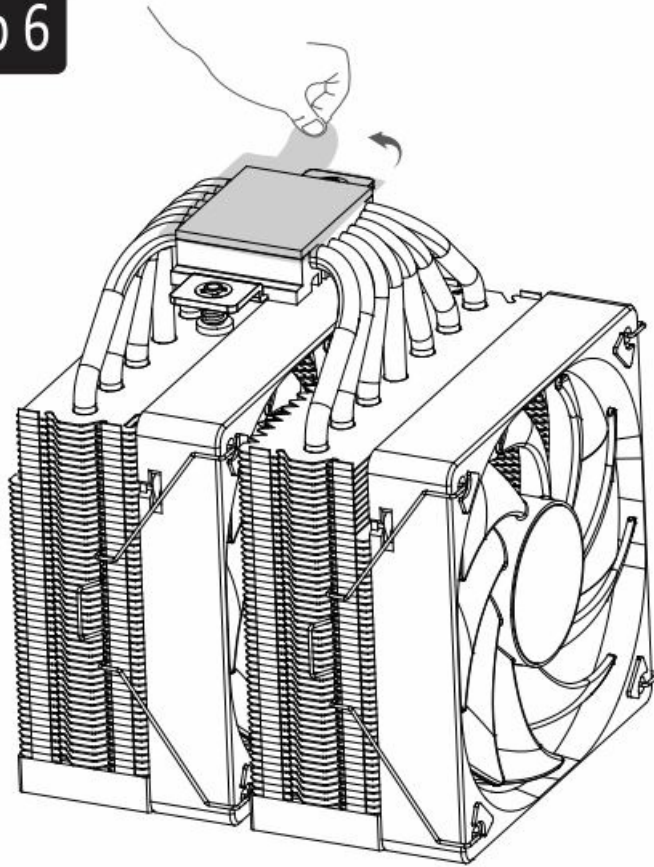


Remove copper bottom protective film

Step 7

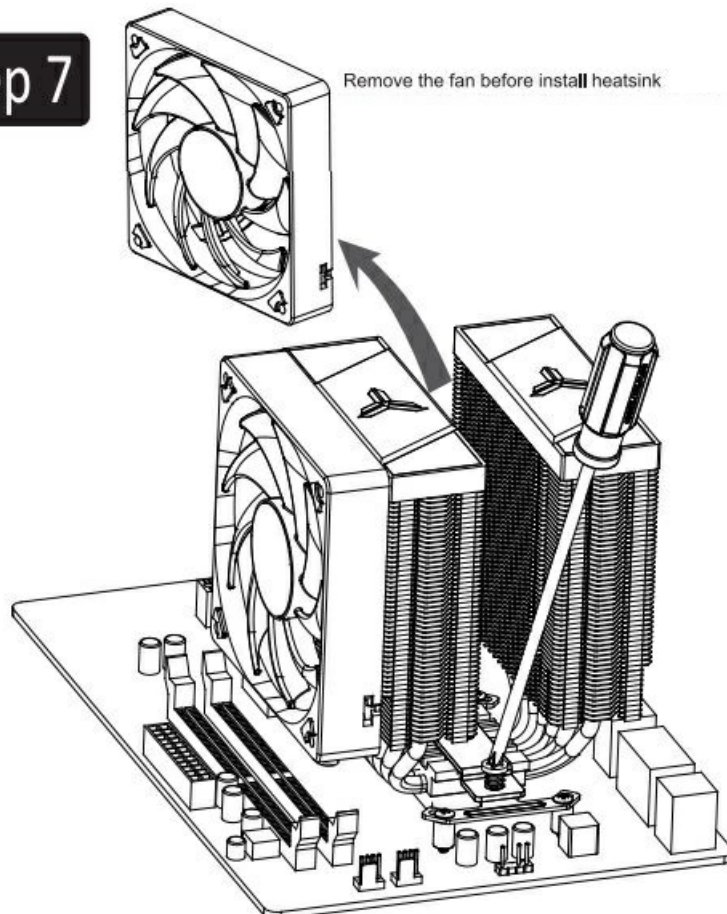

Place the heat sink on the CPU and fix it on the installation fastener

Step 8

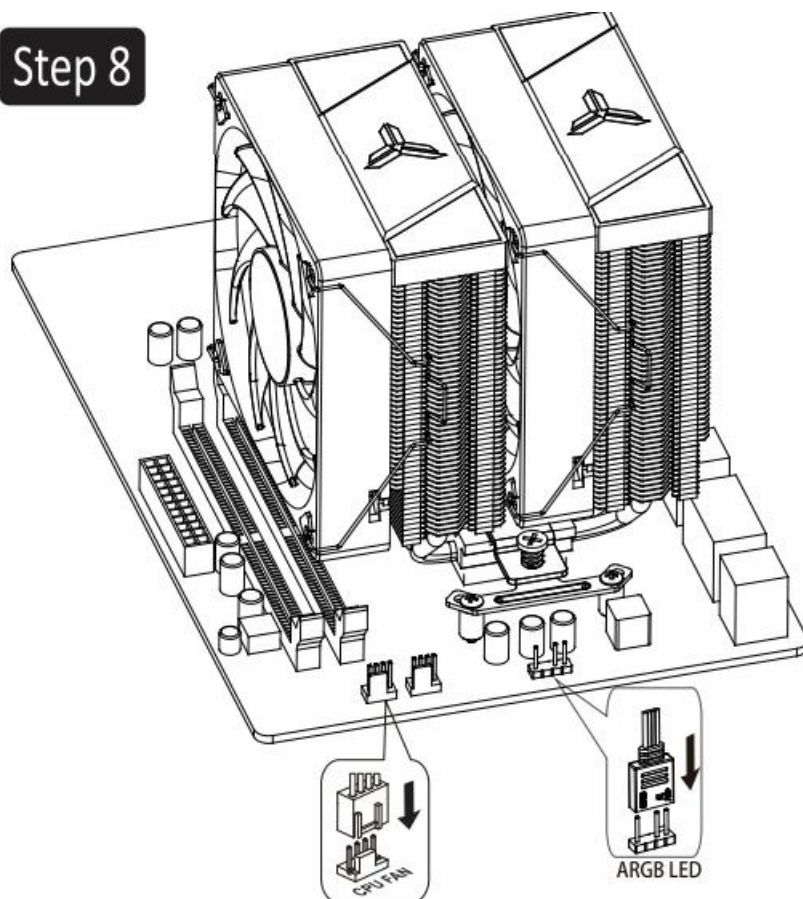

Connect the fan lead to the main board according to the figure above

CR-3000series



JONSBO Technology Co., Ltd.

No.5, Xinglong Lu, Sanzhong Village, Qingxi Town, Dongguan City, Guangdong Province, 523651, China

JONSBO Technology Co., Ltd.

No.5, Xinglong Lu, Sanzhong Village, Qingxi Town, Dongguan City,
Guangdong Province, 523651, China

Documents / Resources



[jONSBO CR-3000 ARGB CPU Fan](#) [pdf] User Manual
CR-3000, CR-3000 ARGB CPU Fan, ARGB CPU Fan, CPU Fan, Fan

References

- [User Manual](#)

Manuals+.