



JONSBO TF ARGB User Manual

[Home](#) » [JONSBO](#) » JONSBO TF ARGB User Manual 



Contents


1 Chapter 1- Part List







2 Chapter 2- Installation

3 Documents / Resources


4 Related Posts

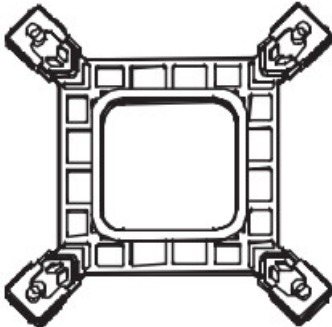Chapter 1- Part List


Intel Backplate	Intel mounting brackets
	
AMD mounting brackets	Intel 115X mounting standoff

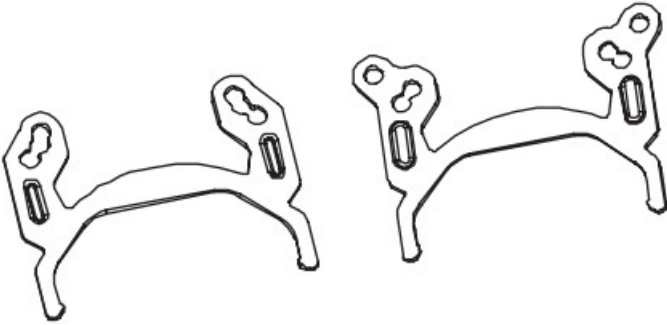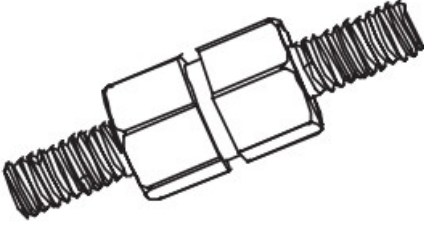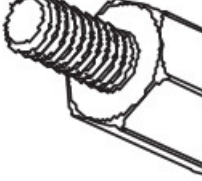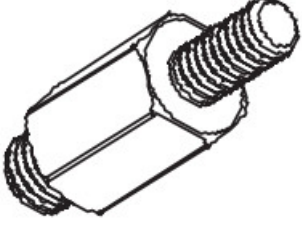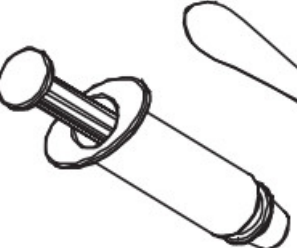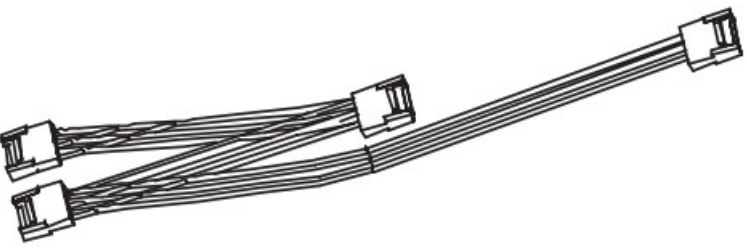	
Intel 178X mounting standoff	Intel 208X mounting standoff
	
AMD AM4 mounting stand off	AMD TR4 mounting standoff
	
Radiator mounting screws	Thermal paste
	
Y-cable	Mounting nut
	

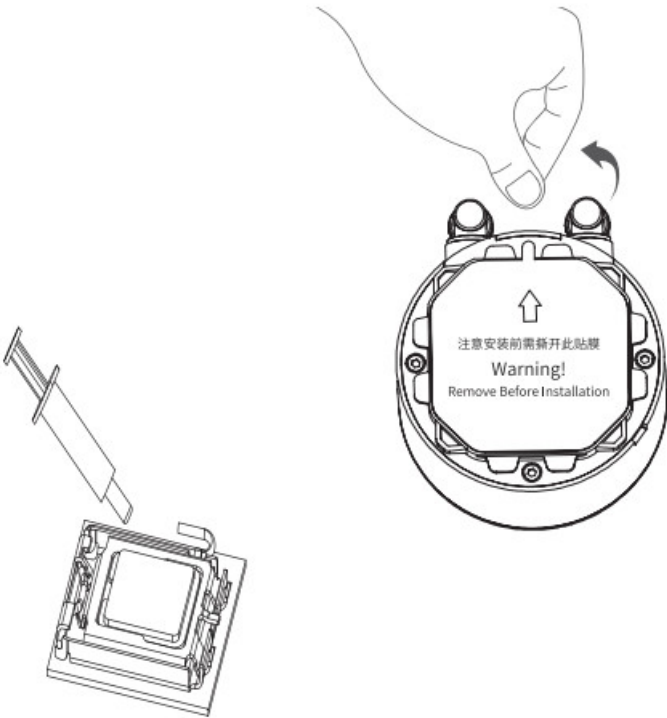
Step 1



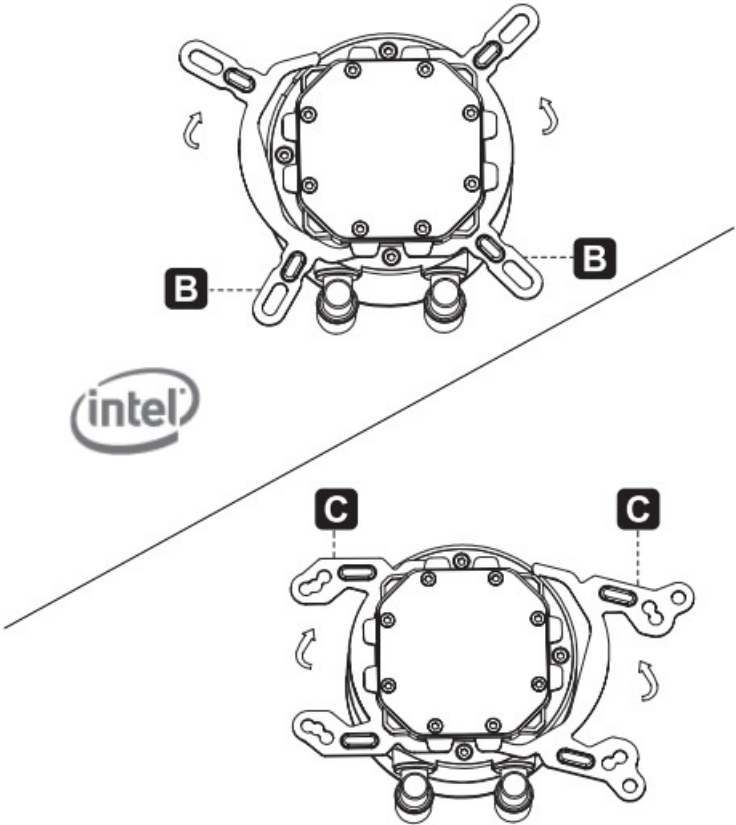Step 2
Intel/AMD



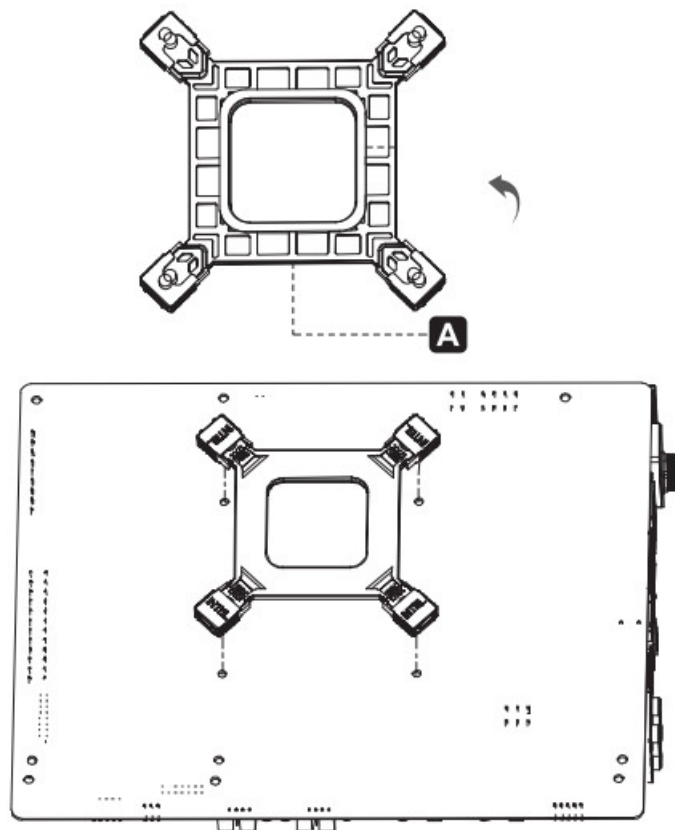Step 3 115X & 17XX




Applying thermal paste on CPU/ Remove the protection film


First insert one end of the bracket into slot on the pump unit, then push in the other end to fix it

Tear off the double-sided adhesive film on the back panel, align it with the mounting holes, and fix it on the back of the motherboard

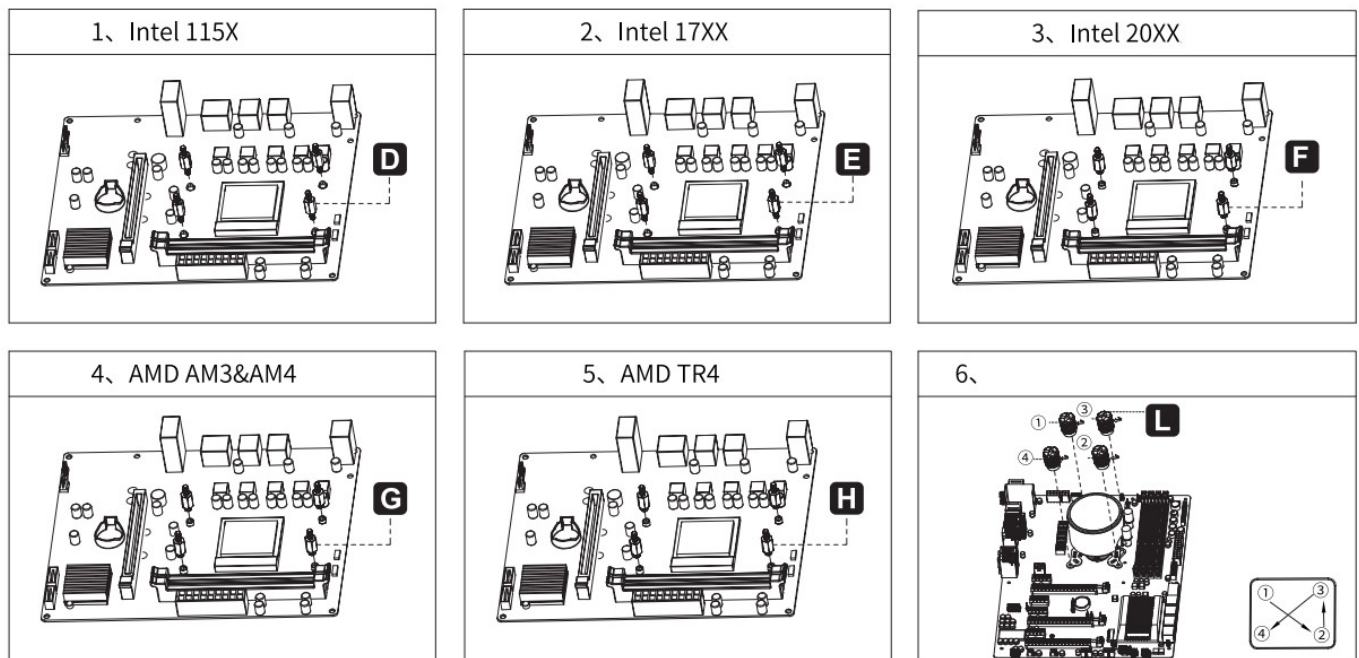Step 4




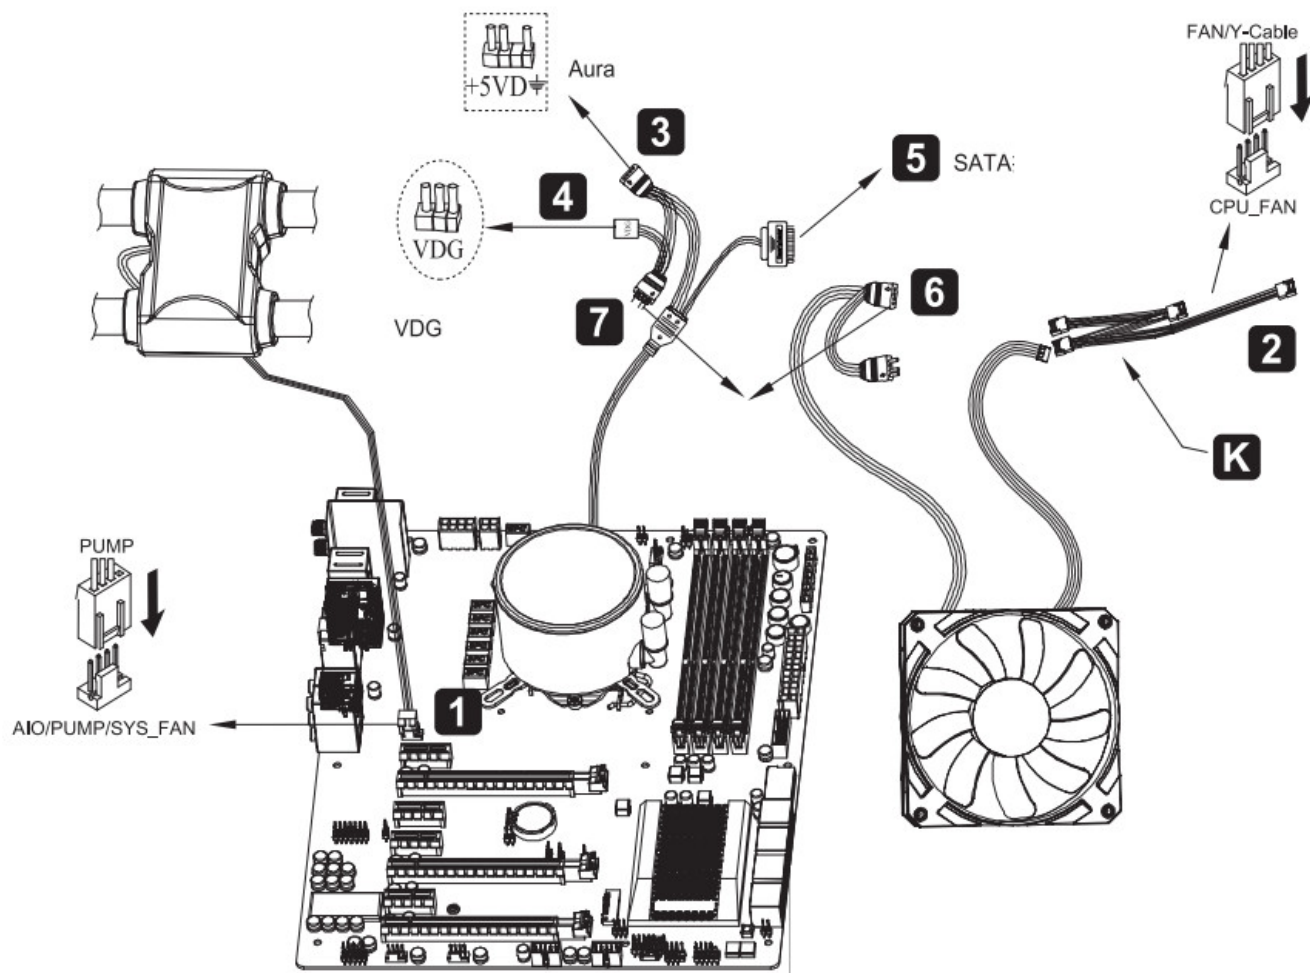Step 5



1. Connect the 3-pin cable from pump unit to AIO/PUMP socket on motherboard.
2. Connect the 4-pin PWM fan with Y-cable to the CPU_FAN socket on the motherboard
3. Connect to ASUS's 5V AURA socket
4. Connect to Gigabyte's 5V VDG AURA socket

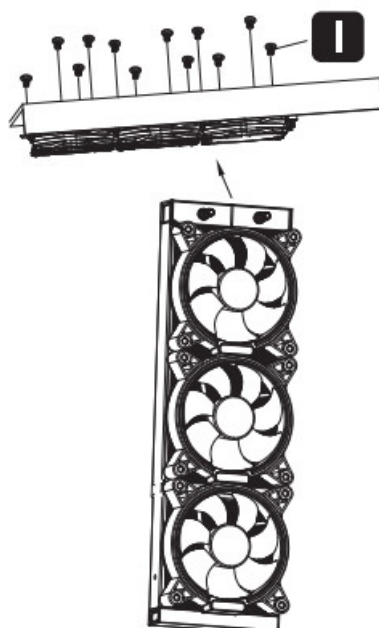Steps



Secure the fans and radiators to case

Documents / Resources

	JONSBO TF ARGB [pdf] User Manual TF ARGB, TF, ARGB
---	---

[Manuals+](#).