


joy-it COM-MIC-ADMP401 Microphone on Breakout Board Owner's Manual

[Home](#) » [JOY-It](#) » joy-it COM-MIC-ADMP401 Microphone on Breakout Board Owner's Manual 

joy-it COM-MIC-ADMP401 Microphone on Breakout Board Owner's Manual

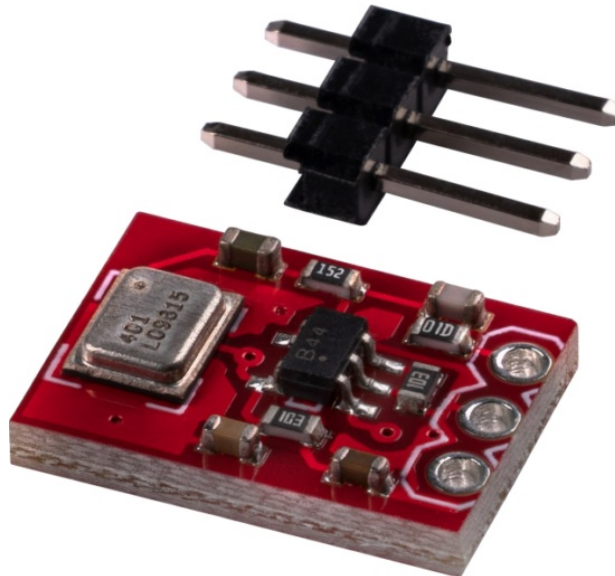

Contents

- [1 GENERAL INFORMATION](#)
- [2 USAGE WITH THE RASPBERRY PI](#)
- [3 This is an analog sensor.](#)
- [4 USAGE WITH THE ARDUINO](#)
 - [4.1 Connection](#)
 - [4.2 OTHER INFORMATION](#)
 - [4.3 Information about Package:](#)
 - [4.4 SUPPORT](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

GENERAL INFORMATION

Dear customer,

thank you very much for choosing our product.

In the following, we will introduce you to what to observe while starting up and using this product.

Should you encounter any unexpected problems during use, please do not hesitate to contact us.


USAGE WITH THE RASPBERRY PI



This guide was written under Raspberry Pi OS Bookworm for the Raspberry Pi 4 and 5. It has not been checked with newer operating systems or hardware.

This is an analog sensor.

Since the Raspberry Pi has no analog inputs, you have to use an analog-to-digital converter. In this example we use the ADC COM-KY053 from **Joy-IT**.

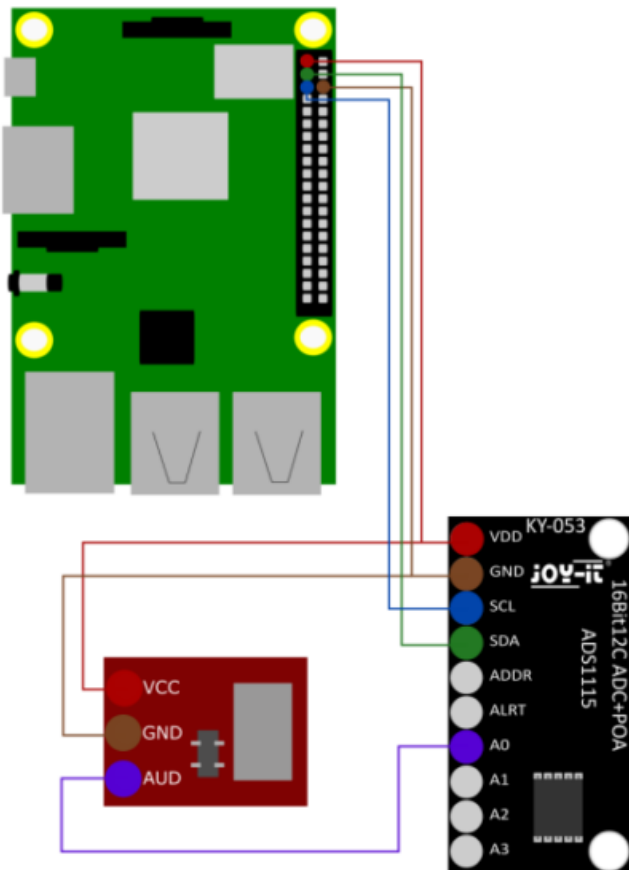

Raspberry Pi	KY-053	ADMP401
Pin 1 (3.3 V)	VDD	VCC
Pin 6 (Ground)	GND	GND
Pin 2 GPIO 2 (SDA)	SDA	–
Pin 5 GPIO 3 (SCL)	SCL	–
–	A0	AUD

First you need to enable I2C on your Raspberry Pi. To open the configuration, enter the following command:

```
sudo raspi-config
```

There select **3 Interface Options** → **I4 I2C** and enable the I2C interface.

You have now successfully activated I2C. The analog-to-digital converter is now accessible under the I2C address 0x48, which is set by default for this sensor. The I2C address will be different if you have already configured it before configuring your Raspberry Pi.

Now install pip3 with the following command:

```
sudo apt-get install python3-pip
```

The next step is to set up the virtual environment. To do this, enter the following commands:

```
mkdir project-name  
cd project-name  
python -m venv --system-site-packages env  
source env/bin/activate
```

We use the **Adafruit_CircuitPython_ADS1x15** library for our code example, which is released under the **MIT license**. Use the following commands to download and install this library.

```
pip3 install adafruit-circuitpython-ads1x15
```

The code sample we provide can be downloaded here or you can run the following command in your console.

```
wget https://www.joy-it.net/files/files/Produkte/COM-MIC-ADMP401/COM-MIC-RPi.zip
```

Now, unpack the file with the following command:

```
unzip COM-MIC-RPi.zip
```

You can now execute the script with the following command. Be aware that your file path may be differ.

```
python3 COM-MIC-RPi.py
```

Alternatively, you can copy the code example here and paste it into your Python file.

```
#!/usr/bin/python  
# coding=utf-8  
import time  
import board  
import busio  
import adafruit_ads1x15.ads1115 as ADS  
from adafruit_ads1x15.analog_in import AnalogIn  
  
# Create the I2C bus i2c = busio.I2C(board.SCL, board.SDA)  
  
# Create the ADC object using the I2C bus ads = ADS.ADS1115(i2c)
```


```
# Create single-ended input on channel0 chan0 = AnalogIn(ads, ADS.P0)
```

```
while True:
```

```
print("channel 0: ","{:>5}\t{:>5.3f}".format(chan0.value, chan0.voltage)) time.sleep(1)
```

USAGE WITH THE ARDUINO

Connection

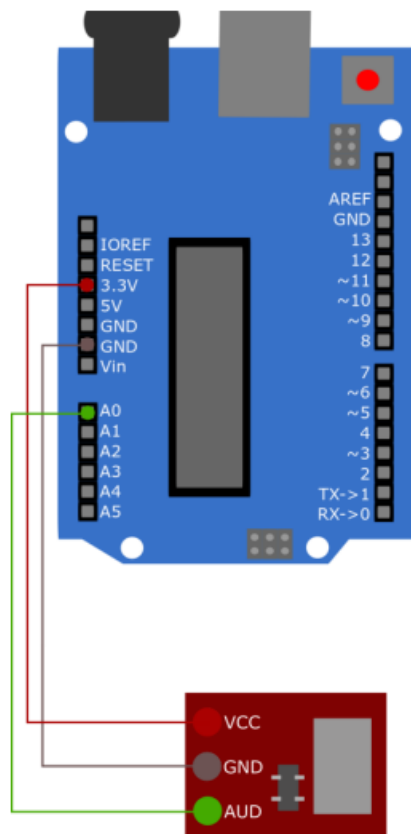

Arduous	ADMP401
3.3 V	VCC
GND	GND
A0	AUD

Code example

Now, copy the following code into your Arduino IDE.

```
int pin = A0;
int value;
void setup() {
  // put your setup code here, to run once:
  Serial.begin(9600); } void loop() {
  // put your main code here, to run repeatedly:
  value = analogRead(pin);
  Serial.println(value);
```

Click on **Upload** to run the program. However, make sure that **Board** and **Port** are selected correctly under **Tools**.

Under **Tools**, click on **Serial** Plotter to display the read-out values of the microphone graphically.

OTHER INFORMATION

Our Information and Take-back Obligations according to the Electrical and Electronic Equipment Act (ElektroG)



■ Symbol on Electrical and Electronic Products:

This crossed-out bin means that electrical and electronic products do not belong into the household waste. You must hand over your old appliance to a registration place. Before you can hand over the old appliance, you must remove used batteries and replacement batteries which are not enclosed by the device.

Return Options:

As the end user, you can hand over your old appliance (which has essentially the same functions as the new one bought with us) free of charge for disposal with the purchase of a new device.

Small devices, which do not have outer dimensions bigger than 25 cm can be handed in for disposal independently of the purchase of a new product in normal household quantities.

1. Possibility of return at our company location during our opening hours

Simac Electronics GmbH, Pascalstr. 8, D-47506 Neukirchen-Vluyn

2. Possibility of return nearby

We will send you a parcel stamp with which you can send us your old appliance free of charge. For this possibility, please contact us via e-mail at service@joy-it.net or via telephone.

Information about Package:

Please package your old appliance safe for transport. Should you not have suitable packaging material or you do not want to use your own material, you can contact us and we will send you an appropriate package.

SUPPORT

If any questions remained open or problems may arise after your purchase, we are available by e-mail, telephone and ticket support system to answer these.

E-Mail: service@joy-it.net

Ticket-system: <https://support.joy-it.net>

Telephone: +49 (0)2845 9360 – 50

(Mon – Thur: 09:00 – 17:00 o'clock CET, Fri: 09:00 – 14:30 o'clock CET)

For further information visit our website:


www.joy-it.net

www.joy-it.net








SIMAC Electronics GmbH

Pascalstr. 8, 47506 Neukirchen-Vluyn



	<p>joy-it COM-MIC-ADMP401 Microphone on Breakout Board [pdf] Owner's Manual COM-MIC-ADMP401 Microphone on Breakout Board, COM-MIC-ADMP401, Microphone on Breakout Board, on Breakout Board, Breakout Board, Board</p>
--	---

References

-  [ITnet | Servizi di Colocation e Cloud](#)
-  [For Makers and Professionals | Joy-IT](#)
-  [GitHub - adafruit/Adafruit_CircuitPython_ADS1x15: CircuitPython drivers for the ADS1x15 series of ADCs.](#)
-  [Adafruit_CircuitPython_ADS1x15/LICENSE at main · adafruit/Adafruit_CircuitPython_ADS1x15 · GitHub](#)
-  [Joy-IT Helpdesk](#)
-  [For Makers and Professionals | Joy-IT](#)
-  [For Makers and Professionals | Joy-IT](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.