

jOY-it COM-ZY12PDG USB-PD Trigger Module Instruction **Manual**

Home » JOY-It » jOY-it COM-ZY12PDG USB-PD Trigger Module Instruction Manual




Contents

- 1 jOY-it COM-ZY12PDG USB-PD Trigger
- Module
- **2 GENERAL INFORMATION**
- 3 INTERFACE
- **4 OPERATION**
- **5 SONSTIGE INFORMATIONEN**
- 6 SUPPORT
- 7 Documents / Resources
- **8 Related Posts**



jOY-it COM-ZY12PDG USB-PD Trigger Module

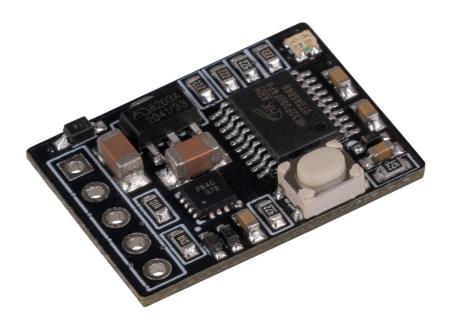

GENERAL INFORMATION

Dear customer,


Thank you for purchasing our product. In the following, we will show you which things should be noted during the use.


Should you encounter any unexpected problems, do not hesitate to contact us.

When using the module, make sure to use a sufficient cable cross-section.

To use the module as intended, you need a USB-PD-capable power supply unit.

INTERFACE

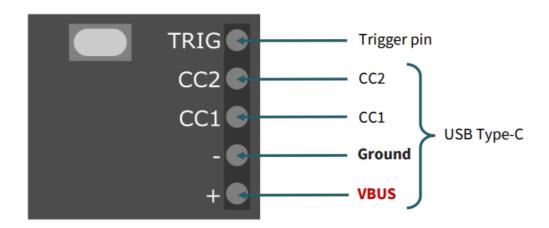

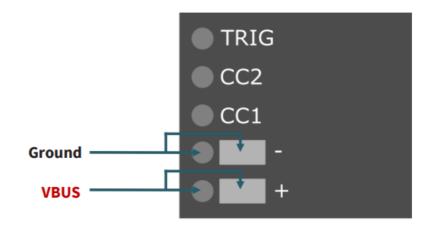


The trigger pin on the board has the same function as the button. By set-ting the pin LOW, pressing the button is simulated.


OPERATION

Connect your USB-PD trigger module to a USB-PD compatible power supply using the interface explained above. The free solder pads on the back of the board are used to connect the load. These modules provide you with different voltage modes, which are indicated by the LED.

Colour	Voltage mode
•	5 V
-	9 V
	12 V
	15 V
	20 V
	Maximum possible voltage of the power supply
-	Runs through all modes (one per second)

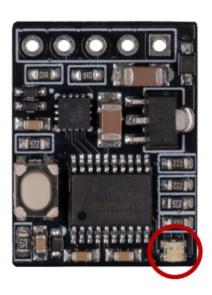

To set the modes as default, first plug the board into your power supply while holding down the button on the board. Now the LED will start flashing colourfully. Now you can select the desired mode using the button. Now press and hold the button to confirm your selection. Finally, disconnect the power supply from the module and then reconnect it so that the module now starts directly in this mode.

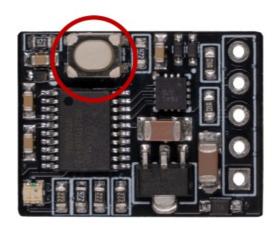

SONSTIGE INFORMATIONEN

Our Information and Take-back Obligations according to the Electrical and Electronic Equipment Act (ElektroG)

• Symbol on Electrial and Electronic Products:

This crossed-out bin means that electrical and electronic products do not belong into the household waste. You

must hand over your old appliance to a registration place. Before you can hand over the old appliance, you must remove used batteries and replacement batteries which are not enclosed by the device.

• Return Options:

As the end user, you can hand over your old appliance (which has essentially the same functions as the new one bought with us) free of charge for disposal with the purchase of a new device.

Small devices, which do not have outer dimensions bigger than 25 cm can be handed in for disposal independently of the purchase of a new product in normal household quantities.

1. Possibility of return at our company location during our opening hours

Simac Electronics Handel GmbH, Pascalstr. 8, D-47506 Neukirchen-Vluyn

2. Possibility of return nearby

We will send you a parcel stamp with which you can send us your old appliance free of charge. For this possibility, please contact us via e-mail at service@joy-it.net or via telephone.

Information about Package:

Please package your old appliance safe for transport. Should you not have suitable packaging material or you do not want to use your own material, you can contact us and we will send you an appropriate package.

SUPPORT

If any questions remained open or problems may arise after your purchase, we are available by e-mail, telephone and ticket support system to answer these.

E-Mail: service@joy-it.net

Ticket-system: http://support.joy-it.net

Telephone: +49 (0)2845 98469 - 66 (10 - 17 o'clock)

For further information visit our website:

www.joy-it.net

www.joy-it.net

SIMAC Electronics GmbH Pascalstr. 8, 47506 Neukirchen-Vluyn

Documents / Resources



<u>jOY-it COM-ZY12PDG USB-PD Trigger Module</u> [pdf] Instruction Manual COM-ZY12PDG USB-PD Trigger Module, COM-ZY12PDG, USB-PD Trigger Module

Manuals+.