

**Joysway**

Joysway 2999021  
Remote  
Controlled  
Speedboat



# Joysway 2999021 Remote Controlled Speedboat Instruction Manual

[Home](#) » [Joysway](#) » Joysway 2999021 Remote Controlled Speedboat Instruction Manual 

## Contents

- [1 Joysway 2999021 Remote Controlled Speedboat](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Intended use](#)
- [5 Safety instructions](#)
- [6 General information](#)
- [7 Declaration of Conformity \(DOC\)](#)
- [8 Technical data](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)
- [10 Related Posts](#)

# Joysway

**Joysway 2999021 Remote Controlled Speedboat**



### Specifications:

- Item no.: 2999021
- Intended use: Not a toy – Not suitable for children under 14 years old

### Product Information

The device is designed for hobbyists and enthusiasts above the age of 14. It should be operated under the direct supervision of an adult. The product comes with up-to-date operating instructions that can be downloaded from [www.conrad.com/downloads](http://www.conrad.com/downloads) or by scanning the provided QR code.

### Product Usage Instructions

#### Safety Instructions:

Read and follow the operating instructions carefully, especially the safety information. Failure to adhere to safety instructions may result in personal injury or property damage.

#### Before Use:

- Check rigging and ensure compartments are sealed.
- Ensure transmitter and receiver batteries are adequately charged.
- Switch ON the transmitter first, then the receiver.
- During Use:
- Avoid operating the model in certain conditions.
- After Use:
  - Switch OFF the receiver first, then the transmitter.
  - Perform routine maintenance tasks.

#### General Information:

- Keep the device away from children and pets.
- Avoid extreme temperatures, direct sunlight, and mechanical stress.
- Remove batteries if not in use for an extended period to prevent damage.
- Handle leaking or damaged batteries with protective gloves.

#### Disposal:

Follow proper disposal guidelines for electronic equipment and batteries to protect the environment and prevent hazards.

**Product Disposal:**

Do not dispose of the product as unsorted municipal waste.

Follow proper disposal procedures for electrical and electronic equipment.

**FAQ:**

- **Q: Can children under 14 years old use this product?**

A: No, this product is not suitable for children under 14 years old and should be used under adult supervision.

- **Q: How can I obtain the latest operating instructions?**

A: You can download the latest operating instructions from [www.conrad.com/downloads](http://www.conrad.com/downloads) or by scanning the provided QR code.

**Important Information**

Item no. 2999021

**Intended use**

- The product is a remote controlled speedboat.
- For safety and approval purposes, you must not rebuild and/or modify this product. If you use the product for purposes other than those described above, the product may be damaged. In addition, improper use can cause hazards such as short circuiting, fire, electric shock etc.
- Read these important notes and the operating instructions of your product carefully and keep them. Make this product available to third parties only together with these important notes and its operating instructions.
- This product complies with the statutory national and European requirements. All company names and product names are trademarks of their respective owners. All rights reserved.
- You are solely responsible for the safe operation of the product.
- WARNING! Not a toy – Not suitable for children under 14 years old!
- WARNING! To be used under the direct supervision of an adult.

**Up-to-date Operating Instructions**

Download the latest operating instructions at [www.conrad.com/downloads](http://www.conrad.com/downloads) or scan the QR code shown. Follow the instructions on the website.

**Safety instructions**



Read the operating instructions carefully and especially observe the safety information. If you do not follow the safety instructions and information on proper handling in this manual, we assume no liability for any resulting personal injury or damage to property. Such cases will invalidate the warranty/guarantee.

### **Before use**

- Check the rigging and make sure compartments are sealed.
- The transmitter and receiver batteries should have sufficient charge to avoid losing control of the model.
- Switch ON the transmitter first, and then switch ON the receiver.

### **During use**

- Do not operate the model:
- On waterways where there is recreational or commercial traffic. This can cause serious accidents, personal injury and/or property damage.
- Near people, small children, or animals.

### **After use**

- Switch OFF the receiver first, and then switch OFF the transmitter. Perform routine maintenance such as checking for– Dirt and debris
- Water ingress
- If the battery compartment is wet:
  - Immediately remove the batteries.
  - Tip the water out and allow the interior to completely dry.

### **General information**

- The device is not a toy. Keep it out of the reach of children and pets.
- Do not leave packaging material lying around carelessly. This may become dangerous playing material for children.
- Protect the appliance from extreme temperatures, direct sunlight, strong jolts, flammable gases, steam and solvents.
- Do not place the product under any mechanical stress.
- If it is no longer possible to operate the product safely, take it out of operation and protect it from any accidental use. Safe operation can no longer be guaranteed if the product:

- is visibly damaged,
- is no longer working properly,
- has been stored for extended periods in poor ambient conditions or
- has been subjected to any serious transport-related stresses.
- Please handle the product carefully. Jolts, impacts or a fall even from a low height can damage the product.
- Consult an expert when in doubt about the operation, safety or connection of the appliance.
- Maintenance, modifications and repairs must only be completed by a technician or an authorised repair centre.
- If you have questions which remain unanswered by these operating instructions, contact our technical support service or other technical personnel.

### **(Rechargeable) batteries**

Correct polarity must be observed while inserting the (rechargeable) battery.

- The (rechargeable) batteries should be removed from the device if it is not used for a long period of time to avoid damage through leaking. Leaking or damaged (rechargeable) batteries might cause acid burns when in contact with skin, therefore use suitable protective gloves to handle corrupted (rechargeable) batteries.
- (Rechargeable) batteries must be kept out of reach of children. Do not leave (rechargeable) batteries lying around, as there is risk, that children or pets swallow them.
- All (rechargeable) batteries should be replaced at the same time. Mixing old and new (re-chargeable) batteries in the device can lead to (rechargeable) battery leakage and device damage.
- (Rechargeable) batteries must not be dismantled, short-circuited or thrown into fire. Never recharge non-rechargeable batteries. There is a risk of explosion!

### **Disposal**

#### **Product**

- This symbol must appear on any electrical and electronic equipment placed on the EU market. This symbol indicates that this device should not be disposed of as unsorted municipal waste at the end of its service life.
- Owners of WEEE (Waste from Electrical and Electronic Equipment) shall dispose of it separately from unsorted municipal waste. Spent batteries and accumulators, which are not enclosed by the
- WEEE, as well as lamps that can be removed from the WEEE in a non-destructive manner, must be removed by end users from the WEEE in a non-destructive manner before it is handed over to a collection point.

Distributors of electrical and electronic equipment are legally obliged to provide free take-back of waste. Conrad provides the following return options free of charge (more details on our website):

- in our Conrad offices
- at the Conrad collection points
- at the collection points of public waste management authorities or the collection points set up by manufacturers or distributors within the meaning of the ElektroG
- End users are responsible for deleting personal data from the WEEE to be disposed of.
- It should be noted that different obligations about the return or recycling of WEEE may apply in countries outside of Germany.

## **(Rechargeable) batteries**

- Remove batteries/rechargeable batteries, if any, and dispose of them separately from the product. According to the Battery Directive, end users are legally obliged to return all spent batteries/rechargeable batteries; they must not be disposed of in the normal household waste.
- Batteries/rechargeable batteries containing hazardous substances are labelled with this symbol to indicate that disposal in household waste is forbidden. The abbreviations for heavy metals in batteries are: Cd = Cadmium, Hg = Mercury, Pb = Lead (name on (rechargeable) batteries, e.g. below the trash icon on the left).
- Used (rechargeable) batteries can be returned to collection points in your municipality, our stores or wherever (rechargeable) batteries are sold. You thus fulfil your statutory obligations and contribute to environmental protection.
- Batteries/rechargeable batteries that are disposed of should be protected against short circuit and their exposed terminals should be covered completely with insulating tape before disposal. Even empty batteries/rechargeable batteries can contain residual energy that may cause them to swell, burst, catch fire or explode in the event of a short circuit.

## **Declaration of Conformity (DOC)**

- Conrad Electronic SE, Klaus-Conrad-Straße 1, D-92240 Hirschau hereby declares that this product conforms to the 2014/53/EU directive.
- Click on the following link to read the full text of the EU declaration of conformity:  
[www.conrad.com/downloads](http://www.conrad.com/downloads)
- Enter the product item number in the search box. You can then download the EU declaration of conformity in the available languages.

## **Technical data**

### **1. Speedboat**

- Battery.....6,4 V 320 mAh LiFePo4 (Li-ion)
- Speed.....max. 20 km/h

### **2. Transmitter (remote control)**

- Power supply.....4x AA 1.5 V batteries
- Frequency range.....2.403 – 2.480 GHz
- Transmission power.....14.92 dBm
- Transmission distance.....approx. 200 m (open area)

### **3. Charger**


- Input.....5 V/DC 2 A
- Output.....6.4 V/DC 200 mA

This is a publication by Conrad Electronic SE, Klaus-Conrad-Str. 1, D-92240 Hirschau ([www.conrad.com](http://www.conrad.com)). All rights including translation reserved. Reproduction by any method, e.g. photocopy, microfilming, or the capture in electronic data processing systems require the prior written approval by the editor. Reprinting, also in part, is prohibited. This publication represent the technical status at the time of printing.

Copyright 2024 by Conrad Electronic SE.

\*2999021\_v2\_0824\_02\_dh\_ss\_en

## Documents / Resources

	<p><a href="#">Joysway 2999021 Remote Controlled Speedboat</a> [pdf] Instruction Manual 2999021 Remote Controlled Speedboat, 2999021, Remote Controlled Speedboat, Controlled Speedboat, Speedboat</p>
---	--

## References

- [Download center](#)
- [User Manual](#)

### Manuals+, [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.