

**Contents** [ [hide](#) ]

- [1 JOYTECH RT100 Remote Control](#)
- [2 Product Information](#)
- [3 Instructions for use](#)
- [4 Technical data](#)
- [5 Programming](#)
- [6 FCC Warning Statement](#)
- [7 FAQ](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)

# JOYTECH

## JOYTECH RT100 Remote Control



## Product Information

### Specifications

- **Model:** RT100
- **Product Name:** Remote Control

- **Date** 2025-5-7
- **Ver** 1.0

## Instructions for use

## Technical data

### Database

1. **Voltage:** CR2032\*1 3V
2. **Working current:** 9.5mA
3. **Static current:** 0.15uA
4. **Key values:** 0001, 0010, 0100 (1 2 4)
5. **Speed:** 411

## Programming

When the remote control button is pressed, the indicator light stays on and emits a signal. Release the button and the indicator light will stay on for a while before turning off.

**Note:** Press and hold for 15 seconds to stop firing, but the indicator light does not turn off to prevent key jamming.



## FCC Warning Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This

equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.

## **FAQ**

- **Q: How do I change the batteries in the remote control?**

- A: To change the batteries, locate the battery compartment on the back of the remote control, remove the old batteries, and insert new CR2032 batteries following the correct polarity.

- **Q: What should I do if the remote control stops working?**

- A: If the remote control stops working, try replacing the batteries first. If the issue persists, contact customer support for further assistance.

# Documents / Resources



[JOYTECH RT100 Remote Control \[pdf\]](#) User Manual

RT100 Remote Control, RT100, Remote Control, Control

## References

- [User Manual](#)

control, Joytech, Remote Control, RT100, RT100 Remote

Joytech Control

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

[Post Comment](#)

## Search:

[Search](#)

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.