



JTECH Extend Two-Way Radio User Guide

[Home](#) » [JTECH](#) » JTECH Extend Two-Way Radio User Guide 

Contents

- [1 JTECH Extend Two-Way Radio](#)
- [2 Components](#)
- [3 Product Controls / Keys](#)
- [4 BATTERY INSTALLATION](#)
- [5 CHARGING THE BATTERY / RADIO](#)
- [6 BASIC RADIO OPERATION](#)
- [7 SCAN FOR ACTIVE CHANNEL](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



JTECH Extend Two-Way Radio



Thank you for purchasing JTECH Extend Radios.
For full detailed information, please consult the instruction manual.

Components



Extend Radio



Multi Unit Charger
w/ power supply




Radio
Holster



Battery

Product Controls / Keys

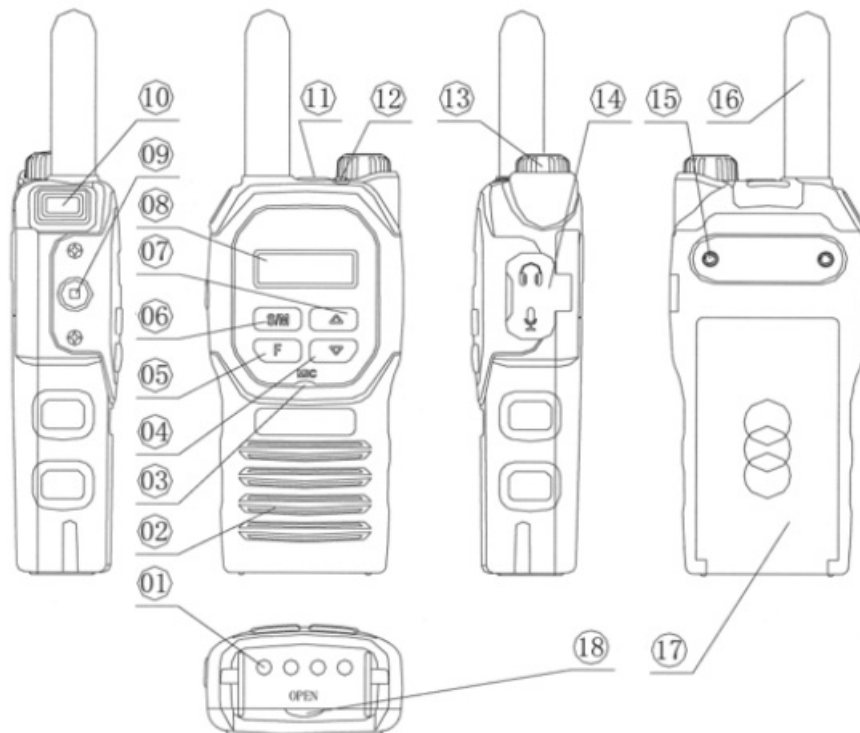

1. Charger Terminal
2. Speaker


3. Microphone
4. Channel Down Key
Select item key in Local setting Mode
5. F, Programmable function key – Default Key Lock @long press, Flashlight@short press, Exit current status key in local setting mode
6. S/M, Programmable function key – Default Menu long press, Scan @short press
7. A, Channel Up Key – Select item key in Local programming Mode
8. LCD display – refer to the below symbols list.
9. SF2, Programmable function key Default: Channel view@short press, Monitor @long press
10. SF1, Programmable function key – default PTT
11. LED Flashlight
12. LED Indicator (Tx & Busy)
13. Power switch/ Volume Knob
14. Head set Jack /Programming Cable Jack
15. Belt clip screw hole
16. Antenna
17. Battery cover
18. Open slot for battery cover

BATTERY INSTALLATION

- Remove the battery cover by pushing down the recess part on the door. Slide the battery door off the radio.
- Install the rechargeable Lithium Ion (Li Ion) battery provided.
- Slide and snap the battery door into place

CHARGING THE BATTERY / RADIO

- Place the multi unit charger on a flat surface.
- Insert the plug of the power cord into the jack of the charger.
- Plug the cord into an AC outlet.
- Turn the radio off.
- Insert the radio (with battery installed) into the charging slots. LED will light up. The LED is solid red when battery is charging and solid green when charging is complete.
- Charge the radios at least 4-6 hours prior to use.

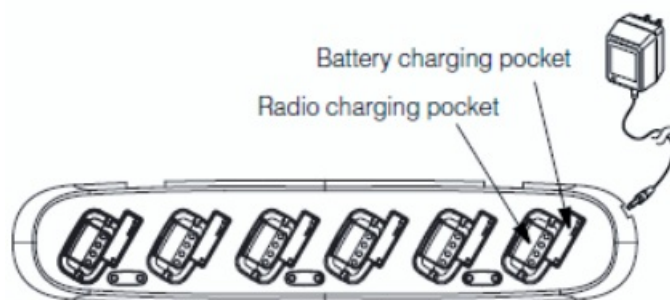

BASIC RADIO OPERATION

- To talk, press and hold the “Push to Talk” button and speak into the microphone. Hold the radio 2-3 inches away from your mouth.
- To listen, release “Push to Talk”.
- **NOTE** *When using an earpiece, you must use the Push to Talk button located on the earpiece wire, not on the radio.

SCAN FOR ACTIVE CHANNEL

- To scan for active channel, press the S/M key. The scan icon will display, and the radio will begin to scan the channels.
- When the radio detects activity, it stops on that channel and displays the channel number.
- To talk to the person transmitting without switching channels, press the Push-to-talk button before scan resumes.
- To stop scanning, press the “S/M” key.



For help contact wecare@jtech.com or call 800.321.6221

Documents / Resources

	<p>JTECH Extend Two-Way Radio [pdf] User Guide Extend Two-Way Radio, Extend, Two-Way Radio, Radio</p>
	<p>JTECH Extend Two Way Radio [pdf] Owner's Manual Extend Two Way Radio, Extend, Two Way Radio, Way Radio, Radio</p>

References

- [JT Pager Systems for Staff & Guests | Restaurants, Hospitals & More | JTECH](#)

