




JTECH Ralpha Keypad Programming User Manual

[Home](#) » [JTECH](#) » JTECH Ralpha Keypad Programming User Manual 

JTECH Ralpha Keypad Programming

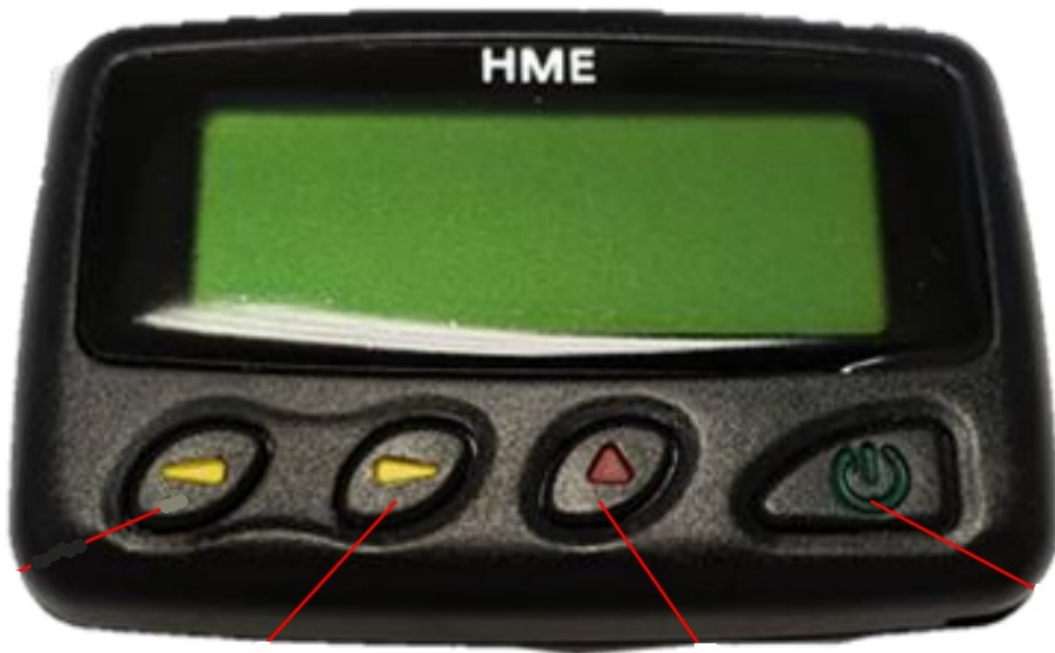

Contents

- [1 Product Description](#)
- [2 A. New Pager/First time programming:](#)
- [3 B. To add/change Capcodes to a pager already in use:](#)
- [4 Customer Service](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Product Description



A. New Pager/First time programming:

(See below “B” to add/change Capcodes to Pager already in use/field)

Insert battery – Pager will display battery condition followed with the type of pager e.g., HME Wireless and time and date

1. Press “**Function Key**” twice to display function menu. Press the “**Shift Right Key**” to move the cursor to “ON/OFF PAGER” – Press function key to turn the pager OFF.
2. Press and hold “**Shift Left Key**” and “**Shift Right Key**” for 2 seconds simultaneously. The screen will display “1234”. Default password is “0000”. While the cursor is under the first digit “1234” press function key to change the digit to “0”. Move cursor with “**Shift Right Key**” to second digit “0234” and press the “**Function Key**” to change the value to “0”. Continue doing the same for the 3rd and 4th digits.
3. On completion of above press the “**Read Key**” to access the main menu as below: “**ADSYSBFRQT**”
Move cursor by using “**Shift Keys**” to select one of the following options:
AD: Pager Capcode Settings
SY: System Parameter Settings
SB: Reserved (not used now)
FR: Frequency Settings
QT: Save and Quit
4. With the default AD selected press the “**Function Key**” to view the capcode settings. The following will display: Ex.: “1:1234560 0”
1: ID of the First Capcode
1234560: The 7-digit Capcode
0: Message Type – 0—Normal personal Message (default) / 1—Mail Drop (public) message
To change the 7-digit code use the “**Shift Right Key**” to select the first digit. Then use the “**Function Key**” to change the digit value. When the correct digit is displayed use the “**Shift Right Key**” to select the next digit until all 7 digits are set to the required numbers. Message type

remains set at “0” for normal operation.

To advance to the 2 nd ID, move the cursor using the “ **Shift Keys** ” to Selection of the ID number, then press the “ **Function Key** ” to scroll to the next ID/Capcode.

NOTE: Maximum of 6 capcodes can be programmed After setting the capcode press the “ **Read Key** ” to return to the main programming menu “ADSYSBFRQT”

5. Press the “ **Shift Keys** ” to move the cursor to SY then press the “ **Function Key** ” to open the system parameters settings. The following 20 characters will display:

A B C D E F G H I J K

L M N O P Q Q Q Q

Function Descriptions:

Change system parameters if required by using the “ **Shift Keys** ” to select, then use the “ **Function Key** ” to change the settings.

- A Signal Polarity
 - 0 -- Normal
 - 1 -- Inverted
- DD/MM
 - 1 -- DD/MM Day/Month
 - 0 -- MM/DD Month/Day
- C Mail Menu
 - 1 -- Mail Drop Menu Enabled
 - 0 -- Mail Drop Menu Disabled
- D Unread Vibrate
 - 1 -- Unread Vibrate Enabled
 - 0 -- Unread Vibrate Disabled
- E Unread Alarm
 - 0 -- Unread Alarm Enabled
 - 1 -- Unread Alarm Disabled
- F Reserved
 - 0 -- Default
- G Reserved
 - 0 -- Default
- H Display Standby Icon “o”
 - 0 -- No icon
 - 1 -- Display Icon (Default)
- I Sequential Lockout Time
 - 0 -- Disabled
 - 1 -- 1 to 9 Minutes
- J Space Before Message
 - 0 -- No Space
 - 1~9 Spaces Before Message
- K User Language

- 0 -- French
- 1 -- English
- 2 -- Russian
- 3 -- German/Swiss
- 4 -- German
- 5 -- French/Swiss
- 6 -- Arabic
- L Baud rate
 - 0 -- 512 BPS
 - 1 -- 1200 BPS
 - 2 -- 2400 BPS
- NMOP No function
 - Default 0000
- QQQQ Four Digit Password
 - 1234

Press the “ **Read Key** ” to return to the main programming menu “**ADSYBFRQT**”.

6. Use the “ **Shift Keys** ” to move the cursor to “FR” to program the required frequency then press the “ **Function Key** ”, the pager will display:

Ex.: FR: 457.5750 MHz. Use the “ **Shift Keys** ” to move the cursor to a digit and press the “ **Function Key** ” to change the digit/number. Press the “ **Read Key** ” to return to the main menu screen “ADSYBFRQT”.

NOTE: Manual frequency programming options is only available if the pager was initially programmed for manual programming at the factory. Pager will need to be returned to JTECH or an authorized agent to change to manual frequency programming function. Only the frequencies within the range of the pager frequency can be programmed.

7. Use the “ **Shift Keys** ” to move the cursor to “QT”, and then press the “ **Function Key** ” to save the settings and quit the program.

B. To add/change Capcodes to a pager already in use:

Press the “ **Function Key** ” twice if the pager is in sleep mode to go to the main menu. Press the “ **Shift Right Key** ” to move cursor to “ON/OFF PAGER” and press the “ **Function Key** ” to turn the pager OFF.

Follow the sequence from above item 2.

Customer Service

www.jtech.com
wecare@jtech.com



Documents / Resources

	JTECH Ralpa Keypad Programming [pdf] User Manual Ralpa Keypad Programming, Ralpa, Keypad Programming, Programming, Keypad
---	--

References

-  [All-guides – Innovative Search Service of Online Manuals](#)