

Juniper NETWORKS AP33 Wireless Access Point Installation Guide

Home » JUNIPER NETWORKS » Juniper NETWORKS AP33 Wireless Access Point Installation Guide 🖫



NETWORKS AP33 Wireless Access Point Installation Guide



AP33 and AP32 Hardware

Contents

- 1 Overview
- 2 AP33/32 Mounting
- **3 Technical Specifications:**
- **4 Warranty Information**
- **5 Regulatory Compliance**


Information:

- **6 Radiation Exposure Statement:**
- 7 Documents / Resources
 - 7.1 References

Overview

The Mist AP33 and AP32 contains three IEEE 802.11ax radios that deliver up to 4×4 MIMO with four spatial streams when operating in multi-user (MU) or single-user (SU) mode.


I/O ports

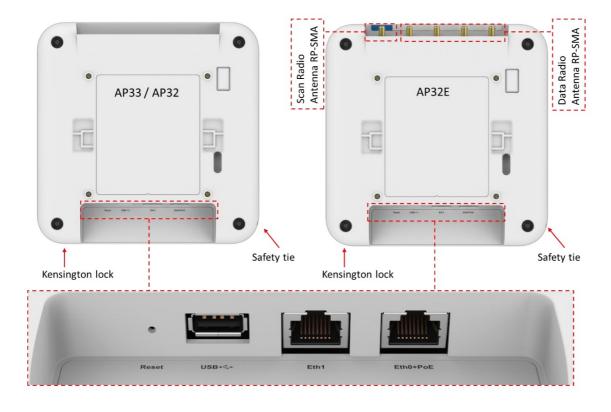

Reset	Reset to the factory default settings				
USB	SB2.0 support interface				
Eth1	10/100/1000BASE-T RJ45 interface				
Eth0+PoE	100/1000/2500BASE-T RJ45 interface that supports 802.3at PoE PD				

AP33/32 Mounting


APBR-U Mounting box options

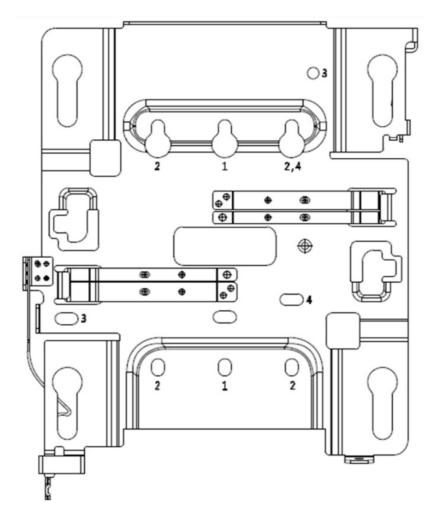

Holes	Mounting options				
1	JS Single gang, 4 inch round, 3.5 inch round				
2	US Double gang, Wall/ceiling mount				
3	US 4 inch square				
4	EU junction box				

In a wall mount installation, please use screws that have a 1/4in. (6.3mm) diameter head with a length at least 2 in. (50.8mm).

Mounting to a 9/16 inch or 15/16 inch T-bar

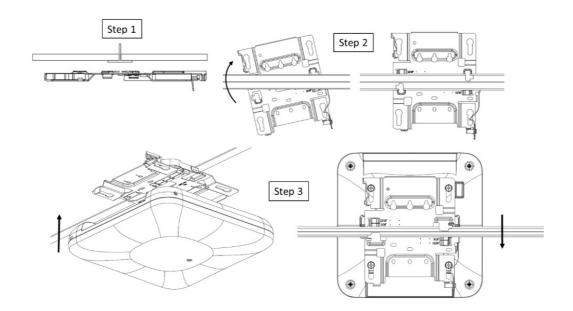


Step 1. Mount APBR-U to the t-bar

Step 2. Rotate APBR-U to lock to the t-bar


Step3. Slide the AP with shoulder screws on the APBR-U until the lock is engaged

US single gang, 3.5 or 4 inch round junction box

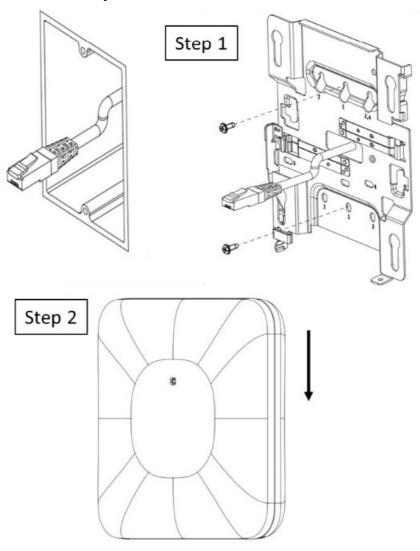


Step 1 Mount APBR-U to the box using two screws and the #1 holes. Make sure Ethernet cable extends thru the bracket.

Step 2 Slide the AP with shoulder screws on the APBR-U until the lock is engaged US double gang junction box

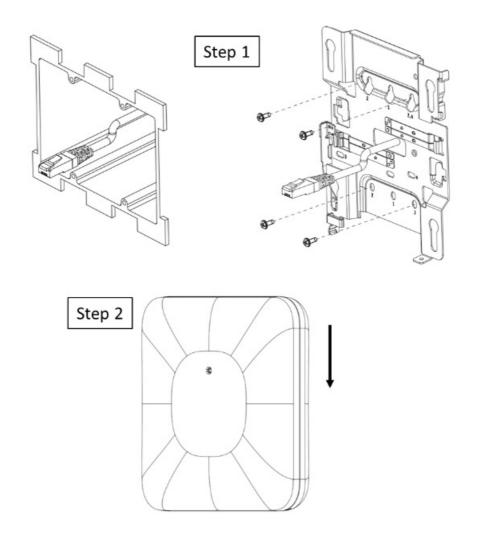


Step 1
Mount APBR-U to the box using four screws and the #2 holes. Make sure Ethernet cable extends thru the bracket.
Step 2
Slide the AP with shoulder screws on the APBR-U until the lock is engaged

US 4 inch square junction box

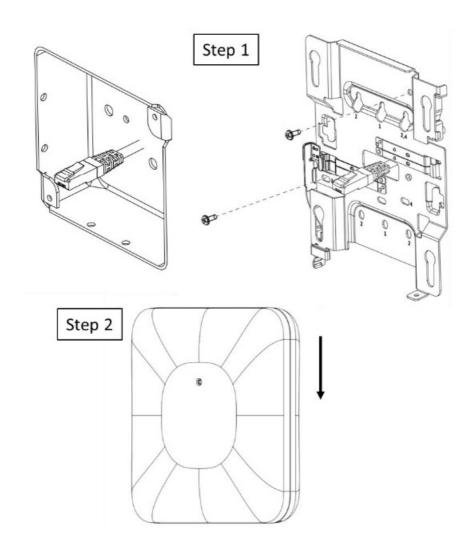


Step 1
Mount APBR-U to the box using two screws and the #3 holes. Make sure Ethernet cable extends thru the bracket.
Step 2
Slide the AP with shoulder screws on the APBR-U until the lock is engaged

EU junction box

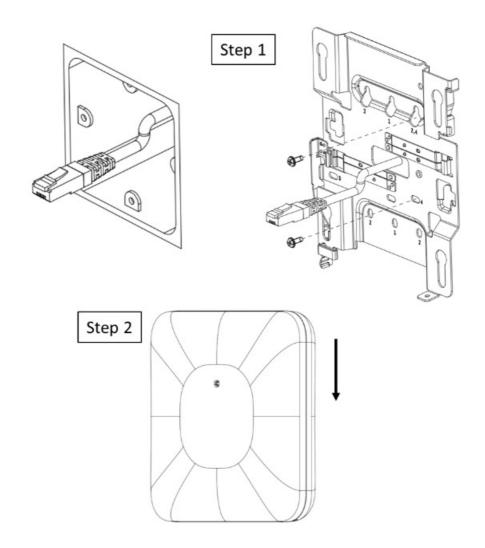


Step 1
Mount APBR-U to the box using two screws and the #4 holes. Make sure Ethernet cable extends thru the bracket.
Step 2
Slide the AP with shoulder screws on the APBR-U until the lock is engaged
Recessed 15/16 inch T-bar

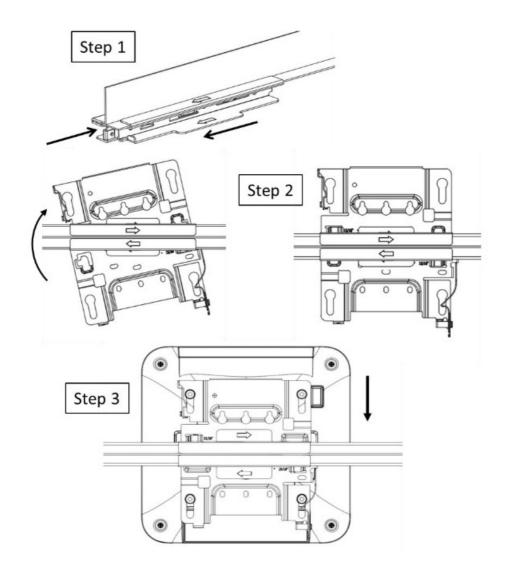

Step 1
Mount the APBR-ADP-RTIS to the t-bar
Step 2

Mount the APBR-U to the APBR-ADP-RTIS. Rotate the APBR-U to lock to the APBR ADP-RTIS Step ${\bf 3}$

Slide the AP with shoulder screws on the APBR-U until the lock is engaged Recessed 9/16 inch T-bar or channel rail

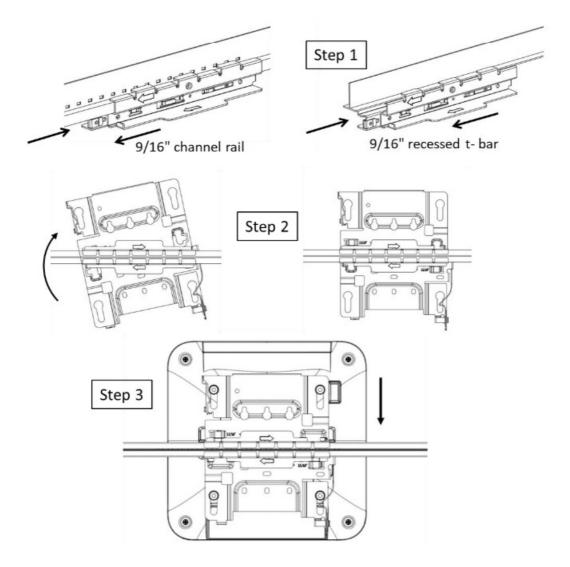


Step 1 Mount the APBR-ADP-CR9 to the t-bar Step 2

Mount the APBR-U to the APBR-ADP-CR9. Rotate the APBR-U to ock to the APBR ADP-CR9 Step $3\,$

Slide the AP with shoulder screws on the APBR-U until the lock is engaged


1.5 inch T-bar

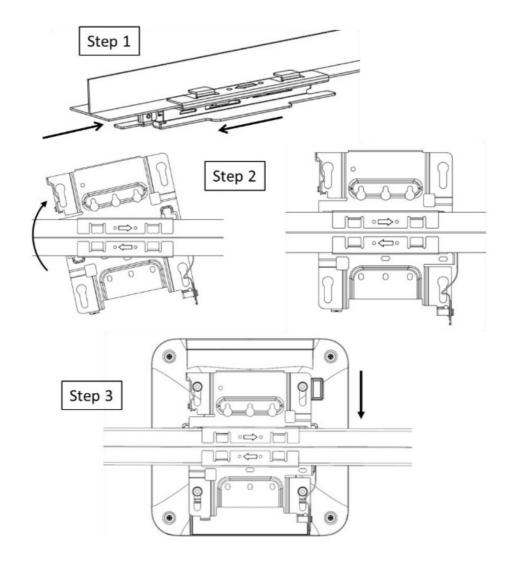


Step 1 Mount the APBR-ADP-WSIS to the t-bar Step 2

Mount the APBR-U to the APBR-ADP-WSIS. Rotate the APBR-U to lock to the APBR-ADP-WSIS Step $\bf 3$


Slide the AP with shoulder screws on the APBR-U until the lock is engaged $\bf Mounting\ to\ a\ 5/8\ inch\ threaded\ rod$

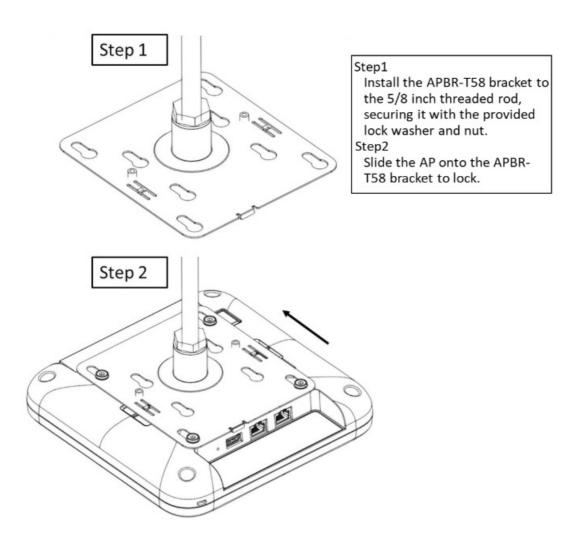

The bracket attaches to a rod that is 5/8"-11. Mounting to a 16mm threaded rod

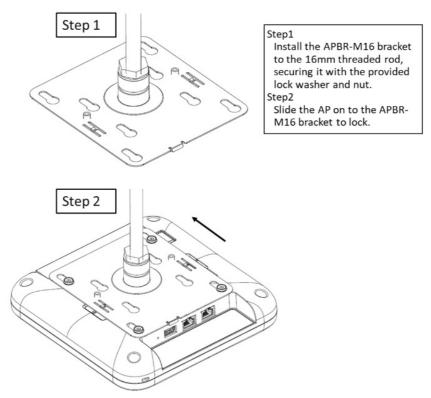

The bracket attaches to a rod that is M16-2. 1/2" threaded rod adapter

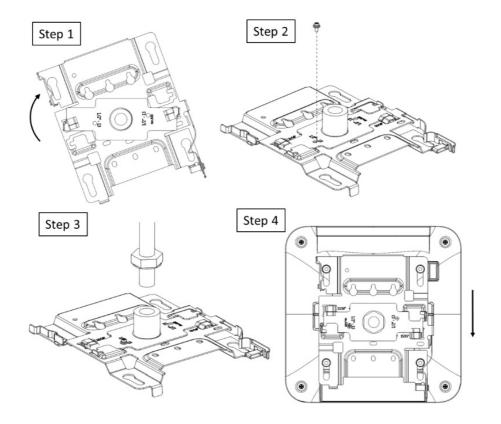

Step 1 Install the APBR-ADP-TI2 to the APBR-U. Rotate to lock.

Step 2

Secure the APBR-ADP-TI2 to the APBR-U with the provided screw

Step 3

Install the bracket assembly to the $1/2^{\prime\prime}$ threaded rod and secure with the provided lock washer and nut.

Step 4

Slide the AP with shoulder screws on the APBR-U until the lock is engaged

Technical Specifications:

Feature	Description					
Power options	802.3at/802.3af PoE					
Dimensions	202mm x 202mm x 44mm (7.95in x 7.95in x 1.73in)					
Weight	AP33: 0.88 kg (1.94 lbs) AP32:0.79 kg (1.74 lbs) AP32E: 0.81 kg (1.78 lbs)					
Operating temperature	AP33:-5° to 40° C AP32: -5° to 40° C AP32E: -5° to 40° C					
Operating humidity	10% to 90% maximum relative humidity, non-condensing					
Operating altitude	3,048m (10,000 ft)					
I/O	1 – 100/1000/2500BASE-T auto-sensing RI-45 with PoE 1 – 10/100/1000BASE-T aut o-sensing R3-45 1 – USB2.0					
RF	5GHz – 4×4:4SS 802.11ax MU-MIMO & SU-MIMO 2.4GHz – 2×2:2SS 802.11ax MU-MIMO & SU-MIMO 2.4GHz / 5GHz scanning radio AP33 – 2.4GHz BLE with Dynamic Antenna Array AP32/AP32E – 2.4GHz BLE with Omni Antenna					
Maximum PHY rate	Total maximum PHY rate – 2974 Mbps 5GHz – 2400 Mbps 2.4GHz – 574Mbps					
Indicators	Multi-color status LED					
Compliance standards	CAN/CSA-C22.2 No. 62368-1-14 UL 2043 FCC Part 15.247, 15.407, 15.107, and 15.109 RSS-247 ICES-003 (Canada)					

Suitable for use in environmental air space in accordance with Section 300-22(C) of the National Electrical Code, and Sections 2-128, 12-010(3), and 12-100 of the Canadian Electrical Code, Part 1, CSA C22.1.

Warning: The AP must be mounted only horizontally if you mount it into a plenum space.

14 AP33 or AP32 Hardware Installation Guide

Juniper Networks, Inc. (C) Copyright 2020. All Rights Reserved Juniper Business Use Only

Warranty Information

The AP33 or AP32 family of Access Points comes with a limited lifetime warranty.

Ordering Information:

Access Points

AP33-US	802.11ax WiFi and BLE Array AP – Internal Antenna for the US Regulatory domain
AP33-WW	802.11ax WiFi and BLE Array AP – Internal Antenna for the WW Regulatory domain
AP32-US	802.11ax WiFi and BLE AP – Internal Antenna for the US Regulatory domain
AP32-WW	802.11ax WiFi and BLE AP – Internal Antenna for the WW Regulatory domain
AP32E-US	802.11ax WiFi and BLE AP – External Antenna for the US Regulatory domain
AP32E-WW	802.11ax WiFi and BLE AP – External Antenna for the WW Regulatory domain

Mounting brackets

APBR-U	Universal AP Bracket for T-Rail and Drywall mounting for Indoor Access Points
APBR-T58	5/8-inch threaded rod bracket
APBR-M16	16mm threaded rod bracket
APBR-ADP-CR9	Adapter for channel rail and recessed 9/16" t-rail
APBR-ADP-RT15	Adapter for recessed 15/16" t-rail
APBR-ADP-WS15	Adapter for recessed 1.5" t-rail
APBR-ADP-T12	Adapter for 1/2-inch threaded rod

Regulatory Compliance Information:

This product and all interconnected equipment must be installed indoors within the same building, including the associated LAN connections as defined by the 802.3at Standard.

Professional installation instructions

- Installation personnel This product is designed for a specific application and needs to be installed by qualified personnel who have RF and related rule knowledge. The general user shall not attempt to install or change the settings.
- Installation location The product shall be installed at a location where the radiating antenna can be kept 44cm(FCC) or 48cm(IC) from nearby personnel in normal operating conditions to meet the regulatory RF exposure requirement.
- External antenna Use only an antenna which has been approved by Juniper. The non-approved antenna(s) may produce unwanted spurious emissions or excessive RF transmitting power which could violate the FCC limits
- Installation procedure Please refer to top section of this installation guide for detailed instructions.
- Warning Please carefully select the installation position and make sure that the final output power does not exceed the limit set in the relevant rules. The violation of the rule could lead to a federal penalty.

If you need further assistance with purchasing the power source, please contact Juniper Networks, Inc.

FCC Requirement for Operation in the United States of America:

FCC Guideline for Human Exposure

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 44 cm between the radiator & your body.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

• Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Industry Canada

This device complies with RSS-247 of the Industry Canada Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This radio transmitter (IC: 22068-AP33 / Model: AP32E, AP32, AP33) has been approved by ISED to operate with the antenna type listed below with maximum permissible gain indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device. Approved antenna(s) list:

Antenna No.	Brand	Model	Antenna Ne t Gain (dBi)	Frequency range (GHz)	Antenna Type	Connector T ype
Ext WiFi Dual	Acceltex	ATS-00-245-46-	4	2.4 — 2.484		
Ant		6RPSP-36	6	5.15 — 5.85	Omnidirectional	RPSMA Plug
Ext WiFi Dual	Acceltex	ATS-OP-245-81 0-	8	2.4 — 2.484		
Ant		4RPSP-36	10	5.15 — 5.85	Directional	RPSMA Plug
Int WiFi Dual			5	2.4 — 2.484		
Ant			6	5.15 — 5.85	Omnidirectional	N/A

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 48 cm between the radiator & your body.

IC Caution

- (i) The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;
- (ii) The maximum antenna gain permitted for devices in the bands 5250-5350 MHz and 5470-5725 MHz shall be such that the equipment still complies with the e.i.r.p. limit;
- (iii) The maximum antenna gain permitted for devices in the band 5725-5850 MHz shall be such that the equipment still complies with the e.i.r.p. limits specified for point-to-point and non-point-to-point operation as appropriate; and
- (iv) Users should also be advised that high-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.



This device complies with the Radio Equipment Directive, 2014/53/EU, issued by the Commission of the European Community.

Hereby, Juniper Networks, Inc. declares that the radio equipment type (AP33, AP32, and AP32E) are in compliance with Directive 2014/53/EU, Radio Equipment Regulations 2017.

The full text of the EU declaration of conformity is available at the following: https://www.mist.com/support/
The frequency and maximum EIRP Power in EU:

Bluetooth:

Frequency range (MHz)	Maximum EIRP in EU (dBm)			
2400 – 2483.5	9.98			

WLAN:

Frequency range (MHz)	Maximum EIRP in EU (dBm)		
2400 – 2483.5	19.99		
5150 – 5250	22.93		
5250 – 5350	22.9		
5500 – 5700	29.99		
5745 – 5825	13.96		

The minimum distance between the user or bystander and the radiating structure of the transmitter is 20cm.

The product is for use by authorized professionals and in environments where the product has been assessed for safe and compliant operation. The installer is responsible for ensuring that the equipment meets all local safety requirements for the installed location.

For products not certified for use in Hazardous Locations, the equipment is not suitable for use in explosive environments, in the presence of flammable liquids, near explosives, or in areas where blasting is occurring. The device is restricted to indoor use only when operating in the 5150 to 5350 MHz frequency range.

	AT	BE	BG	CZ	DK	EE	FR	DE	IS
	IE	IT	EL	ES	CY	LV	LI	LT	LU
	HU	MT	NL	NO	PL	PT	RO	SI	SK
	TR	FI	SE	СН	HR	UK(NI)			



AP33 or AP32 Hardware Installation Guide Juniper Networks, Inc. (C) Copyright 2020. All Rights Reserved

Documents / Resources



Juniper NETWORKS AP33 Wireless Access Point [pdf] Installation Guide AP33 Wireless Access Point, AP33, Wireless Access Point, Access Point, Point

References

- .:: Support Mist
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.