



JUNIPER NETWORKS SSR130 Smart Router Images User Guide

[Home](#) » [JUNIPER NETWORKS](#) » [JUNIPER NETWORKS SSR130 Smart Router Images User Guide](#) 

Contents

- [1 JUNIPER NETWORKS SSR130 Smart Router Images](#)
- [2 Product Information](#)
- [3 Product Usage Instruction](#)
- [4 Meet the SSR130](#)
- [5 Onboarding the SSR130](#)
- [6 Onboard the SSR130 Using the Mist AI Mobile App](#)
- [7 Onboard the SSR130 Using a Web Browser](#)
- [8 Create a Template](#)
- [9 Assign the Template to a Site](#)
- [10 Assign the SSR130 to a Site](#)
- [11 Install the SSR130 Hardware](#)
- [12 Connect your SSR130 to the Mist Cloud](#)
- [13 What's Next](#)
- [14 General Information](#)
- [15 Learn with Videos](#)
- [16 Documents / Resources](#)
 - [16.1 References](#)
- [17 Related Posts](#)



JUNIPER NETWORKS SSR130 Smart Router Images



Product Information

Specifications

- **Product Name:** SSR130

Meet the SSR130

The SSR130 is a networking device that can be onboarded to the Juniper Mist™ cloud. It is designed to provide WAN connectivity and is equipped with Mist AI technology for advanced network management.

Onboarding the SSR130

The SSR130 can be onboarded using either the Mist AI mobile app or a web browser.

Onboard the SSR130 Using the Mist AI Mobile App

To onboard the SSR130 using the Mist AI mobile app, follow these steps:

1. Download and install the Mist AI app from the Google Play Store or Apple App Store.
2. Open the Mist AI app and log in using your account credentials. If you do not have an account, see [Create a Mist Account and Organization](#) for details about creating one.
3. Select your organization.
4. Tap Claim Devices to Org and focus the camera on the QR code on the claim code label. The app automatically claims the device and adds it to your organization's inventory.
5. On the Organization screen, tap Device Inventory > Routers > Unassigned. Review the MAC address.

Onboarding Complete!

Fantastic, the SSR130 is in your inventory! To provision the SSR130, see [Step 2: Up and Running](#) on page 5 and continue with [Add the Network](#).

Product Usage Instruction

Onboard the SSR130 Using a Web Browser

To onboard the SSR130 using a web browser, follow these steps:

Note:

Onboarding multiple switches requires an activation code while onboarding a single switch requires the alphanumeric claim code.

1. Log in to your account at <https://manage.mist.com/>. If you do not have an account, see [Create a Mist](#)

- Account and Organization for details about creating one.
2. Log in to your Mist organization's dashboard.
 3. Navigate to your organization's inventory and select the WAN tab at the top.
 4. Select the Claim WAN Edges button in the upper right of the inventory screen.
 5. Add the claim code to the list of devices to claim.
 6. Clear the Assign claimed WAN edges to the site check box to place the SSR into inventory.
 7. Click the Claim button to claim the SSR into your inventory.

If you claim multiple routers, expect a slight delay for the Router Claim Results window to pop up. Review the information and close the window. View your new router or routers on the Inventory page. Expect to see the status as Disconnected. Onboarding Complete! Fantastic, the SSR130 is in your inventory! To provision the SSR130, see Step 2: Up and Running on page 5 and continue with Add the Network.

Step 2: Up and Running

After onboarding the SSR130, follow these steps to get it up and running:

Create a Template

To create a template for your SSR130, follow these steps:

1. Log in to your Mist portal.
2. Begin the WAN configuration.
3. Use the SSR WAN Edge Templates to simplify the configuration process.

Assign the Template to a Site

To assign the template to a site where your SSR130 will be deployed, follow these steps:

1. Scroll to the top and click Assign to Site.
2. Select the site from the list where you want the template applied.
3. Click Apply.

Assign the SSR130 to a Site

To assign the SSR130 to a specific site, follow the instructions provided in Step 2: Up and Running on page 5 of the user manual.

Install the SSR130 Hardware

Refer to the user manual for detailed instructions on how to install the SSR130 hardware.

Connect your SSR130 to the Mist Cloud

To connect your SSR130 to the Mist cloud, follow the instructions provided in Step 2: Up and Running on page 5 of the user manual.

FAQ

- **Q: How do I create a Mist account and organization?**

A: To create a Mist account and organization, please refer to the user manual for detailed instructions.

- **Q: What is the Mist AI mobile app used for?**

A: The Mist AI mobile app is used to onboard the SSR130 and manage your Mist network from your mobile phone.

- **Q: Can I onboard multiple SSR130 devices at once?**

A: Yes, you can onboard multiple SSR130 devices at once by using the Mist AI mobile app or a web browser. Please refer to the user manual for detailed instructions.

- **Q: How do I provision the SSR130?**

A: To provision the SSR130, follow the instructions provided in Step 2: Up and Running on page 5 of the user manual.

- **Q: What is the purpose of the SSR WAN Edge Templates?**

A: The SSR WAN Edge Templates are used to simplify the configuration process for the SSR130.

This guide walks you through the simple steps to get a new cloud-ready Juniper Networks® SSR130 router up and running in the Juniper Mist™ cloud portal. You can onboard a single device using your mobile phone, or one or more devices using your computer. Once onboarded, we'll walk you through the steps to create a basic configuration. You'll need your Juniper Mist WAN Assurance subscription and your login credentials for the Juniper Mist portal.

NOTE:

Before you begin, you must set up your organization and sites and activate your subscriptions. For more information, see [Create a Mist Account and Organization](#).

Meet the SSR130

- The Juniper Networks SSR130 network appliance is part of the Juniper® Session Smart™ Routing portfolio. The SSR130 features six 1 GbE ports and two 1 GbE RJ-45/SFP combo ports.
- The SSR130 runs the FIPS 140-2 Level 1 compliant Juniper® Session Smart™ Routing (SSR) software, which provides secure and resilient WAN connectivity.
- The SSR130 is available in models with or without LTE support.



Onboarding the SSR130


- The SSR130 comes ready to install and manage using the Juniper Mist™ Cloud portal. You can onboard one or more routers using your computer, or a single router using your mobile phone.
- To onboard your SSR130 using your mobile phone, see “Onboard the SSR130 Using the Mist AI Mobile App” on page 3.
- To manually onboard your SSR130, see “Onboard the SSR130 Using a Web Browser” on page 3.
- To perform either onboarding process, you will need to locate the SSR130 claim code label on the rear panel of your device.



Onboard the SSR130 Using the Mist AI Mobile App

From your mobile phone:

1. Download and install the Mist AI app from the Google Play Store or Apple App Store.
2. Open the Mist AI app and log in using your account credentials. If you do not have an account, see Create a Mist Account and Organization for details about creating one.
3. Select your organization.
4. Tap Claim Devices to Org and focus the camera on the QR code on the claim code label. The app automatically claims the device and adds it into your organization's inventory.

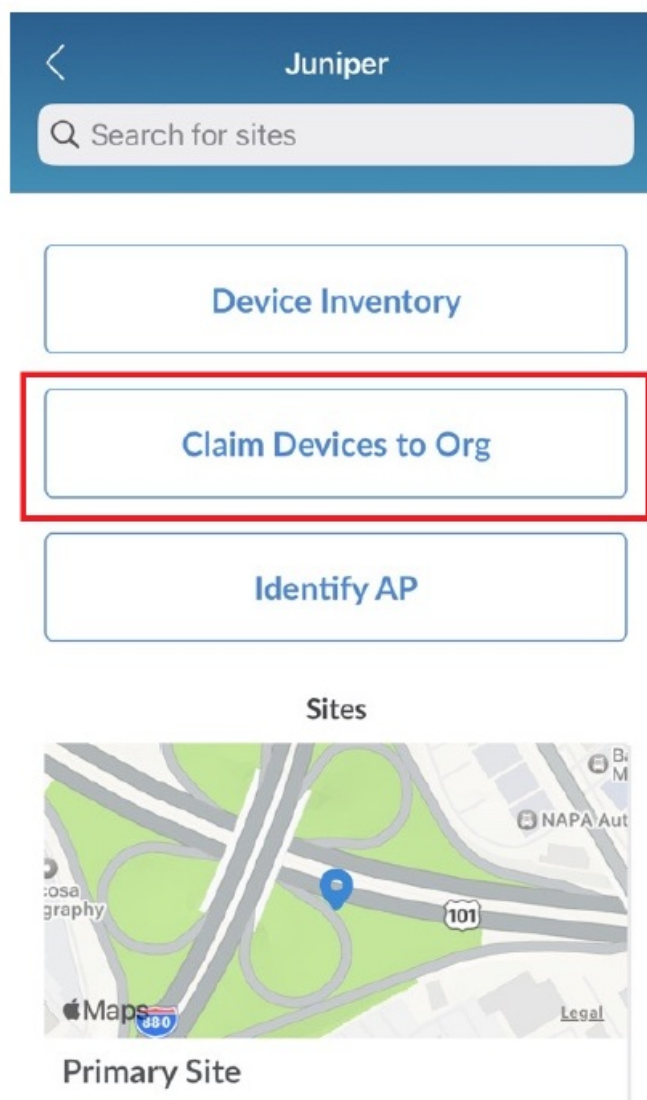

5. On the Organization screen, tap Device Inventory → Routers → Unassigned. Review the MAC address.

Onboarding Complete!

Fantastic, the SSR130 is in your inventory! To provision the SSR130, see “Step 2: Up and Running” on page 5 and continue with Add the Network.

Onboard the SSR130 Using a Web Browser

Onboarding multiple switches

When you purchase multiple switches, we provide you with an activation code along with your PO information. Make a note of this code.


Onboarding a single switch

Locate the QR code on your switch and make a note of the alphanumeric claim code directly above it.

1. Log in to your account at <https://manage.mist.com/>.

If you do not have an account, see Create a Mist Account and Organization for details about creating one.

2. Log in to your Mist organization’s dashboard.

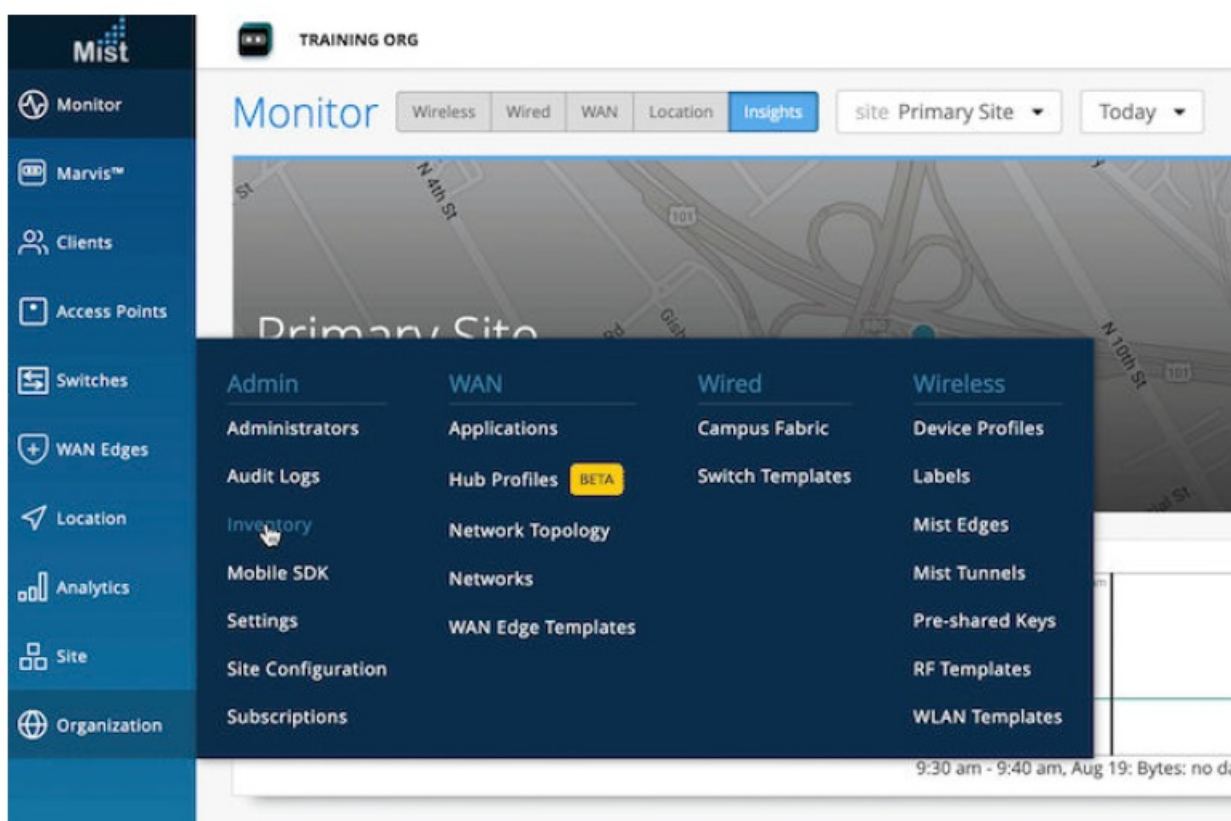

3. Navigate to your organization’s inventory, and select the WAN tab at the top.

4. Select the Claim WAN Edges button in the upper right of the inventory screen.

5. Add the claim code into the list of devices to claim.

6. Clear the Assign claimed WAN edges to site check box. This places the SSR into inventory, to be assigned to a site later.

7. Click the Claim button to claim the SSR into your inventory.

- If you claim multiple routers, expect a slight delay for the Router Claim Results window to pop up.
- Review the information and Close the window.
- View your new router or routers on the Inventory page. Expect to see the status as Disconnected.

Onboarding Complete!

Fantastic, the SSR130 is in your inventory! To provision the SSR130, see “Step 2: Up and Running” on page 5 and continue with Add the Network.


The SSR130 is onboarded to the Juniper Mist™ cloud. To provision the SSR130 with ZTP, log in to your Mist portal and begin the WAN configuration. Configuring your SSR device is made simple through the use of the SSR WAN Edge Templates.

Create a Template

The WAN Edge Templates provide you with the basic network configuration in a single step, and allow for re-usable and consistent configuration for every SSR device you deploy. The template provides device-specific, preconfigured WAN interfaces, LAN interfaces, a traffic steering policy, and an application policy. You simply name the template and select the device type.

1. From the organization sidebar menu, select WAN Edge Templates.
2. Select Create Template in the upper right.
3. Give the template a name.
4. Place a checkmark in the Create from Device Model box.
5. Select your SSR model from the dropdown.
6. Click Create.

The device template is displayed. Scroll down through the template to see the preconfigured WAN interfaces, LAN interfaces, Traffic Steering, and Application Policies. Great job! You now have a working WAN Edge template you can apply to many sites and devices across your organization.

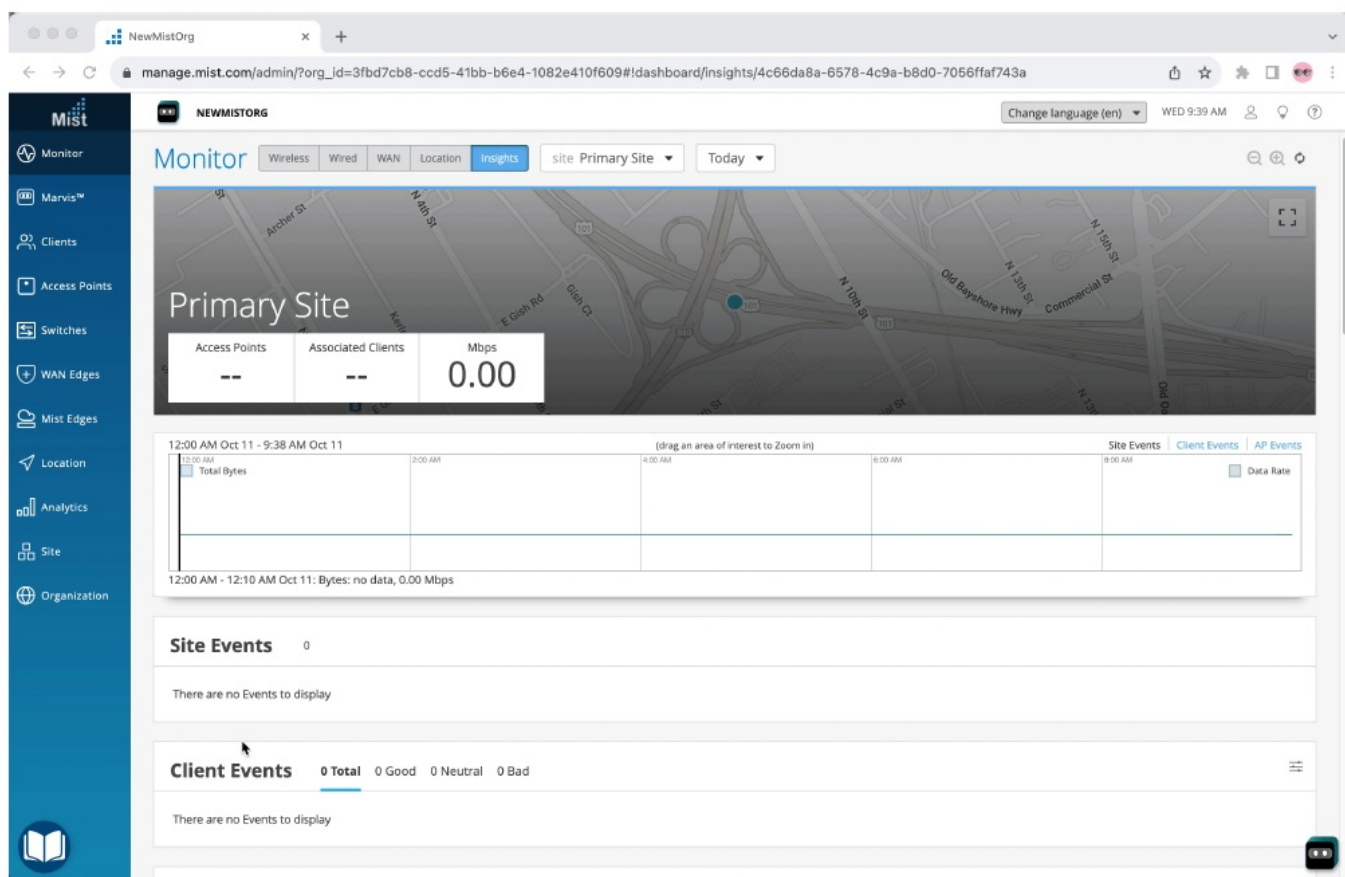


Assign the Template to a Site

Now that you have set up a template, you need to assign it to the site where your SSR will be deployed.

1. Scroll to the top and click Assign to Site.

2. Select the site from the list where you want the template applied.
3. Click Apply.

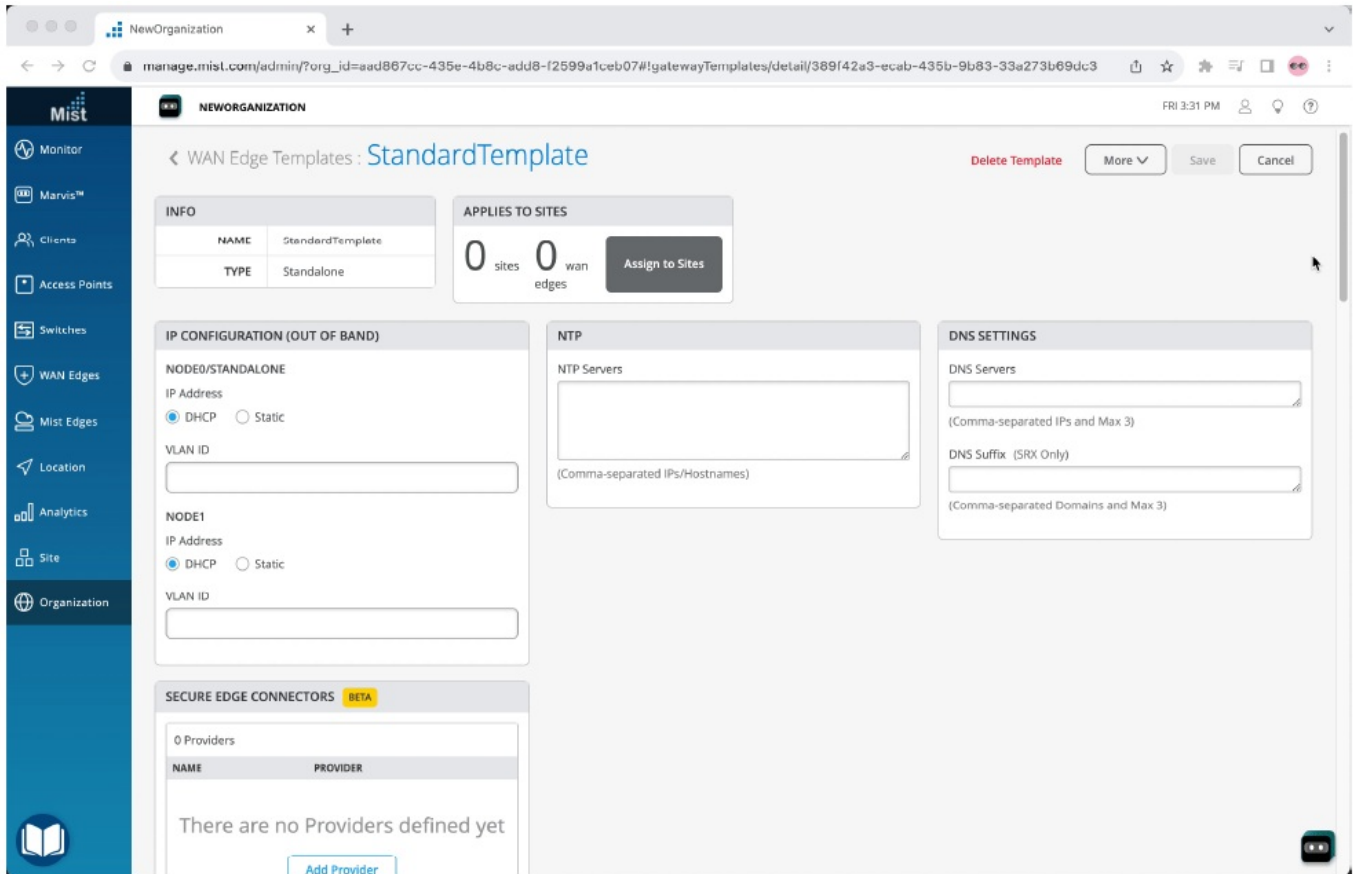

Great work!

All that remains is to associate the SSR130 with a site.

Assign the SSR130 to a Site

Once you associate the SSR130 with a site and a template, the working configuration will be complete.

1. Select Organization on the left sidebar, and navigate to your organization's WAN Edges Inventory.
2. Select your SSR130 and assign it to your site.
3. If you are configuring a Mist-managed router (SSR Software version 6.x and greater), check the Manage configuration with the Mist check box. For version 5.4.x and greater conductor-managed routers, make sure there is no checkmark in the Manage Configuration from Mist under Manage Configuration.
4. Select Assign to Site.

Congratulations you now have a Mist-claimed SSR130, and a basic configuration ready to send to your device!

Install the SSR130 Hardware

Your SSR130 installation has specific features that must be installed depending on your use and environment. Refer to the SSR130 Hardware Installation Guide to complete the following procedures:

- Rack, Wall, or Surface Mounting
- LTE Antenna Install


- SIM Card Install
- Connecting Power

Please return here after completing those procedures to complete the network connections.

Connect your SSR130 to the Mist Cloud

Your SSR130 uses port 0 (ge-0-0) as a default WAN port to contact Mist for zero-touch provisioning (ZTP). You'll need to set up port 3 (ge-0-3) with a LAN network.

1. Connect SSR port 0 to an Ethernet WAN link that can provide:
 - DHCP address assignment
 - Connectivity to the Internet and Mist (see Firewall Requirements)
2. Connect SSR port 3 to your LAN devices, including:
 - Mist-managed Juniper EX switches
 - Mist APs
 - User devices

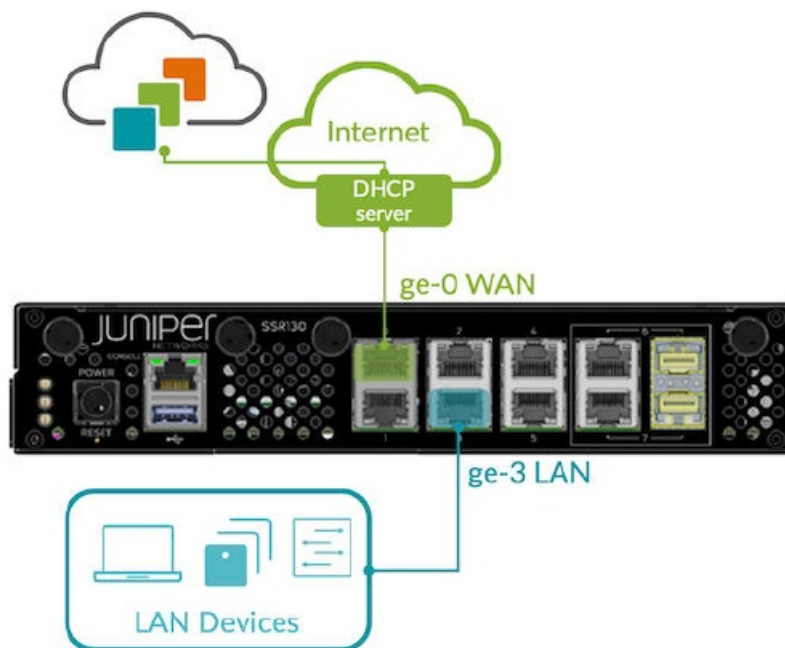

- Great job, your SSR130 is now connected to the Mist cloud! In just a few minutes, Mist will send the template-driven configuration down to your device. Once the configuration has been applied, it will begin forwarding sessions from
- LAN to WAN as described by your policy.
- Head over to the WAN Edges menu on the Mist sidebar, select your device, and watch events as the device completes ZTP.
- As your client devices connected to the LAN are assigned addresses from the WAN Edge DHCP server and begin sending sessions, telemetry will populate the insights page, and Marvis will start analyzing it on your behalf.

For conductor-managed devices, additional views for Cloud Telemetry are configurable in the SSR GUI and PCLI.

Congratulations!

Now that you've done the initial configuration, your SSR130 is ready to use. Here are some things you can do next:

What's Next

If you want to	Then
Get an overview of the SSR configuration and how it is managed	See the SSR Configuration Management section of the SSR Documentation in the Juniper Networks TechLibrary

General Information

If you want to	Then
See all documentation available for the SSR130	See the SSR130 Documentation in the Juniper Networks TechLibrary
Get more details about installing and maintaining the SSR130 hardware	See the SSR130 Hardware Guide
See all documentation available for SSR software	Visit Session Smart Router Documentation in the Juniper Networks TechLibrary

Stay up-to-date about new and changed features and known and resolved issues	See the SSR Release Notes
--	---


Learn with Videos

Here are some great video and training resources that will help you expand your knowledge of SSR Software.

If you want to	Then
Learn about Virtual Router Redundancy Protocol for the SSR	See SSR Virtual Router Redundancy Protocol on the SSR YouTube page
Learn about BFD for Traditional Routing	See BFD for Traditional Routing on the SSR YouTube page
Learn about Configuration Concurrency with the SSR	See Configuration Concurrency on the SSR YouTube page
Learn about Service Route Redundancy and Vectors	See Service Route Redundancy and Vectors on the SSR YouTube page
Get short, concise tips and instructions that provide quick answers, clarity, and insight into specific features and functions of Juniper technologies	See Learning with Juniper on Juniper Networks main YouTube page
View a list of free technical training offered by Juniper	Visit the Getting Started page on the Juniper Learning Portal

Inc. in the United States and other countries. All other trademarks, service marks, registered marks, or registered service marks are the property of their respective owners. Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice. Copyright © 2023 Juniper Networks, Inc. All rights reserved.

Documents / Resources

	<p>JUNIPER NETWORKS SSR130 Smart Router Images [pdf] User Guide SSR130 Smart Router Images, SSR130, Smart Router Images, Router Images, Images</p>
---	--

References

- [J Get Started with Free Juniper Training](#)
- [Mist Systems](#)
- [Mist Systems](#)
- [Session Smart Router \(formerly 128T\) Documentation | Juniper Networks](#)
- [SSR130 Documentation | Juniper Networks](#)
- [SSR130 Hardware Guide | Juniper Networks](#)
- [Unpack and Mount an SSR130 | Juniper Networks](#)
- [Mist | Quick Start | Step 1: Begin | Juniper Networks](#)
- [Configuration Management on the SSR | SSN Docs](#)
- [Enable Ports on the Firewall | SSN Docs](#)
- [SSR 5.4 Release Notes | SSN Docs](#)
- [User Manual](#)