
Home » JUNIPer » Juniper BHA2GSA Height Adjustable Workstation Think Desk Instruction Manual



Juniper BHA2GSA Height Adjustable Workstation Think Desk **Instruction Manual**

Contents 1 BHA2GSA Height Adjustable Workstation Think 2 BHA2GSA BHA3GSA 2.1 General Installation Guide 2.2 Workstation Overview 2.3 Parts List **3 WORKSTATION** 3.1 1 | Determine Surface Size for Installation **4 WORKSTATION** 4.1 2 | Assemble Workstation Frame 4.2 3 | Place Frame on the Surface 4.3 4 | Adjust Frame on Surface 4.4 (G) 30" Deep Surfaces 4.5 5 | Secure Power Cord & Install Feet 4.6 A1: Casters Overview 4.7 Parts List 4.8 1 | Remove Glides From Feet 4.9 2 | Attach Casters to Feet 4.10 A2: Modesty Panel 4.11 Parts List 4.12 1 | Secure Brackets to Modesty Panel 4.13 2 | Attach Modesty Panel to Surface 4.14 A3: Slim Pedestal Overview **5 SLIM PEDESTAL** 5.1 1 | Secure Brackets to Slim Pedestal 5.2 2 | Attach Slim Pedestal to Surface 5.3 A4: Cable Tray **6 CABLE TRAY 6.1 Parts List 6.2 CABLE TRAY** 7 END OF CABLE TRAY SECTION 7.1 2 | Attach Cable Tray to Surface 7.2 A4: Cable Tray Overview 7.3 Parts List 7.4 1 | Extend Cable Tray to Desired Length 7.5 2 | Attach Cable Tray to Surface 8 Documents / Resources 8.1 References 9 Related Posts

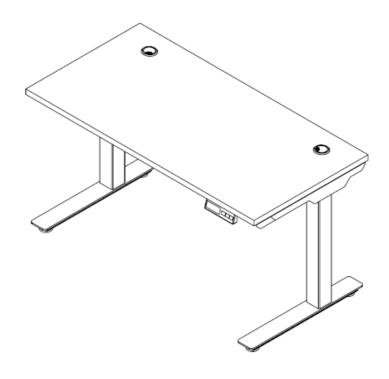

THINK Desk Height-Adjustable Workstation Includes Add-Ons: A1 | A2 | A3 | A4

General Installation Guide

Workstation Overview

THINK Height-Adjustable Workstation

All parts listed are for a single workstation; additional parts will be needed for additional workstations.

Parts List

Parts List

Code	Qty.	Description	
*****	1	Surface	\Diamond
	1	Center-Adjustable Beam	1
	1	Feet (Set of 2)	
	2	23" Arm Bracket	-
	2	Leg with Motor]
BHA3GSA or	1	Handset	6
BHA2GSA	1	Short & Long Extension Cord	\``\o
	1	Power Cable	6
	8	Screw (A)	₹.
	24	Screw (B)	~
	3	Screw (C)	8
	8	Screw (D)	•
BHANBEAM*	1	BOOST Replacement Beam	
BHA19*	2	19" Arm Bracket	No.
TLEG. ADAPTGSA*	1	T-Leg Adapter (Set of 2)	Po
BASB72*	1	42" Support Bar	

^{*}If applicable.

WORKSTATION

1 | Determine Surface Size for Installation

Use the chart below to identify which arm brackets will be used with surface size, and if surface will need replacement beam (BHANBEAM).

Note: Reference STEP 4 after completing STEP 2 and 3.


Surface Depth	Surface Width	Including Surface Dividers?	Arm Bracket Type	BHANBEAM	Reference Step 4
24"	36"-47"	No	Default	Yes	А
24"	36"-47"	Yes	BHA19	Yes	В
24"	48"	No	Default	No	С
24"	48"	Yes	BHA19	No	D
24"	54"-72"	No	Default	No	E
24"	54"-72"	Yes	Default	No	F
30"	36"-47"	Yes/No	Default	Yes	G
30"	54"-72"	Yes/No	Default	No	J

WORKSTATION

2 | Assemble Workstation Frame

Attach legs with motor and arm brackets to the center beam using screws (A).

Note: Replace default arm brackets if workstation requires BHA19 or T-brackets. Surface width 36"-47" will need to replace beam, with replacement beam (BHANABEAM-without control box).

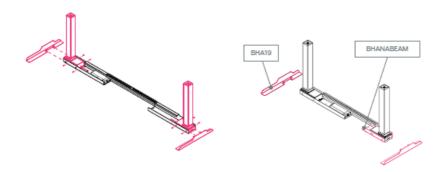


3 | Place Frame on the Surface

Loosen existing locking screws on adjustable beam to extend beam to fit table size. Run cord through cutout from

the adjustable beam and secure the

handset to control box. Attach the short extension cord to the motor closest to control box and attach the longer extension cord on the opposite end.

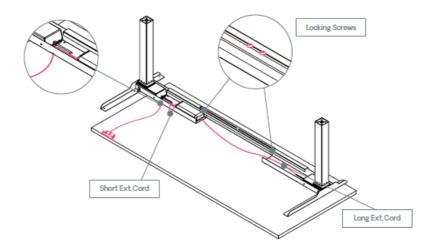


4 | Adjust Frame on Surface

Note: Based on STEP 1 surface size chart, reference one of the following workstation diagrams to secure frame.

(A) 24"D x 36"-47"W Surfaces Without Side Dividers


Extend the frame equal to the surface width. Center arm brackets in reference to surface depth. Secure frame to surface using wood screws (B) and secure handset using wood screws (C).

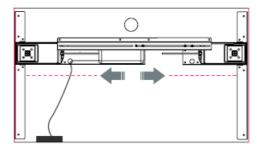

(B) 24"D x 36"-47"W Surfaces With Side Dividers


If using side dividers, frame will include arm brackets BHA19. Extend the frame equal to the surface width. Center arm brackets in reference to surface depth. Secure frame to surface using wood screws (B) and secure handset using wood screws (C).

BHA19 Brackets

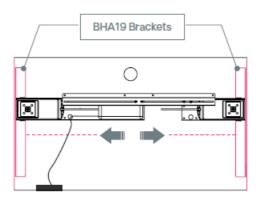

(C) 24"D x 48"W and Smaller Surfaces Without Side Dividers


Extend the frame equal to the surface width. Center arm brackets in reference to surface depth. Secure frame to surface using wood screws (B) and secure handset using wood screws (C).

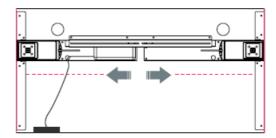

(D) 24"Dx48"W and Smaller Surfaces With Side Dividers


If using side dividers, frame will include arm brackets BHA19. Extend the frame equal to the surface width. Center arm brackets in reference to surface depth. Secure frame to surface using wood screws (B) and secure handset using wood screws (C).

BHA19 Brackets

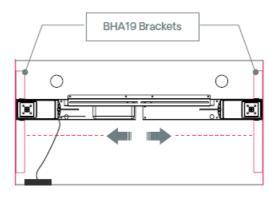

(E) 24"D x 54"-72"W Surfaces Without Dividers


Extend the frame equal to the surface width. Center arm brackets in reference to surface depth. Secure frame to surface using wood screws (B) and secure handset using wood screws (C).

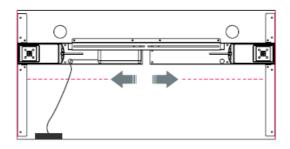

(F) 24"D x 54"-72"W Surfaces with Side Dividers

If using side dividers, inset the frame 2" from each end. Center arm brackets to surface depth. Secure frame to surface using wood screws (B) and secure handset using wood screws (C).

Note: If using side dividers AND a facing divider with BSBHL, replace the arm brackets with BHA19.

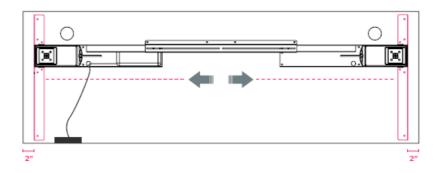

(G) 30" Deep Surfaces


Extend the frame equal to the surface width. Center arm brackets to surface depth. Secure frame to surface using wood screws (B) and secure handset ORKSTATION SECTION

using wood screws (C).

5 | Secure Power Cord & Install Feet

Secure power cord to the control box. Secure locking screws on the adjustable beam and install the feet using screws (D) for each leg. If workstation is complete, flip over. Reference handset guide for initialization and operation functions.

Note: Use T-feet if using T-arm brackets.

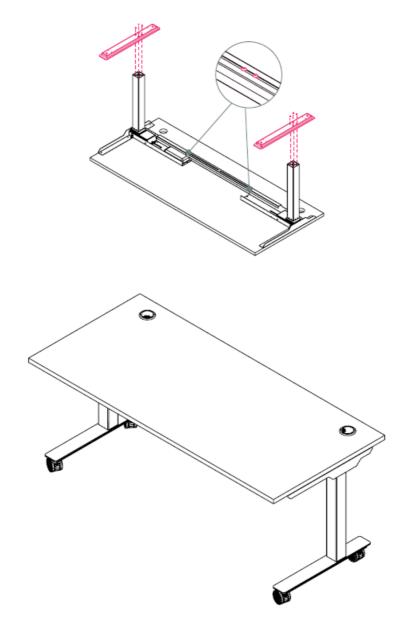

A1: Casters Overview

THINK Height-Adjustable Workstation


All parts listed are for a set of 4 casters; additional parts will be needed for additional casters.

Parts List

Code	Qty.	Description	
BHACAST	1	Caster Kit (Set of 4)	
	16	Screws	


1 | Remove Glides From Feet


Unscrew all four glides from feet and disregard.

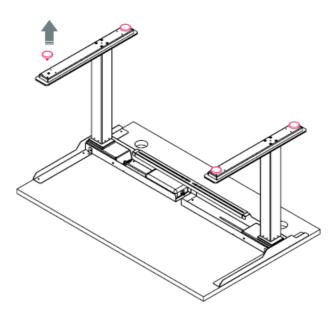

2 | Attach Casters to Feet

The workstation's feet have pre-drilled holes for the caster plate. Attach casters using self-tapping metal screws.

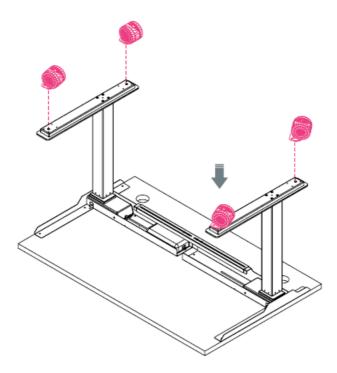

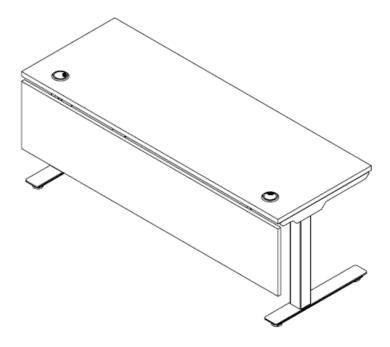

A2: Modesty Panel

Overview

THINK Height-Adjustable Workstation

All parts listed are for a single modesty panel; additional parts will be needed for additional modesty panels.

Parts List

Code	Qty.	Description	
GLMP##	1	Laminate Modesty Panel*	
GLIVIF##	4	Machine Screws	
BMPBFB	2	L-Brackets	
ט וט וואוט	4	Wood Screws	

^{*}For Steel Modesty Panel: components may vary, but process is similar.

1 | Secure Brackets to Modesty Panel

Connect the BMPBFB bracket to the modesty panel using screws. Secure tightly.

END OF M

2 | Attach Modesty Panel to Surface

Attach modesty panel to surface using wood screws provided with brackets. Panel will be center aligned and flushed with back of surface.

A3: Slim Pedestal Overview

THINK Height-Adjustable Workstation

All parts listed are for a single slim pedestal; additional parts will be needed for additional slim pedestals.

SLIM PEDESTAL

Parts List

Code	Qty.	Description	
BFSLM.SM	1	Large Mounting Bracket	
DI OLIVI.OW	1	Small Mounting Bracket	
BFSLM	1	Slim Pedestal	
BFSLM.HW	8	Machine Screw	
DI OLIVI.I IVV	10	Wood Screw	

SLIM PEDESTAL

1 | Secure Brackets to Slim Pedestal

Align large mounting bracket to front of pedestal and align small mounting bracket to back. Secure both brackets using provided screws.

END OF SLIM PEDESTAL SECTION

2 | Attach Slim Pedestal to Surface

Secure pedestal to surface using wood screws. The pedestal brackets will connect on either side of the center beam.

A4: Cable Tray

Overview

THINK Height-Adjustable Workstation

All parts listed are for a single cable tray; additional parts will be needed for additional cable trays.


CABLE TRAY

Parts List

Code	Qty.	Description	
внст	1	Surface-Mount Cable Management Tray	
ВПОТ	10	Wood Screws	

CABLE TRAY


1 | Extend Cable Tray to Desired Length Extension range: 25"-45".

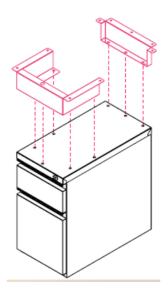

END OF CABLE TRAY SECTION

2 | Attach Cable Tray to Surface

Attach cable tray using wood screws.

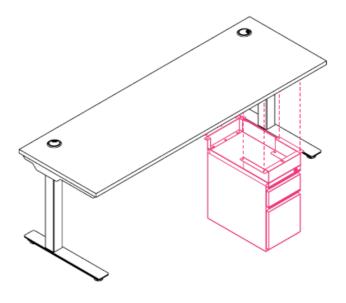

A4: Cable Tray Overview


THINK Height-Adjustable Workstation All parts listed are for a single cable tray; additional parts will be needed for additional cable trays.

Parts List

Code	Qty.	Description	
ВНСТ	1	Surface-Mount Cable Management Tray	STEEL STEEL
	10	Wood Screws	ETM


1 | Extend Cable Tray to Desired Length

Extension range: 25"-45".

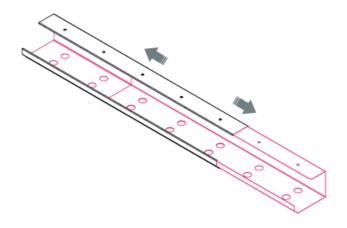

2 | Attach Cable Tray to Surface

Attach cable tray using wood screws.

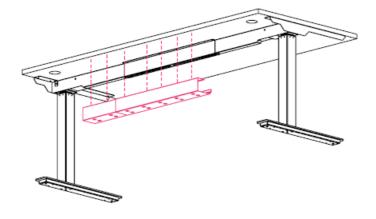

1-866-999-0955 | hello@juniperoffice.com | juniperoffice.com © 2023 Juniper Office | Version 23.0.0

Documents / Resources



Juniper BHA2GSA Height Adjustable Workstation Think Desk [pdf] Instruction Manual BHA2GSA, BHA2GSA Height Adjustable Workstation Think Desk, Height Adjustable Workstation Think Desk, Adjustable Workstation Think Desk, Workstation Think Desk, Think Desk, Desk

References

- √ Juniper | Office Furniture for the Entire Workspace
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.