



JUNO H-Type Adapter Instruction Manual

[Home](#) » [Juno](#) » JUNO H-Type Adapter Instruction Manual 

Contents

- [1 JUNO H-Type Adapter](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 INSTALLATION INSTRUCTIONS For H-Type Adapter](#)
- [5 Second Circuit Positioning](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



JUNO H-Type Adapter

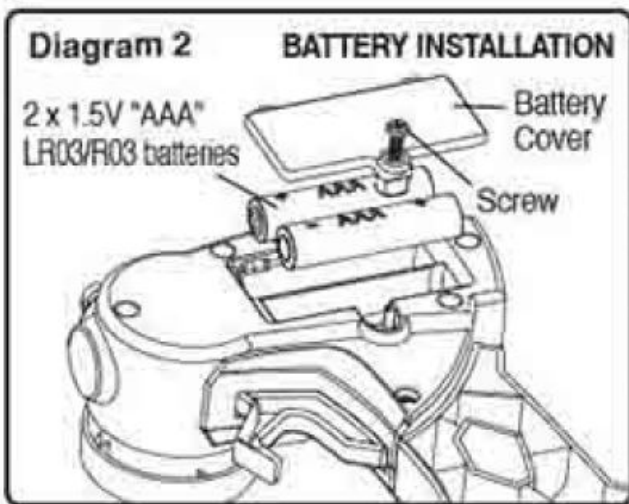
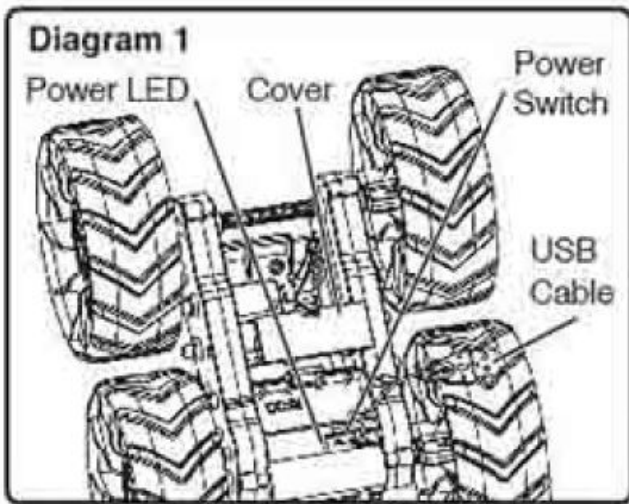


Product Information


The product is an H-Type Adapter used for installation purposes. It is designed to be inserted into a track to connect different components. The adapter box has a latch and a polarity line, which are important for proper installation.

Product Usage Instructions

1. Locate the latch and the polarity line on the adapter box.
2. Align the parts as shown in the diagram below.
3. Insert the adapter box into the track.
4. Rotate the adapter box in the opposite direction of the arrows until the latch snaps in place between the two track rails.
5. Continue to depress the latch until the adapter box reaches its final position.



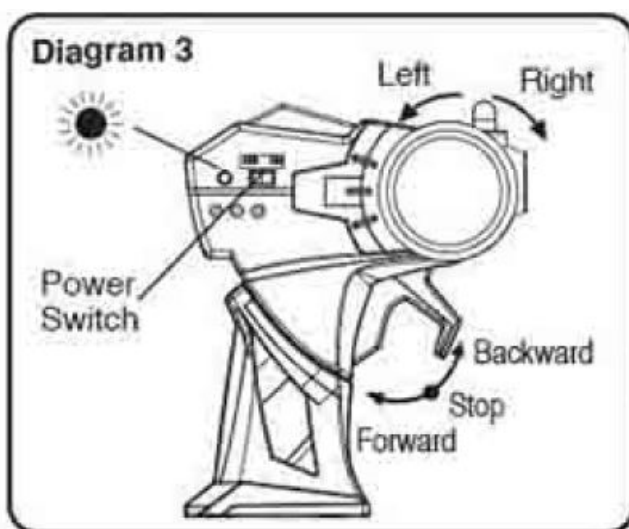1. For second circuit positioning, hold onto the Adapter Box with one hand.
2. Place the end of a flat head screwdriver under the contact shown in the diagram below.
3. Gently pull up on the screwdriver, and the contact should move vertically until it hits a hard stop.
4. Follow the instructions for inserting the adapter box into the track.




Following these instructions will ensure proper installation of the H-Type Adapter. Please refer to the diagrams for visual guidance.

INSTALLATION INSTRUCTIONS For H-Type Adapter


SAVE THESE INSTRUCTIONS






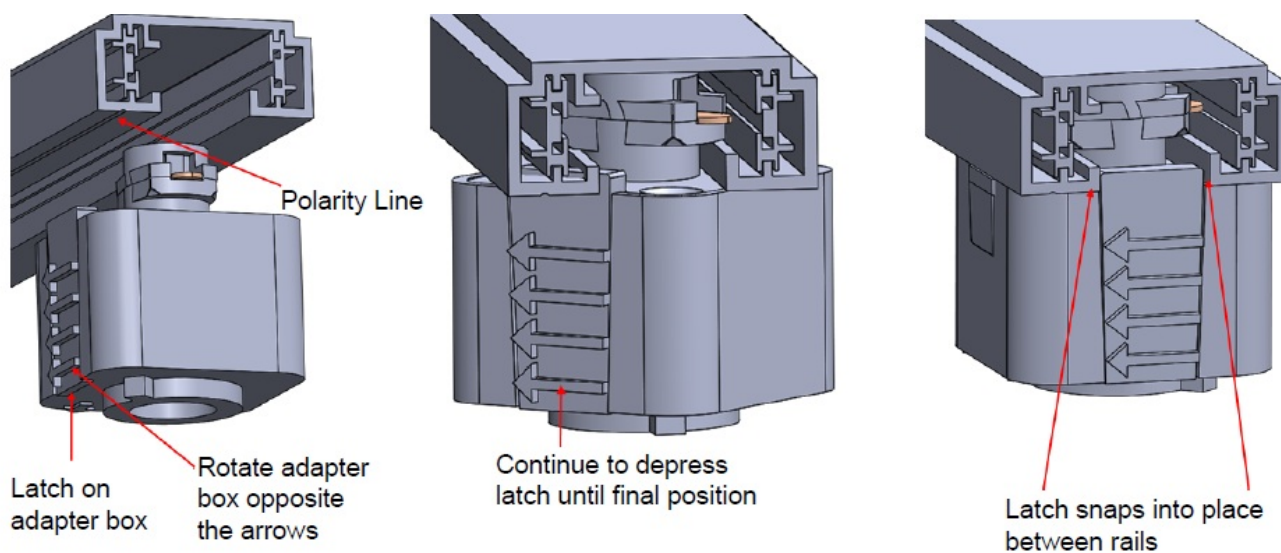
- Find the latch and the polarity line. Align parts as shown below and insert the adapter box into the track
- Rotate the adapter box opposite the arrows until the latch snaps in place between the two track rails
- Final Position



Second Circuit Positioning

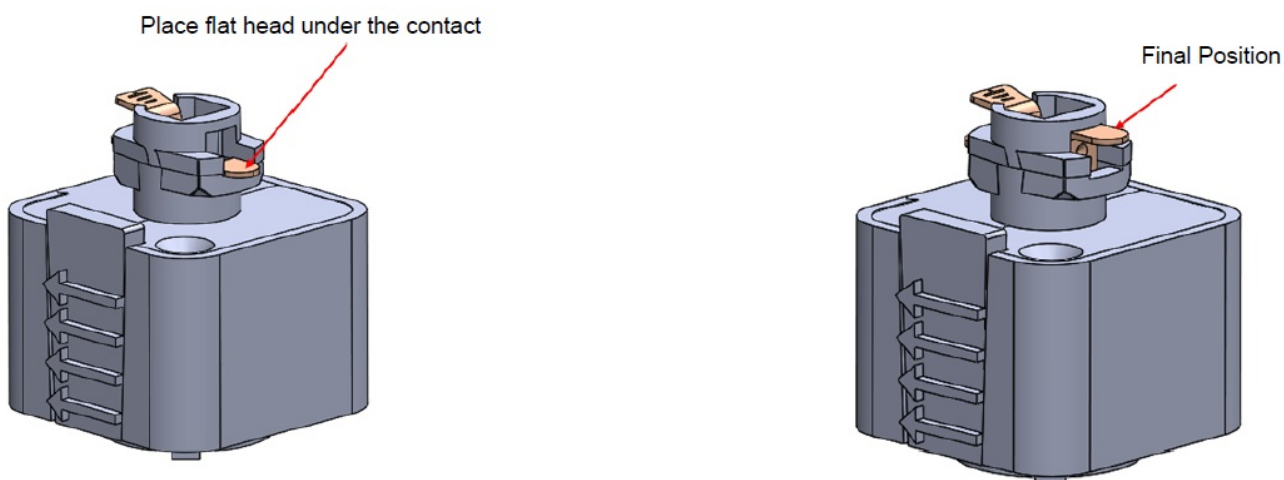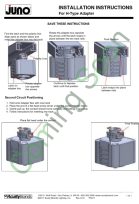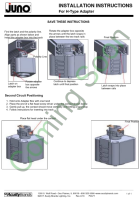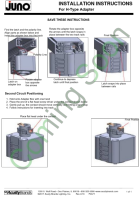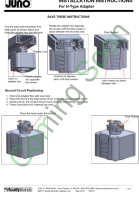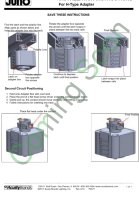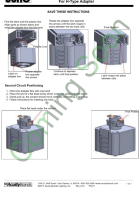1. Hold onto Adapter Box with one hand
2. Place the end of a flat head screw driver under the contact shown below
3. Gently pull up, the contact should move vertically until hitting a hard stop
4. Follow instructions for inserting into track



	<p>JUNO H-Type Adapter [pdf] Instruction Manual H-Type Adapter, H-Type, Adapter</p>
	<p>JUNO H-Type Adapter [pdf] Instruction Manual H-Type Adapter, H-Type, Adapter</p>
	<p>JUNO H-Type Adapter [pdf] Instruction Manual H-Type Adapter, H-Type, Adapter</p>
	<p>JUNO H-Type Adapter [pdf] Instruction Manual H-Type Adapter, H-Type, Adapter</p>
	<p>JUNO H-Type Adapter [pdf] Instruction Manual H-Type Adapter, H-Type, Adapter</p>
	<p>JUNO H-Type Adapter [pdf] Instruction Manual H-Type Adapter, H-Type, Adapter</p>

References

-  [Acuity Brands | Lighting, Controls, and Building Management Solutions](#)