



# Juno Portable Handheld Video Magnifier with OCR and Touch User Guide

 
[Home](#) » [Juno](#) » Juno Portable Handheld Video Magnifier with OCR and Touch User Guide 

## Contents

- [1 Juno Portable Handheld Video Magnifier with OCR and Touch](#)
- [2 Charging Juno](#)
- [3 Hardware Buttons](#)
- [4 Button Bars on the Screen](#)
- [5 Main Menu Structure](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)



**Juno Portable Handheld Video Magnifier with OCR and Touch**

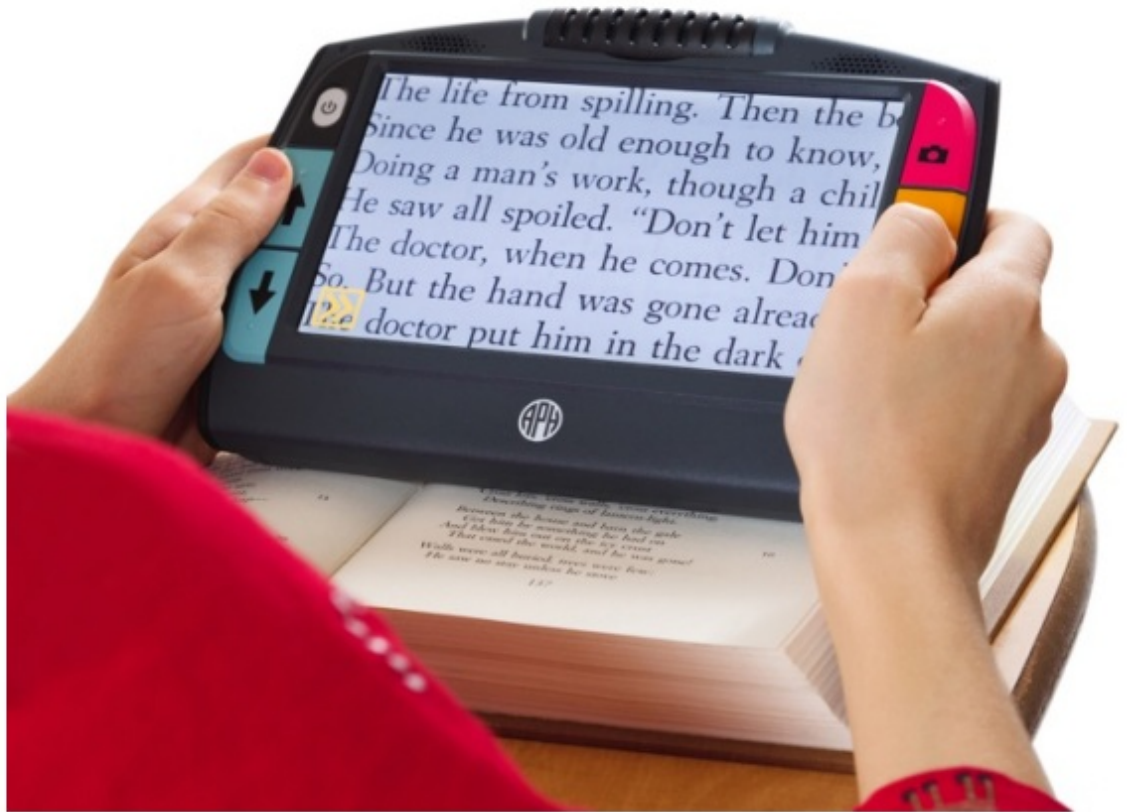

## Charging Juno

Begin charging Juno before first use. When the light on the left side of the device is red, the battery needs to be charged. You can use the device for about three hours once the battery is fully charged. The charging LED light will turn green when the battery is charged.

To charge Juno:

1. Insert the USB Type C cable into the USB-C slot on the left side of the device.
2. Attach the power adapter to the USB-C cable, and plug the power adapter into an electrical outlet. You can alternately insert the cable into a computer without using the adapter, but this charging method is slower.



3. Power on Juno by pressing the white Power button. You can work when the LED is solid red, which means that the battery is charging. However, you should leave it plugged in until the light turns green. The image on the following page is a view of the back and left sides of the device.
4. Begin using Juno. Go to the next section, "First Use."




## First Use


The first time you use Juno, you must follow these steps. You cannot exit once you start these steps and cannot use the device until you complete them. However, you can change these settings later if needed.

1. Plug in and power on Juno. See the previous section, "Charging Juno."
2. On the Select Juno Voice, tap to select a female or male voice to narrate as you navigate Juno. Only English is available.



3. Tap the Next button. The Select Date screen is displayed.

4. Swipe up or down in each column and tap to select the month, day, and year. Tap the Previous button  to return to the previous screen.

5. Tap the Next button.  The Select Time screen is displayed.



6. Swipe up or down in each column and tap to select hours, minutes, and AM or PM.

7. Tap the Next button


 



 
to complete the setup. The Live view is displayed. Refer to the Juno User Guide for step-by-step instructions.





## Hardware Buttons

See the Juno User Guide for more information about the hardware buttons.

Button	Name	Color	Location	Description
	<b>Power</b>	White	Top left	Press to power on the device. Short press to put on standby. Long press to power off.
	<b>Color Mode</b>	Blue	Middle and lower left	Press to cycle through true color, grayscale, and 22 high contrast color combinations.

Button	Name	Color	Location	Description
	<b>Capture</b>	Red	Top right	Press to capture a snapshot or go to live view. Optionally save a capture, recognize text, and read or listen to the text.
	<b>Zoom in/out</b>	Yellow	Middle and lower right	Press and hold for continuous zoom, press and release to incrementally zoom, or pinch and zoom on touch screen to increase or decrease magnification.

## Button Bars on the Screen

Tap the Restore button  in the lower-left corner of the screen to display the button bars on the left and right sides of the screen. Tap the Hide button  to no longer display the button bars.

- Main Menu



- Volume and Speech Rate
- Restore & Hide Button Bars
- LED Lights
- On and Off Toggle



- Lines & Masks Toggle
- Focus Unlocked & Locked Toggle

## Main Menu Structure

See the Juno User Guide for features associated with these menus.







## Files Menu

- File Information screen



- Edit screen
- Record Audio Tag screen



- Transfer screen

## About Menu

- Support screen
- Acknowledgments screen
- Juno User Guide

## **Brightness Menu**

## **Settings Menu**

The Settings menu has four sub-menus, as shown on the following pages:

- Reading Settings
- Menu Settings
- User Settings
- System Settings

## **Reading Settings Menu**

Viewing Modes screen

### **Default viewing mode (top right button)**

- Image mode
- Teleprompter mode
- Ticker Tape mode

### **Default highlighting mode (bottom right button)**

- Boxed
- Underlined
- Select Reading Language screen

## **Menu Settings Menu**

- Talking Menu screen
- Voice Selection screen
- Color Theme screen
- Font Size screen

## **User Settings Menu**

- Color Modes screen
- Standby Time screen
- Juno Storage screen

## **System Settings Menu**



- Time & Date screen
- Default Save Types screen
- Update Juno screen
- Reset All Settings screen

## Documents / Resources

	<a href="#">Juno Portable Handheld Video Magnifier with OCR and Touch</a> [pdf] User Guide Portable Handheld Video Magnifier with OCR and Touch
---	--

## References

-  [APH Home | American Printing House](#)