



Home » Jura » jura X10c CLARIS Pro Smart Plus Filter Cartridge Instruction Manual 📆



Contents [hide]

- 1 Jura X10c CLARIS Pro Smart Plus Filter Cartridge
- 2 Product Specifications
- 3 Product Usage Instructions
- 4 MODELS
- 5 Frequently Asked Questions (FAQ)
- 6 Documents / Resources
 - 6.1 References



Jura X10c CLARIS Pro Smart Plus Filter Cartridge



Product Specifications

• Filter Types: CLARIS Pro Smart+ (Article No: 25055) and CLARIS Pro Smart maxi

(Article No: 24146)

• Quantity: 1 unit each

• Model: X10c

• Website: jura.com

• Year: 202501

Product Usage Instructions

Safety Precautions:


Before changing the filter, ensure to read and follow all safety information and warnings provided in the user manual to prevent any hazards.

Changing the Filter





- 1. Locate the filter cartridge (CLARIS Pro Smart+ or CLARIS Pro Smart maxi) based on your model's requirement.
- 2. Ensure the coffee machine is turned off and unplugged before proceeding.
- 3. Remove the old filter cartridge by following the specific instructions in the user manual.

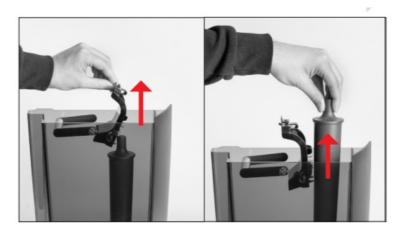

- 4. Insert the new filter cartridge into the designated slot, ensuring it is securely in place.
- 5. Follow any additional instructions provided in the user manual for priming or activating the new filter.
- 6. Once installed, run a cleaning cycle or flush water through the system as recommended to ensure proper functioning.



These short instructions do not replace the Instructions for Use. Make sure you read and observe the safety information and warnings first in order to avoid changing the filter hazards.

MODELS

CLARIS Pro Smart+ filter cartridge

Article No: 25055

1 unit



CLARIS Pro Smart maxi filter cartridge

Article No: 24146

1 unit



Frequently Asked Questions (FAQ)

• Q: Can I reuse the filter cartridge?

 A: No, it is recommended to replace the filter cartridge with a new one to maintain optimal performance and quality of your coffee.

• Q: How often should I change the filter?

• **A:** The frequency of filter changes may vary based on usage and water quality. It is generally recommended to replace the filter every 2-3 months for best results.

Documents / Resources



jura X10c CLARIS Pro Smart Plus Filter Cartridge [pdf] Instruction

Manual

X10c A, 25055, 24146, X10c CLARIS Pro Smart Plus Filter Cartridge, CL ARIS Pro Smart Plus Filter Cartridge, Smart Plus Filter Cartridge, Filter C artridge, Cartridge

References

- User Manual
- Jura
- ♦ 24146, 25055, Cartridge, CLARIS Pro Smart Plus Filter Cartridge, Filter Cartridge, Jura, Smart Plus Filter Cartridge, X10c A, X10c CLARIS Pro Smart Plus Filter Cartridge

Leave a comment

Your email address will not be published. Required fields are marked*

Comment*

Name

Email

Website

Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.