



Justice 2831012WM Party Speaker Float Instruction Manual

[Home](#) » [Justice](#) » Justice 2831012WM Party Speaker Float Instruction Manual 

Justice 2831012WM Party Speaker Float



 
 
Contents

- 1 Installing & Uninstalling Speaker
 - 1.1 UNINSTALLING SPEAKER
 - 1.2 INSTALLING SPEAKER
- 2 Controls
 - 2.1 FUNCTIONS
- 3 Getting Started
 - 3.1 HOW TO USE:
- 4 Warnings
 - 4.1 READ CAREFULLY & KEEP THIS MANUAL
 - 4.2 IP67 WATERPROOF RATING
 - 4.3 PRODUCT SPECIFICATIONS
- 5 Warnings Compliance Information
 - 5.1 FCC Information
 - 5.2 Radiation Exposure Information
 - 5.3 WARNING Li-ion Battery Inside
 - 5.4 Rating Label Definitions
- 6 Documents / Resources
- 7 Related Posts

Installing & Uninstalling Speaker



UNINSTALLING SPEAKER

To remove, (1) rotate speaker counterclockwise and (2) pull out of tube float speaker mount.

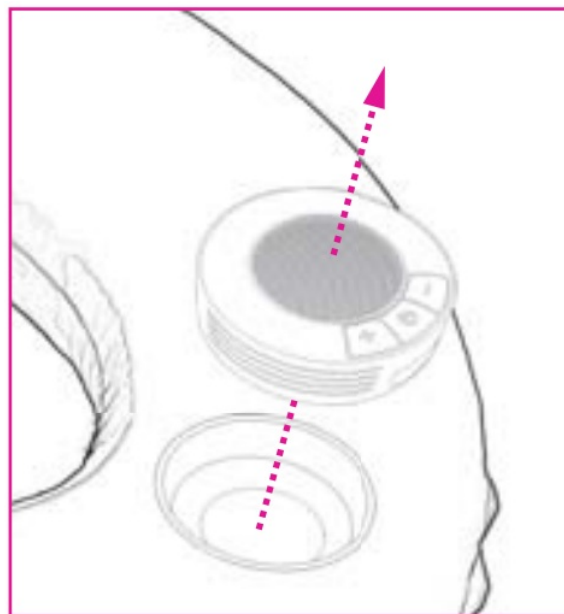
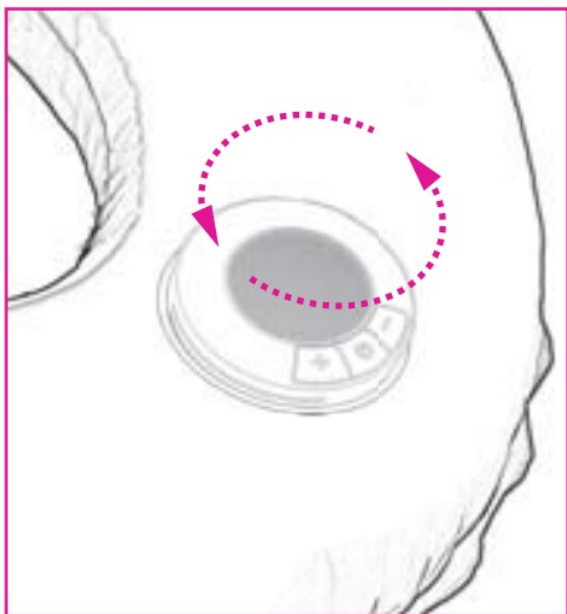


INSTALLING SPEAKER

    To install, (1) insert speaker onto speaker mount and (2) rotate clockwise to lock in place.

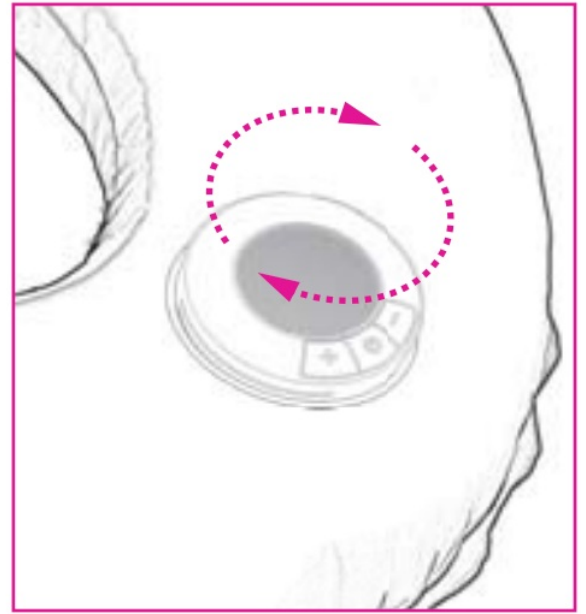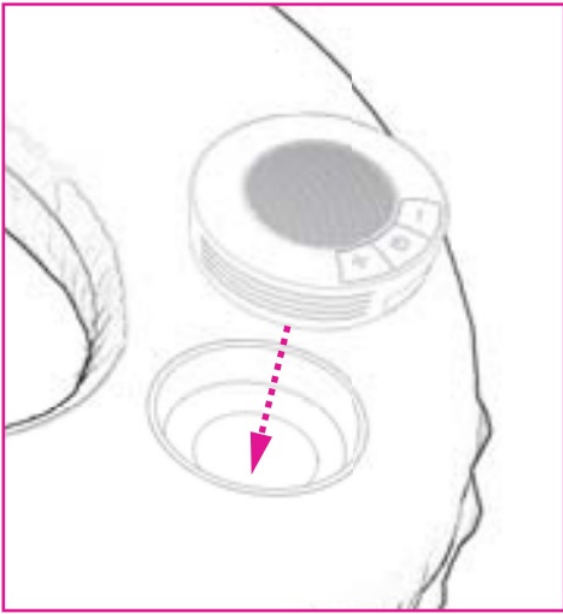

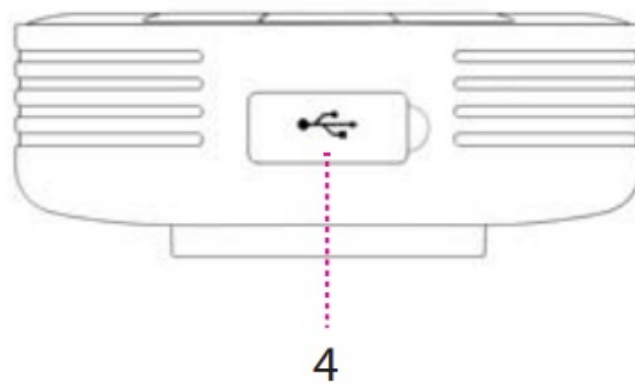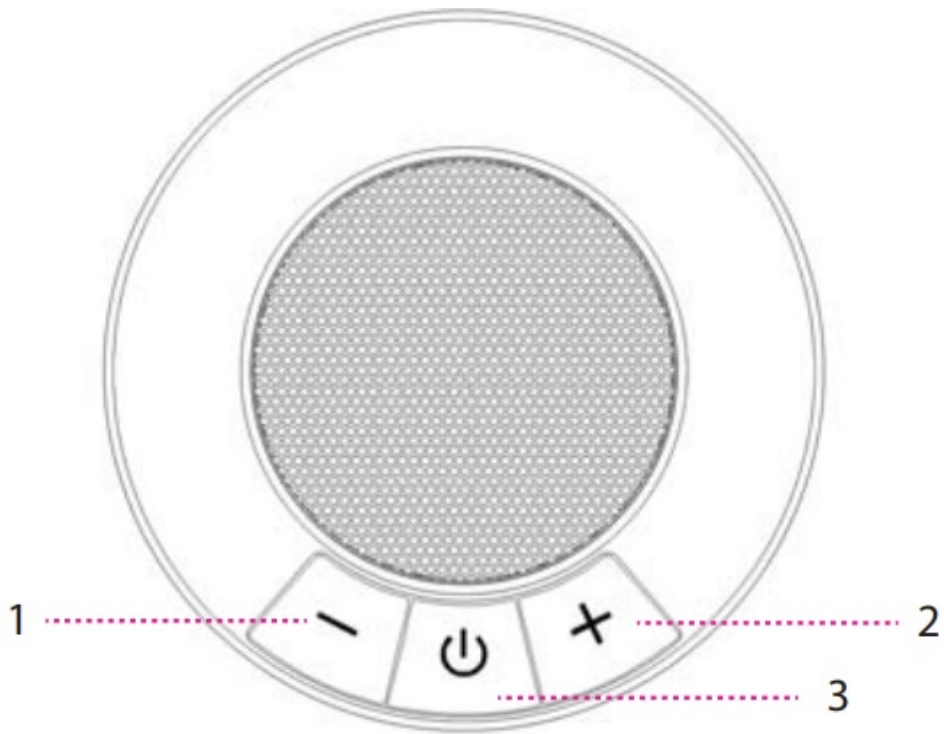

Controls



2. Power / Pause
3. Volume + / Next
4. Charging Port Cover

FUNCTIONS

- Click the  or  button to skip to the previous or next track
- Press and hold the or button to adjust the volume
- Click the button to pause/play or to answer incoming calls. Press and hold to power off.


Getting Started

HOW TO USE:

Charge product before use:

1. Open charging port cover.
2. Plug the USB charging cable into the charging port on the speaker.
3. Plug the other end into a USB power port, such as the power port on a computer, or into a 5V USB wall adapter (not included).
4. The LED indicator will turn RED while charging.
5. Make sure charging port cover is fully sealed before using product.

Using the Bluetooth® Speaker:

1. To power on, hold  until the blue light flashes.
2. Make sure Bluetooth® is enabled on your device. 3
3. On your device, select the pairing name “JUSTICE”.

Using the LED Lights:


Press  and  at the same time to switch between RGB modes.

1. Music Sync Mode: When playing audio, the LED light will sync with your music.
2. Color Changing Mode: The LED light will revolve between 6 colors.
3. Light Off Mode: LED light is deactivated.

TWS: Pairing 2 Speakers:

You can create a True Wireless (TWS) pairing with 2 Justice speakers.

1. Place 2 Justice speakers near each other and power both on at the same time.
2. The speakers will pair automatically.
3. Follow the Bluetooth® pairing instructions to connect your device to the speaker pair.

Note: Press the  button 3 times to disconnect one speaker from the other. If you have previously paired your device to one speaker, you may need turn Bluetooth® off while you pair with a second speaker.

Warnings

READ CAREFULLY & KEEP THIS MANUAL



WARNINGS

- ALWAYS ENSURE THAT CHARGING PORT COVER IS FULLY SEALED BEFORE USING PRODUCT IN WATER. FAILURE TO SEAL THE CHARGING PORT WILL PERMANENTLY DAMAGE DEVICE.
- Do not drop, apply excessive force to the controls, or put heavy objects on top of the speaker
- Do not attempt to repair, disassemble, or modify the product
- If the speaker is not in use for long periods, store in a cool, dry place, free from extreme temperatures, humidity and dust
- Keep speaker away from heat sources

IP67 WATERPROOF RATING

This product is designed and tested to withstand submersion in water for up to 1 meter deep (3ft. 3") for up to 30 minutes.

PRODUCT SPECIFICATIONS

Speaker	4 ohm 3W
Playing Time	2-3 hours with light ring 4-5 hours without light ring
Wireless Range	8 meters
Battery	800 mAh li polymer
Charging Time	3-4 hours
Waterproof Level	IP67

Warnings Compliance Information

FCC Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARNING Li-ion Battery Inside

This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).




Rating Label Definitions

	Direct current symbol.
	This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.
	This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.
	This symbol signifies that this is a wireless device powered by Bluetooth® technology
	This symbol represents FCC Declaration of Conformity and compliance.

Justice trademarks, names and logos are trademarks of JUSTICE BRAND HOLDINGS LLC. ©2023. All rights reserved.


Manufactured, marketed and distributed under license by Conquest Sport Group, LLC.

Conquest Sport Group LLC, 5601 1st Ave. Brooklyn NY, 11220.
For more information please email: support@conquestsportusa.com or call 1-877 768-8483

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Conquest Sport Group is under license, a subsidiary of Southern Telecom Inc. Other trademarks and trade names are those of their respective owners.



Documents / Resources

	<p>Justice 2831012WM Party Speaker Float [pdf] Instruction Manual AU057, 2ADK3AU057, 2831012WM Party Speaker Float, 2831012WM, Party Speaker Float</p>
---	--

[Manuals+](#)