

 
 


JVC KD-R326 CD Receiver Instructions


[Home](#) » [JVC](#) » JVC KD-R326 CD Receiver Instructions 

JVC

KD-R326/KD-R325
CD RECEIVER

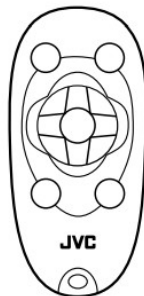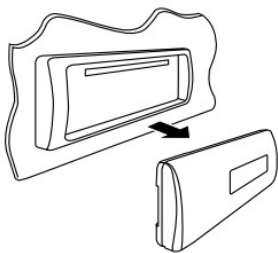

WMA MP3

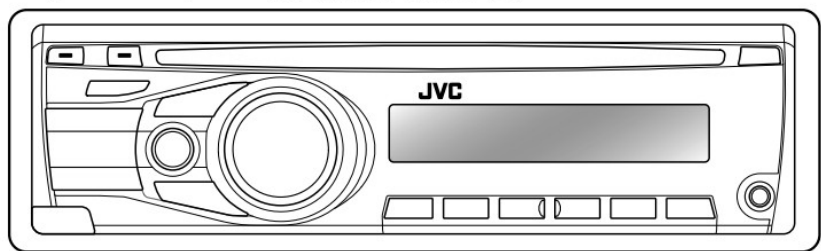 

For canceling the display demonstration, see page 4.
For installation and connections, refer to the separate manual.

Contents

- 1 INSTRUCTIONS
- 2 Canceling the display demonstration
- 3 Setting the clock
- 4 Preparing the remote controller
- 5 About discs
- 6 Basic operations
- 7 Listening to the radio
- 8 Listening to a disc
- 9 Connecting the other external components
- 10 Documents / Resources
 - 10.1 References

INSTRUCTIONS

Thank you for purchasing a JVC product.

Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.

IMPORTANT FOR LASER PRODUCTS

1. CLASS 1 LASER PRODUCT
2. CAUTION: Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
3. CAUTION: Visible and/or invisible class 1M laser radiation when open. Do not view directly with optical instruments.
4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED OUTSIDE THE UNIT.

CAUTION

VISIBLE AND/OR INVISIBLE CLASS 1M LASER RADIATION WHEN OPEN. DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS.

1EC60825-1:2001



[European Union only]

WARNING:

Stop the car before operating the unit.

Caution:

Adjust the volume so that you can hear sounds outside the car. Driving with the volume too high may cause an accident.

 
Caution on volume setting:

Discs produce very little noise compared with other sources. Lower the volume before playing a disc to avoid damaging the speakers by the sudden increase of the output level.

Caution for DualDisc playback:


The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.

How to attach/detach the control panel

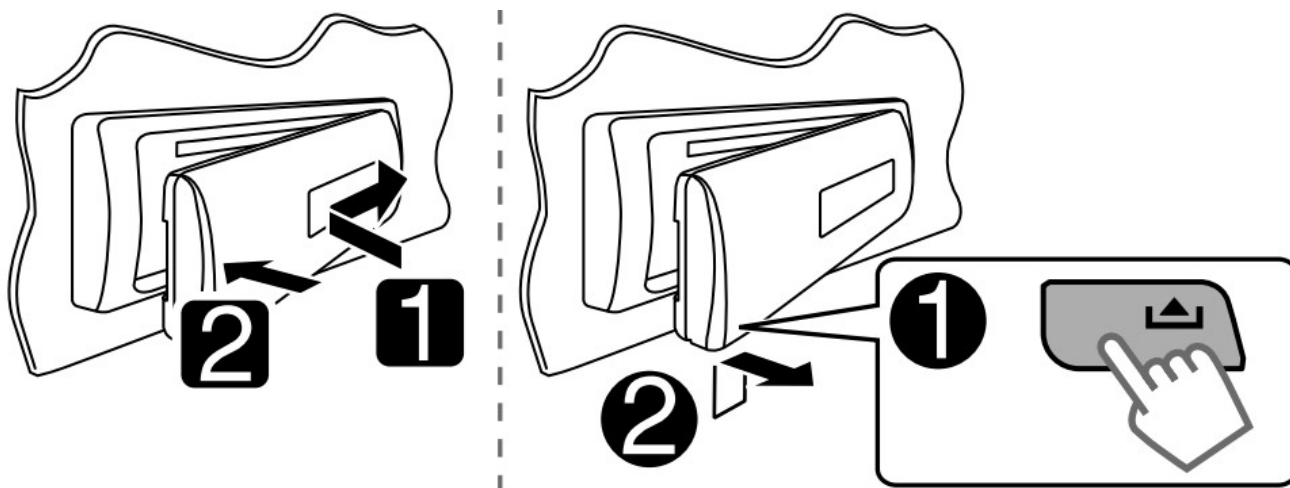

How to reset your unit

 Your preset adjustments will also be erased.

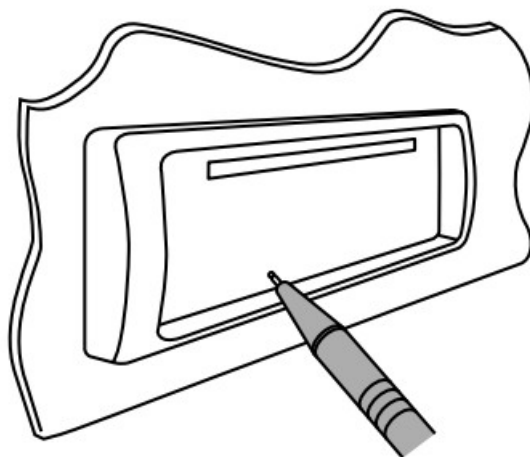

How to forcibly eject a disc



- Be careful not to drop the disc when it ejects.
- If this does not work, reset your unit.

Maintenance Cleaning the unit

Wipe off the dirt on the panel with a dry silicon or soft cloth. Failure to observe this precaution may result in damage to the monitor or unit.

Cleaning the connector

Wipe off dirt on the connector of the unit and panel. Use a cotton swab or cloth.

Canceling the display demonstration

Display demonstration will be activated automatically if no operation is done for about 20 seconds.

1. Turn on the power.



2.



 
3.



4. Select <DEMO OFF>.



5.

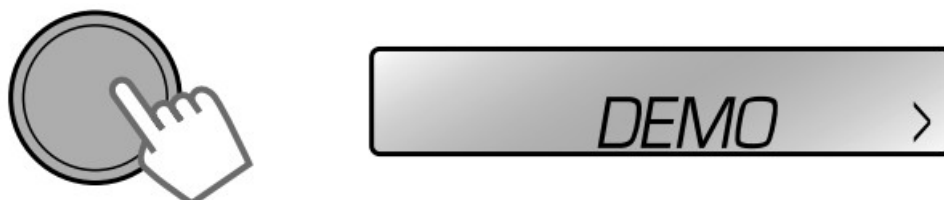

6. Finish the procedure.

 


Setting the clock

1. Turn on the power.



2.

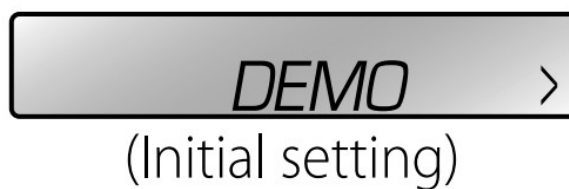


3. Select <CLOCK>.



4. Select <CLOCK SET>.



 
5. Adjust the hour.

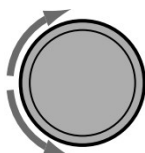


(Initial setting)



 6. Adjust the minute.




 7. Finish the procedure.

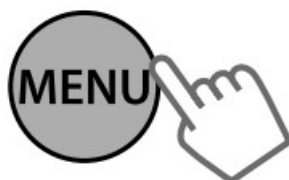


Preparing the remote controller

 When you use the remote controller for the first time, pull out the insulation sheet.

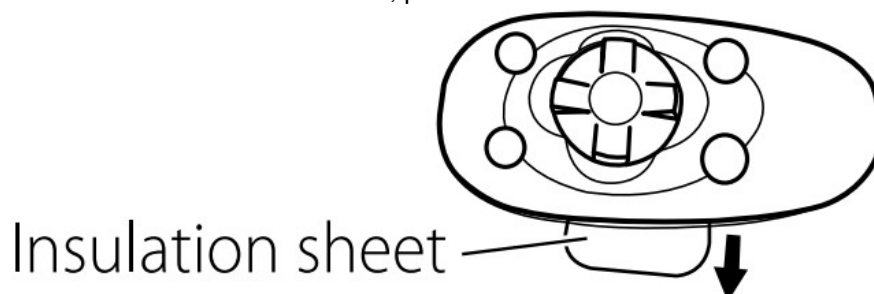

If the effectiveness of the remote controller decreases, replace the battery.

 Replacing the lithium coin battery

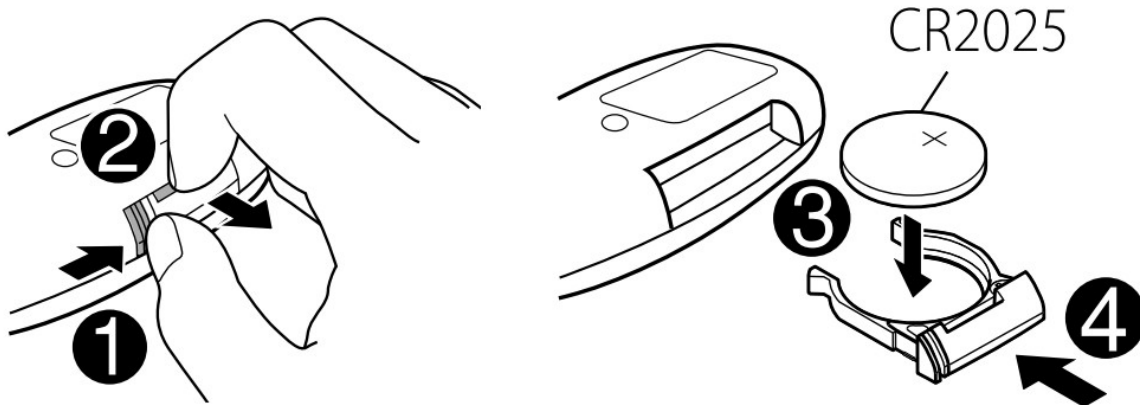

Caution:

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Battery shall not be exposed to excessive heat such as sunshine, fire, or the like.

Warning (to prevent accidents and damage):

- Do not install any battery other than CR2025 or its equivalent.
- Do not leave the remote controller in a place (such as dashboards) exposed to direct sunlight for a long time.
- Store the battery in a place where children cannot reach.
- Do not recharge, short, disassemble, heat the battery, or dispose of it in a fire.
- Do not leave the battery with other metallic materials.
- Do not poke the battery with tweezers or similar tools.
- Wrap the battery with tape and insulate when throwing away or saving it.

About discs

This unit can only play the CDs with:



 
Discs that cannot be used:

- Discs that are not round.
- Discs with coloring on the recording surface or discs that are dirty.
- You cannot play a Recordable/ReWritable disc that has not been finalized. (For the finalization process refer to your disc writing software, and your disc recorder instruction manual.)
- 3-inch CD cannot be used. Attempt to insert using an adapter can cause malfunction.


Handling discs:

- Do not touch the recording surface of the disc.
- Do not stick tape etc. on the disc, or use a disc with tape stuck on it.
- Do not use any accessories for the disc.
- Clean from the center of the disc and move outward.
- Clean the disc with a dry silicon or soft cloth. Do not use any solvents.
- When removing discs from this unit, pull them out horizontally.
- Remove the rims from the center hole and disc edge before inserting a disc.

Basic operations

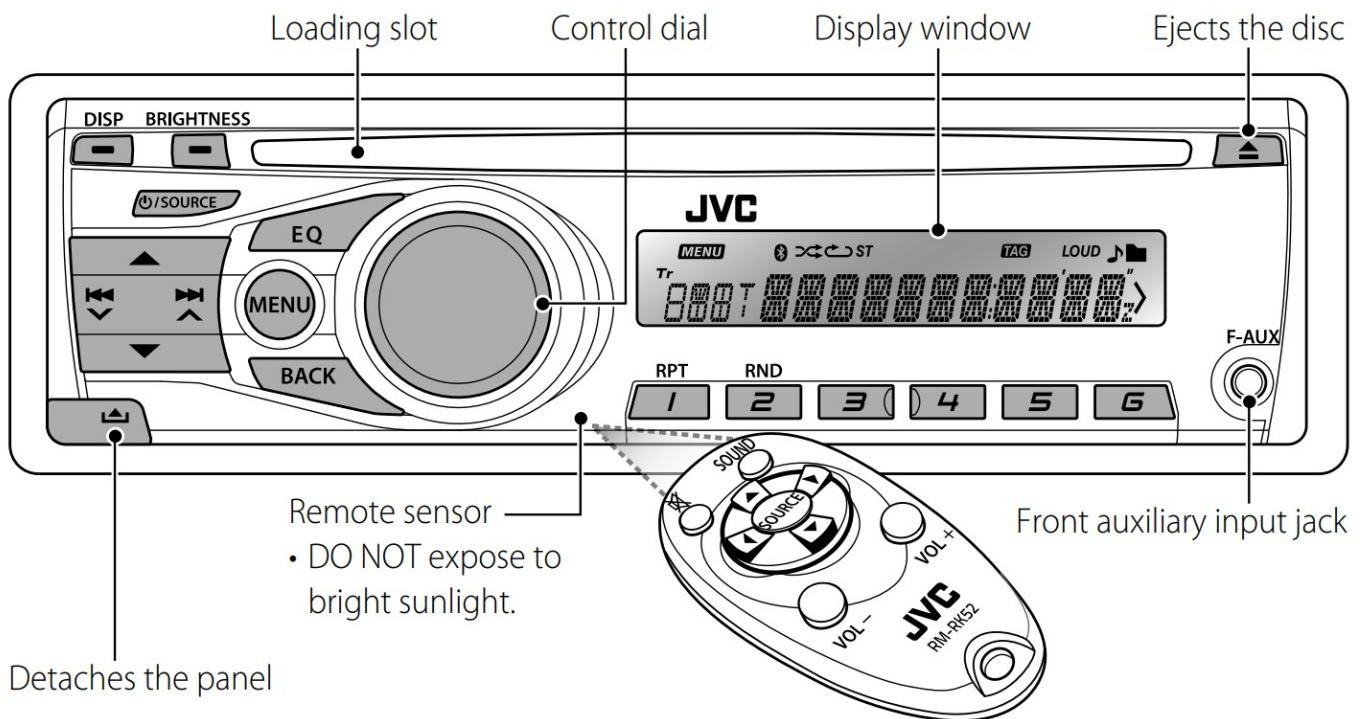

When you press or hold the following button(s)...

Main unit	Remote controller	General operation
⏻/SOURCE	—	<ul style="list-style-type: none"> •Turns on. •Turns off [Hold].
	SOURCE	Selects the sources (FM, CD, F-AUX, BT AUDIO or R-AUX or BT PHONE, AM). •"CD" is selectable only when a disc is loaded.
Control dial (turn)	VOL – / +	•Adjusts the volume level.
		•Selects items.
Control dial (press)		Mutes the sound during playback. If the source is "CD," playback pauses. •Press the button again to cancel muting or resume playback.
	—	Confirms selection.
EQ	SOUND	Selects the sound mode. •Hold the EQ button on the main unit to enter tone level adjustment directly . (page 10)
Number buttons (1 — 6)	—	•Selects preset stations.
	—	•Stores the current station into the selected number button [Hold]. •Press number button 1 (RPT) or 2 (RND) to enter REPEAT/ RANDOM setting directly. (page 8)
BRIGHTNESS	—	Enters <BRIGHTNESS> menu directly. (page 11)
BACK	—	<ul style="list-style-type: none"> •Returns to the previous menu. •Exit from the menu [Hold].
DISP	—	<ul style="list-style-type: none"> •Changes the display information. •Scrolls the display information [Hold].



Listening to the radio



- Auto search [Press].
- Manual search [Hold]. "M" flashes, then press the button repeatedly.

"ST" lights up when receiving an FM stereo broadcast with sufficient signal strength.

Improving the FM reception

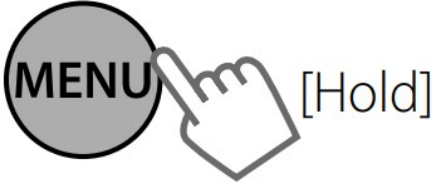
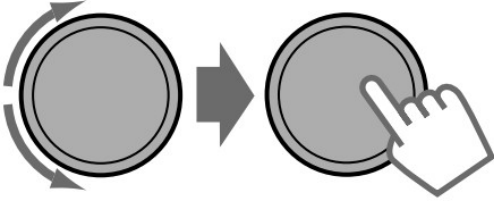
1	
2	

⇨<TUNER> ⇨<MONO> ⇨ <MONO ON> Reception improves, but stereo effect will be lost.

To restore the stereo effect, repeat the same procedure to select <MONO OFF>.

**Automatic presetting (FM)—
SSM (Strong-station Sequential Memory)**

You can preset up to 18 stations for FM.
While listening to a station...

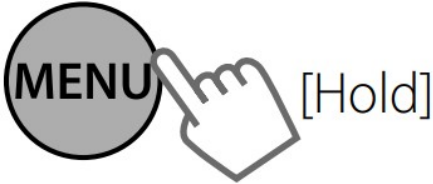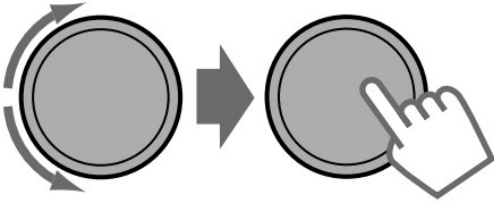

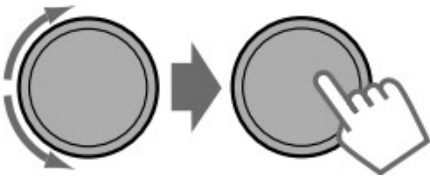
1	
2	

⇨<TUNER>⇨<SSM> ⇨<SSM 01 – 06 / 07 – 12 / 13 – 18> “SSM” flashes and local stations with the strongest signal are searched and stored automatically.

To preset another 6 stations, repeat the above procedure by selecting one of the other 6 SSM setting ranges.
Changing the display information



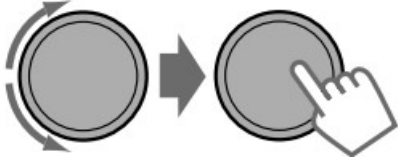


Manual presetting (FM/AM)
You can preset up to 18 stations for FM and 6 stations for AM.

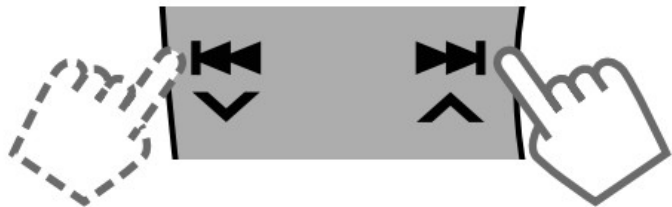1	 <p>⇒ Tune in to a station you want to preset.</p>
2	 [Hold] <p>“PRESET MODE” flashes.</p>
3	 <p>⇒ Selects preset number. Preset number flashes and “MEMORY” appears.</p>

- Pressing and holding the number buttons (1 – 6) can also store the current station to the selected number buttons (1 – 6).

Selecting a preset station

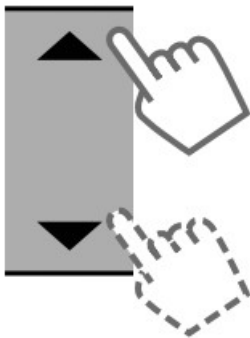	1.
	 


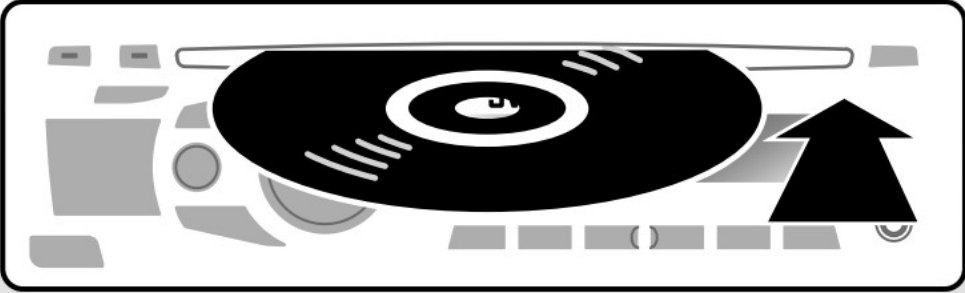
- Pressing the number buttons (1 – 6) can also select the preset stations (1 – 6).

Using the remote controller

▲/▼ : Changes the preset stations.


◀/▶ : Searches for stations.

Listening to a disc

1	
2	 Playback starts automatically.


All tracks will be played repeatedly until you change the source or eject the disc.

 Stopping playback and ejecting the disc




If the ejected disc is not removed within 15 seconds, it is automatically inserted into the loading slot.

 Selecting a track/folder




Selects folder of the MP3/WM

 

[Press] Selects track. [Hold] Fast-forwards or reverses the track.

Using the remote controller
▲/▼ : Selects folder of the MP3/WMA.
◀/▶ : [Press] Selects track.
[Hold] Fast-forwards or reverses the track.

 
Changing the display information



Disc title/Album name/performer (folder name)* = Track title (file name)* = Current track number with the elapsed playing time =Current track number with the clock time = (back to the beginning)

 * "NO NAME" appears for conventional CDs or if not recorded.


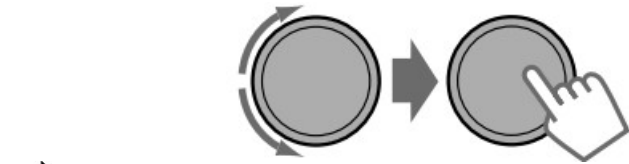
Selecting a track/folder from the list

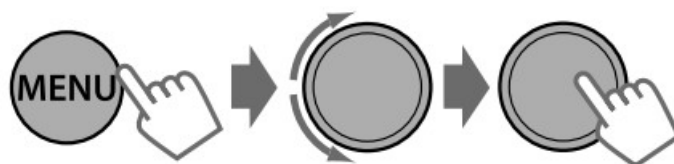

- If the MP3/WMA disc contains many tracks, you can fast search (± 10 , ± 100) through the disc by turning the control dial quickly.
- To return to the previous menu, press BACK.

Selecting the playback modes

You can use only one of the following playback modes at a time.

1	 [Hold] <ul style="list-style-type: none">• Pressing number button 1 (RPT) or 2 (RND) can enter REPEAT/RANDOM setting directly. Then, perform step 3.
2	 ⇒ "REPEAT" ↔ "RANDOM"
3	

REPEAT

TRACK RPT: Repeats current track

FOLDER RPT : Repeats current folder

RANDOM

FOLDER RND : Randomly plays all tracks of current folder, then tracks of next folders

 
ALL RND : Randomly plays all tracks

To cancel repeat play or random play, select "RPT OFF" or "RND OFF."

Connecting the other external components

You can connect an external component to the auxiliary input jack on the control panel (F-AUX) and/or on the rear side of the unit (R-AUX).

Summary of using the external components through the auxiliary input jacks:



⏻ / SOURCE



 
MENU




[Hold]




⏻ / SOURCE

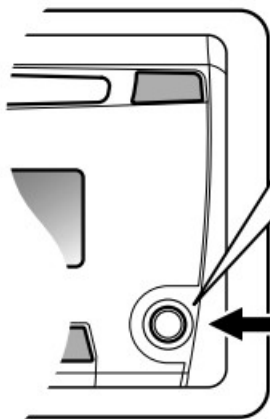

 3.5 mm stereo mini plug (not supplied)

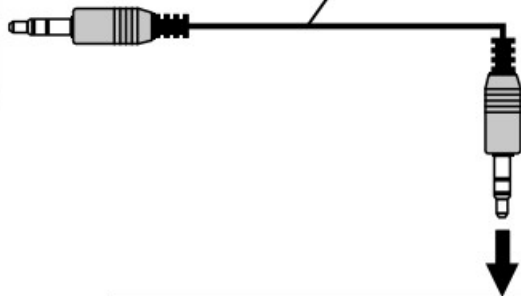

Portable audio player,
etc.

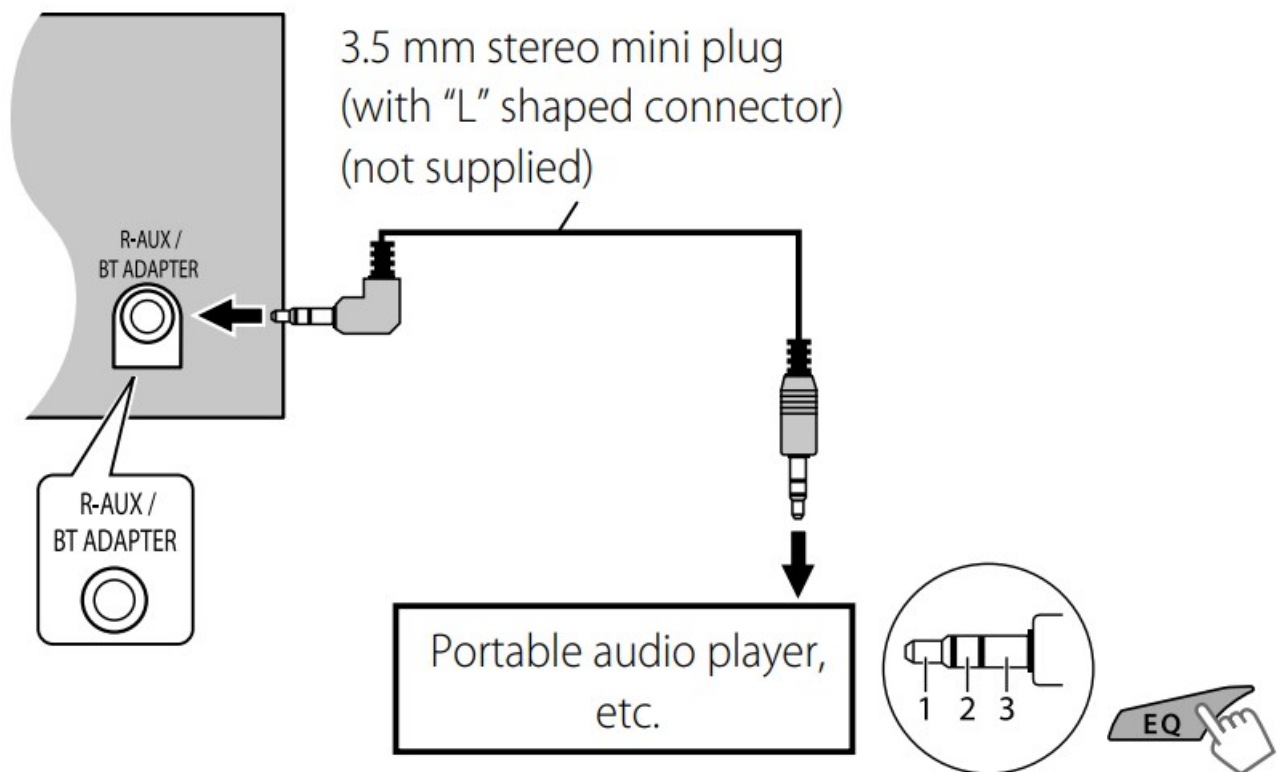 


Adjusting the microphone volume

Volume level: High/ Normal (initial)/ Low

KS-BTA100

 Microphone

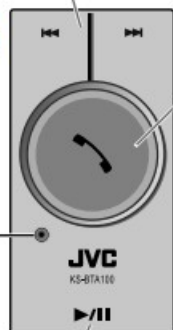

• Receiving a call

When a call comes in...

• Making a call

Making a call to the last connected number from your phone.

• Switching between handsfree and phone

While talking...



• Ends/rejects call

 
• Voice dialing

[Hold]
(< 5 seconds)

Voice dialing is available only when the connected mobile phone has the voice recognition system. To use this, speak the name you want to call clearly.

Using the Bluetooth audio device

1



(CD receiver)

⇒ "BT AUDIO"

2



If playback does not start, operate the Bluetooth audio player to start playback.



[Press] Selects track.

[Hold] Fast-forwards or reverses the track.



Do the required electrical connections. /

Install the unit at an angle of less than 30°.

 
 
 
Bend the appropriate tabs to hold the sleeve firmly in place. /

Flat head screws (M5 × 8 mm)

Pocket


Bracket

* Not supplied for this unit.

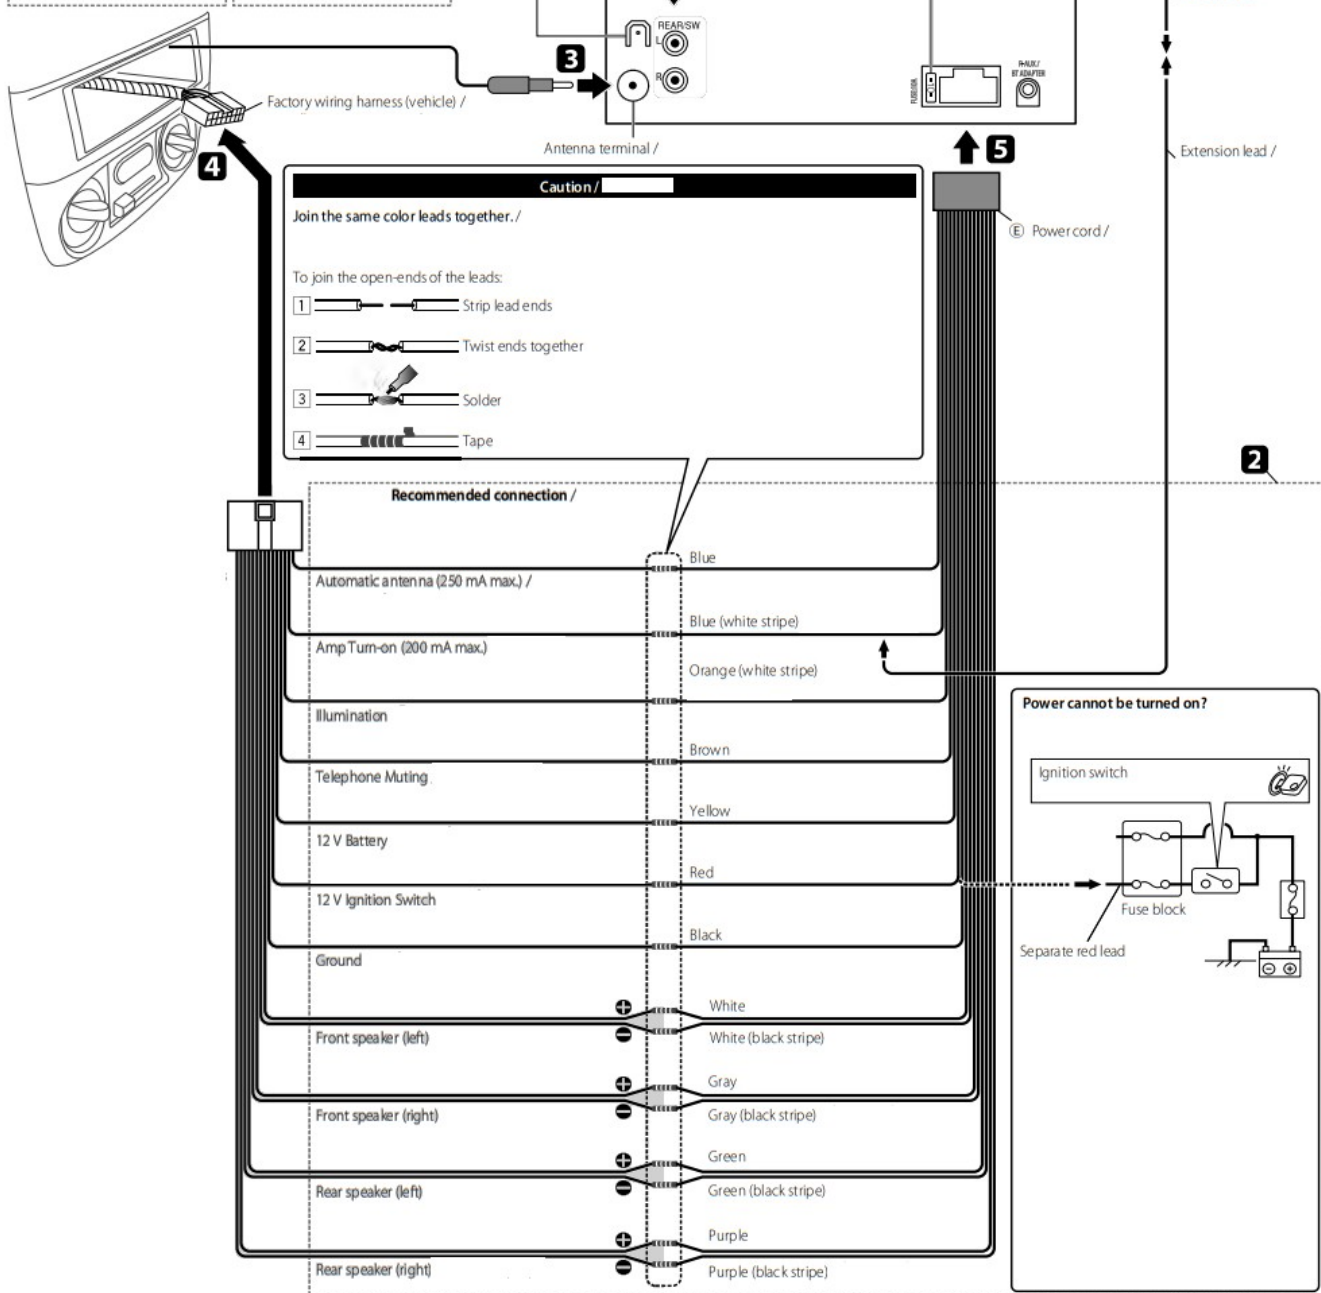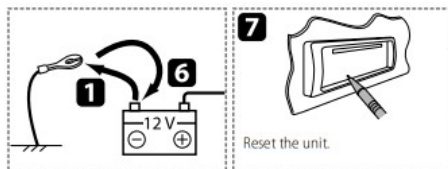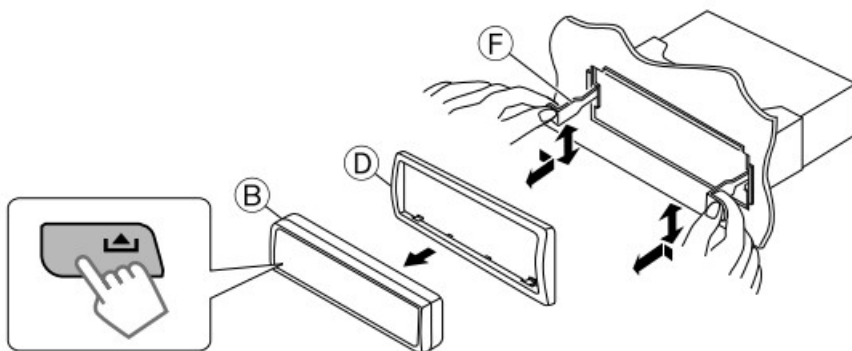



 Make the <SRC SELECT> setting accordingly, see pages 9, 12, and 14 of the INSTRUCTIONS.

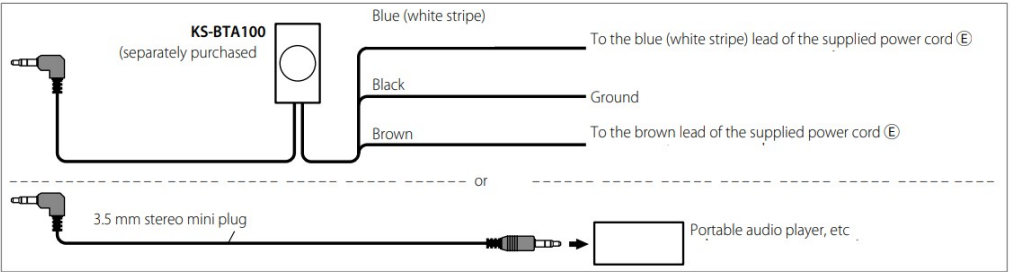

Documents / Resources



[JVC KD-R326 CD Receiver](#) [pdf] Instructions

KD-R326, KD-R325, KD-R326 CD Receiver, KD-R326, CD Receiver, Receiver

References

- [tone.TEL](#)
- [BKManuals - A simple library of user manuals for your products](#)
- [User Manual](#)