



JVC RC-E561B-DAB Portable CD Player with CASSETTE-MP3-USB-DAB Plus Bluetooth Instruction Manual

[Home](#) » [JVC](#) » JVC RC-E561B-DAB Portable CD Player with CASSETTE-MP3-USB-DAB Plus Bluetooth Instruction Manual 

Contents

- [1 JVC RC-E561B-DAB Portable CD Player with CASSETTE-MP3-USB-DAB Plus Bluetooth](#)
- [2 INTRODUCTION](#)
- [3 NAME OF CONTROLS](#)
- [4 REMOTE CONTROL](#)
- [5 REMOTE CONTROL OPERATION](#)
- [6 BASIC FUNCTION](#)
- [7 FM OPERATION](#)
- [8 DAB RADIO OPERATION](#)
- [9 CASSETTE OPERATION](#)
- [10 CD/MP3 OPERATION](#)
- [11 USB OPERATION](#)
- [12 BLUETOOTH OPERATION](#)
- [13 AUX IN OPERATION](#)
- [14 SPECIFICATIONS](#)
- [15 Documents / Resources](#)
 - [15.1 References](#)
- [16 Related Posts](#)

JVC

JVC RC-E561B-DAB Portable CD Player with CASSETTE-MP3-USB-DAB Plus Bluetooth



INTRODUCTION

- Thank you for buying our product.
- Please read through these operating instructions, so you will know how to operate your equipment properly.
After you finished reading the instructions manual, put it away in a safe place for future reference.

WARNING

 
To prevent fire or shock hazard, do not expose this appliance to rain or moisture. To avoid electrical shock, do not open the cabinet; refer servicing to qualified personnel only.

CAUTION

Use of controls or adjustment or performance of procedures other than those specified herein may result in hazardous radiation exposure.

DANGER

Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

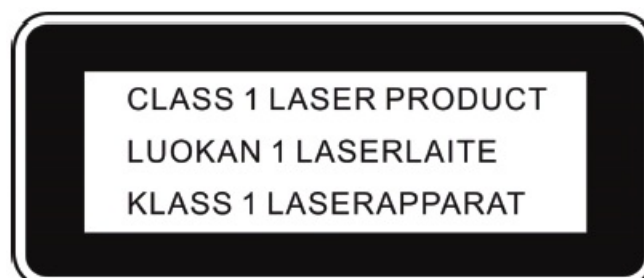

This Compact Disc player is classified as a Class 1 LASER PRODUCT. THE CLASS 1 LASER PRODUCT label is located on the rear exterior.

 
NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications that could void the user's authority to operate the equipment.



- Avoid installing the unit in locations described below:
 - Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, on top of other stereo equipment that radiate too much heat.
 - Places lacking ventilation or dusty places.
 - Places are subject to constant vibration.
 - Humid or moist places.
- Operate turning controls and switches as instructed in the manual.
- Before turning on the power for the first time, make sure that the power cord is properly installed.




WARNING: Remove batteries if exhausted or if they will not be used again for a long period. The incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst, therefore:

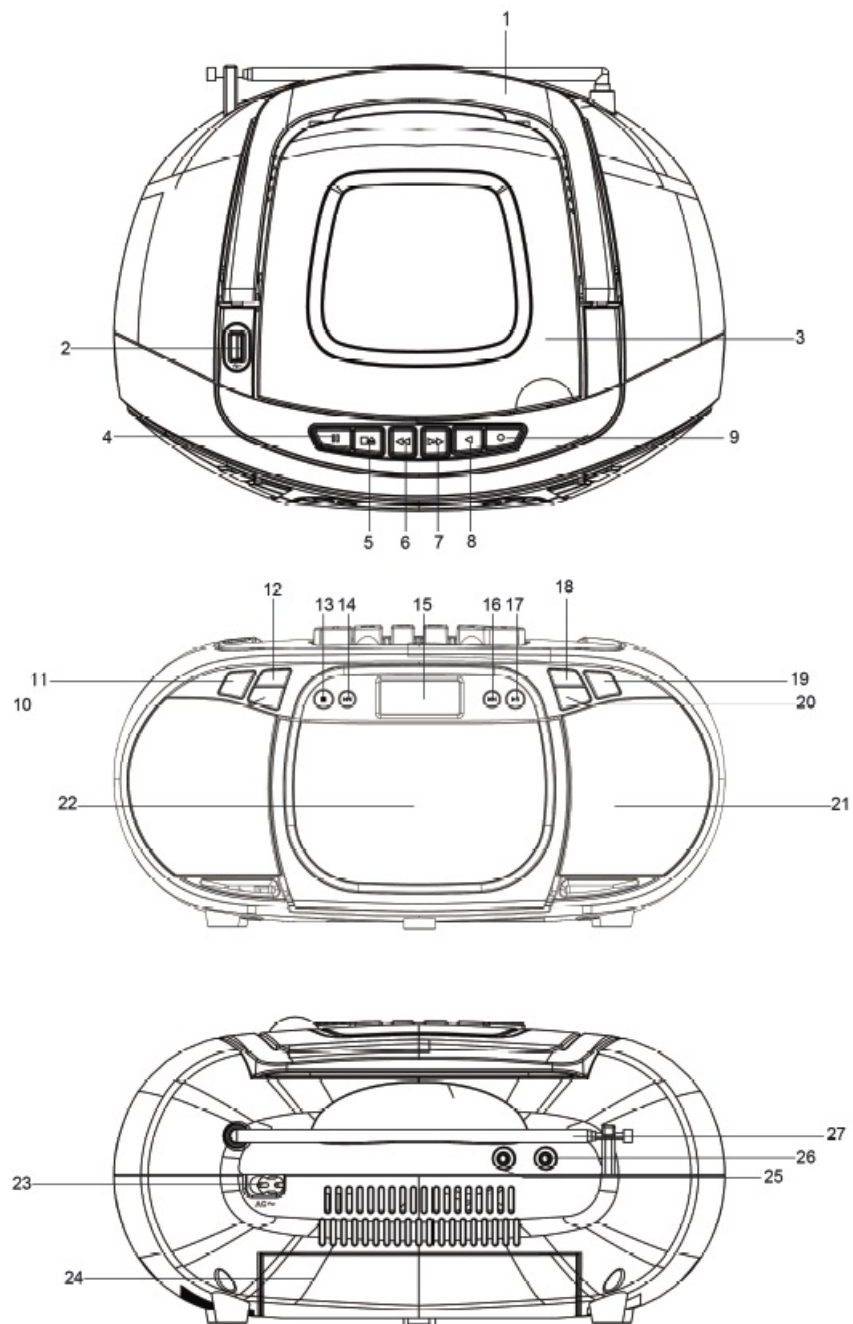- Do not mix battery types, e.g. alkaline with zinc carbonate.
 - When inserting new batteries, replace all batteries at the same time.
1. Do not ingest the battery, Chemical burn hazard (the remote control supplied with).
 2. This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
 3. Keep new and used batteries away from children.
 4. If the battery compartment does not close securely, stop using the product and keep it away from children.
 5. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

NAME OF CONTROLS



1. FOLDING HANDLE
2. USB PORT
3. CD COMPARTMENT
4. CASSETTE PAUSE KEY
5. CASSETTE STOP/EJECT KEY
6. CASSETTE FAST FORWARD KEY
7. CASSETTE REWIND KEY
8. CASSETTE PLAY KEY
9. CASSETTE RECORD KEY
10. 10/FOLD./MEM.- BUTTON
11. PROG./M./P-MODE BUTTON
12. 10/FOLD./MEM.+ BUTTON
13.  /MENU/INFO BUTTON
14.  /TUN- BUTTON

15. LCD DISPLAY
16. /TUN+ BUTTON
17.  /SELECT/SCAN/PAIR BUTTON
18. VOL+ BUTTON
19.  /FUNC. BUTTON
20. VOL- BUTTON
21. SPEAKERS
22. CASSETTE COMPARTMENT
23. AC SOCKET
24. BATTERY COMPARTMENT
25. AUX IN JACK
26. HEADPHONE JACK
27. FM ANTENNA

POWER SOURCE

This unit is designed to be operated on AC/DC.

AC OPERATION

Plug the smaller end of AC power cord into AC jack on unit and the other bigger end into household AC wall outlet. The unit will be automatically disconnected.

 
DC OPERATION





Open the BATTERY COMPARTMENT DOOR. Install 6 pcs UM-1/D size batteries (not included) into compartment. Please follow correct polarities as indicated.

CAUTION

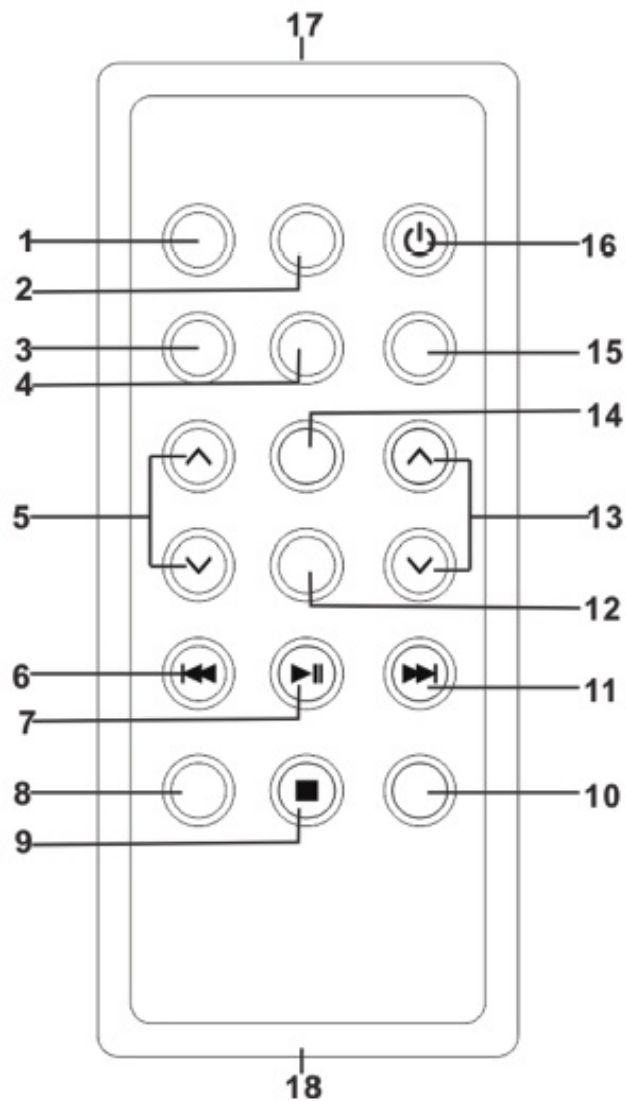- Remove batteries if they are exhausted or long time use.
- Batteries contain chemical substances, so they should be disposed of properly.

REMOTE CONTROL



1. FUNC. KEY
2. MUTE KEY
3. MEMORY KEY
4. SCAN KEY
5. FOLD/10/M. UP/DOWN KEY
6. CD B-SKIP  /TUN- KEY
7. CD  /PAIR KEY
8. INFO KEY
9.  /MENU KEY
10. SELECT KEY
11. CD F-SKIP /TUN+ KEY
12. ID3 KEY
13. VOLUME UP/DOWN KEY
14. P-MODE KEY
15. MO/ST KEY
16.  STANDBY KEY
17. REMOTE SENSOR

18. BATTERY COMPARTMENT

REMOTE CONTROL OPERATION

To operate the unit with the remote control, point the remote handset at the remote sensor on the front panel and press the appropriate button on the remote handset.

The remote works best within a range of 6 ~ 7 meters from the front panel and on an angle of 30 degrees. Bright sunlight or room light conditions can interfere with the remote control. If the remote operation is unsatisfactory or stops working entirely, first try replacing the remote batteries, then try reducing the room lighting conditions.



LITHIUM BATTERY INSTALLATION OF REMOTE CONTROL

The remote control includes one CR2025(3V) lithium battery.


To replace the battery, gently push the clasp to the right direction accordingly to the instruction and then pull out the battery compartment. Take the drained battery out and install a new lithium battery (CR-2025) in the compartment with the positive polarity unwarded. then push the compartment back to its position with a “click” sound indicating installation.

BASIC FUNCTION

SWITCHING ON THE UNIT

After connecting the power, press the  button to turn on the unit, then press the  button again to choose FM / TAPE / CD / USB / BT or DAB mode.

NOTE: In CD / USB / AUX mode, when the unit is not providing the main function for 15 minutes, the unit will automatically switch into standby mode. In the tape mode, only the tape stops for 15 minutes, the unit will

automatically switch into standby mode. To turn on the unit again, press  button or replug the unit.

ESD hints – The product maybe reset or not reset to operation of control due to electrostatic discharge, just switch off and reconnect again.

TO ADJUST VOLUME

Press VOL.+/- button to increase or decrease volume.



HEADPHONE JACK

For private listening, connect a 3,5 mm headphone (not included) to the HEADPHONE jack. The SPEAKER will be automatically disabled.

CAUTION: LISTENING AT A HIGH VOLUME OVER A LONG PERIOD IS NOT GOOD FOR YOUR EARS.


FM OPERATION

TUNING IN RADIO STATIONS

1. Press the /FUNC. button to choose radio mode: FM mode.
2. Tune to the desired station by pressing /TUN+ or /TUN- button, the station frequency will show on the display.
3. Press the VOL.+/- button to adjust the volume to a comfortable level.
4. To optimize reception when listening to stations on the FM band, extend the telescopic antenna to its full






length. When the stereo signal is received, the “ST” show on the display.

RADIO AUTO SCAN (SEARCH)


Press and hold the  /SELECT/SCAN/PAIR button on unit, the unit will conduct auto scan and program until having found a strong signal. The unit will start to broadcast from the P01 after searching finished, then press the 10/FOLD./MEM+ or 10/FOLD./MEM- to choose the desired stored station.

RADIO STATION MEMORY OPERATION

You may pre-store 30 (FM) radio stations in memory for your preference.

1. Press the the  /TUN+ or  /TUN- button to select the first desired station. Then press and hold the PROG./M/P-MODE button on unit, “PRESET STORE” will show on the display.
2. Press the  /TUN+ or  /TUN- to choose the desired sequence you want to store, then press the  /SELECT/SCAN/PAIR button on unit to confirm.
3. Search another station, repeat steps (1) & (2) until all desired stations stored. Up to 30 stations can be programmed.






DAB RADIO OPERATION

DAB radio mode receives DAB/DAB+ digital radio and displays information about the station and programmed/track as broadcast. Press the  /FUNC. button until display reads “Welcome to DAB”.




SYSTEM

The system setting allows you to select display languages, reset to factory settings and view the software version.




LANGUAGE

To select different languages for display messages. Press and hold the  /MENU/INFO button to enter menu selection, select the “System” option and press the  /SELECT/SCAN/PAIR button to enter, select “Language” then press the  /TUN+ or  /TUN- button to choose the desired language to be displayed, then press the  /SELECT/SCAN/PAIR button to confirm.








FACTORY RESET

Factory reset can help to clear all user defined settings, replacing them with the original default values, including the DAB station list and preset stations. Press and hold the  /MENU/INFO button to enter menu selection, select the “System” option and press the  /SELECT/SCAN/PAIR button to enter, select “Factory reset” then press the /TUN+ or /TUN- button to choose YES or NO option, then press the  /SELECT/SCAN/PAIR button to confirm.




SOFTWARE VERSION

This displays the current software version. Press and hold the  /MENU/INFO button to enter menu selection, select the “System” option and press the  /SELECT/SCAN/PAIR button to enter, select “SW version” then press the  /SELECT/SCAN/PAIR button to view the current software version.





SCANNING FOR STATIONS

1. To do a full scan, press and hold the  /MENU/INFO button to enter menu selection, select the “Full scan” option and press the /SELECT/SCAN/PAIR button on the unit to confirm. Once a full scan is complete, the radio returns to play the previously-selected station or first station on the station list.
2. To choose between the scanned station list, press the  /TUN+ or  /TUN- button to scroll through the list of stations and press the /SELECT/SCAN/PAIR button to confirm. The “Playing” screen will display the new station details.
3. To remove stations that are listed but unavailable, press and hold the  /MENU/INFO button to enter menu selection, select the “Prune” option and press the /SELECT/SCAN/PAIR button to enter, press the  /TUN+ or  /TUN- button to choose YES or NO option, then press the  /SELECT/SCAN/PAIR button to confirm. This removes all invalid stations, indicated in the station list with a “?” in front of the station name.


PRESET STATIONS

To store a station in a preset memory, tune to the station that you want to save as a preset, then press the PROG./M/P-MODE button on the unit until the display shows “Preset Store”. Use the  /TUN+ or  /TUN- button to choose a preset memory position (for example, “Preset 1”), then press the  /SELECT/SCAN/PAIR button to confirm. Repeat this operation to save up to 30 preset stations.


MANUAL TUNE


To do a manual tune, press and hold the  /MENU/INFO button to enter menu selection, select the “Manual tune” option and press the  /SELECT/SCAN/PAIR button to confirm. Use the  /TUN+ or  /TUN- button to tune to the desired stations.

NOW PLAYING INFORMATION

While a station is playing, the screen shows its name and DLS (Dynamic Label Segment) information broadcast by the station such as program name, track title and contact details. To view further information, press the  /MENU/INFO button each time to show next set of information, cycling through: DLS text, DL Plus information (this is only displayed if broadcast by the station), signal strength, program type, ensemble name, channel number/frequency, signal error rate and bit rate.

DYNAMIC RANGE COMPRESSION (DRC)

This function helps to reduce the difference between the loudest and quietest audio being broadcast. Effectively, this makes quite sounds comparatively louder and loud sounds comparatively quieter. There are 2 options in this setting, the options available are: DRC/off. To change the DRC setting, press and hold the  /MENU/INFO


button to enter menu selection, select the "DRC" option then use the  /SELECT/SCAN/PAIR button to choose a desired option.

CASSETTE OPERATION

UNDERSTANDING THE BUTTONS

- **PLAY** – Press to play cassettes.
- **REW** – From stop mode, press to rewind the tape toward the beginning.
- **F.FWD** – From stop mode, press to advance the tape toward the end.
- **STOP/EJ.** – Press to stop current tape activity or to open the cassette compartment door when no buttons are active.
- **PAUSE** – Press to interrupt tape play or record mode. Press the second time to resume tape play or tape record mode.


PLAYING A CASSETTE TAPE

1. Press the  /FUNC. button to Choose TAPE mode.
2. Press STOP/EJ. key to open the cassette compartment door.
3. Insert cassette tape into the compartment with the open edge facing up and the full reel on the right.
4. Close the door securely.
5. Press REW or F.FWD to move tape to the desired starting point.
6. Press PLAY key to begin playing the tape.
7. Adjust the volume to your desired listening level.

AUTOMATIC STOP FEATURE



When the cassette deck is operating in play or record mode and the end of the tape is reached, the unit automatically shuts itself off and returns all buttons to the off position.

RECORDING FROM THE RADIO

1. Load a blank tape into the tape compartment and close the door.
2. Press the  /FUNC. button to choose FM or DAB mode.
3. Tune to the required station by pressing the or button.
4. Press the RECORD key to begin recording. RECORD key and PLAY key go down simultaneously.
5. Press STOP/EJ. key to end recording.
6. To hear what you recorded, follow instructions in PLAYING A CASSETTE TAPE.

NOTE: PAUSE FOR A MOMENT – Using the PAUSE key on the cassette deck instead of the STOP/EJ. Key to momentarily interrupt recording gives you a much clear recording. Press the PAUSE key again to resume recording.

RECORDING FROM CD/USB

 
1. Insert a blank cassette tape into the tape compartment.
2. Press the  /FUNC. button to choose CD or USB mode.
3. Load a CD or insert a USB and select the desired track you want to record.
4. Press CD  /SELECT/SCAN/PAIR button to start playback. Press RECORD key to begin recording. RECORD key and PLAY key go down simultaneously.
5. Press PAUSE key to interrupt or edit recording. Press it again to resume recording.
6. Press STOP/EJ. key to end recording.
7. To hear what you recorded, follow instructions in PLAYING A CASSETTE TAPE.

TYPES OF CASSETTE

Use only good quality cassettes (IEC TYPE 1) for making recordings. May be used to replay other types of cassette but is unable to make proper recording on these more specialized tapes. The use of C120 cassettes is NOT recommended in this machine.

PROTECTING RECORDING

Normally, anything recorded on the tape is automatically erased when new recording is made. It is possible to protect your recording from accidental erasure by removing the tabs found on the rear of the cassette.

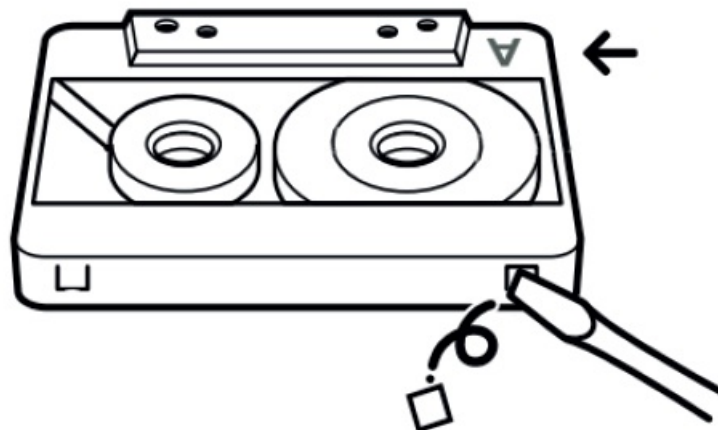

- ERASE TAB FOR SIDE "A"

When the cassettes is held with the recorded side upper-most and exposed tape facing the front, the protective tab will be found on the left rear of the cassette.

All pre-recorded cassette are protected in this way to prevent accidental erasure of the commercial recording. "Protected" cassette will prevent the record button from being operated. If at any time you attempt to record and find that this button will not depress, never force the mechanism or it may be damaged. Check that a cassette has been loaded and that tab has not been removed. Recording on a cassette from which the tabs have been removed can be done by covering the tab openings with a piece of adhesive tape.

CARE OF CASSETTE MECHANISM

Gently clean the tape head and pinch wheel/capstan assemblies after every 10 hours of using the unit. A range of cassette care products are available.



1. Pinch Roller
2. Capstan
3. Record/Playback head
4. Erase Head



The erase head and record/play head and the surface of the pinch roller are delicate and must not be touched with metal objects such as screwdrivers. You may find it easier to clean the assembly by pressing the PLAY button to bring head and pinch roller into view. Be sure to press the STOP/EJ. button after cleaning the mechanism. Damage to the pinch wheel can occur if the unit is left in PLAY mode with the power switch off. Under no circumstances should you attempt to lubricate any part of the machine..

CD/MP3 OPERATION

Discs for Playback

This system can playback all digital audio CD, MP3, finalized digital audio CD-Recordable (CD-R) discs, finalized digital audio CD-Rewritable (CD-RW) discs and CD-DA format digital audio CD/CD-R/CD-RW discs.




LOADING A DISC

1. Press the  /FUNC. button to choose CD mode.
2. Open the CD door. "OPEN" will be shown on the display.
3. Place an audio CD into the tray with the label side facing up.
4. Close the CD door. The total number of tracks will appear on the display after reading finished.
5. To remove the CD, press  /MENU/INFO button and open CD compartment lid, grasp the CD by its edges, and carefully take it out.

Note:



To ensure good system performance; wait until the disc tray completely reads the disc before proceeding. If no disc is loaded into the compartment, or the disc is placed upside down, the display will show "NO DISC".

PLAYING A DISC





1. After loading the disc, the unit starts playback automatically.
2. To interrupt playback, press the  /SELECT/SCAN/PAIR button. The "current playing time" indicator will flash on the display. To resume playback, press the  /SELECT/SCAN/PAIR button again.
3. To stop playback, press the  /MENU/INFO button, the total number of tracks appears on the display.

SELECTING A DESIRED TRACK/PASSAGE

To select a desired track



- Press the /TUN+ or /TUN- button repeatedly in stop mode or during play until the desired track appears on the display.
- Press the /SELECT/SCAN/PAIR button to start play.

To search for a particular passage during playback (track scanning at high speed)

- Press and hold the /TUN+ or /TUN- button to scan the current playing track at high speed until desired passage appears, and then release the button. Playback will start again from this point.
- To select a song whose track number exceeds 10 (for MP3 disc only)
- To select a song/track which number exceeds 10, press the 10/FOLD./MEM.+ or 10/FOLD./MEM.- button each time to skip forward/backward 10 tracks, then press the /TUN+ or /TUN- button to select desired track. For example: to select the 17th track, press 10/FOLD./MEM.+ button, and then the /TUN+ button six times immediately.
- To Select The Desired Folder (for MP3 disc only) (if the MP3 disc contains more than one folder)
- To skip to the desired folder during playback, press and hold the 10/FOLD./MEM.+ or 10/FOLD./MEM.- button for about 2 seconds to skip to next/previous folder.


PROGRAM TRACKS

Programming tracks of disc are possible when playback is stopped. Up to CD 20 tracks /MP3 99 tracks can be stored in the memory in any order.



1. In stop mode, press the PROG./M/P-MODE button, the "T-000" will flash and the "P01" indicator will be on.
2. Press the CD /TUN+ or /TUN- button to select the first desired track to be programmed.
3. Press the PROG./M/P-MODE button to enter. The display changes to show "P02".
4. Repeat steps 2 & 3 to store other desired tracks until all tracks are programmed.
5. Press the /SELECT/SCAN/PAIR button to start playback from the first programmed track.
6. Press the /MENU/INFO button to stop program playback.

To Erase the Memory (Program)

To clear the program, you have two options:

- Press the  /MENU/INFO button when the disc is stopped.
- Open the CD compartment lid, program will be erased.

NOTE: If there are several folders in the USB or MP3 disc, it is necessary to program folders first and then the tracks. Press the 10/FOLD./MEM.+ or 10/FOLD./MEM.- to select the first folder you want to program.


After that, press /TUN+ or /TUN- button to choose the first desired track to be programmed, press the PROG./M/P-MODE button to enter. The display changes to show "P02".

REPEAT


To Repeat a Single Track

1. Press the PROG./M/P-MODE button once in play mode, “REP-1” will show steady on the display. The current track will be played repeatedly until the /MENU/INFO button is pressed.
2. To cancel the Repeat function, press the PROG./M/P-MODE button until the “REP-1” disappear on the LCD display.

To repeat all the Tracks

1. Press PROG./M/P-MODE button in play mode till the “REP-ALL” shows steady on the display, all tracks on the disc will be played repeatedly until the  /MENU/INFO button is pressed.
2. To cancel Repeat function, press the PROG./M/P-MODE button until the “REP-ALL” disappear on the LCD display.

To repeat the current folder (for MP3 only)

1. Press the PROG./M/P-MODE button in play mode, till the “REP-ALBUM” shows steady on the display, the current folder will be played repeatedly until the  /MENU/INFO button is pressed.
2. To cancel the Repeat function, press the PROG./M/P-MODE button until the “REP-ALBUM” disappear on the LCD display.



RANDOM PLAY

Press the PROG./M/P-MODE button in play mode till the “RANDOM” shows steady on the display, the random play will start immediately until all tracks are played over and then stop. Press the PROG./M/P-MODE button once to cancel.

INTRO






Press the PROG./M/P-MODE button in play mode till the “INTRO” shows steadily on the display, the intro play will start and scan 10 seconds for every track. To cancel intro play, press the PROG./M/P-MODE button until “INTRO” disappear from the display.

USB OPERATION

1. Press the  /FUNC. button to choose USB mode.
2. Connect the USB to the USB INPUT. The LCD will show the total number of tracks and folders stored in the USB. After reading the USB, the unit will start playback automatically.
3. Press the  /MENU/INFO button on unit to stop playing. The display will show total number of tracks and folders.
4. Proceed repeat play (repeat 1- repeat folder – repeat all – random – intro) operation as the same described in above CD/MP3 OPERATION.

CAUTION: Do not use any USB extension cable for connecting the USB bar which may cause harmful interference.

BLUETOOTH OPERATION

1. Press the /FUNC. button to switch to BLUETOOTH function, the LCD will display flashing "UNCONNECT" at high speed.
2. Turn on the Bluetooth function on the device, scan the unit "JVC RC-E561B-DAB" and connect, then input the password 0000 if required, the "BT MODE CONNECT" will show steadily to indicate connection done. Press the /SELECT/SCAN/PAIR button on the unit or play key on the device to start playback.
3. If the unit can't connect the relative Bluetooth within 2 minutes, press and hold the /SELECT/SCAN/PAIR button on unit to reconnect.
4. Press the VOL.+/- buttons to select your desired level.
5. Press /TUN+ or /TUN- on the unit to choose the desired track.
6. To stop playback, press /SELECT/SCAN/PAIR button.

Note: The Bluetooth works best within 10 meters.

AUX IN OPERATION

This unit provides a 3,5 mm AUX IN jack, through this jack other audio sources can be connected to this unit and be amplified.

1. Connect the audio cable(cable not included) to the AUX IN jack and the other end connects to the AUDIO OUT jack of the external audio source. The unit will change to AUX mode automatically.
2. Adjust the volume of the main unit to your desired level.
3. Press PLAY of the external audio source (eg. MP3 player) to start playback.

COMPACT DISC MAINTENANCE

Always use a compact disc bearing the mark as shown.



Notes on handling discs

- Removing the disc from its storage case and loading it.
- Do not touch the reflective recorded surface.
- Do not stick paper or write anything on the surface.
- Do not bend the disc.

Storage

- Store the disc in its case.
- DO not expose discs to direct sunlight or high temperatures, high humidity or dusty places. Cleaning a disc

- Should the disc become soiled, wipe off dust, dirt and fingerprints with a soft cloth.
- The disc should be cleaned from the center to the edge.
- Never use benzene, thinners, record cleaner fluid or anti-static spray.
- Be sure to close the CD door, so the lens is not contaminated by dust.
- Do not touch the lens.

SPECIFICATIONS

GENERAL

- Power Requirement AC 100-240V ~ 60/50Hz
- DC 9V UM-1/D x 6 PCS
- Power consumption 14 Watts
- Standby Power consumption < 0,5 W
- Weight Approx.1,7 kg
- Dimensions Approx. 285 (W) x 213 (D) x 140 (H) mm
- Operation temperature +5°C – +35°C

RECEIVER SECTION

- FM Frequency Range 87,5 – 108 MHz
- DAB+ Frequency Range 174,928 – 239,200 MHz
- BLUETOOTH SECTION
- BT Frequency Range 2402 – 2480 MHz
- EIRP -3,43 dBm

COMPACT DISC SECTION

- **Optical Pickup 3** – Beam Laser
- **Frequency Response 100 Hz** – 16 kHz

CASSETTE SECTION

- Recording System 2 Tracks 2 Channel (Stereo)
- Bias System DC Bias
- **Frequency Response 125** – 6,3 kHz
- Wow and Flutter 0,35% WRMS (JIS)

AUDIO SECTION

- Power output 2 x 1,5 Watts RMS

ACCESSORIES

WARNING: DO NOT USE THIS PRODUCT NEAR WATER, IN WET AREAS TO AVOID FIRE OR INJURY OF ELECTRIC CURRENT. ALWAYS TURN OFF THE PRODUCT WHEN YOU DON'T USE IT OR BEFORE A REVISION. THERE AREN'T ANY PARTS IN THIS APPLIANCE WHICH ARE REPARABLE BY CONSUMER. ALWAYS APPEAL TO A QUALIFIED AUTHORIZED SERVICE. THE PRODUCT IS UNDER A DANGEROUS TENTION.

TO AVOID THE DANGER OF SUFFOCATION, KEEP THE PLASTIC BAG AWAY FROM BABIES AND CHILDREN. DO NOT USE THIS BAG IN CRIBS, BEDS, CARRIAGES, OR PLAYPENS. THIS BAG IS NOT A TOY.

Disposal of old Electrical & Electronic Equipment

(Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Hereby, ETA a.s. declares that the radio equipment type RC-E561B-DAB is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:


www.JVCAUDIO.cz/doc

The Bluetooth® word mark and logo are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by King Profit Trading Ltd., is under license. Other trademarks and trade names are those of their respective owners.

This product is manufactured and distributed exclusively by ETA a.s., serviced, and warranted by its designated partner.

“JVC” is the trademark of JVCKENWOOD Corporation, used by such company under license

Documents / Resources

	<p>JVC RC-E561B-DAB Portable CD Player with CASSETTE-MP3-USB-DAB Plus Bluetooth [pdf] Instruction Manual</p> <p>RC-E561B-DAB, Portable CD Player with CASSETTE-MP3-USB-DAB Plus Bluetooth, RC-E561B-DAB Portable CD Player with CASSETTE-MP3-USB-DAB Plus Bluetooth, Player with CASSETTE-MP3-USB-DAB Plus Bluetooth, Plus Bluetooth</p>
---	---

References

- [JVC JVC AUDIO | Japanese quality | jvcaudio.bg](#)
- [JVC JVC AUDIO | Japonská kvalita | jvcaudio.cz](#)
- [JVC Declaration of Conformity | jvcaudio.cz](#)
- [JVC JVC AUDIO | Japán minőség | jvc-tv.hu](#)
- [JVC JVC AUDIO | Japanese quality | jvcaudio.pl](#)
- [JVC JVC AUDIO | Calitate japoneză | jvcaudio.ro](#)

