



# JVC RD-E761 Bluetooth All-in-One Audio System Instruction Manual

[Home](#) » [JVC](#) » JVC RD-E761 Bluetooth All-in-One Audio System Instruction Manual

# JVC

Bluetooth All-in-One Audio System  
Instruction Manual



## Contents [ [hide](#)

- [1 RD-E761 Bluetooth All-in-One Audio System](#)
- [2 SAFETY](#)
- [3 PRODUCT OVERVIEW AND CONTROL BUTTONS](#)
- [4 REMOTE CONTROL BUTTONS](#)
- [5 USING THE DEVICE](#)
- [6 MAINTENANCE / CLEANING](#)
- [7 TROUBLESHOOTING](#)
- [8 SPECIFICATIONS](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)
- [10 Related Posts](#)

## RD-E761 Bluetooth All-in-One Audio System

### INTRODUCTION

- Thank you for buying our product.
- Please read through these operating instructions, so you will know how to operate your equipment properly. After you finished reading the instructions manual, put it away in a safe place for future reference.

### DANGER

Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

This Product is classified as a Class 1 LASER PRODUCT. THE CLASS 1 LASER PRODUCT label is located on the rear exterior.

### SAFETY

#### General

- Do not drop the device and do not expose it to liquid, moisture or humidity. These might lead to damage to the device.
- If the device is moved from a cold environment into a warmer one, do let it adapt to the new temperature before operate the device. Otherwise, it might lead to condensation and cause malfunctions in the device.
- Do not use the device in a dust environment as dust can damage the interior electronic components and lead to malfunctions in the device.
- Protect the device from strong vibrations and place it on stable surfaces.
- Do not attempt to disassemble the device.
- If the device is not using for a long period of time, disconnect it from the power supply by unplugging the power plug. This is to avoid the risk of fire.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.

#### Risks associated with high volumes









Risks associated with high volumes Connect headphones with the volume set low and increase it if

required. Prolonged listening through some headphones at high volume settings can result in hearing damage. To prevent possible hearing damage, do not listen at high volume levels for long periods. Battery handling and usage

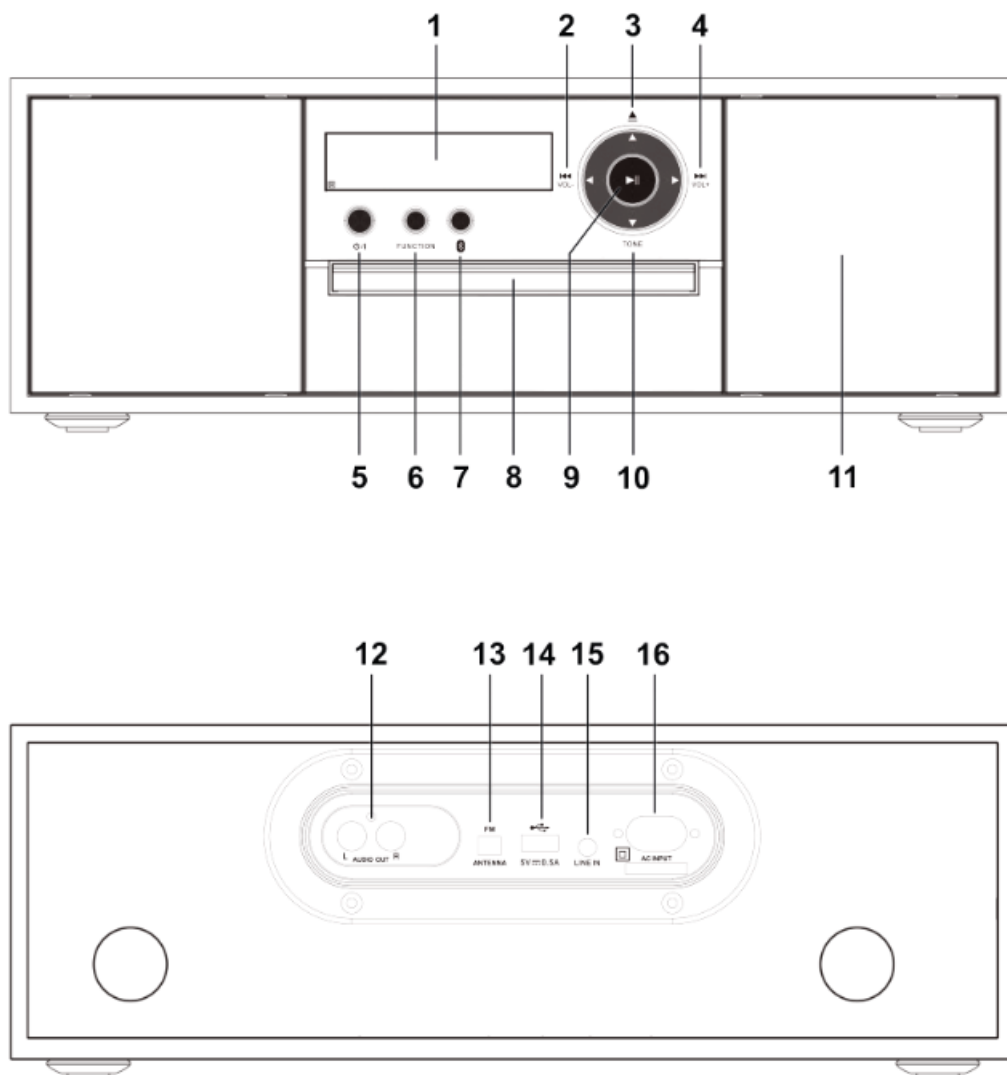






- Only adults should handle batteries. Do not allow a child to use this device unless the battery cover is securely attached.
- Remove batteries if exhausted or if they will not be used again for a long period. The incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst, therefore:
  - Do not mix battery types, e.g. alkaline with zinc carbonate.
  - When inserting new batteries, replace all batteries at the same time.
- Batteries contain chemical substances, so they should be disposed of properly.

## PRODUCT OVERVIEW AND CONTROL BUTTONS



1. Display 2.  /VOL- button 3.  Open/Close button 4.  /VOL+ button 5. I ON/OFF button 6. FUNCTION button 7.  Bluetooth button 8. CD Door	9.  Play/Pause button 10. <b>TONE</b> button 11. Speakers 12. L/R AUDIO output 13. FM ANTENNA input 14. USB port 15. LINE IN jack 16. AC INPUT socket
---	---

## REMOTE CONTROL BUTTONS

	Power On/Off
	Open / Close CD door
<b>1- 0/10</b>	<b>FM</b> mode: Press to select saved station. <b>CD/USB</b> mode: Press to select the desired track.
<b>GoTo</b>	<b>FM</b> mode: Press to set the radio frequency directly.
	<b>FM</b> mode: Press repeatedly to tune the desired radio frequency. <b>CD/USB</b> mode: Fast Forward / Rewind during playback
	<b>FM</b> mode: Press to skip the previous/next saved station. <b>CD/USB/BT</b> mode: Press to skip to the previous/next track.
	Stop playback
	Start / Pause playback
<b>INTRO</b>	<b>CD</b> mode: Press to play the beginning (15 s) of each track from CD-DA.
<b>FM</b>	Press to select the <b>FM</b> mode.
<b>SEARCH</b>	Press to search radio channels automatically.
<b>VOL-/+</b>	Decrease / Increase volume level
	• Mute or resume the sound
<b>▶ TRACK COPY</b>	Press to record a single track from a CD to a USB drive.

<b>COPY</b>	Press to record the full CD to a USB drive.
<b>FUNCT</b>	Press to select the mode ( <b>CD/FM/LINE IN/BT</b> ).
<b>CD/USB</b>	Press to switch between <b>CD</b> and <b>USB</b> modes.
<b>BASS-/+</b>	Adjust bass level
<b>TREB-/+</b>	Adjust treble level
<b>MODE</b>	<b>CD/USB</b> mode: Press to select the Audio mode (Stereo, Mono L, Mono R).
<b>DSP</b>	Press to choose sound effects.
<b>REPEAT</b>	<b>CD/USB</b> mode: Press to select the Repeat mode.
<b>OLD</b>	<b>CD/USB</b> mode: Press to select the track time (elapsed/remaining) display mode.

### To install the batteries

Lift off the battery compartment cover from the rear of the remote control. Insert 2 x 1,5V AAA-size batteries in accordance with the diagram in the battery compartment. Make sure to observe the correct polarity.

### Remote control operation

To operate the device with the remote control, point the remote handset at the remote sensor on the front panel and press the appropriate button on the remote handset. The remote works best within a range of 6 ~ 7 meters from the front panel and on an angle of 30 degrees. Bright sunlight or room light conditions can interfere with the remote control. If the remote operation is unsatisfactory or stops working entirely, first try replacing the remote batteries, then try reducing the room lighting conditions.

## GETTING STARTED

### CONNECTION AND PREPARATION

#### Power connection

Connect the mains cable to the AC INPUT socket of the device and then into a mains socket. Warning: Ensure that the power supply voltage corresponds to the voltage printed on the back of the device. **LINE IN connection** You can use the LINE IN to play any music from your phone or tablet. Connect the audio cable (included) to the LINE IN jack and the other end connects to the AUDIO OUT jack of your external device. Adjust the volume to your desired level. Press PLAY of the external audio source (eg. MP3 player) to start playback.

#### L/R AUDIO

output connection You can use the L/R AUDIO output to listen to music from this device on another external audio device. Use a suitable cable (not included) for the connection. NOTE: L/R AUDIO output is active in CD and USB modes only.

## GENERAL FUNCTIONS

### Power on/off

Press the **I** button on the device or press the button on the remote control to switch on the device. Switch off to the standby mode with the same button.

### Mode selection

Press the FUNCTION button on the device or the remote control to select CD (USB)/FM/LINE IN/BT mode.

**NOTE:** You can use the BLUETOOTH button on the device to select Bluetooth mode.

### Volume

Press the V+/- buttons on the device or the remote control to adjust the volume. If you wish to turn the sound off, press the button on the remote control. Press the button again or press the V+/- buttons on the device or the remote control to resume normal listening.

### Bass/Treble level

Press the BASS +/- buttons on the remote control to adjust the bass level. Press the TREBLE +/- buttons on the remote control to adjust the treble level.

**NOTE:** You can use the TONE button on the device to set the Bass/Treble level.

## USING THE DEVICE

### FM RADIO

NOTE: Connect the radio antenna (included) to the device before listening to the radio.

#### Display info



1. A radio station preset number

2. FM frequency

### Scanning for stations

Press the SEARCH button to search for radio stations. After searching, the radio stations are stored in presets automatically.

Press the GoTo or ◀/▶ button to change the stored radio station. After setting a new frequency, the radio station is stored in presets automatically.


#### Select preset stations

Press the NUMBERS or ◀/▶ buttons to select the stored station.

### CD

**NOTE:** This device can playback all digital audio CD, MP3, finalized digital audio CD-Recordable (CD-R) discs, finalized digital audio CD-Rewritable (CD-RW) discs and CD-DA format digital audio CD/CD-R/CD-RW discs.

#### Display info

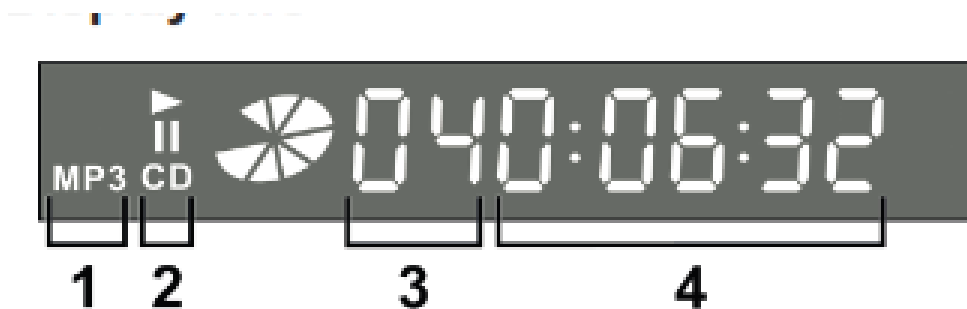



1. CD-R/RW with MP3 files

2. CD-DA

3. Track number

#### 4. Elapsed/Remaining time


Press the button on the  device or the remote control to open the disc compartment. Insert a disc with the label side up. Press the  button to close the disc compartment. The play starts automatically. If not press the button.

#### USB

**NOTE:** The device supports USB drives (FAT32) with up to 32 GB of memory. Only support the MP3 audio format. Do not use any USB extension cable for connecting the USB drive.

#### Display info


1.

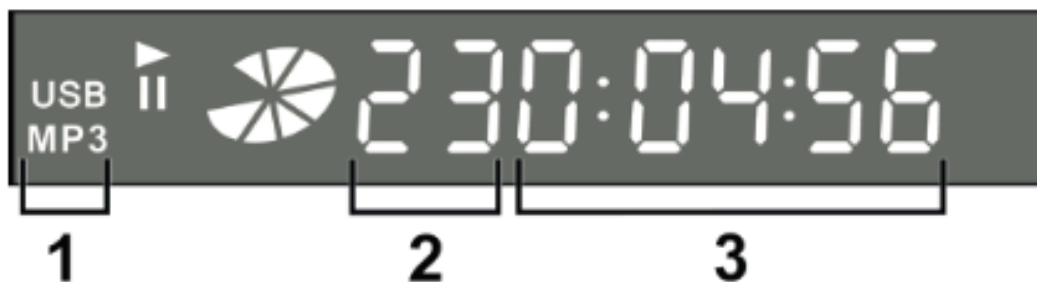

USB disc with MP3 files

2. Track number

3. Elapsed/Remaining time


Insert a USB drive into the USB port. Select the USB mode. The play starts automatically. If not press  the button.

**NOTE:** To select USB mode, switch the device to CD mode and then press the CD/USB button on the remote control.

#### CONVERT CD TO MP3 FILES

**NOTE:** Insert a USB drive to the USB port.

#### Display info

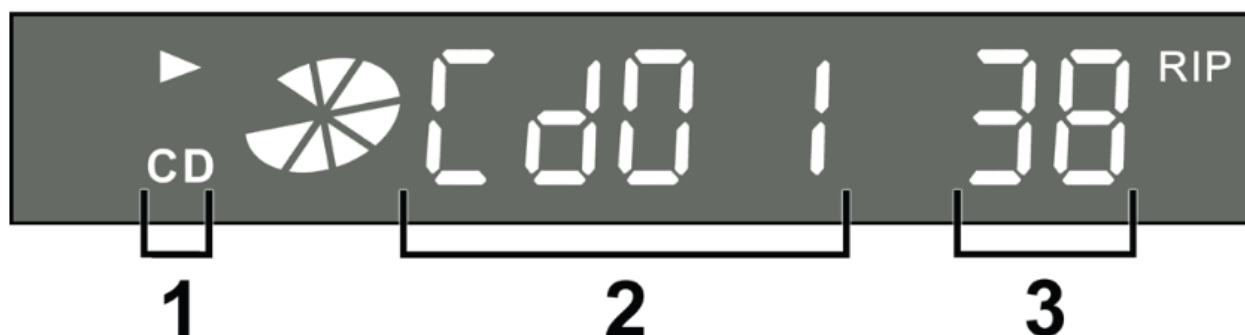

1. CD-DA

2. Track number

3. Progress (% Complete)




While playing a CD track, press the TRACK COPY button on the remote control to record a single track. While playing a CD, Press the ALL COPY button to record the full disc.

**NOTE:** All recordings are in “.mp3” format. The recordings are kept in a folder named “MP3” IMPORTANT: Do not

interrupt the recording, wait until the recording is finished.

## BLUETOOTH

Select the BT mode. On your device enable Bluetooth and search for Bluetooth devices that can be paired (refer to the user manual of the device). Select JVC RD-E761 on your Bluetooth-enabled device and if necessary input '0000' as the pairing password. After successful pairing and connection tone is heard from the device.

Control the music playback from your Bluetooth device. Press   to skip to the previous/next  track. Press to pause/resume playback.

**NOTE:** Compatibility with all Bluetooth devices is not guaranteed. The effective operation range between this unit and your Bluetooth-enabled device is approximately 10 meters (30 feet). Any obstacle between the unit and the device can reduce the operational range.

## MAINTENANCE / CLEANING

- Always power off the device when cleaning it.
- Never use any harsh or strong solvents to clean the device since these may damage the surface of the device. A dry, soft cloth is appropriate, however, if the device is extremely dirty may be wiped off with a slightly moist cloth. Make sure the device is dried off after cleaning. When you are necessary to ship the device, store it in its original package. Save the package for this purpose.

## TROUBLESHOOTING

Problem	Solution
No power.	<ul style="list-style-type: none"><li>• Ensure that the AC cord is properly connected.</li><li>• Ensure that there is power at the AC outlet.</li></ul>
No sound.	<ul style="list-style-type: none"><li>• Increase the volume.</li><li>• Turn on the sound as it may be muted.</li><li>• If using Bluetooth, ensure that the volume on your source device is turned up and that the device is not muted.</li></ul>
The remote control does not work.	<ul style="list-style-type: none"><li>• Reduce the distance between the remote control and the device.</li><li>• Replace the battery.</li><li>• Aim the remote control directly at the sensor on the front of the device.</li></ul>
No disc detected.	<ul style="list-style-type: none"><li>• Insert a disc.</li><li>• Check if the disc is inserted upside down.</li><li>• Wait until the moisture condensation at the lens has dried.</li><li>• Replace or clean the disc.</li><li>• Use a finalized CD or correct format disc.</li></ul>
Poor radio reception.	<ul style="list-style-type: none"><li>• Check the radio antenna.</li><li>• Increase the distance between the unit and your TV.</li></ul>

## SPECIFICATIONS



<b>GENERAL</b>	
Supply voltage	AC 220~240 V, 50/60 Hz
Power consumption	≤ 30 W
Standby Power consumption	< 0,5 W
Remote Control Power Supply	2 x 1,5V AAA battery (not included)
Weight	Approx. 3kg
Dimensions	360 (L) x 120 (H) x 218 (D) mm
Operation temperature	+5°C – +35°C
<b>RADIO SECTION</b>	
FM Frequency Range	87,5 – 108 MHz
<b>BLUETOOTH SECTION</b>	
Bluetooth	V4.2 – Supports A2DP, AVRCP profiles
BT Frequency Range	2402 – 2480 MHz
EARP	0,39 dBm
<b>AUDIO SECTION</b>	
Power output	2 x 8 Watts RMS

## **WE RESERVE THE RIGHT TO CHANGE TECHNICAL SPECIFICATIONS.**

### **PACKAGE CONTENTS**

Audio system, Remote control, Audio cable with 3,5 mm jack at both ends, FM Radio Antena, User manual



**WARNING:** DO NOT USE THIS PRODUCT NEAR WATER, IN WET AREAS TO AVOID FIRE OR INJURY FROM ELECTRIC CURRENT. ALWAYS TURN OFF THE PRODUCT WHEN YOU DON'T USE IT OR BEFORE A



REVISION. THERE AREN'T ANY PARTS IN THIS APPLIANCE WHICH ARE REPARABLE BY CONSUMER. ALWAYS APPEAL TO A QUALIFIED AUTHORIZED SERVICE. THE PRODUCT IS UNDER A DANGEROUS TENSION. TO AVOID THE DANGER OF SUFFOCATION, KEEP THE PLASTIC BAG AWAY FROM BABIES AND CHILDREN. DO NOT USE THIS BAG IN CRIBS, BEDS, CARRIAGES OR PLAYPENS. THIS BAG IS NOT A TOY.

### **Disposal of old Electrical & Electronic Equipment**

(Applicable in the European Union and other European countries with separate collection systems)



■ This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead, it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.


**Bluetooth®** The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks Guangzhou Jie Li Electron Co., Ltd., is under license. Other trademarks and trade names are those of their respective owners.

Hereby, ETA a.s. declares that the radio equipment type RD-E761 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:  
[www.JVCAUDIO.cz/doc](http://www.JVCAUDIO.cz/doc)



This product is manufactured and distributed exclusively by ETA a.s., serviced and warranted by its designated partner. “JVC” is the trademark of JVC KENWOOD Corporation, used by such a company under license.

## Documents / Resources

 <p><b>JVC</b></p> <p>RD-E761</p>	<p><a href="#">JVC RD-E761 Bluetooth All-in-One Audio System</a> [pdf] Instruction Manual RD-E761, Bluetooth All-in-One Audio System, RD-E761 Bluetooth All-in-One Audio System, All-in-One Audio System, Audio System</p>
--	--

## References

- [JVC JVC AUDIO | Japanese quality | jvcaudio.bg](#)
- [JVC JVC AUDIO | Japonská kvalita | jvcaudio.cz](#)
- [JVC Declaration of Conformity | jvcaudio.cz](#)
- [JVC JVC AUDIO | Japán minőség | jvc-tv.hu](#)
- [JVC JVC AUDIO | Japanese quality | jvcaudio.pl](#)
- [JVC JVC AUDIO | Calitate japoneză | jvcaudio.ro](#)
- [JVC JVC AUDIO | Japonská kvalita | jvcaudio.sk](#)