



JVC RM-C1244 Remote Control Instructions

[Home](#) » [JVC](#) » JVC RM-C1244 Remote Control Instructions 

Contents

- [1 JVC RM-C1244 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Replacement Remote Control](#)
- [5 Common Buttons](#)
- [6 FAQ \(Frequently Asked Questions\)](#)
- [7 Using Remote Control](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)



JVC RM-C1244 Remote Control



Product Information

Specifications

- **Product Model:** RM-C1244
- **Colour:** Red, Green, Yellow, Blue
- **Compatibility:** JVC devices

Product Usage Instructions

Original Remote Control

The original remote control has the following buttons:

- **Power:** Turns the device on or off.
- **Mute:** Mutes the audio.
- **Eject Red:** Ejects a red disc.
- **Eject Green:** Ejects a green disc.
- **Title Yellow:** Select the yellow title.
- **DVD Yellow:** Select the yellow DVD.
- **Play:** Starts playing the content.
- **Pause:** Pauses the playback.
- **Stop:** Stops the playback.
- **Angle:** Changes the viewing angle of the content.
- **Return:** Returns to the previous screen.

- **Text:** Displays text information.

Replacement Remote Control

The replacement remote control has the following buttons:

- **Power:** Turns the device on or off.
- **Mute:** Mutes the audio.
- **Eject Green:** Ejects a disc.
- **Yellow Options:** Select the yellow options.
- **Blue Play:** Starts playing the content.
- **Pause:** Pauses the playback.
- **Stop:** Stops the playback.
- **Smart Text:** Displays smart text information.

Common Buttons

Both the original and replacement remote controls have the following common buttons:

- **Return:** Returns to the previous screen.
- **Text Subtitle Display:** Displays text subtitles.
- **Menu / Info:** Opens the menu or displays information.
- **Menu Up:** Navigate up in the menu.
- **Source:** Select the input source.
- **Left:** Navigate left in the menu.
- **OK:** Confirms a selection or opens a submenu.
- **Right:** Navigate right in the menu.
- **EPG:** Opens the electronic program guide.
- **Down:** Navigate down in the menu.
- **Exit:** Exits the menu or submenu.
- **Vol+:** Increases the volume.
- **FAV CH+:** Changes to the favourite channel.

FAQ (Frequently Asked Questions)

- **Q:** What is the model number of the original remote control?
- **A:** The model number of the original remote control is RM-C1244.
- **Q:** Where can I purchase a replacement remote control?
- **A:** You can purchase a replacement remote control for JVC RM-C1244 from the following website:
Replacement Remote Control for JVC RM-C1244.

Using Remote Control



Original	Rechange	Original	Rechange
Power	Power	Return / Text	Shift + Back
Mute	Mute	Subtitle	Subt
Red / Eject	Red	Display	Shift + Info
Red / Eject	Eject	Menu / Info	Info
Green / Title	Green	Menu / Info	D. Menu
Yellow / DVD	Yellow	Menu	Menu
Yellow / DVD	Options	Up	Up
Blue / A-B	Blue	Source	AV
<</[=0]	<<	Left	Left
>>/[=?]	>>	OK	Ok
I<</[=+]	I<<	Right	Right
>>I/[=.]	>>I	EPG	Guide
Play	Play	Down	Down
Pause	Pause	Exit	Exit
Stop	Stop	Vol+	Vol +
Angle / [=i]	Smart	FAV	Pre Ch
Return / Text	Text	CH+	Ch +



Original	Rechange	Original	Rechange
Vol-	Vol -		
REP	Rec		
CH-	Ch -		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
Audio	Dual		
0	0		
Recall / Goto	Back		



<https://tout-telecommandes.fr/fr/JVC/1064704-81826-telecommande-de-remplacement-pour-JVC-RM-C1244.html>.

Documents / Resources



[JVC RM-C1244 Remote Control](#) [pdf] Instructions
RM-C1244 Remote Control, RM-C1244, Remote Control, Control

References

- [M Télécommande qui remplace JVC RM-C1244](#)
- [User Manual](#)