



JVC RM-C1244 Replacement Remote Control Instructions

[Home](#) » [JVC](#) » JVC RM-C1244 Replacement Remote Control Instructions 

Contents

- [1 JVC RM-C1244 Replacement Remote Control](#)
- [2 OVERVIEW](#)
- [3 REMOTE FUNCTION](#)
- [4 Specifications](#)
- [5 Product Usage Instructions:](#)
- [6 Navigation](#)
- [7 Volume and Channel Control](#)
- [8 \(FAQ\)](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)



 


 
 
 

 
 
 
 

 
 
 
 
 
 


 
 
 
 
 
 

 


 

 
 

 



 
 
 







 

 
 
 


 
 

 

 






JVC RM-C1244 Replacement Remote Control






 
 
 
 
 
 
 
 
 

 

 

 



 

 






OVERVIEW



REMOTE FUNCTION

Original		Replacement		Original		Replacement	
	Power		Power		Return / Text		Shift + Back
	Mute		Mute		Subtitle		Subt
	Red / Eject		Red		Display		Shift + Info
	Red / Eject		Eject		Menu / Info		Info
	Green / Title		Green		Menu / Info		D. Menu
	Yellow / DVD		Yellow		Menu		Menu
	Yellow / DVD		Options		Up		Up
	Blue / A-B		Blue		Source		AV
	<</[≡0]		<<		Left		Left
	>>/[≡?]		>>		OK		Ok
	l<</[≡+]		l<<		Right		Right
	>>l/[≡..]		>>l		EPG		Guide
	Play		Play		Down		Down
	Pause		Pause		Exit		Exit
	Stop		Stop		Vol+		Vol +
	Angle / [≡i]		Smart		FAV		Pre Ch
	Return / Text		Text		CH+		Ch +

Original		Replacement	
	Vol-		Vol -
	REP		Rec
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Audio		Dual
	0		0
	Recall / Goto		Back

Specifications

- **Model:** RM-C1244
- **Color:** Black
- **Compatibility:** JVC DVD and Blu-Ray players
- **Power Source:** 2 AAA batteries (not included)
- **Dimensions:** 7.5 x 2.0 x 0.8 inches
- **Weight:** 3.5 ounces

Product Usage Instructions:

- **Power:**

To turn on the device, press the **Power** button located at the top left corner of the remote control.

- **Mute:**

To mute or unmute the audio, press the **Mute** button located next to the Power button.

- **Eject:**

To eject a disc from the DVD or Blu-Ray player, press the **Eject** button. In the original remote, this button is colored red, while in the replacement remote, it is colored green.

- **Title / DVD:**

In the original remote, the **Title** button is colored yellow and the **DVD** button is colored yellow with a superimposed “p” and “DVD” respectively. These buttons are used for specific functions depending on the DVD or Blu-Ray player.

- **Options / Smart:**

The **Options** button in the replacement is remote is colored blue, while the **Smart** button is represented by a “>” symbol followed by “|>|”. These buttons provide access to various settings and features of the DVD or Blu-Ray player.

- **Play / Pause / Stop:**

The **Play**, **Pause**, and **Stop** buttons are used to control the playback of the disc. Press the **Play** button to start playing, the **Pause** button to temporarily pause the playback, and the **Stop** button to stop the playback completely.

- **Angle / Return**

The **Angle** button allows you to change the viewing angle of certain scenes in a DVD or Blu-Ray disc, if supported. The **Return** button is used to go back to the previous menu or screen.

- **Text / Subtitle Display:**

In the original remote, the **Text** button is used to access teletext or other text-related features. The **Subtitle Display** button is used to turn on or off subtitles during playback. In the replacement remote, these buttons are represented by “+ Shift” followed by “Back” and “+ Shift” followed by “Info” respectively.

- **Menu / Info:**

The **Menu** button is used to access the main menu of the DVD or Blu-Ray player. The **Info** button provides information about the current disc or playback status. In the original remote, there are two sets of buttons labeled “Menu / Info”, while in the replacement remote, there is only one set.

Navigation

The navigation buttons on the remote control allow you to navigate through menus and options:

- **Menu Up:** Move the selection up in the menu.
- **Source:** Change the source input of the DVD or Blu-Ray player.
- **OK:** Confirm or select an option.
- **Right:** Move the selection to the right in the menu.
- **EPG:** Access the Electronic Program Guide (EPG) if available.
- **Down:** Move the selection down in the menu.
- **Exit:** Exit the current menu or screen.
- **Vol+:** Increase the volume.
- **FAV:** Access favorite channels or settings.
- **CH+:** Change to the next channel.

Volume and Channel Control

The remote control allows you to control the volume and change channels:

- **Vol+/Vol-:** Increase or decrease the volume respectively. In the original remote, these buttons are labeled “VolREP” and “CH-” respectively.
- **Pre Ch/Ch+:** Change to the previous channel or change to the next channel respectively. In the original remote, these buttons are labeled “1 2 3 4 5 6 7 8 9” and “Audio 0 Recall/Goto” respectively. In the replacement remote, they are labeled “Dual” and “Back” respectively.

(FAQ)

Frequently Asked Questions (FAQ)

- **Q: Where can I find a replacement remote control for my JVC RM-C1244?**

A: You can find a replacement remote control for your JVC RM-C1244 on the following website: [Replacement Remote Control for JVC RM-C1244](https://all-remote-controls.co.uk/en/JVC/1064704-81826-replacement-remote-control-for-JVC-RM-C1244.html).

- **Q: What are the dimensions and weight of the remote control?**

A: The dimensions of the remote control are approximately 7.5 x 2.0 x 0.8 inches, and it weighs approximately 3.5 ounces.

<https://all-remote-controls.co.uk/en/JVC/1064704-81826-replacement-remote-control-for-JVC-RM-C1244.html>

Documents / Resources



[JVC RM-C1244 Replacement Remote Control](#) [pdf] Instructions
RM-C1244 Replacement Remote Control, RM-C1244, Replacement Remote Control, Remote Control

References

-  [Replacement remote control for JVC RM-C1244](#)
- [User Manual](#)