



RM-SUXP5R JVC Remote Control Instructions

[Home](#) » [JVC](#) » RM-SUXP5R JVC Remote Control Instructions 

Contents

- [1 RM-SUXP5R JVC Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 PRODUCT OVERVIEW](#)
- [5 REMOTE USING INSTRUCTIONS](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



RM-SUXP5R JVC Remote Control



Product Information

Specifications

- **Model:** JVC RM-SUXP5R
- **Power Source:** 2 x AAA batteries
- **Compatibility:** Compatible with JVC audio systems
- **Dimensions:**
 - **Length:**
 - **Width:**
 - **Height:**

Product Usage Instructions

Power On/Off

To turn on the JVC audio system, press the “Standby/On” button. To turn it off, press the same button again.

Selecting Input Source

Use the “MD/AUX”, “FM/AM”, or “Tape” buttons to select the desired input source for playback.

CD Playback

To play or pause a CD, press the “Play/Pause CD” button. To stop playback, press the “Stop” button. Use the “<>” buttons to skip to the previous or next track.

Display and Dimmer Control

Adjust the display brightness using the “Dimmer Display” button. Press it repeatedly to cycle through different brightness levels or turn off the display.

Sleep Timer

To set a sleep timer and automatically turn off the audio system after a specified time, press the “Sleep” button. Use the “< Multi Key” and “Multi Key >” buttons to adjust the sleep time.

Programming, Random Playback, and Repeat

Use the “Prog”, “Random”, and “Repeat” buttons to program specific tracks, enable random playback, or repeat a single track or the entire CD.

Sound Mode and FM Mode

Use the “Sound Mode” button to select different sound modes for audio enhancement. The “FM Mode” button allows you to switch between stereo and mono FM reception.

Auto Preset

Press the “Auto Preset” button to automatically tune and save FM/AM radio stations.

Volume Control

Adjust the volume level using the “Volume+” and “Volume-” buttons. Pressing and holding these buttons will continuously increase or decrease the volume.

Additional Functions

– “Recharge”: Not specified in the user manual. – “Exit”: Exits the current menu or mode. – “Left Pre Ch” and “Right Pre Ch”: Not specified in the user manual. – “Menu”: Accesses the menu settings of the audio system. – “Format”: Formats a compatible storage medium. – “AV Subt”: Not specified in the user manual. – “Vol + Vol -”: Not specified in the user manual.

FAQ

- **Q1: How do I replace the batteries in the JVC RM-SUXP5R remote control?**
- **A1:** To replace the batteries, locate the battery compartment on the back of the remote control. Slide open the compartment and remove the old batteries. Insert two new AAA batteries, ensuring they are placed correctly according to the polarity markings. Close the compartment securely.
- **Q2: Can I use the JVC RM-SUXP5R remote control with other audio systems?**
- **A2:** The JVC RM-SUXP5R remote control is specifically designed for use with JVC audio systems and may not be compatible with other brands or models.
- **Q3: How do I program specific tracks for playback?**

- **A3:** To program specific tracks, press the “Prog” button. Use the “<>|” buttons to navigate through the tracks and press the “Prog” button again to confirm the selection. Repeat this process to add more tracks to the playlist. Press the “Play/Pause CD” button to start playback of the programmed tracks.

PRODUCT OVERVIEW




REMOTE USING INSTRUCTIONS



<https://tout-telecommandes.fr/fr/JVC/1063380-79072-telecommande-de-remplacement-pour-JVC-RM-SUXP5R.html>

Documents / Resources

	<p>JVC RM-SUXP5R JVC Remote Control [pdf] Instructions</p> <p>RM-SUXP5R JVC Remote Control, RM-SUXP5R, JVC Remote Control, Remote Control, Control</p>
---	--

References

- [Télécommande qui remplace JVC RM-SUXP5R](#)
- [User Manual](#)