



JVC SX-WD10E Speaker System Instructions

[Home](#) » [JVC](#) » JVC SX-WD10E Speaker System Instructions 

JVC SX-WD10E Speaker



Contents

1 SAFETY INSTRUCTIONS

1.1 CAUTION!

2 Warnings, Cautions and Others

2.1 Precautions for installation

2.2 Precautions for daily use

3 Preparation

3.1 Attaching the feet

4 Connection

5 Precautions

5.1 Connecting the speaker system to the amplifier

6 About Speaker Grille

6.1 To remove the speaker grille

7 Specifications

8 Customer Support

9 Documents / Resources

9.1 References

10 Related Posts

SAFETY INSTRUCTIONS

“SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT”

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

Do read the operating instructions before you attempt to use the equipment.

Do ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug when making or changing connections.

Do consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

Do be careful with glass panels or doors on equipment.

DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way switch off, withdraw the mains plug and consult your dealer.

DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a standby mode.

Switch off using the switch on the equipment and make sure that your family know how to do this. Special arrangements may need to be made for infirm or handicapped people.

DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. It is illegal to watch television whilst driving.

DON'T listen to headphones at high volume as such use can permanently damage your hearing.

DON'T obstruct the ventilation of the equipment, for example with curtains or soft furnishing. Overheating will cause damage and shorten the life of the equipment.

DON'T use makeshift stands and NEVER fix legs with wood screws-to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided according to the instructions.

DON'T allow electrical equipment to be exposed to rain or moisture. ABOVE ALL

-NEVER let anyone, especially children, push anything into holes, slots or any other opening in the case-this could result in a fatal electrical shock:

-NEVER guess or take chances with electrical equipment of any kind-it is better to be safe than sorry!

CAUTION!

To avoid personal injury or accidentally dropping the unit, have two persons unpack, carry, and install the unit.



22 kg

Warnings, Cautions and Others

Precautions for installation

- Do not install the speakers on an uneven surface or in a place subject to vibration; otherwise, they may fall over, causing damage or injury.
 - Take the occurrence of earthquakes or other physical shocks into consideration when selecting the installation place, and secure the speakers thoroughly.
- To prevent deformation or discoloration of the cabinet, do not install the speakers where they are exposed to direct sunlight or high humidity, and avoid installation near air conditioning outlets.
- Speaker vibrations may cause howling. Place the speakers as far away from the player as possible.
- The speakers are magnetically shielded to avoid color distortions on TVs. However, if not installed properly, it may cause color distortions. So, pay attention to the following when installing the speakers.
 - When placing the speakers near a TV set, turn off the TV's main power switch or unplug it before installing the speakers, Then wait at least 30 minutes before turning on the TV's main power switch again. Some TVs may still be affected even though you have followed the above.If this happens, move the speakers further away from the TV.
- Tuner reception may become noisy or hissing if a speaker is installed near the tuner.
 - In this case, leave more distance between the tuner and the speakers or use an outdoor antenna for better tuner reception without interference from the speakers.
- Do not lean against the speakers, as the speakers could fall down or break, possibly causing an injury.
 - Especially be careful that children do not lean against them.

Precautions for daily use

- **To maintain the appearance of the speaker**

Wipe with a dry, soft cloth if the cabinet should become dirty. If very dirty, wipe with a cloth applied a small amount of water or neutral detergent, then wipe with a dry cloth.

– Do not use chemicals such as benzene and thinner for cleaning the cabinet

- **To improve the sound field**

It is recommended to leave a space of more than 50 cm between the speakers and the wall.

If the speakers are facing a solid wall or glass door, etc., it is recommended to furnish the wall with materials that absorb sounds, for example by hanging up thick curtains, to prevent reflections and standing waves.

- **To use the speakers without any trouble**

Do not reproduce sounds at so high a volume that they are distorted.; otherwise, the speakers may be damaged by internal heat buildup.

When moving the speakers, do not pull the speaker cords; otherwise, the speakers may fall over, causing damage or injury,

Preparation

Attaching the feet

To prevent the speaker from falling over, be sure to attach the supplied feet to the speaker

 
- Take care not to drop the feet or speaker while assembling; otherwise, it may cause damage to the floor or injury.

- Ensure enough space for assembly and installation.
- Place a large, thick cloth on the floor where you assemble the speaker, so you can protect the floor and the speaker itself.
- Do not touch the speaker unit speaker.

Turn the speaker upside down.


- Turn the speaker and facing the bottom upward,

Caution: Make sure the speaker does not fall.

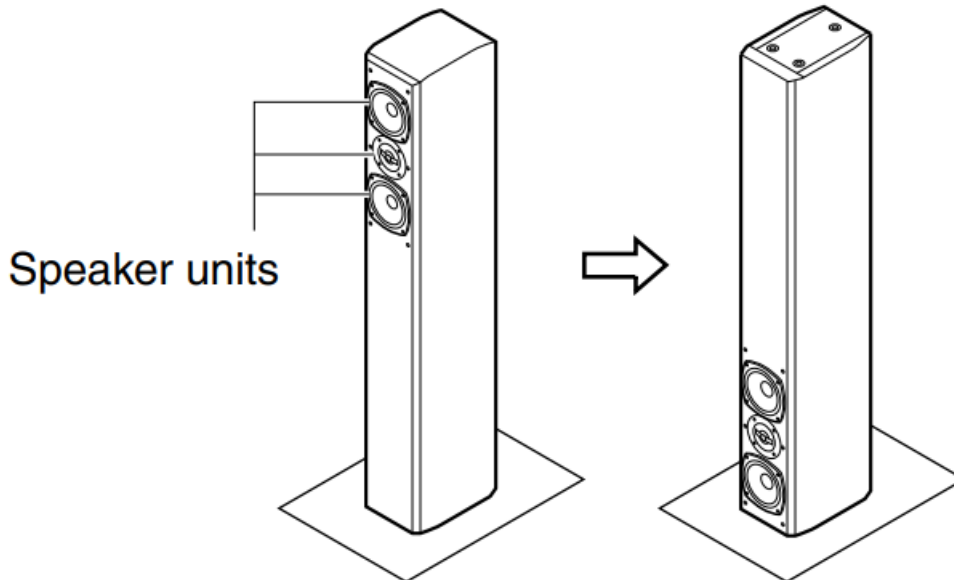

Attach the feet.

 
- Attaching the 3 feet on the bottom of the speaker

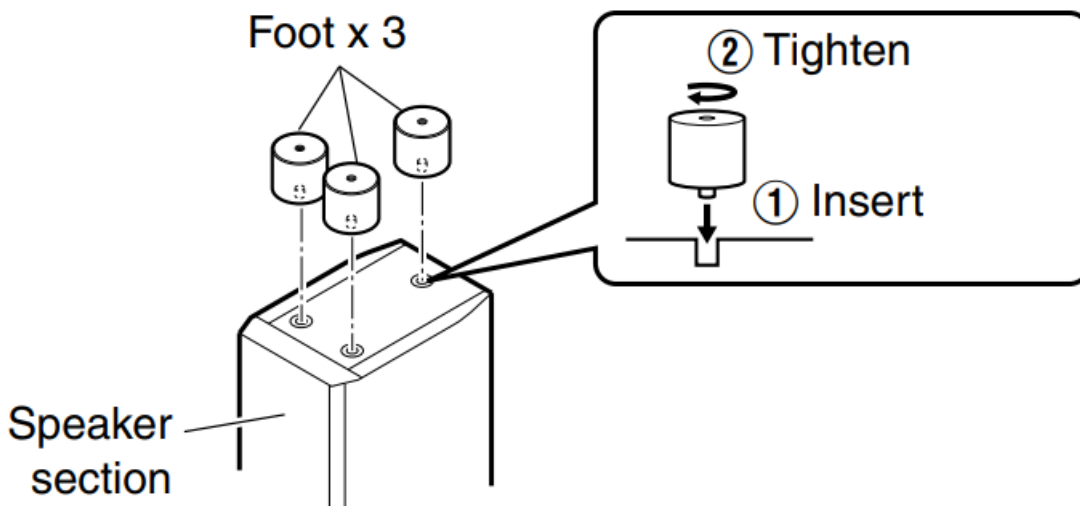

Attach the base.

- Prepare a Philips screwdriver.
- Attaching the base securely on the feet with the supplied three screws

 Screw x 3 (M8 x 40 mm)

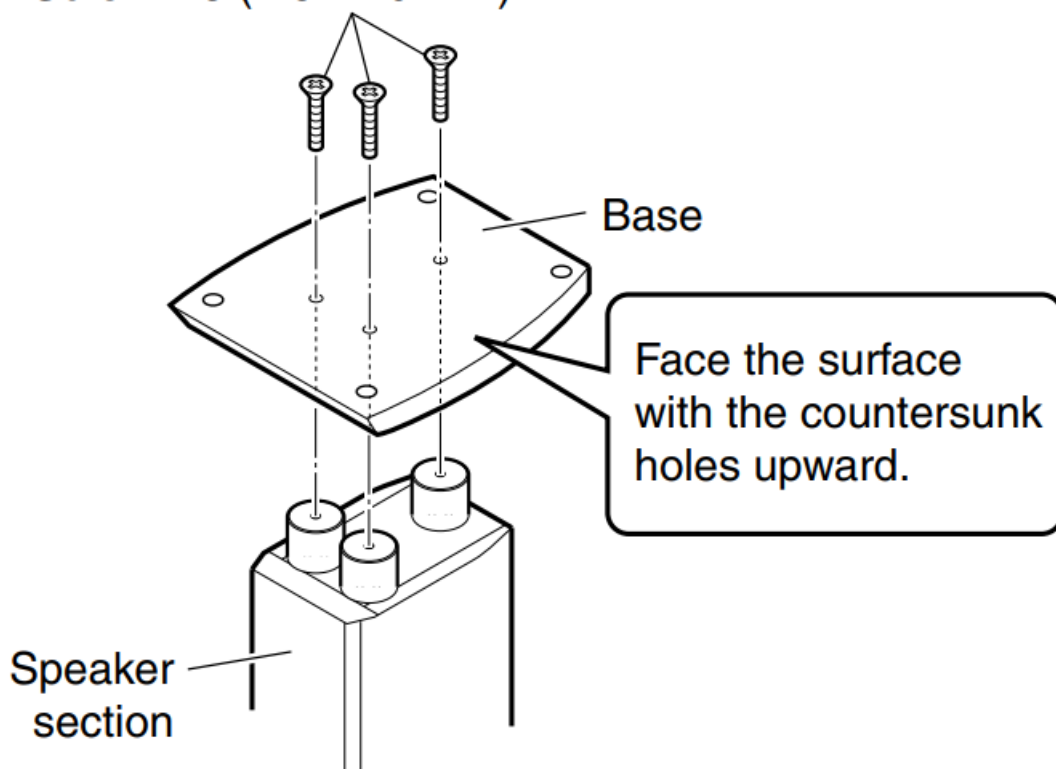

Connection

 
Precautions

- Turn off the power to the amplifier before connecting the speaker system; otherwise, the speakers may be damaged,
- The impedance of the speaker is 6 Ω .
If this does not match with the speaker impedance range indicated on the amplifier, you cannot connect this system to the amplifier.
- The maximum power handling capacity of the speaker is 150 W. Excessive input will result in abnormal noise and possible damage,
- Be sure to turn down the volume level on the amplifier to prevent unwanted noise before performing following operations:
 - Turning on or off other components
 - Operating the amplifier
 - Tuning FM stations
 - Fast-forwarding a tape
 - Continuously reproducing high frequency oscillation or high pitch electronic sounds
 - Connecting or disconnecting a microphone
- When using a microphone, do not aim it at the speakers or use it near the speakers; otherwise, the howling which occurs may damage the speakers.
- Before replacing the cartridge, always turn off the power both to the amplifier and to the turntable; otherwise, the clicking noise may damage the speakers,

Connecting the speaker system to the amplifier

Twist and remove the insulation at the end of each speaker cord before connecting.

- Make sure to match the polarity (\oplus and \ominus); otherwise, the surround effect will become less effective.

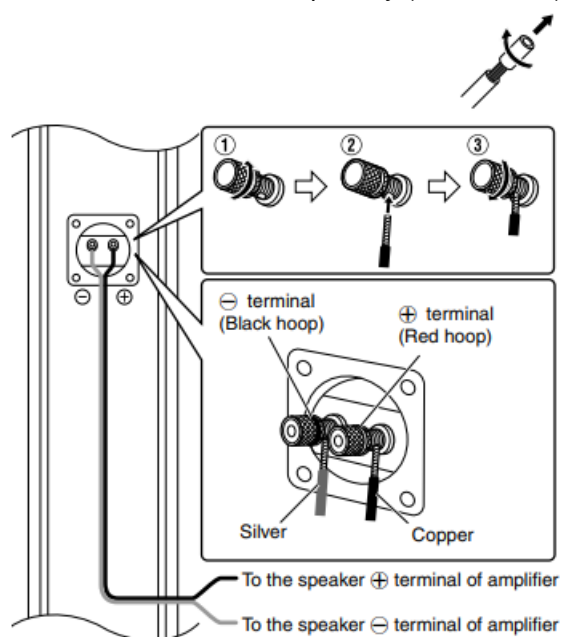


About Speaker Grille

To remove the speaker grille

To remove the speaker grille, insert your fingers at the bottom of the speaker grille, then pull upward.

To attach the speaker grille, put the projections of the speaker into the holes of the speaker grille,

 - Do not press the speaker grille strongly.

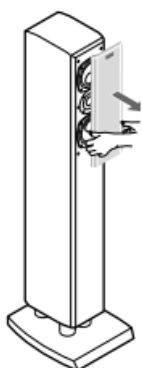

Specifications

Type Speaker unit : 2-way 3-speaker bass-reflex type Magnetically-shielded type

Mid and low range : 10.5 cm wooden cone x 2

Tweeter : 2.0 cm wooden dome x 1

Frequency range : 150 W

Impedance : 6 .Q

Crossover frequency : 3.8 kHz

Frequency range : 45 Hz to 50 000 Hz

Sound pressure level : 85 dB/W•m

Dimensions (WxHxD) : 270 mm x 1101 mm x 320 mm

Mass : 16 kg

Supplied accessories : Speaker cord (3 m) (1) Foot (3) Base (1) Screw (3)

Design and specifications subject to change without notice.

Customer Support


This file has been downloaded from:

User Manual and User Guide for many equipment like mobile phones, photo cameras, monther board, monitors, software, tv, dvd, and othes .



Manual users, user manuals, user guide manual, owners manual, instruction manual, manual owner, manual owner's, manual guide, manual operation. operating manual, users manual. operating instructions, manual operators, manual operator, manual product, documentation manual, user maintenance, brochure, user reference, pdf manual.

JVC

Documents / Resources

 The image shows the front cover of the JVC SX-WD10E Speaker System manual. It features the JVC logo at the top left, followed by the text 'SPEAKER SYSTEM' and 'SX-WD10E'. Below this is a small image of the speaker system and the word 'INSTRUCTIONS'.	<p>JVC SX-WD10E Speaker System [pdf] Instructions SX-WD10E Speaker System, SX-WD10E, Speaker System</p>
--	---

References

-  [User Manual, users guide, operation instruction](#)
-  [User Manual, users guide, operation instruction](#)