



**JVC TH-E534B 2.1 Channel
Soundbar with Built In Subwoofer**



JVC TH-E534B 2.1 Channel Soundbar with Built In Subwoofer Instruction Manual

[Home](#) » [JVC](#) » JVC TH-E534B 2.1 Channel Soundbar with Built In Subwoofer Instruction Manual



Contents

- 1 JVC TH-E534B 2.1 Channel Soundbar with Built In Subwoofer
- 2 Product Usage Instructions
- 3 FAQ
- 4 INTRODUCTION
- 5 IMPORTANT SAFETY INSTRUCTIONS
- 6 WHAT'S IN THE BOX
- 7 IDENTIFYING THE PARTS
- 8 REMOTE CONTROL
- 9 PLACEMENT AND MOUNTING
- 10 GENERAL OPERATION
- 11 CONNECTIONS
- 12 BLUETOOTH® OPERATION
- 13 USB OPERATION
- 14 TROUBLESHOOTING
- 15 SPECIFICATIONS
- 16 MAINTENANCE / CLEANING
- 17 Documents / Resources
 - 17.1 References



JVC TH-E534B 2.1 Channel Soundbar with Built In Subwoofer



Product Information:

The TH-E534B is a 2.1 Channel Soundbar with a built-in subwoofer designed to enhance your audio experience while watching TV or listening to music. It comes with various connectivity options and a remote control for easy operation.

Product Usage Instructions

Identifying the Parts:

The Soundbar includes various components:

1. (ON/OFF) button: Switch between ON and Standby mode.
2. (SOURCE) button: Select play function.
3. +/- (VOLUME) buttons: Adjust volume level.

Placement and Mounting:

Placement:

If your TV is on a table, place the Soundbar centered with the TV screen. If your TV is wall-mounted, mount the Soundbar below the TV screen.

1. Firmly fix dowels into the wall if necessary.
2. Tighten wall mount brackets with screws.
3. Install wall mounting screws into the back of the Soundbar.
4. Lift the Soundbar onto the wall mount brackets.

FAQ

- **Q: How do I connect the Soundbar to my TV?**

- A: You can connect the Soundbar to your TV using the HDMIeARC/ARC socket for audio playback originating from the TV.

 
- **Q: How do I adjust the bass level?**

- A: You can adjust the bass level using the Bass +/- buttons on the remote control.

INTRODUCTION

- Thank you for buying our product.
- Please read through these operating instructions, so you will know how to operate your equipment properly. After you finished reading the instructions manual, put it away in a safe place for future reference.

IMPORTANT SAFETY INSTRUCTIONS

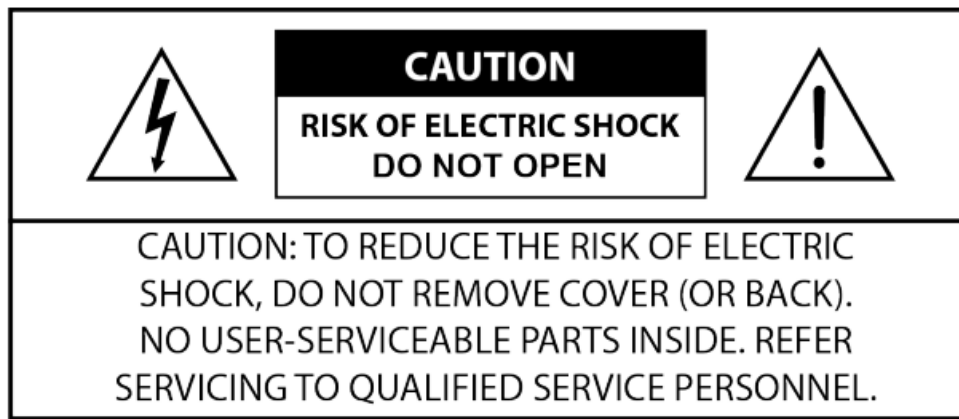


- The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude as to constitute a risk of electric shock to persons.



- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Safety

- Read these instructions – All the safety and operating instructions should be read before this product is operated.
- Keep these instructions – The safety and operating instructions should be retained for future reference.
- Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
- Follow all instructions – All operating and usage instructions should be followed.
- Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool and the like.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
- Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over

- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.
-  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
- The apparatus shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.
- Minimum distance around the apparatus for sufficient ventilation is 5cm.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc...
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Batteries should be recycled or disposed of as per state and local guidelines.
- The use of apparatus in moderate climates.

Caution

- Use of controls or adjustments or performance of procedures other than those described herein, may result in hazardous radiation exposure or other unsafe operation.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on apparatus.
- The mains plug/appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

 
Warning

- The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
- Do not place this unit close to strong magnetic fields.
- Do not place this unit on the amplifier or receiver.
- If any solid object or liquid falls into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- Do not attempt to clean the unit with chemical solvents as this may damage the finish. Use a clean, dry or slightly damp cloth.
- When removing the power plug from the wall outlet, always pull directly on the plug, never yank on the cord.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment.
- The rating label is pasted on the bottom or back of the equipment.

Battery usage CAUTION


- To prevent battery leakage which may result in bodily injury, property damage, or damage to the apparatus:
 - Install all batteries correctly, **+** and **-** as marked on the apparatus.
 - Do not mix old and new batteries.
 - Do not mix alkaline, standard (Carbon-Zinc) or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.
 - Remove batteries when the unit is not used for a long time.

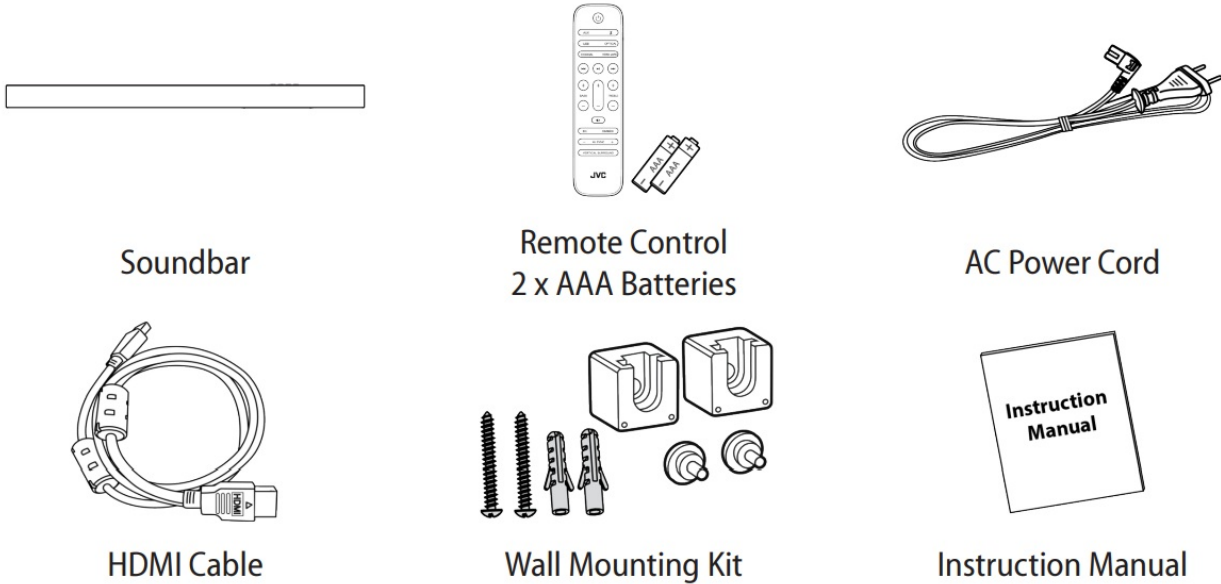

WHAT'S IN THE BOX





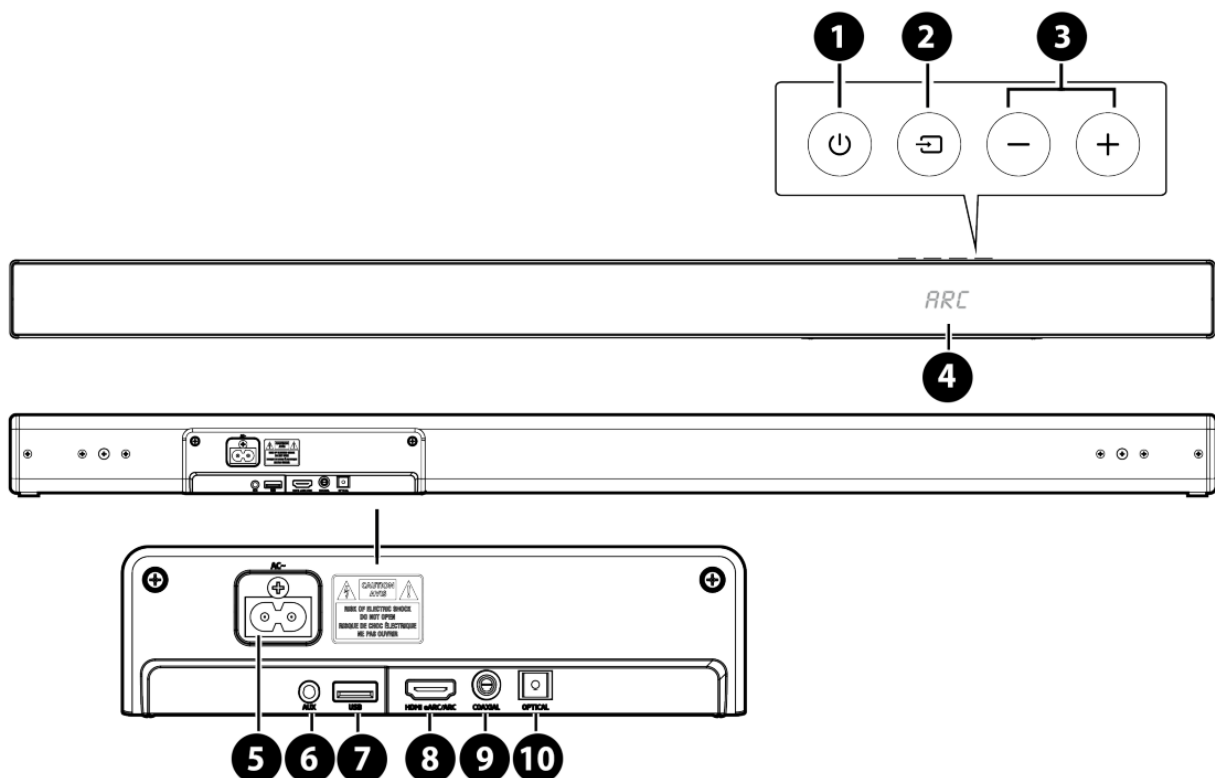 


IDENTIFYING THE PARTS


SOUNDBAR




1.  (ON/OFF) button
Switch the Soundbar between ON and Standby mode.
2.  (SOURCE) button
Select the play function.
3. +/- (VOLUME) buttons
Increase/decrease the volume level.
4. Display Window
Show the current status.
5. AC~ Socket
Use to connect to power cable.
6. AUX Socket
Connect to an external audio device.
7. USB Socket
Insert the USB device to play music.
8. HDMI eARC/ARC Socket
The port for connecting a TV. The port supports the eARC/ARC HDMI feature, which allows the soundbar to play audio that originates on the connected TV.
9. COAXIAL Socket
Use to connect to the COAXIAL OUT socket on an external device.
10. OPTICAL Socket
Use to connect to the OPTICAL OUT socket on an external device.

REMOTE CONTROL

 (ON/OFF)	Switch the Soundbar between ON and STANDBY mode.
	Select the Bluetooth mode.
AUX	Select the AUX mode.
USB	Select the USB mode.
HDMI eARC	Select the HDMI ARC mode.
OPTICAL	Select the OPTICAL mode.
COAXIAL	Select the COAXIAL mode.
	Skip to previous/next track.
	Play/pause/resume playback.
TREBLE +/-	Adjust treble level.
BASS +/-	Adjust bass level.
+/-	Increase/decrease the volume level.
 (MUTE)	Mute or resume the sound.
EQ	Select Equalizer (EQ) Effect.
DIMMER	Adjust display brightness.
AV SYNC+/-	Set the Audio Delay.
VERTICAL SURROUND	Adjust the surround ON/OFF.

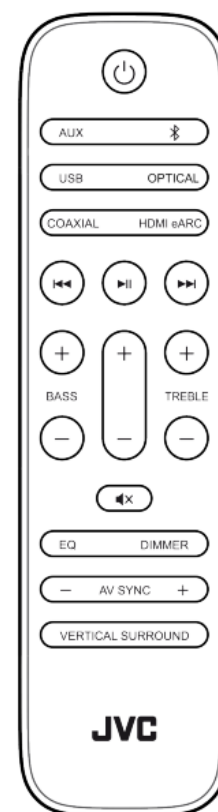 



NOTE: Press and hold  to activate the pairing function in Bluetooth mode or disconnect the existing paired Bluetooth device.

Prepare the Remote Control

The provided remote control allows the Soundbar to be operated from a distance.

- Even if the remote control is operated within the effective range 6m (19,7 feet), remote control\ operation may be impossible if there are any obstacles between the Soundbar and the remote control.
- If the remote control is operated near other products which generate infrared rays, or if other remote control devices using infrared rays are used near the Soundbar, it may operate incorrectly. Conversely, the other products may operate incorrectly.

 Replace the Remote Control Battery


- Press and slide the back cover to open the battery compartment of the remote control.
- Insert two AAA size batteries (included). Make sure the  ends of the batteries match the  ends indicated in the battery compartment.
- Close the battery compartment cover.

Precautions Concerning Batteries

- Be sure to insert the batteries with correct positive \oplus and negative \ominus polarities.
- Use batteries of the same type. Never use different types of batteries together.
- Either rechargeable or non-rechargeable batteries can be used. Refer to the precautions on their labels.
- Be aware of your fingernails when removing the battery cover and the battery.
- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.
- Do not use any batteries other than those specified.
- Do not mix new batteries with old ones.
- Never recharge a battery unless it is confirmed to be a rechargeable type.


PLACEMENT AND MOUNTING

 Placement

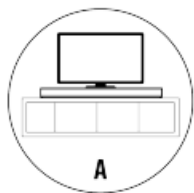

Option A

 If your TV is placed on a table, you can place the Soundbar on the table directly in front of the TV stand, centered with the TV screen.

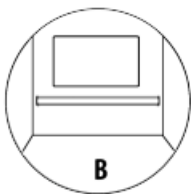

Option B

If your TV is attached to a wall, you can mount the Soundbar on the wall directly below the TV screen.

 
Wall Mounting (if using Option B)

- Installation must be carried out by qualified personnel only. Incorrect assembly can result in severe personal injury and property damage (if you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing that may be buried inside the wall). It is the installer's responsibility to verify that the wall will safely support the total load of the Soundbar and wall brackets.
- Additional tools (not included) are required for the installation.
- Do not overtighten screws.
- Keep this instruction manual for future reference.
- Use an electronic stud finder to check the wall type before drilling and mounting.

WARNING

- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- Suggested wall mounting height: $\leq 1,5$ meters.

1. Drill 2 parallel holes ($\varnothing 5,5-6$ mm each according to wall type) in the wall. The distance between the holes should be 796 mm.
2. Firmly fix 1 dowel into each hole in the wall if necessary. Tighten the wall mount brackets on the wall with screws and screwdriver (not included). Make sure that they are securely installed.
3. Remove the screws at the back of the Soundbar. Install the wall mounting screws into the back of the Soundbar.
4. Lift the Soundbar onto the wall mount brackets and slot into place.

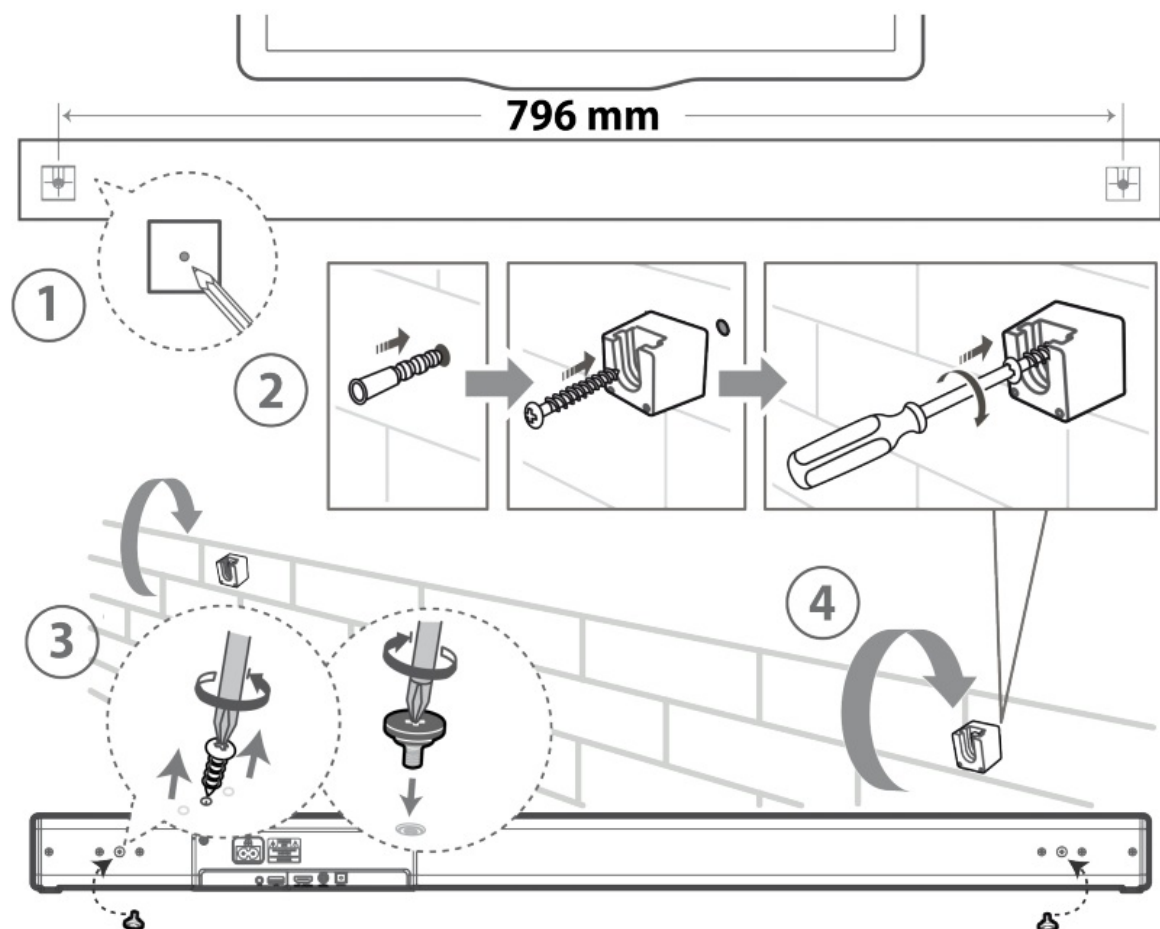


GENERAL OPERATION

CONNECT POWER

Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the Soundbar. Before connecting the AC power cord, ensure you have completed all other connections.

 Soundbar

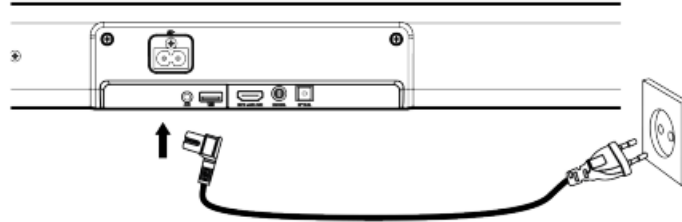

Connect the mains cable to the AC~ socket of the Soundbar and then into a mains socket.



NOTE: If there is no power, ensure the power cord and plug are fully inserted and the power is turned on.

STANDBY/ON



When you first connect the Soundbar to the mains socket, the Soundbar will be in Standby mode.

- Press the  button on the Soundbar or on the remote control to switch the Soundbar ON.
- Press the  button again to switch the Soundbar back to STANDBY mode.
- Disconnect the mains plug from the mains socket if you want to switch the Soundbar OFF completely.

Automatic Power Off Function

- The Soundbar automatically turns to Standby mode after about 15 minutes if the TV or the external unit is disconnected, switched off or the volume is too close to mute.
- Please turn the Soundbar off completely to save energy when not in use.

SELECT MODES

Press the  (SOURCE) button on the Soundbar or the AUX, , OPTICAL, COAXIAL, HDMI eARC and USB buttons on the remote control to select the desired mode. The selected mode will show\ on the display.

ADJUST THE BASS/TREBLE LEVEL

- Press the BASS +/- buttons on the remote control to adjust bass level.
- Press the TREBLE +/- buttons on the remote control to adjust treble level.



TURN THE SURROUND SOUND ON/OFF

Press the VERTICAL/SURROUND button on the remote control to turn on the surround sound. Press\ this button again to turn off the surround sound.

SELECT EQUALIZER (EQ) EFFECT

Press the EQ button repeatedly on the remote control to select your desired preset equalizer effects (VOICE / SPORT / MOVIE / MUSIC).

ADJUST THE VOLUME

Press the +/- (VOLUME) buttons on the Soundbar or on the remote control to adjust the volume. If you wish to turn the sound off, press the  (MUTE) button on the remote control. Press the  (MUTE) button again or press the +/- (VOLUME) buttons on the Soundbar or on the remote control to resume normal listening.

ADJUST THE BRIGHTNESS

Press the DIMMER button repeatedly on the remote control to select the brightness level.

AV SYNC (SET THE AUDIO DELAY)

 
Video image processing, is sometimes longer than the time required to process the audio signal. This is called “delayed.” The AV SYNC feature is designed to remedy this delay. Press the AV SYNC +/- buttons on the remote control to adjust the delay time.

NOTE: The audio delay setting is only possible for digital audio (HDMI / OPTICAL / COAXIAL). In AUX / BT / USB mode, the AV SYNC feature is not supported.

CONNECTIONS

HDMI CONNECTION


Some 4K HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR display, please refer to the instruction manual of your TV. eARC / ARC (Enhance Audio Return Channel) The eARC / ARC (Enhance Audio Return Channel) function allows you to send audio from your ARC-compliant TV to your soundbar through a single HDMI connection. To enjoy the ARC function, please ensure your TV is both HDMI-CEC and ARC compliant and set up accordingly. When correctly set up, you can use your TV remote control to adjust the volume output (VOLUME +/- and MUTE) of the soundbar.

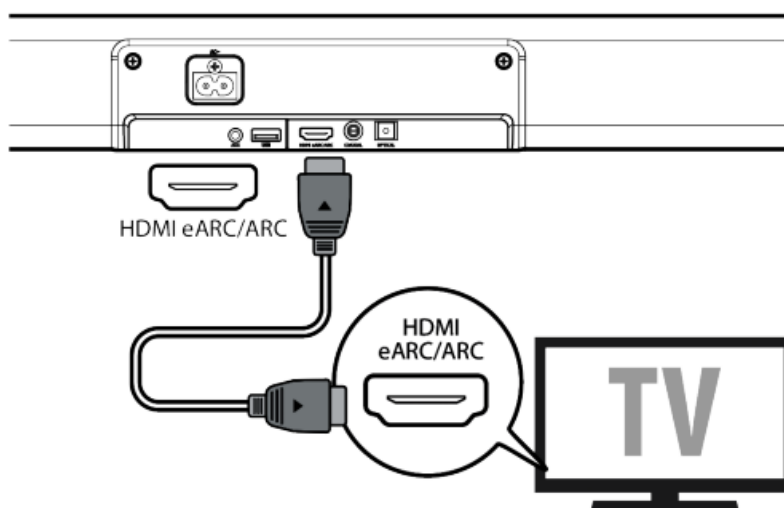

Connect the HDMI cable from unit's HDMI eARC/ARC socket to the HDMI (ARC) socket on your ARC compliant TV.


NOTE: Your TV must support the HDMI-CEC and ARC function. HDMI-CEC and ARC must be set to On. The setting method of HDMI-CEC and ARC may differ depending on the TV. For details about ARC function, please refer to the owner's manual. ARC only works with devices that are HDMI ARC capable as well as with an HDMI 1.4 cable (and higher).

 USE THE OPTICAL SOCKET

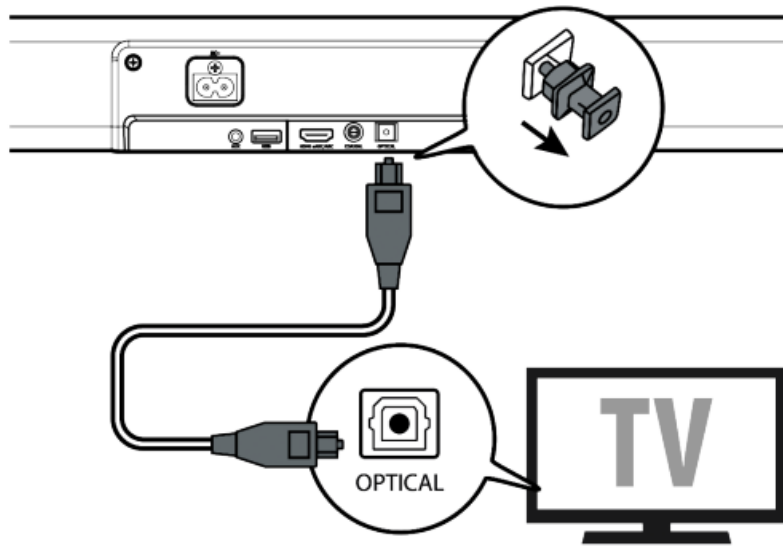


- Remove the protective cap of the OPTICAL socket, then Connect an OPTICAL cable to the TV's OPTICAL OUT socket and the OPTICAL socket on the Soundbar

 USE THE COAXIAL SOCKET

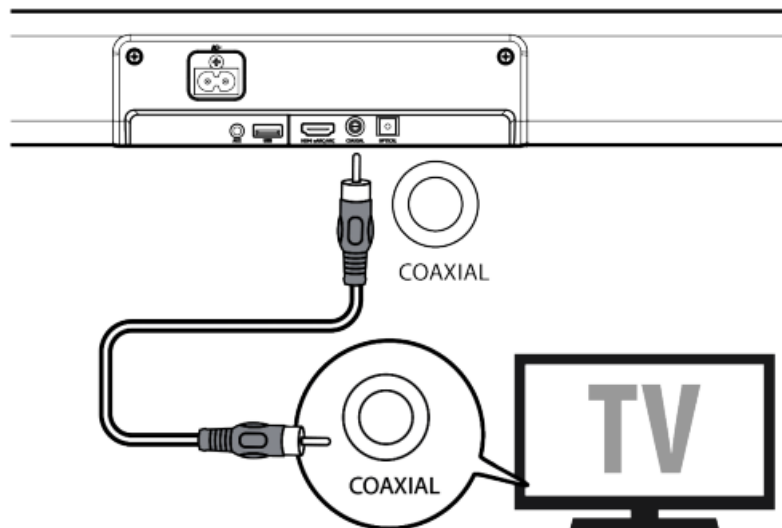


- You also can use the COAXIAL cable to connect the TV's COAXIAL OUT socket and COAXIAL socket on the Soundbar.

 USE THE AUX SOCKET

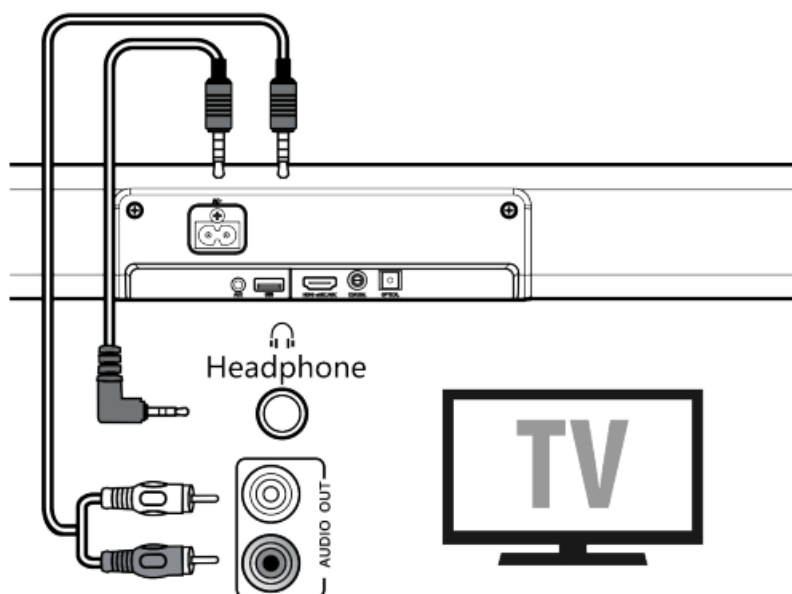

Use a 3,5mm to 3,5mm audio cable to connect the TV's or external audio device headphone socket to the AUX socket on the Soundbar. Use a RCA to 3,5mm audio cable to connect the TV's audio output sockets to the AUX socket on the Soundbar.

AUX / OPTICAL / COAXIAL / HDMI OPERATION

1. Ensure that the Soundbar is connected to the TV or audio device.
2. Press the  (SOURCE) button repeatedly on the Soundbar or press the AUX, OPTICAL, COAXIAL, HDMI eARC buttons on the remote control to select the desired mode. The selected mode will show on the display.
3. Press the +/- (VOLUME) button to adjust the volume to your desired level.

NOTE: The Soundbar may not be able to decode all digital audio formats from the input source. In this case, the Soundbar will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to PCM or Dolby Digital (Refer to the user manual of the input source device for its audio setting details) with HDMI ARC / OPTICAL / COAXIAL input. When selecting a different audio format, the Soundbar will display the following as follows:



Dolby Digital, Dolby TrueHD, Dolby Digital Plus - DOLBY AUDIO

Dolby Atmos - Dolby TrueHD, Dolby Atmos - Dolby Digital Plus - DOLBY ATMOS


BLUETOOTH® OPERATION

Pairing the Soundbar with a Bluetooth® device to listen to music.

First time pairing

1. Press the  (SOURCE) button repeatedly on the Soundbar or press the  button on the remote control to select Bluetooth® mode. The display will show **NO BT**.
2. Activate your Bluetooth® device and select the search mode.
3. Select "TH-E534B" in the pairing list. After the audio prompt, the system is successfully connected, the display will show **BT**.



Pairing a new device

1. If you want to connect your soundbar with another Bluetooth device, press and hold the  button on the remote control to disconnect the currently connected Bluetooth device.
2. Follow step 2-3 in “First time pairing” above to pair a new Bluetooth® device.

Listen to Music from Bluetooth® device

If your Bluetooth® device supports A2DP, play music via your device.

If your Bluetooth® device supports AVRCP, use the supplied remote control to control play.

- To increase/decrease the volume, press +/- (VOLUME) button.
- To pause/resume playback, press  button.
- To skip to a track, press  button.




To disconnect the Bluetooth® function, you can:

- Switch to another source on the Soundbar;
- Disable the function from your Bluetooth® device.

NOTE: The operational range between the Soundbar and the device is approximately 8 metres. Before connecting a Bluetooth® device to the Soundbar, ensure you know the device's capabilities. Compatibility with all Bluetooth® devices is not guaranteed. Any obstacle between the device and the Soundbar can reduce operational range. Keep this player away from other electronic devices that may cause interference. The player will also be disconnected when your device is moved beyond the operational range.

USB OPERATION

By connecting a USB mass storage device (e.g. USB flash drive) to this unit, you can enjoy the device's stored music through the Soundbar.

1. Press the  (SOURCE) button on the Soundbar or press the USB button on the remote control to select USB mode.
2. Press button  to pause/resume playback.
3. To skip to a track, press  button.

NOTE: The player supports the USB music file format of MP3 only. The Soundbar can support USB devices with up to 32 GB of memory. The Soundbar may not be compatible with all USB devices, this is not an indication of a problem with the unit.

DOLBY ATMOS®

Dolby Atmos® gives you an immersive listening experience by delivering sound in three-dimensional space, and all the richness, clarity, and power of Dolby sound. For more information, please visit dolby.com/technologies/dolby-atmos




 
For using Dolby Atmos®

- Dolby Atmos® is available only in HDMI mode. For the details of the connection, please refer to “HDMI Connection”.
- To use Dolby Atmos® in HDMI ARC/eARC mode, your TV has to support Dolby Atmos®.
- Make sure that “No Encoding” is selected for bitstream in the audio output of the connected external device (e.g. Blu-ray DVD player, TV etc.).

NOTE: The full Dolby Atmos experience is only available when the soundbar is connected to the source via a HDMI 2.0 cable. The soundbar will still function when connected via other methods (such as a Digital Optical cable) but these are unable to support all of the Dolby features. Given this, our recommendation is to connect via HDMI, in order to ensure full Dolby support.

TROUBLESHOOTING

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this unit, check the following points before requesting service

Problem	Solution
No power	<ul style="list-style-type: none"> • Ensure that the AC cord of the apparatus is properly connected. • Ensure that there is power at the AC outlet. • Press  button to turn the Soundbar on.
Remote control does not work	<ul style="list-style-type: none"> • Before you press any playback control button, first select the correct source. • Reduce the distance between the remote control and the Soundbar. • Insert the battery with its polarities \oplus / \ominus aligned as indicated. • Replace the battery. • Aim the remote control directly at the sensor on the front of the Soundbar.
No sound	<ul style="list-style-type: none"> • Make sure that the Soundbar is not muted. Press  (MUTE) or +/- (VOLUME) button to resume normal listening. • Press  button on the Soundbar or on the remote control to switch the soundbar to standby mode. Then press the  button again to switch the soundbar on. • Ensure the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to PCM or Dolby Digital mode while using digital (e.g. HDMI, OPTICAL, COAXIAL) connection. • The Soundbar may not be able to decode all digital audio formats from the input source. In this case, the Soundbar will mute. This is NOT a defect.
TV has display problem while viewing HDR content from HDMI source	<ul style="list-style-type: none"> • Some 4K HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR display, please refer to the instruction manual of your TV.
I can't find the Bluetooth name of this unit on my Bluetooth device for Bluetooth pairing	<ul style="list-style-type: none"> • Ensure the Bluetooth function is activated on your Bluetooth® device. • Re-pair the Soundbar with your Bluetooth® device. • The Soundbar has a Bluetooth® function that can receive a signal within 8 metres. Keep a distance within 8 metres between the Soundbar and your Bluetooth® device.
The Soundbar turns off	<ul style="list-style-type: none"> • When the Soundbar's external input signal level is too low, the Soundbar will be automatically turn off after 15 minutes. Please increase the volume level of your external device.
Can't achieve outstanding Dolby Atmos® effects	<ul style="list-style-type: none"> • For non-HDMI connections (such as use of USB, Bluetooth, OPTICAL or AUDIO IN), limited height Surround effects are generated. See the section of Dolby Atmos® about how to achieve best Dolby Atmos® effects.

SPECIFICATIONS

Soundbar

- Power Supply 100-240 V~ 50/60 Hz

- Power Consumption
 - 36 W
 - < 0,5 W (StandBy)
- **USB**
 - 5 V / 500 mA
 - Hi-Speed USB (2.0) / FAT32 / FAT16
 - 32G (max), Supported files MP3
- Dimension (WxHxD) 944 x 64 x 106 mm
- Net weight 3 kg
- Audio input sensitivity 700 mV
- Frequency Response 60 Hz – 20 KHz

Wireless Specification

- Bluetooth version / profiles V 5.3 (A2DP, AVRCP)
- Bluetooth frequency range 2402 MHz ~ 2480 MHz
- Bluetooth Max. transmitting power ≤ 10 dBm
- Modulation Type GFSK, $\pi/4$ DQPSK

Amplifier (RMS Output power)

- L/R / Speaker 2 x 50 W
- Subwoofer 140 W

Remote Control

- Distance/Angle 6 m (19,7 feet) / 30°
- Battery type AAA (2 x 1,5 V)

WE RESERVE THE RIGHT TO CHANGE TECHNICAL SPECIFICATIONS

MAINTENANCE / CLEANING

- Ensure the unit is fully unplugged from the mains socket before cleaning.
- Never use any harsh or strong solvents to clean the device since these may damage the surface of the device. Dry, soft cloth is appropriate, however, if the device is extremely dirty, it may be wiped off with a slightly moist cloth. Make sure the device is dried off after cleaning. When you are necessary to ship the device, store it in its original package. Save the package for this purpose.



WARNING: DO NOT USE THIS PRODUCT NEAR WATER, IN WET AREAS TO AVOID FIRE OR INJURY OF ELECTRIC CURRENT. ALWAYS TURN OFF THE PRODUCT WHEN YOU DON'T USE IT OR BEFORE A REVISION. THERE AREN'T ANY PARTS IN THIS APPLIANCE WHICH ARE REPARABLE BY CONSUMER. ALWAYS APPEAL TO A QUALIFIED AUTHORIZED SERVICE. THE PRODUCT IS UNDER A

DANGEROUS TENSION.



TO AVOID THE DANGER OF SUFFOCATION, KEEP PLASTIC BAG AWAY FROM BABIES AND CHILDREN. DO NOT USE THIS BAG IN CRIBS, BEDS, CARRIAGES OR PLAYPENS. THIS BAG IS NOT A TOY. Disposal of old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)



■ This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product. Hereby, ETA a.s. declares that the radio equipment type TH-E534B is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.JVCAUDIO.cz/doc

LICENCE NOTIFICATION



- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Zhong Shan City Richsound Electronic Industrial Ltd. is under license. Other trademarks and trade names are those of their respective owners.




- The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.








- Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012-2024 Dolby Laboratories. All rights reserved.

This product is manufactured and distributed exclusively by ETA a.s., serviced and warranted by its designated partner. “JVC” is the trademark of JVCKENWOOD Corporation, used by such company under license.

Documents / Resources

	<p>JVC TH-E534B 2.1 Channel Soundbar with Built In Subwoofer [pdf] Instruction Manual TH-E534B 2.1 Channel Soundbar with Built In Subwoofer, TH-E534B, 2.1 Channel Soundbar with Built In Subwoofer, Soundbar with Built In Subwoofer, with Built In Subwoofer, Built In Subwoofer</p>
---	--

References

-  [Dolby Atmos - Official Site - Dolby](#)
-  [JVC AUDIO | jvcaudio.bg](#)
-  [JVC AUDIO | jvc-tv.hu](#)
-  [JVC AUDIO | jvcaudio.pl](#)
-  [JVC AUDIO | jvcaudio.ro](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.