


JVC UX-V30RE Micro Component System Instructions

Home » JVC » JVC UX-V30RE Micro Component System Instructions

Contents

- 1 JVC UX-V30RE Micro Component System
- **2 Product Information**
- **3 Product Usage Instructions**
- **4 Precautions**
- **5 Product Overview**
- **6 IMPORTANT FOR LASER PRODUCTS**
- 7 Features
- **8 IMPORTANT PRECAUTIONS**
- 9 Getting Started
- **10 Common Operations**
- 11 Using the Tuner
 - 11.1 Receiving FM Stations with RDS
- 12 Using the CD Player
 - **12.1 Programing the Playing Order of the Tracks**
- 13 Using the Cassette Deck
 - 13.1 Using the Cassette Deck (Recording)
- 14 Using External Equipment
- 15 Using the Timers
- **16 Care and Maintenance**
- 17 Troubleshooting
- 18 Specifications
- 19 Documents / Resources
 - 19.1 References
- **20 Related Posts**



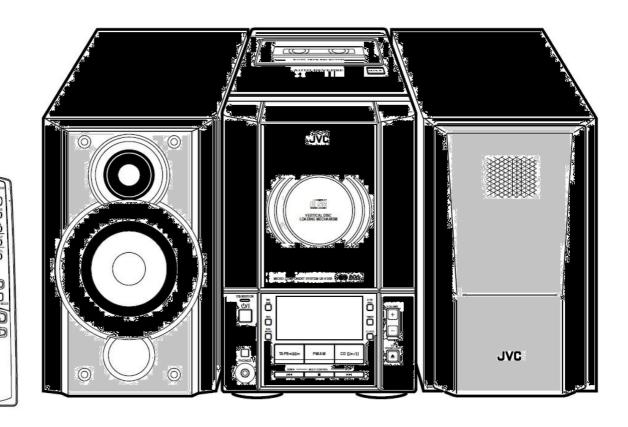

Product Information

Model	UX-V30R	UX-V330R					
Remote Control	RM-RXUV5R	RM-RXUV5R					
Features	Dimmer, Sleep, Display FM Mode, MD/AUX Auto, AHB Pro Preset, CD Program Random Repeat, Bass Treble Canc el	Dimmer, Sleep, Display FM Mode, MD/AUX Auto, AHB Pro Preset, CD Program Random Repeat, Bass Treble Canc el					
Display Modes	PTY/EON, TAPE, TUNER BAND, CD	PTY/EON, TAPE, TUNER BAND, CD					
Tape Features	Auto Tape Selector, Auto Reverse	Auto Tape Selector, Auto Reverse					
Audio Loading Mechanism	Compact Digital Audio Vertical Disc Loading Mechanism	Compact Digital Audio Vertical Disc Loading Mechanism					

Product Usage Instructions

To ensure proper usage of the micro component system, please follow these instructions:

- 1. Proper Ventilation:
 - Front: Ensure there are no obstructions and open spacing.
 - Sides/Top/Back: Do not place any obstructions in the indicated areas.
 - Bottom: Place the system on a level surface and maintain an adequate air path for ventilation by using a stand with a height of 10 cm or more.
- 2. Using the Remote Control:
 - Use the RM-RXUV5R remote control to control various functions of the micro component system.
- 3. Display Modes:
 - Use the display modes to view different information on the micro component system's display, such as

PTY/EON, TAPE, TUNER BAND, and CD.

- 4. Tape Features:
 - The system supports auto tape selection and auto reverse for easy tape playback.
- 5. Audio Loading Mechanism:
 - The micro component system features a compact digital audio vertical disc loading mechanism for loading CDs.

Precautions

Warnings, Cautions and Others

Caution: switch!

Disconnect the mains plug to shut the power off completely (the STANDBY/ON lamp goes off). The switch in any position does not disconnect the mains line.

- When the unit is on standby, the STANDBY/ON lamp lights red.
- When the unit is turned on, the STANDBY/ON lamp lights green.

The power can be remote controlled.

CAUTION: To reduce the risk of electrical shocks, fire, etc.:

- 1. Do not remove screws, covers or cabinet.
- 2. Do not expose this appliance to rain or moisture.


Caution: Proper Ventilation

To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows:

- 1. Front:
 - · No obstructions and open spacing.
- 2. Sides/Top/Back:
 - No obstructions should be placed in the areas shown by the dimensions below.
- 3. Bottom:
 - Place on the level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm or more.


Product Overview

Front view/ Side view

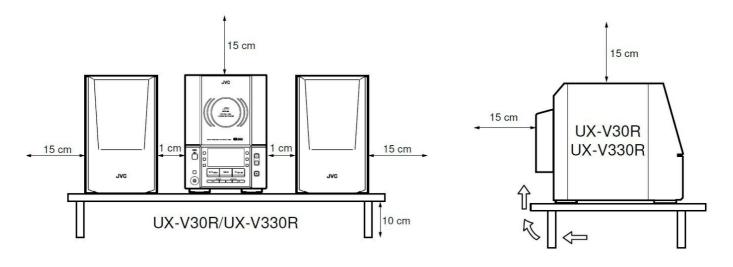

IMPORTANT FOR LASER PRODUCTS

REPRODUCTION OF LABELS

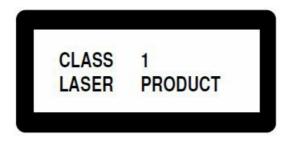

- 1. CLASSIFICATION LABEL, PLACED ON REAR ENCLOSURE
- 2. WARNING LABEL, PLACED INSIDE THE UNIT

DANGER: Invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM.

- 1. CLASS 1 LASER PRODUCT
- 2. **DANGER:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
- CAUTION: Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel.

Thank you for purchasing the JVC Micro Component System.

We hope it will be a valued addition to your home, giving you years of enjoyment. Be sure to read this instruction manual carefully before operating your new stereo system. In it you will find all the information you need to set up and use the system. If you have any query that is not answered by the manual, please contact your dealer.

Features

Here are some of the things that make your System both powerful and simple to use.

 The controls and operations have been designed to make them very easy to use, freeing you to just enjoy the music.

- **COMPUPLAY** With JVC's COMPU PLAY you can turn on the System and automatically start the Radio, Cassette deck or CD Player with a single touch.
- The System incorporates Active Hyper Bass PRO circuitry to faithfully reproduce low frequency sounds.
- Forty-five-station preset capability (30 FM and 15 AM (MW/LW)) in addition to auto-seek and manual tuning.
- · Versatile CD options include repeat, random and program play.
- When the Unit is turned on and the CD door is closed, the illuminations on the CD door light up.
- Timer functions; Daily Timer, Recording Timer and Sleep Timer.
- Auto-reverse tape function.
- The System is compatible with RDS (Radio Data System) broadcasting.
 - The EON data enables you to standby for desired information.
 - The PTY Search function searches for programs in the category you wish. In addition, Radio Text can be displayed using data sent by station.
- You can connect various external units, such as an MD recorder.

How This Manual Is Organized

- Basic information that is the same for many different functions e.g. setting the volume is given in the section "Common Operations", and not repeated under each function.
- The names of buttons/controls and display messages are written in all capital letters: e.g. TAPE, "NO DISC".

IMPORTANT PRECAUTIONS

- 1. Installation of the System
 - Select a place which is level, dry and neither too hot nor too cold. (Between 5°C and 35°C.)
 - Leave sufficient distance between the System and a TV.
 - Do not use the System in a place subject to vibrations.

2. Power cord

- Do not handle the power cord with wet hands!
- · Some power is always consumed as long as the power cord is connected to the wall outlet.
- When unplugging the System from the wall outlet, always pull the plug, not the power cord.
- 3. Malfunctions, etc.
 - There are no user serviceable parts inside. In case of a system failure, unplug the power cord and consult your dealer.
 - · Do not insert any metallic object into the System.

Getting Started

Accessories


Make sure that you have all of the following items, which are supplied with the System.

- AC Power Cord (1)
- AM Loop Antenna (1)

- Remote Control (1)
- Batteries (2)
- FM Wire Antenna (1)

If any of these items are missing, contact your dealer immediately.

How to Put Batteries in the Remote Control

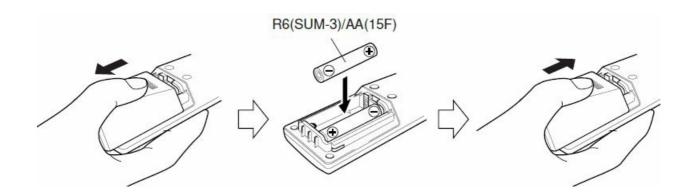

• Match the polarity (+ and –) on the batteries with the + and – markings in the battery compartment.

CAUTION: Handle batteries properly.

To avoid battery leakage or explosion:

- Remove batteries when the Remote Control will not be used for a long time.
- When you need to replace the batteries, replace both batteries at the same time with new ones.
- Do not use an old battery with a new one.
- Do not use different types of batteries together.

Using the Remote Control




• The Remote Control makes it easy to use many of the functions of the System from a distance of up to 7 m away.

• You need to point the Remote Control at the remote sensor on the System's front panel.


CAUTION: Make all connections before plugging the System into an AC power outlet.

Connecting the FM Antenna


Rear Panel of the Unit

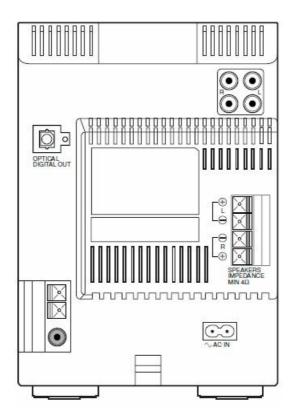


Using the supplied Wire Antenna

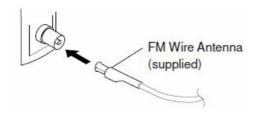

Using the coaxial type connector (not supplied)

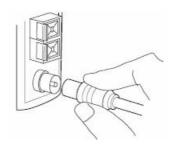

A 75 W antenna with coaxial type connector (IEC or DIN 45325) should be connected to the FM (75 W)
 COAXIAL terminal.

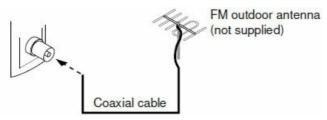


• If reception is poor, connect the outdoor antenna.

Note: Before attaching a 75 Ω coaxial lead (the kind with a round wire going to an outdoor antenna), disconnect the supplied FM Wire Antenna.

Connecting the AM (MW/LW) Antenna

Rear Panel of the Unit

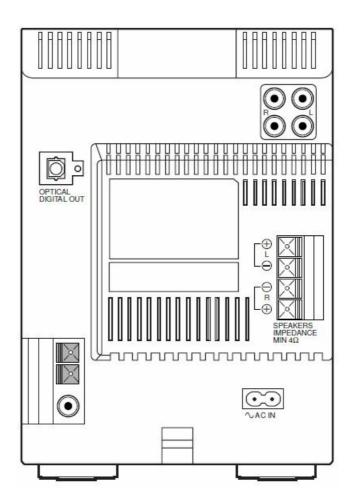


CAUTION: To avoid noise, keep antennas away from the System, the connecting cord and the AC power cord.

• AM Loop Antenna (supplied)



• Attach the AM loop to its base by snapping the tabs on the loop into the slot in the base.

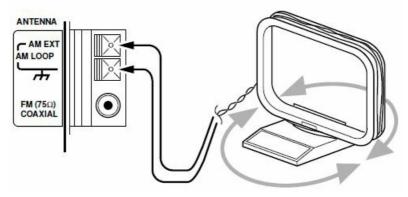


• Turn the loop until you have the best reception.

CAUTION: Make all connections before plugging the System into an AC power outlet.

Connecting the Speakers

For each speaker, connect one end of the speaker wire to the speaker terminals on the back of the System.

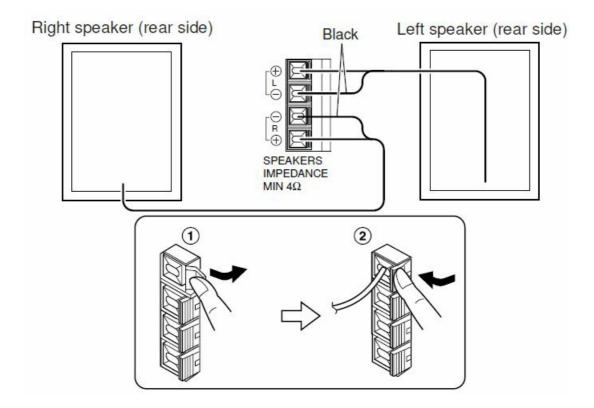


- 1. Open each of the terminals and insert the speaker wires firmly, then close the terminals.
- 2. Connect the red (+) and black (-) wires of the right side speaker to the red (+) and black (-) terminals marked

R on the System. Connect the red (+) and black (-) wires of the left side speaker to the red (+) and black (-) terminals marked L on the System.

CAUTION


• If a TV is installed near the speakers, the picture on the TV may be distorted. If this happens, set the speakers away from the TV.

Connecting External Equipment

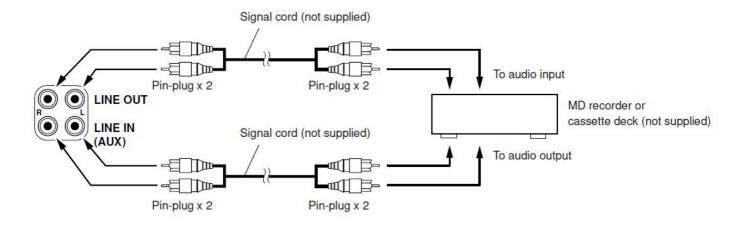


- Connect signal cords (not supplied) between the System's LINE IN (AUX)/LINE OUT terminals and the
 output/input terminals of an external MD recorder, cassette deck, etc.
- You can then listen to the external source through the System, or record the System's CD player, cassette tape, or tuner to the external unit.

Connecting an MD Recorder, etc. (Digital Output)

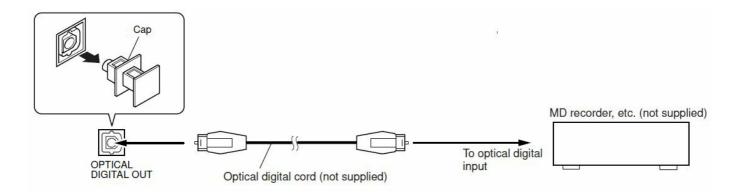

- Unplug the cap and connect an optical digital cord (not supplied) between the System's OPTICAL DIGITAL
 OUT terminal and the input terminal of an MD recorder, etc.
- You can record the digital output signal from the System's CD Player to the MD recorder, etc.

Connecting the AC Power Cord

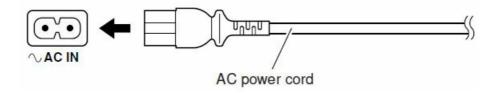

• Firmly insert the supplied AC power cord into the AC inlet on the back of the Unit.

CAUTIONS

- ONLY USE JVC POWER CORD PROVIDED WITH THIS SYSTEM TO AVOID MALFUNCTION OR DAMAGE TO THE SYSTEM.
- BE SURE TO UNPLUG THE POWER CORD FROM THE OUTLET WHEN YOU ARE GOING OUT OR WHEN THE SYSTEM IS NOT IN USE FOR AN EXTENDED PERIOD OF TIME.

Now you can plug the AC power cord into the wall outlet, and your System is at your command!

COMPU PLAY

The JVC's COMPU PLAY feature lets you control the most frequently used System functions with a single touch. With One Touch Operation you can play a CD, a tape, turn on the radio, or listen to an external equipment at a single press of the play button for that function. One Touch Operation turns the power on for you, then starts the function you have specified. How One Touch Operation works in each case is explained in the section dealing with that function. The COMPU PLAY buttons are:

On the Unit

- CD ▷/IIbutton
- FM/AM button
- TAPE

 → button
- MD/AUX button


On the Remote Control

- CD ▷/IIbutton
- TUNER BAND button
- TAPE
 □ button
- MD/AUX button

AUTOMATIC POWER ON


- The System automatically turns on with the following operation.
- When you press the CD OPEN/CLOSE button on the Unit (or CD button on the Remote Control), the System automatically turns on and the CD cover opens to allow CD insertion. However, this operation does not change the source to CD.
- When you press the U/I button to turn on or off the System, the CD cover will automatically close if it is open.

Removing the speaker grilles

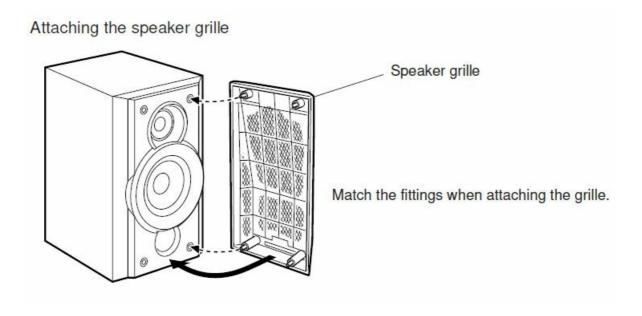

- The speaker grilles can be removed.
- · When removing,
 - 1. Insert your fingers at the top and pull toward you.
 - 2. Pull the bottom toward you as well.

Common Operations

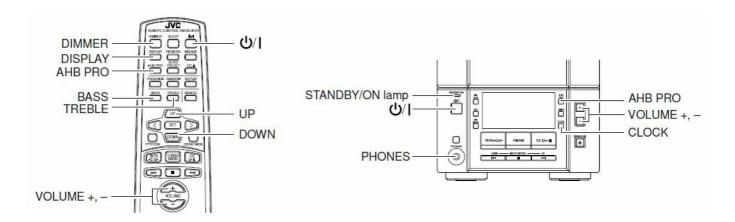


Turning the Power On and Off

Turning the System on —————

Press the U/Ibutton

The STANDBY/ON lamp lights in green. The System comes on ready to play the source it was for when the power was last turned off.

- For example, if the last thing you were doing was listening to a CD, you are now ready to listen to a CD again. If you wish, you can change to another source.
- If you were listening to the Tuner last, the Tuner comes on playing the station it was last set to.

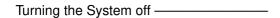

Press the U/Ibutton again

The STANDBY/ON lamp lights in red.

- Some power is always consumed even though power is turned off (called Standby Mode).
- To switch off the System completely, unplug the AC power cord from the wall outlet. When you unplug the AC power cord, the clock will be reset to 0:00.

Adjusting the Brightness (Dimmer)

You can adjust the brightness of the backlighting for the display.

When the System is turned on-

- To make the brightness of the backlighting darker, press the DIMMER button on the Remote Control.
- To make the brightness brighter, press the DIMMER button on the Remote Control again.

Adjusting the Volume

VOLUME 15

- Press the VOLUME + button to increase the volume or press the VOLUME button to decrease it.
- You can adjust the volume level between 0 and 40.

CAUTION

- DO NOT turn off (on standby) the Unit with the volume set to an extremely high level; otherwise a sudden blast of sound could damage your hearing, speakers and/or headphones when you turn on the Unit or start playing any source next time.
- REMEMBER you cannot adjust the volume level while the Unit is on standby.

For private listening

- Connect a pair of headphones to the PHONES jack. No sound comes out of the speakers.
- Be sure to turn down the volume before connecting or putting on headphones.

Reinforcing the Bass Sound (AHB PRO)

You can reinforce the bass sound to maintain rich, full bass at low volume (you can use this effect only for playback):

• To get the effect, press the AHB (Active Hyper Bass) PRO button.

- The BASS indicator lights up on the display.
- To cancel the effect, press the button again.
- The BASS indicator goes out.

Controlling the Tone (Bass/Treble)

You can control the tone by changing the bass and treble.

Adjusting the bass level ————

You can adjust the bass level (low frequency range level) between -5 and +5. (0: Flat)

1. Press the BASS button on the Remote Control.



2. Press the UP or DOWN button on the Remote Control to adjust the bass level.

Adjusting the treble level ————

You can adjust the treble level (high frequency range level) between -5 and +5. (0: Flat)



- 1. Press the TREBLE button on the Remote Control.
- 2. Press the UP or DOWN button on the Remote Control to adjust the treble level.

Showing the Clock Time


- In Standby mode, the digital clock appears on the display.
- When the System is turned on, you can display the digital clock any time.
- · To display the digital clock, press the CLOCK button on the
- Unit or DISPLAY button on the Remote Control.



To return to the previous mode, press the same button again.

Note: To let the clock work, you need to set the clock beforehand. (See "Setting the Clock")

Using the Tuner

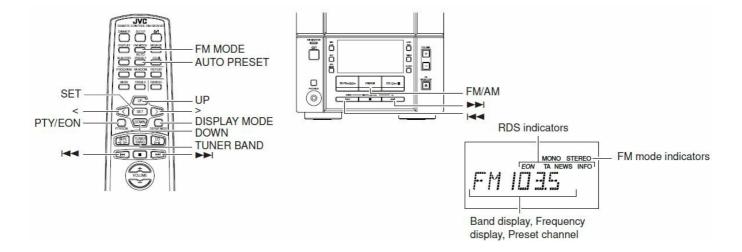

- When the System is in use, the display shows other items as well.
- For simplicity, only the items described in this section are shown here.

You can listen to FM and AM (MW/LW) stations. Stations can be tuned in manually, automatically, or from preset memory storage.

- · Before listening to the radio:
 - Make sure that both the FM and AM (MW/LW) antennas are correctly connected.

One touch radio —————

Just press the FM/AM button on the Unit (or the TUNER BAND button on the Remote Control) to turn on the System and start playing the station you were last tuned to.


- You can switch from any other sound source to the radio by pressing the FM/AM button on the Unit (or the TUNER BAND button on the Remote Control).
- Preset Tuning using the Remote Control (Possible only after presetting stations)

OP or DOWN
$$P - IZ \rightarrow FM I IIII$$
(After 1 second)

- Select the desired preset number using the UP, DOWN, > or < button on the Remote Control. After 1 second the display will show the preset number's band and frequency.
- **Example:** Press the UP button until the preset number 12 "P-12" appears.

Tuning In a Station

1. Press the FM/AM button on the Unit (or the TUNER BAND button on the Remote Control).

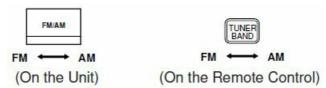

- The band and frequency you were last tuned to appear on the display.
- (If the last station was selected using the preset number, the preset number appears first.)
- Each time you press the button, the band alternates between FM and AM (MW/LW).


- 2. Select a station using one of the following methods.
 - **Manual Tuning:** Press the or button repeatedly to move from frequency to frequency until you find the station you want.
 - Auto Tuning: If you press and hold the button for one second or more, the frequency changes down, or up, automatically until a station is found.

Presetting Stations

You can preset up to 30 FM stations and up to 15 AM (MW/LW) stations using the Remote Control.

Note: Preset numbers may have been set to factory test frequencies prior to shipment. This is not a malfunction. You can preset the stations you want into memory by following one of the presetting methods below.


Presetting stations manually

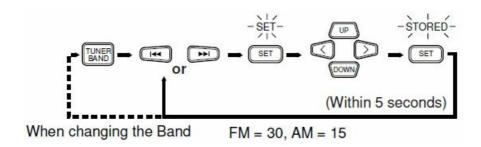

- 1. Select a band by pressing the TUNER BAND button.
- 2. Press the or button to tune in a station.
- 3. Press the SET button.
 - "SET" will flash for 5 seconds.
 - Within 5 seconds, proceed to the next step.
 - When the display returns to the one set in Step 2 after 5 seconds, press the SET button again.
- 4. Press the UP, DOWN, > or < button within 5 seconds to select the preset number.
 - UP or > button: Increases the preset number by 1.
 - DOWN or < button: Decreases the preset number by 1.
 - When the > or < button is held down, the preset number changes rapidly.
- 5. Press the SET button within 5 seconds.
 - "STORED" appears and after 2 seconds, the display returns to the broadcast frequency display.
- 6. Repeat above steps 1 to 5 for each station you want to store in memory with a preset number.
 - To change the preset stations, repeat the same steps as above.

Presetting stations automatically

In each band, you can automatically preset 30 FM and 15 AM (MW/LW) stations. Preset numbers will be allocated as stations are found, starting from the lowest frequency and moving up the frequency.

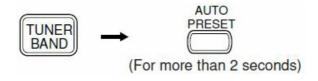


- 1. Select a band by pressing the FM/AM button on the Unit (or the TUNER BAND button on the Remote Control).
- 2. Press the AUTO PRESET button on the Remote Control for more than 2 seconds.
- 3. Repeat steps 1 2 for the other band.
 - If you want to change the preset stations, carry out the Manual Presetting for the desired preset numbers.

CAUTION: Even if the system is unplugged or if a power failure occurs, the preset stations will be stored for about 24 hours. However, in case the preset stations are erased, you will need to preset the stations again.

Changing the FM Reception Mode

- When you have tuned into an FM stereo broadcast, the STEREO indicator lights up and you can hear stereo
 effects.
- If an FM stereo broadcast is hard to receive or noisy, you can select Monaural mode. Reception improves, but you lose any stereo effect.

Press the FM MODE button on the Remote Control so that the MONO indicator lights up on the display.

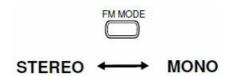

 To restore the stereo effect, press the FM MODE button on the Remote Control so that the MONO indicator goes off.

Receiving FM Stations with RDS

You can use the RDS (Radio Data System) by using the buttons on the Unit and the Remote Control. RDS allows FM stations to send additional signals with their regular program signals. For example, the stations send their station names, and information about what type of programs they broadcast, such as sports or music, etc. This Unit can receive the following types of RDS signals:

- PS (Program Service):
 - shows commonly known station names.
- PTY (Program Type):
 - shows types of broadcast programs.
- RT (Radio Text):
 - shows text messages the station sends.
- EON (Enhanced Other Networks):
 - provides the information about the types of the programs sent by other RDS stations.

What information can RDS signals provide?

The display shows RDS signal information that the station sends.

Showing the RDS signals on the display

Press the DISPLAY MODE button on the Remote Control while listening to an FM station.

Each time you press the button, the display changes to show information in the following order:

- PS (Program Service):
 - While searching, "PS" appears, then station name is displayed.
 - "NO PS" appears if no signal is sent.
- PTY (Program Type):
 - While searching, "PTY" appears, then broadcast program type is displayed. "NO PTY" appears if no signal is sent.
- RT (Radio Text):
 - While searching, "RT" appears, then a text message sent by the station is displayed. "NO RT" appears if no signal is sent.
- Frequency:
 - Station frequency (non-RDS service)

To search for a program using the PTY codes REMEMBER you must preset FM RDS stations to use the EON function. If not yet done.

Notes

- If searching finishes at once, "PS", "PTY" and "RT" will not appear on the display.
- If you press the DISPLAY MODE button while listening to an AM (MW/LW) station, the display only shows station frequency.
- RDS is not available for AM (MW/LW) broadcasts and for some FM broadcasts.

On characters displayed


When the display shows PS, PTY or RT signals:

- The display shows upper case letters only.
- The display cannot show accented letters; For example, "A" may represent accented "A's" like "Á, Â, Ã, Ä, Ä and Å".

Searching for a program by PTY codes

One of the advantages of the RDS service is that you can locate a particular kind of program by specifying the PTY codes.

To search for a program using PTY or TA codes:

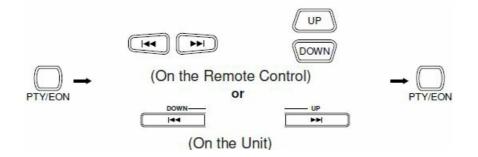

- 1. Press the PTY/EON button on the Remote
 - · Control once while listening to an FM station.
 - The display alternates between "PTY" and "SELECT."
- 2. Select the PTY code using the or button on the Unit (or the UP or DOWN button on the Remote Control) within 10 seconds.
 - Each time you press the button, the display shows a category in the following order: NEWS ↔ AFFAIRS

 ↔I NFO ↔ SPORT ↔ EDUCATE ↔ DRAMA ↔ CULTURE ↔ SCIENCE ↔ VARIED ↔ POP M ↔ ROCK M

 ↔M.O.R.M ↔ LIGHT M ↔ CLASSICS ↔ OTHER M ↔ WEATHER ↔ FINANCE ↔ CHILDREN ↔ SOCIAL

 A ↔ RELIGION ↔ PHONE IN ↔ TRAVEL ↔ LEISURE ↔ JAZZ ↔ COUNTRY ↔ NATIONAL ↔ OLDIES

 ↔ FOLK M ↔ DOCUMENT ↔ TRAFFIC ↔ NEWS
- 3. Press the PTY/EON button on the Remote Control again within 10 seconds.
 - While searching, the display alternates between "SEARCH" and the selected PTY code. The Unit searched 30 preset stations and stops when it finds a station of the category you have selected, then tunes into that station.

To continue searching after the first stop, press the PTY/ EON button on the Remote Control again while the display indications are flashing.

If no program is found, "NOTFOUND" appears on the display.

To stop searching at any time during the process, press the PTY/EON button on the Remote Control.

Descriptions of the PTY Codes

• NEWS: News

AFFAIRS: Topical program expanding on the current news or affairs

• INFO: Programs on medical service, weather forecasts, etc.

• SPORT: Sports events

EDUCATE: Educational programs

DRAMA: Radio plays

• CULTURE: Programs on national or regional culture

SCIENCE: Programs on natural sciences and technology

VARIED: Other programs like comedies or ceremonies

• POP M: Pop music

ROCK M: Rock music

• M.O.R.M: Middle-of-the-road music (usually called "easy listening")

• LIGHT M: Light music

• CLASSICS: Classical music

• OTHER M: Other music

• WEATHER: Weather information

• **FINANCE:** Reports on commerce, trading, the Stock Market, etc.

• CHILDREN: Entertainment programs for children

SOCIAL A: Programs on social activities

• RELIGION: Programs dealing with any aspect of belief or faith, or the nature of existence or ethics

• PHONE IN: Programs where people can express their views either by phone or in a public forum

• TRAVEL: Programs about travel destinations, package tours, and travel ideas and opportunities

• LEISURE: Programs concerned with recreational activities such as gardening, cooking, fishing, etc.

• JAZZ: Jazz music

• COUNTRY: Country music

• NATIONAL: Current popular music from another nation region, in that country's language

• OLDIES: Classic pop music

• FOLK M: Folk music

• DOCUMENT: Programs dealing with factual matters, presented in an investigative style

• TRAFFIC: Traffic announcement


Classification of the PTY codes for some FM stations may be different from the above list.

Example

A	A, Á, Â, Ã, À, Ä, Å	Н	Н	О	O, Ó, Ô, Õ, Ò, Ö, Ø	V	V		0	7	7	,		>	^
J	В	T L	I, Í, Î, Ì, Ï	P	Р	H	W	1	1	В	8	1	1	:	=
	C, Ć, Č	J	J	G	Q	X	X	В	2	9	9			١,	١
П	D, Đ	K	К	R	R, Ŕ, Ř	占	Υ	3	3	*	*	-	2 - -	1	•
E	E, É, Ê È, Ë	L	L	5	S, Ś, Š	2	Z, Ź, Ž	Ч	4	÷	+		_	11	II
F	F	М	М	T	Т			5	5		-	1		35 3	
G	G	Ν	N, Ñ	IJ	U, Ú, Û, Ù, Ü			6	6	,	3	(<		

Switching to a program type of your choice temporarily

EON (Enhanced Other Networks) is another convenient RDS service that allows this Unit to switch temporarily to a broadcast program of your choice (NEWS, TA or INFO) from the currently selected station, except if you are listening to a non-RDS station (all AM (MW/LW) stations or some FM stations).

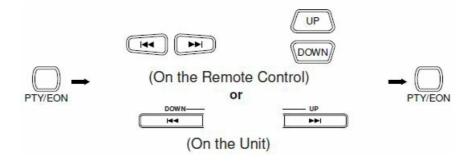

• The EON indicator lights up when tuned to a station which provides EON information.

- If an FM station does not broadcast EON information, EON cannot be activated.
- 1. Press the PTY/EON button on the Remote
 - Control twice while listening to an FMB station.
 - The display alternates between "EON" and "SELECT."
- 2. Select the program type with the or button on the Unit (or the UP or DOWN button on the Remote Control) within 10 seconds.
 - The display shows a program type in the following order:



TA: Traffic Announcement

NEWS: News

• **INFO:** Programs on medical service, weather forecast, etc.

OFF: Canceled

- 3. Press the PTY/EON button on the Remote Control again within 10 seconds to set the selected program type.
 - The selected program type indicator lights up on the display, and the Unit enters EON Standby mode.

Case 1: If there is no station broadcasting the program type you have selected

- The broadcast station being currently heard will continue to be heard.
- When a station starts broadcasting the program you have selected, this Unit automatically switches to the station. The program type (TA, NEWS or INFO) indicator starts flashing.
- When the program is over, this Unit goes back to the currently selected station, but still remains in EON Standby mode.

Case 2: If there is a station broadcasting the program type you have selected

- This Unit tunes to the station broadcasting the program. The program type (TA, NEWS or INFO) indicator starts flashing.
- When the program is over, this Unit goes back to the currently selected station, but still remains in EON Standby mode.

Case 3: If the FM station you are listening to is broadcasting the program type you have selected

- The broadcast station being currently heard will continue to be heard. The program type (TA, NEWS or INFO) indicator starts flashing.
- When the program is over, this Unit goes back to the currently selected station, but still remains in EON Standby mode.

Notes


• If the EON is in standby mode and the source (CD, TAPE, MD/ AUX) is changed or the power is switched off, then the EON mode will be released. When the band is set to AM (MW/LW), the EON is not activated. When


the band is set to FM again, the EON will be set to standby mode.

- When the EON is being operated (i.e. the selected program type is being received from the broadcast station) and if the DISPLAY MODE or button (or the </>
 -/>/DOWN/UP button on the Remote Control) is operated, the station will not switch back to the current selected station even after the program ends. The program type indicator remains in the display, indicating that the EON is in standby mode.
- When the EON is in standby mode and a radio broadcast is being recorded, be careful because the EON may
 be activated and a different program than the intended one may be recorded. When the EON mode is not
 required, release the EON mode.
- When the alarm signal is detected by EON, the station broadcasting the alarm is received with priority. "ALARM" is not displayed.

CAUTION: When the sound alternated intermittently between the station tuned in by the EON function and the current selected station, cancel the EON mode. This does not constitute malfunction of the Unit.

Using the CD Player

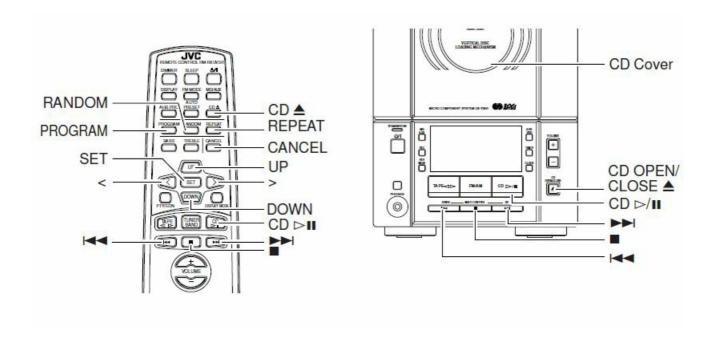

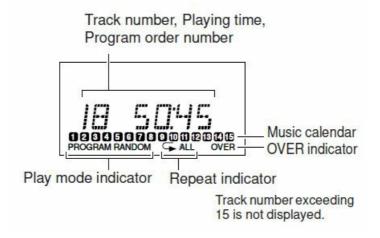


- When the System is in use, the display shows other items as well.
- For simplicity, only the items described in this section are shown here.

You can use Normal, Random, Program or Repeat Play. Repeat Play can repeat all the tracks or just one of the tracks on the CD. Here are the basic things you need to know to play a CD and locate the different tracks on it.

The quickest way to start a CD is with the one touch operation

- Press the CD #/8 button on the Unit or the Remote Control.
 - The power is automatically turned on. If a CD is already inserted, it will start playing from the first track.
 - If no CD is inserted, "NO DISC" appears on the display and the CD Player remains in Stop mode.

Inserting a CD

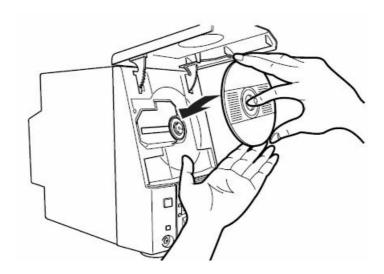


- 1. Press the CD OPEN/CLOSE button on the Unit (or the CD button on the Remote Control). The CD cover opens.
- 2. Place a CD, with its label side out as shown below. Press down on the portions around the CD's center hole until you hear a click.
- 3. Press the CD OPEN/CLOSE button on the Unit (or the CD button on the Remote Control) again to close the CD cover.
 - To close the CD cover and play the CD, you can just press the CD #/8 button.
 - You can place an 8 cm CD without an adaptor.
 - When a CD with 16 tracks or more is loaded, the OVER indicator will light up on the display.
 - If the CD cannot be read correctly (because it is scratched, for example), "00 0000" appears on the display.
 - You can insert a CD while listening to another source.

CAUTIONS

- DO NOT try to open or close the CD cover by hand as it will be damaged.
- When you place or take out a CD, do not let it fall. Be careful not to scratch your fingers with the CD cover.

Unloading a CD

Take out the CD as shown below.

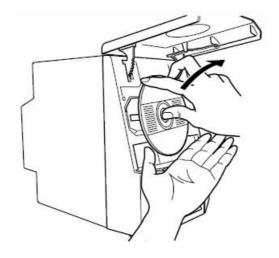

Basics of Using the CD Player — Normal Play


Playing a CD

- 1. Insert a CD.
- 2. Press the CD ▶/IIbutton.



- The first track of the CD begins playing.
- The track number that has already played disappears from the music calendar.
- The CD Player automatically stops when the last track of the CD has finished playing.

To stop playing the CD, press the button

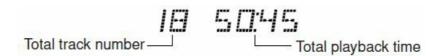

• The following information for the CD is displayed.

To stop playing and remove the CD, press the CD OPEN/ CLOSE button on the Unit or CD button on the Remote Control to open the CD cover. Then remove the CD.

To pause, press the CD >/IIIbutton. The playback time flashes on the display.

To cancel pause, press the same button again. Play continues from the point where it was paused.

Selecting a track

During playback, press the or botton (or the </>/DOWN/ UP button on the Remote Control) to select the track you want. The selected track starts playing.

- Press the button (or the >/UP button on the Remote Control) once to skip to the beginning of the next track.
- Press the button (or the </DOWN button on the Remote Control) to skip to the beginning of the track being played. Press twice quickly to skip to the beginning of the previous track.
- When the > or < button on the Remote Control is held down, the tracks are successively skipped.

Selecting a passage within a track

Holding down the lor lor button (or the DOWN/UP button on the Remote Control), during playback, will fast-forward/reverse the CD so you can quickly find a particular passage in the track you are listening to.


Programing the Playing Order of the Tracks

You can program the playing order of the tracks using the Remote Control.

- You can program up to 20 tracks in any desired order including the same tracks.
- You can only make a program when the CD Player is stopped.
- 1. Insert a CD.
- 2. Press the CD >/IIbutton.
- 3. Press the button to stop the CD.
- 4. Press the PROGRAM button.



- The System enters the programing mode and the PROGRAM indicator lights up.
- 5. Press the > or < button to select the track to program.
 - > button: Increases the track number by 1.
 - < button: Decreases the track number by 1.
 - When the > or < button is held down, the track number changes rapidly.

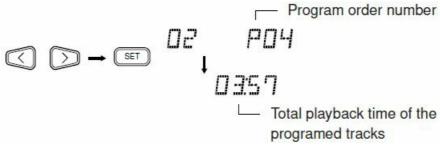

- 6. Press the SET button.
- 7. Repeat steps 5 and 6 to select the other tracks for the program.
 - You can see the total playback time of programed tracks on the display. You can also see the programed tracks on the music calendar.
- 8. Press the CD >/IIbutton.
 - The System plays the tracks in the order you have programed them.
 - You can skip to a particular program track by pressing the button (or the </>/DOWN/UP button on the Remote Control) during Program Play.
 - To stop playing, press the button once.
 - To confirm the programed tracks while the CD player is stopped, press the PROGRAM button; the tracks making up the program will successively be displayed in the programed order. To delete all the tracks in the program while the CD player is stopped, press the button. Pressing the CD button on the Remote Control (or the CD OPEN/CLOSE button on the Unit) to open the CD cover will also clear the

programed tracks. To exit from the program mode while the CD player is stopped, press the button to light off the PROGRAM indicator. All the programed tracks will be cleared.

Notes

- If the total playback time of the programed tracks exceeds 99 minutes 59 seconds, "——: ——" appears on the display.
- If you try to program the 21st track, "FULL" appears on the display for about 2 seconds.

Modifying the program

- Modify the contents of the program while the CD Player is stopped.
- Each time you press the CANCEL button, the last track in the program is deleted. To add new tracks to the end of the program, repeat above steps 5 to 7.


Playing at Random

- The tracks will play in no particular order when you use this mode.
- Press the RANDOM button on the Remote Control.
- The RANDOM indicator lights up on the display, and tracks will be played in random order.
- To skip a track during playback, press the button (or the >/UP button on the Remote Control) to jump to the next randomly selected track. Press the button (or the </DOWN button on the Remote Control) to jump back to the start of a track being played.
- To exit from Random Play mode, press the button.

Repeating Tracks

You can set the program or individual track currently playing to repeat as many times as you like. Press the REPEAT button on the Remote Control.

The Repeat indicator changes at each press of the button, as shown below.

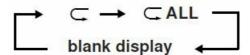

- C: Repeats one track.
- ALL: In Normal Play mode, repeats all the tracks.
 - In Program Play mode, repeats all the tracks in the program.
 - In Random Play mode, repeats all the tracks in random order.

To exit from Repeat mode, press the REPEAT button until the Repeat indicator on the display goes out.

- In Random Play Cannot be selected.
- Repeat mode remains in effect even when you change the play mode.


Locking the CD cover

- You can lock the CD cover and prohibit to unload the CD.
- This operation is possible only using the buttons on the unit.
- To prohibit unloading the CD, press the U/I button while holding the button. (If the CD cover is opened, close it first.) "LOCKED" appears for a while, and the CD cover is locked.
- To cancel the prohibition and unlock the CD cover, press the U/I button while holding the button. "UNLOCKED" appears for a while, and the CD cover is unlocked.

Note: If you try to unload the CD, "LOCKED" appears to inform you that the CD cover is locked.

Using the Cassette Deck

(Listening to a Tape)

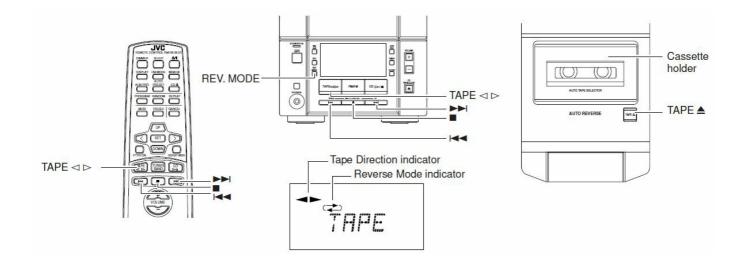

- When the System is in use, the display shows other items as well.
- For simplicity, only the items described in this section are shown here.

The Cassette Deck allows you to play and record audio tapes.

• With Automatic Tape Detection, you can listen to type I, II or IV tapes without having to change any settings.

The use of tapes longer than 120 minutes is not recommended, since characteristic deterioration may occur and these tapes easily jam in the pinch-rollers and the capstans.


One touch play

By pressing the TAPE button on the Unit or the Remote Control, the Unit will come on, "TAPE" appears on the display, and if a tape is in the deck, it will start to play. If no tape is loaded, the Unit will come on and wait for you to insert a tape, or select another function.

Standard Play

When the power is already on, you can use this basic procedure:

- 1. Press the TAPE button on the Unit.
- 2. When the cassette holder opens, put the cassette in, with the side you want to listen to facing up.

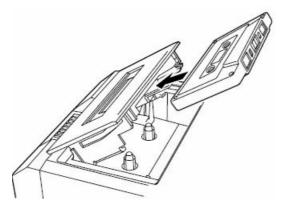

- If the cassette holder does not open, turn the Unit off, then back on and press the TAPE __button again.


- 3. Close the holder gently until it clicks.
- Press the TAPE
 □ button.
 - The tape is played in the direction shown by the Tape Direction indicator.
- 5. If you need to change the playback direction, press the TAPE button again.
 - The other Tape Direction indicator lights up and the tape playback direction changes.
 - To stop playing, press the button.
 - To remove the tape, stop the tape, and press the TAPE button on the Unit.

Fast-winding a tape


- Press the Por button to fast-wind the tape.
 - The Cassette Deck automatically stops when the tape reaches its end.

Reverse Mode

- You can set the cassette deck to play just one side of a tape, both sides once, or both sides continuously.
- Press the REV. (reverse) MODE button on the Unit.
- The indicator changes at each press of the button as shown.

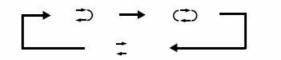


- : The Cassette Deck automatically stops after playing both sides of the tape. (Stops when playback in the ◀ direction is finished.)
- : The Cassette Deck continues to play both sides of the tape until the **button** is pressed.
- : The Cassette Deck automatically stops after playing one side of the tape.

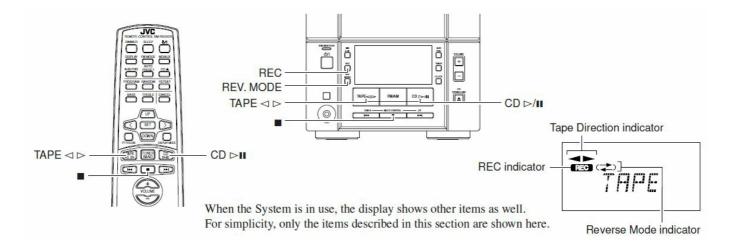

Recording onto a tape from any of the sound sources is simple. Just place a tape in the Cassette Deck, have the source ready, make one or two settings, and you're ready to record. For each source the procedure is a little bit different so we explain each separately. But first, here are a few things to make your recordings better.

Things to know before you start recording

- It may be unlawful to record or play back copyrighted material without the consent of the copyright owner.
- When you want to record onto both sides of a tape, you can set Reverse mode to do so. Recording
 automatically stops after recording in the direction. Therefore, make sure that the tape direction is when
 recording with Reverse mode on.
- The recording level, which is the volume at which the new tape is being made, is automatically set correctly, so it is not affected by the VOLUME control on the System. Nor is it affected by adjusting the sound effects. Thus, during recording you can adjust the sound you are actually listening to without affecting the recording level.

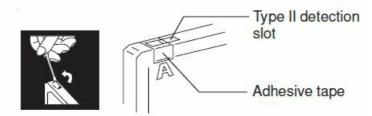

- Two small tabs on the back of the cassette tape, one for side A and one for side B, can be removed to prevent accidental erasure or recording.
- To record on a cassette with the tabs removed, you must cover the holes with adhesive tape first. However, when a type II tape is used, only cover part of the hole as shown, since the other part of the hole (Type II detection slot) is used to detect the tape type.
- Type I and Type II tapes can be used for recording.

Note: At the start and end of cassette tapes, there is leader tape which cannot be recorded onto. Thus, when recording CDs or radio broadcasts, wind on the leader tape first to ensure that the recording will be made without any music part lost.

CAUTION: If a recording you make has excessive noise or static, the Unit may have been too close to a TV which was on during the recording. Either turn off the TV or increase the distance between the TV and the System.

Standard Recording

You can record any sound source to tape as follows:

- 1. Insert a blank or erasable tape into the Cassette Deck.
- 2. If you want to record on both sides of a tape, press the REV. MODE button on the Unit until the indicator is lit.
 - When using Reverse mode, insert the tape so that it will be recorded in the forward direction.
- 3. Check the recording direction for the tape.
 - Make sure that the Tape Direction indicator is the same as that for the tape in the Cassette Deck. If the directions are different, press the TAPE button to correct the tape direction and then press the button to stop the tape.
- 4. Prepare the source by, for example, tuning in a radio station or turning on connected auxiliary equipment.
 - Note: For CD recording, refer to "CD Direct Recording".
- 5. Press the REC button on the Unit.
 - The REC indicator lights up and the System begins recording.

Notes for using Reverse mode for recording

When recording in Reverse mode, the System automatically stops when it reaches the end of the reverse direction. To record on both sides of a tape, make sure that the recording direction for the tape inserted is forwards , and that the Tape Direction indicator is also forwards , before you start recording.

To stop at any time during the recording process

Press the button.

CD Direct Recording

Everything on the CD goes onto the tape in the order it is on the CD, or according to the order you have set in a program.

- 1. Insert a blank or erasable tape into the Cassette Deck.
- 2. Insert a CD.
- 3. Press the CD / button.
- 4. Press the button.
 - If you want to record specific tracks only, program the tracks beforehand. You can check their total playback time on the display during programing.
- 5. If you want to record on both sides of a tape, press the REV. MODE button on the Unit until the indicator is lit.
 - Make sure that the recording direction for the tape and the Tape Direction indicator are correct. (See "Notes for using Reverse mode for recording")
- 6. Select whether to have pauses left between recorded selections.
 - If nothing is done, a non-recorded pause of about four seconds will be automatically left between selections.
 - If you do not want pauses left between selections, do the following before proceeding to the next step.

 Press the CD #/8 button twice. The CD player enters Pause mode.
- 7. Press the REC button on the Unit.

- The REC indicator lights up and the System begins recording.
- When recording a CD onto tape with Reverse mode on: If a song is recorded for more than 12 seconds (which corresponds to the length of leader tape) but not finished before the first side of tape comes to an end, this song will automatically be recorded on the second side from its beginning to avoid being split on both sides. If a song is recorded for less than 12 seconds before the first side of tape comes to an end, the song preceding this song will also be recorded on the second side from its beginning as it may not be completely recorded on the first side because of leader tape.
- After the CD player has played the entire CD, or all the programed tracks, the tape automatically stops.


 To stop at any time during the recording process, press the button. The tape stops after 4 seconds.

Note: When making SLEEP timer settings while doing CD Direct recording, set enough time to allow for the CD to finish playing, otherwise the power will go off before recording is completed.

One track recording

- 1. Insert a blank or erasable tape into the Cassette Deck.
- 2. Play the track on the CD you wish to record.
- 3. Press the REC button on the Unit.
 - The CD player returns to the beginning of that track and the track is recorded on the tape. After recording, the CD player and Cassette Deck automatically stop.

Using External Equipment

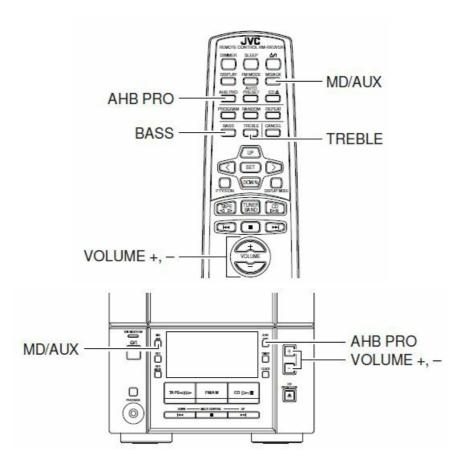

Listening to External Equipment

You can listen to external equipment such as an MD recorder, turntable or other auxiliary equipment.

- First make sure that the external equipment is properly connected to the System.
- 1. Set the VOLUME control to the minimum position.
- 2. Press the MD/AUX button. "AUX" appears on the display.



- 3. Start playing the external equipment.
- 4. Adjust the VOLUME control to the desired listening level.
- 5. Apply sound effects, if you wish.
 - Press the AHB PRO button to reinforce the bass sound.
 - Press the BASS/TREBLE button on the Remote Control to control the tone. (See "Controlling the Tone (Bass/Treble)".)
 - To exit from MD/AUX mode, select another source.

Note: For operation of the external equipment, refer to its Instructions.

Recording the System's Source to External Equipment

You can record the System's sources to external equipment which is connected to the LINE OUT or OPTICAL DIGITAL OUT terminals of the System, such as cassette deck or MD recorder, etc.


• First make sure that the external equipment is properly connected to the System.

Play the System's CD Player or Cassette Deck, or tune into a station

• The recording level is not affected by the VOLUME level. It is not affected by any sound effect, either.

Note: For operation of the external equipment, refer to its Instructions.

Using the Timers

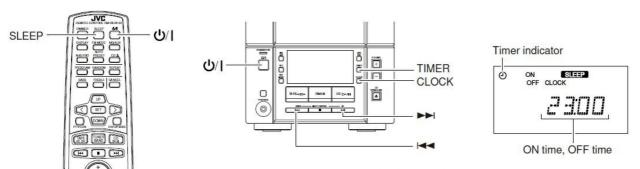


When the System is in use, the display shows other items as well. For simplicity, only the items described in this section are shown here.

The timers let you control listening and recording functions automatically.

Setting the Clock

- When you plug the AC power cord into the wall outlet, the CLOCK indicator flashes on the display.
- You can set the clock whether the System is on or off.

Notes

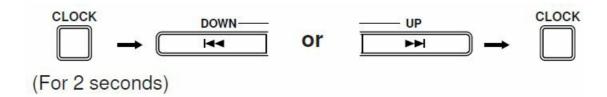

- The clock must be correctly set for the timers to work.
- The procedure must be completed within 2 minutes. Otherwise, the setting is cleared and must be repeated from the beginning.
- 1. Press the CLOCK button on the Unit for more than 2 seconds.
 - The hour digits rapidly flash on the display.
- 2. Press the lor lor button to set the hour.
 - Pressing the button moves the hour forwards and pressing the button moves it backwards.

 Hold down the button to move the hour rapidly.
- 3. Press the CLOCK button.
 - The minute digits rapidly flash on the display.
- 4. Press the or set the minute.
 - Pressing the button moves the minute forwards and pressing the button moves it backwards. Hold down the button to move the minute rapidly.
- 5. Press the CLOCK button again.
 - The selected time is set and the seconds start counting from 0.
 - The CLOCK indicator remains lit on the display.

CAUTION: If the System is unplugged, or a power failure occurs, the timer setting will be lost. You will need to reset the clock first, then the timer.

Note: The clock may gain or lose 1 to 2 minutes per month.


Setting the Daily Timer

Once you have set the Daily Timer, the timer will be activated at the same time every day. It can be canceled and re-activate whenever you wish. The Timer indicator on the display shows when the Daily Timer you have set will be activated.


Notes

- Finish each step within 30 seconds. Otherwise, the setting is cleared and the procedure must be repeated from the beginning.
- The clock must be correctly set for the timers to work. If the clock has not been set, the CLOCK indicator will flash on the display when you press the TIMER button for more than 2 seconds, and then the display alternates

1. Press the TIMER button on the Unit for more than 2 seconds.

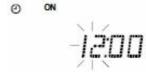

- The ON indicator lights up, and then the current ON time flashes on the display. (Example: 12:00)
- 2. Set the ON time. (Example: 12:15)

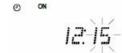

- Press the or button on the Unit to set the hour you want the Unit to come on. Pressing the button moves the hour forwards and pressing the button moves it backwards. Hold down the button to move the hour rapidly. Press the TIMER button to adjust the minute.
- 3. Set the OFF time. (Example: 13:15)

1. Press the TIMER button on the Unit. The hour digits of the current OFF time flashes, and then the OFF indicator lights up on the display.

- 2. Press the ¢ or 4 button on the Unit to set the time you want the Unit to be turned off. Pressing the ¢ button moves the hour forwards and pressing the 4 button moves it backwards. Hold down the button to move the hour rapidly. Press the TIMER button again to adjust the minute.
- 4. Select the music source.

- 1. Press the TIMER button on the Unit. "TUNER" flashes on the display.
- 2. Press the button to select the music source you want to listen to. The display changes as shown below.
- 5. Set the volume level.



- 1. Press the TIMER button on the Unit.
 - The current volume setting flashes on the display.
- 2. Press the or button to select the volume level.
 - : The current volume level will be used. 0 to 40 : When the timer is turned on, the Volume will be automatically set to the selected level.
- 6. Press the TIMER button on the Unit.

- The timer setting is completed and the display returns to the indications before you set the timer. The Timer indicator remains lit.
- 7. Before turning off the System, prepare the music source selected in step 4.
 - TUNER: Tune in to the desired station.
 - REC TUNER: See "Setting the Recording Timer."
 - CD: Insert a CD.
 - TAPE: Insert a tape.
- 8. Press the U/Ibutton to turn off the System.

To cancel the timer, press the TIMER button for more than 2 seconds. The Timer indicator goes out on the display. To re-activate the canceled timer, press the TIMER button for more than 2 seconds to light the Timer indicator. Then, press the TIMER button until the display returns to the previous indications. The Timer indicator should remain lit.

To confirm the timer settings, cancel the timer once by pressing the TIMER button, and press the button again for more than 2 seconds. Then, press the TIMER button repeatedly, to see the current timer settings (ON time, OFF time, source, and volume). Press the TIMER button to set the timer again. To change the timer setting, repeat the setting procedure from the beginning.

• When the timer turns on, the Timer indicator starts flashing.

Note: If the Unit is turned on when the timer-on time comes, Daily Timer does not work.

CAUTION: If the System is unplugged, or a power failure occurs, the timer will be canceled. You will need to reset the clock first, then the timer.

Setting the Recording Timer

• With the Recording Timer, you can make a tape of radio broadcast automatically.

How Recording Timer actually works

The Unit automatically turns on, tunes into the last received station, and starts recording when the on-time comes. Then, when the offtime comes, the Unit automatically turns off (stands by). The timer setting remains in memory until you change it.

Notes

- Finish each step within 30 seconds. Otherwise, the setting is cleared and the procedure must be repeated from the beginning.
- The clock must be correctly set for the timers to work. If the clock has not been set, the CLOCK indicator will flash on the display when you press the TIMER button for more than 2 seconds, and then the display alternates between "ADJUST" and "CLOCK" for about 5 seconds.
- 1. Press the **U**/lbutton to turn on the System.
- 2. Tune in to the desired station.



- 3. Press the TIMER button on the Unit for more than 2 seconds.
 - The ON indicator lights up, and then the current ON time flashes on the display. (Example: 12:00)
- 4. Set the ON time. (Example: 12:15)




- Press the or button on the Unit to set the hour you want the Unit to come on.
- Pressing the button moves the hour forwards and pressing the button moves it backwards.


 Hold down the button to move the hour rapidly. Press the TIMER button to adjust the minute.
- 5. Set the OFF time. (Example: 13:15)



- 1. Press the TIMER button on the Unit.
 - The hour digits of the current OFF time flashes, and then the OFF indicator lights up on the display.

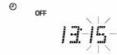

- 2. Press the button on the Unit to set the time you want the Unit to be turned off. Pressing the button moves the hour forwards and pressing the button moves it backwards. Hold down the button to move the hour rapidly. Press the TIMER button again to adjust the minute.
- 6. Press the TIMER button on the Unit.
- 7. Press the or less button until "TUNER" appears and the REC indicator lights up on the display.
 - The display changes as shown below.

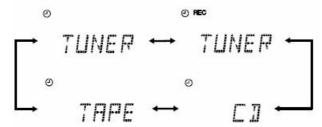

- 8. Set the volume level
 - 1. Press the TIMER button on the Unit.
 - The current volume setting flashes on the display.
 - 2. Press the or button to select the volume level.
 - -: The current volume level will be used.
 - 0 to 40: When the timer is turned on, the Volume will be automatically set to the selected level.
 - To turn off the volume while the Recording Timer is working, set the volume level to "0".
- 9. Press the TIMER button on the Unit. The timer setting is completed and the display returns to the indications before you set the timer. The Timer indicator remains lit.
 - Note: If you change the station before turning off the System, the last received station will be recorded.
- 10. Insert a blank or erasable tape into the Cassette Deck.
 - Make sure that the tape has the enough length for recording.
- 11. Press the **U**/Ibutton to turn off the System.

To cancel the timer, press the TIMER button for more than 2 seconds. The REC and Timer indicators go out on the display. To re-activate the canceled timer, press the TIMER button for more than 2 seconds to light the REC and Timer indicators. To confirm the timer settings, cancel the timer once by pressing the TIMER button, and press the button again for more than 2 seconds. Then, press the TIMER button repeatedly, to see the current timer settings (ON time, OFF time, source, and volume). Press the TIMER button to set the timer again. To change the timer setting, repeat the setting procedure from the beginning.

• When the timer turns on, the Timer indicator starts flashing.

Note: If the Unit is turned on when the timer-on time comes, Recording Timer does not work.

CAUTION: If the System is unplugged, or a power failure occurs, the timer will be canceled. You will need to reset the clock first, then the timer.

Setting the Sleep Timer

When a source is playing, use the Sleep Timer to turn the System off after a certain number of minutes. By setting the Sleep Timer, you can fall asleep to music and know that your System will turn off by itself rather than play all night.

• You can only set the Sleep Timer when the System is on.

Note: The clock must be correctly set for the timers to work. If the clock has not been set, the CLOCK indicator will flash on the display when you press the TIMER button for more than 2 seconds, and then the display alternates between "ADJUST" and "CLOCK" for about 5 seconds.

- 1. Play a CD or a cassette tape, or tune in to the desired station.
- 2. Press the SLEEP button on the Remote Control.
 - The SLEEP indicator lights up.
- 3. Set the length of time you want the source to play before shutting off.

$$\begin{array}{c} \longrightarrow 10 \rightarrow 20 \rightarrow 30 \rightarrow 60 \\ \bigcirc \text{Canceled} \leftarrow 120 \leftarrow 90 \end{array}$$

• Each time you press the SLEEP button, it changes the number of minutes shown on the display in this sequence:

After setting the number of minutes for the Sleep Timer, the display will stop flashing and return to the previous state.

The System is now set to turn off after the number of minutes you set.

To confirm the Sleep Time

• When the SLEEP button is pressed, the remaining sleep time is displayed.

To cancel the Sleep Timer setting

- Press the SLEEP button until the SLEEP indicator goes out on the display.
- Turning off the System also cancels the Sleep Timer.

Care and Maintenance

Handle your CDs carefully, and they will last a long time.

Compact Discs





 Only CDs bearing this mark can be used with this System. However, continued use of irregular shape CDs (heart-shape, octagonal, etc.) can damage the System.



- Remove the CD from its case by holding it at the edges while pressing the case's center hole lightly.
 - Do not touch the shiny surface of the CD, or bend the CD.



- Put the CD back in its case after use to prevent warping.
- Be careful not to scratch the surface of the CD when placing it back in the case.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.



A dirty CD may not play correctly. If a CD does become dirty, wipe it with a soft cloth in a straight line from center to edge.

CAUTION: Do not use any solvent (for example, conventional record cleaner, spray thinner, benzine, etc.) to clean a CD.


General Notes

In general, you will have the best performance by keeping your CDs and the mechanism clean.

- Store CDs in their cases, and keep them in cabinets or on shelves.
- Keep the system's CD cover closed when not in use.

Cleaning the Lens

If the lens in the CD pickup is dirty, sound degradation may take place. Open the CD cover and clean the lens as shown.

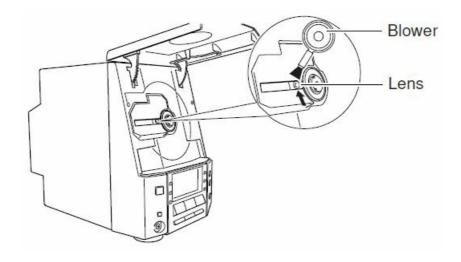

• Use a blower (available from a camera store) to blow dust off the lens.



• If there are fingerprints, etc. on the lens, gently wipe clean with a cotton swab.

Moisture Condensation

Moisture may condense on the lens inside the System in the following cases:



- After turning on heating in the room
- In a damp room
- If the System is brought directly from a cold to a warm place

Should this occur, the System may malfunction. In this case, leave the System turned on for a few hours until the moisture evaporates, unplug the AC power cord, and then plug it in again.

Cassette Tapes



• If the tape is loose, it may get stretched, cut, or caught in the cassette. Take up the slack by inserting a pencil in one of the reels and rotating.




· Do not touch the tape surface.



- Do not store the tape:
 - In dusty places
 - In direct sunlight or heat
 - In moist areas
 - o On a TV or speaker
 - Near a magnet

Cassette Deck

- If the heads, capstans, or pinch-rollers of the Cassette Deck become dirty, the following may occur:
 - Loss of sound quality
 - Discontinuous sound
 - Fading
 - Incomplete erasure
 - Difficulty in recording
- Clean the heads, capstans, and pinch-rollers using a cotton swab moistened with alcohol.

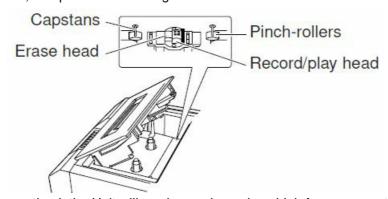

- If the heads become magnetized, the Unit will produce noise or lose high frequency notes.
- To demagnetize the heads, turn off the Unit, and use a head demagnetizer (available at electronics and record shops).

Troubleshooting

- If you are having a problem with your System, check this list for a possible solution before calling for service.
- If you cannot solve the problem from the hints given here, or the System has been physically damaged, call a qualified person, such as your dealer, for service.

Symptom	Possible Cause	Action				
No sound is heard.	 Connections are incorrect, or loose. Headphones are connected. 	 Check all connections and make corrections. Disconnect the headphones. 				
Poor radio reception	 Antennas are disconnected. The AM Loop Antenna is too close to the System. The FM Wire Antenna is not properly extended and positioned. 	 Reconnect the antenna securely. Change the position and direction of the AM Loop Antenna. Extend FM Wire Antenna to the best reception position. 				
The CD does not play.	The CD is upside down.	Put the CD in with the label side up.				
The CD skips.	The CD is dirty or scratched.	Clean or replace the CD.				
The CD cover does not open or close.	The AC power cord is not plugged in.	Plug the AC power cord.				
The cassette holder cannot be opened.	During tape playing, the power cord was unplugged.	Plug in the power cord, press the $0/1$ button, and then press the TAPE \triangle button.				
Unable to record.	Cassette record protect tabs are removed.	Cover the holes on the back edge of the cassette with adhesive tape.				
Operations are disabled.	The built-in microprocessor has malfunctioned due to external electrical interference.	Unplug the System then plug it back in.				
Unable to operate the Remote Control.	 The path between the Remote Control and the sensor on the Unit is blocked. The batteries have lost their charge. 	Remove the obstruction.Replace the batteries.				

Specifications

UX-V30R (CA-UXV30R and SP-UXV30) UX-V330R (CA-UXV330R and SP-UXV330R)

Amplifier

- Output Power 44 W (22 W + 22 W) at 4 W (Max.)
 - 40 W (20 W + 20 W) at 4 W (10% THD)
- Input Sensitivity/Impedance (1 kHz)
 - **LINE IN (AUX):** 400 mV/48 kW
- Output Sensitivity/Impedance (1 kHz)
 - **LINE OUT:** 260 mV/5.8 kW
 - Optical out: -21 dBm -15 dBm
 Speaker terminals: 4 W 16 W
 - ∘ **Phones:** 16 W 1 kW
 - 0 mW 15 mW per channel output into 32 W

Cassette Deck

Frequency Response

Type I (Normal): 50 Hz – 14 kHz
 Type II (CrO2): 50 Hz – 15 kHz

• Wow and Flutter: 0.15% (WRMS)

- Signal-To-Noise Ratio: 90 dB
- Wow And Flutter: Immeasurable

Tuner

- FM Tuner
 - Tuning Range: 87.5 MHz 108.0 MHz
- AM Tuner
 - **Tuning Range:** (MW) 522 kHz 1,629 kHz
 - (LW) 144 kHz 288 kHz

Speaker Specifications

(each unit)

- Speakers: Woofer 9 cm x 1, Tweeter 4 cm x 1
- Impedance: 4 W
- **Dimensions:** 140 mm x 230 mm x 226 mm (W/H/D)
- Mass: Approx. 1.9 kg

General

- Dimensions: 438 mm x 234 mm x 279 mm (W/H/D)
- Mass: Approx. 7.0 kg

Power Specifications

- Power Requirements: AC 230 V \(\square, 50 Hz \)
- Power Consumption: 50 W (power on mode)
 - 3.7 W (in Standby mode)

Design and specifications are subject to change without notice.

For Customer Use

Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

- Model No.:
- Serial No.:

Documents / Resources



JVC UX-V30RE Micro Component System [pdf] Instructions

UX-V30RE, UX-V30RE Micro Component System, Micro Component System, Component System, UX-V330RE

References

- <u>Suser Manual, users guide, operation instruction</u>
- <u>Suser Manual, users guide, operation instruction</u>
- User Manual

Manuals+,