



## K F AT-Q40C Action Camera User Manual

[Home](#) » [K F](#) » K F AT-Q40C Action Camera User Manual 

### Contents

- [1 K F AT-Q40C Action Camera](#)
- [2 Operation note](#)
- [3 Foreword](#)
- [4 Product Feature](#)
- [5 Function introduction](#)
- [6 Waterproof case](#)
- [7 Open guidance](#)
- [8 Use operation instructions](#)
- [9 Accessories](#)
- [10 Assembly diagram](#)
- [11 Basic specification of the camera](#)
- [12 Documents / Resources](#)
- [13 Related Posts](#)



**K F AT-Q40C Action Camera**



## Operation note

1. This product is high precision products, do not fall or impact.
2. Please don't close to the camera with strong magnetic objects, such as magnets and motors, in addition to avoid the product near the issue of strong radio waves of objects, strong magnetic field may can cause product failure, or destroy images and sound.
3. Please don't place the camera at a higher temperature or direct sunlight.
4. Please choose the brand Micro SD card, ordinary card can not guarantee normal use.
5. Please don't store the micro SD card in or near the strong magnetic place to avoid missing Micro SD card storage data.
6. Charging process, if overheating, smoke, or smell, please pull out the power immediately, stop charging to avoid fire.
7. Please put the product out of reach of children when charging, power line may cause a child's accidental suffocation or shock
8. Please send the product in a cool, dry place and the vast dust.

## Foreword

This sport camera is a High-end HD camera product which could meet the customer's needs , with powerful function for take HD videos, photos, Slow motion, voice recording, video display, and changeable battery , it's the best choice for outdoor sports photography, home security monitoring, waterproof photography, you can record your life whenever and wherever you want.

## Multipurpose



Outdoor sports



Marine Sports



Diving




Home burglar

## Product Feature

- Provide waterproof function waterproof shell, convenient for you to shoot wonderful water sports, waterproof shell can be deep waterproof 30 meters
- Shooting function


- Slow photography function
- Video resolution Max 4K @60fps
- 170° Wide-angle lens
- Low power consumption
- 2.0 Inch IPS screen
- Changeable battery, easy to replace , prolong the service life
- Charging function while recording
- HD video output function
- Supports up to 128GB memory card
- Multiple video recording formats 4K, 2.7K, 1080P, 720P
- H.264 format video recording
- A variety of shooting modes: normal,auto, burst,timer



## Function introduction


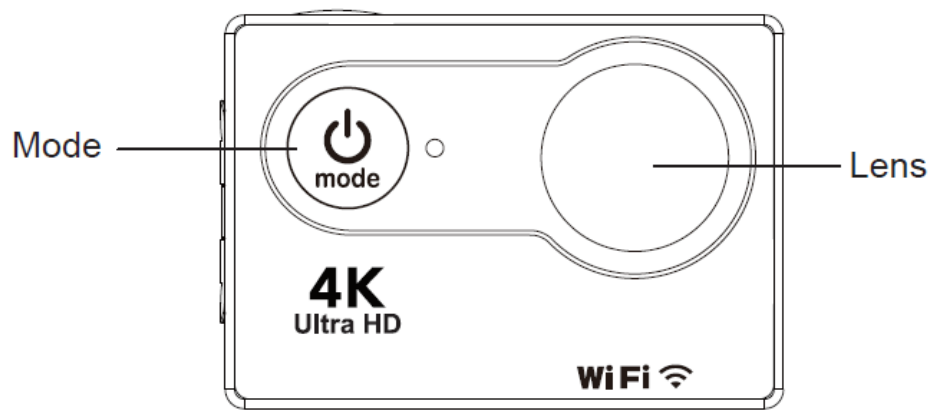


Blue light, flashing  
when WiFi is  
turned on

    Red light, always  
on when charging,  
and off when fully  
charged

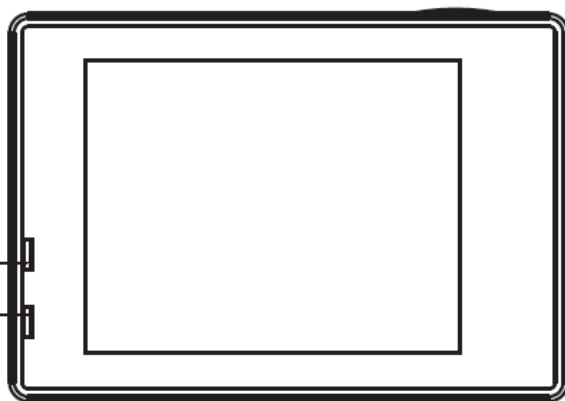

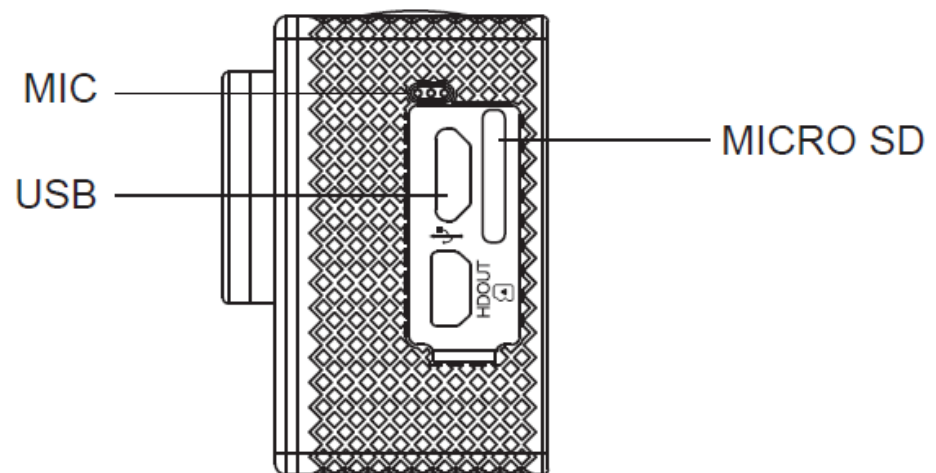
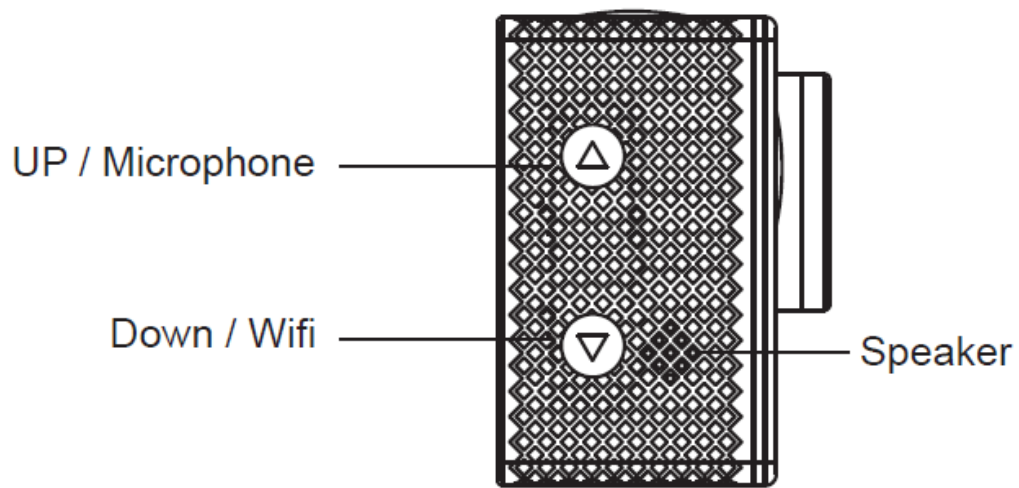


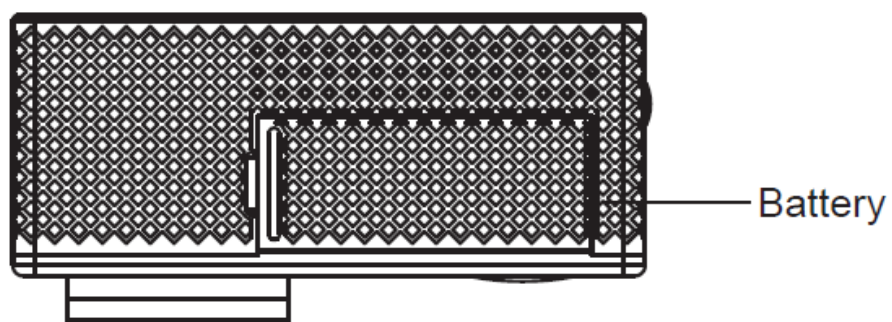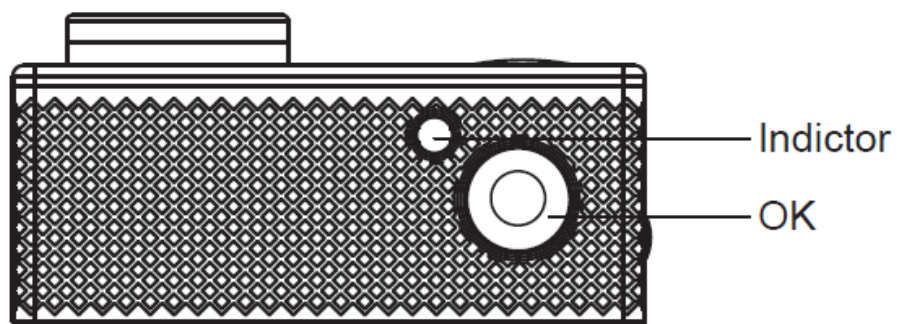




### Waterproof case


     
## Open guidance

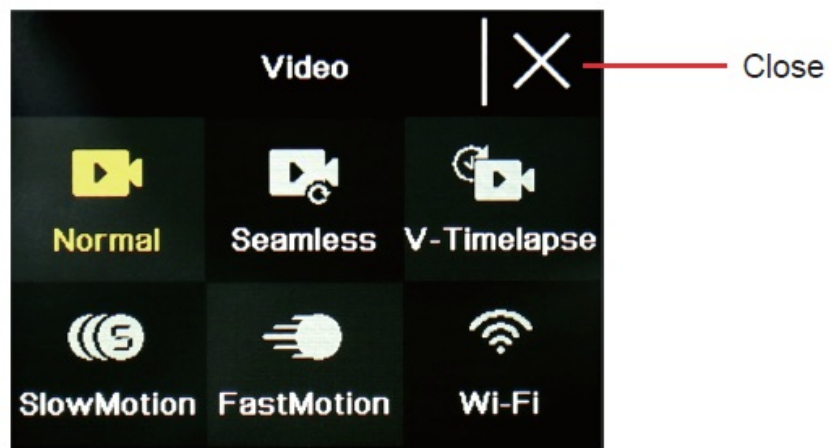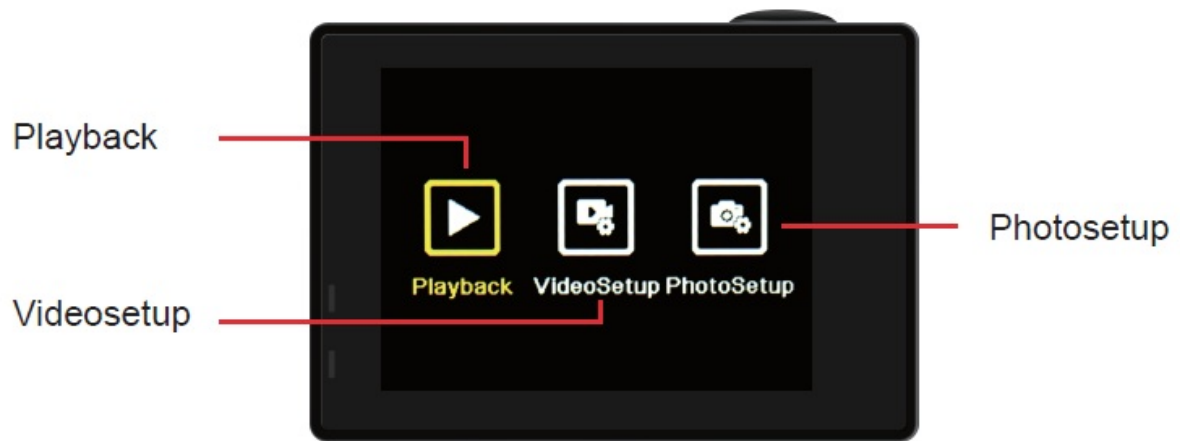



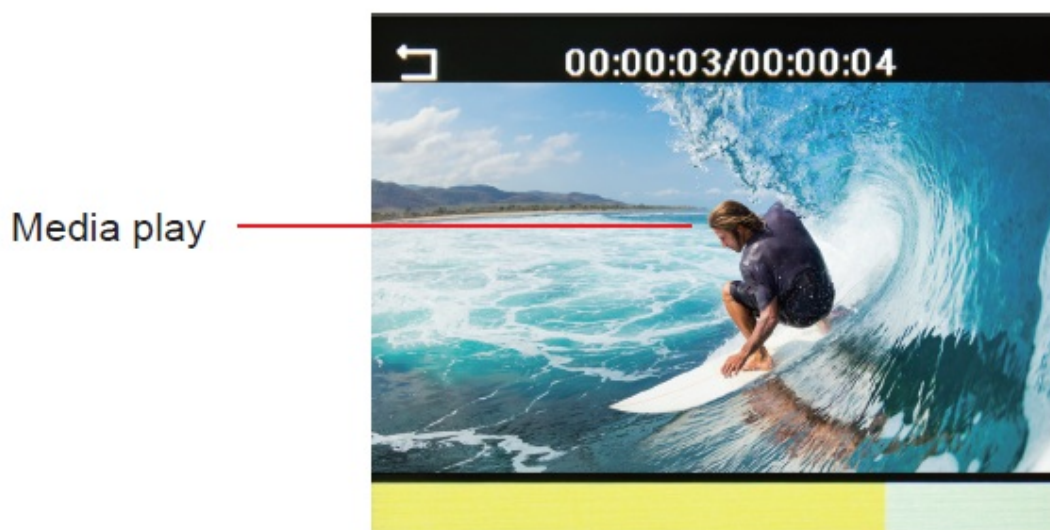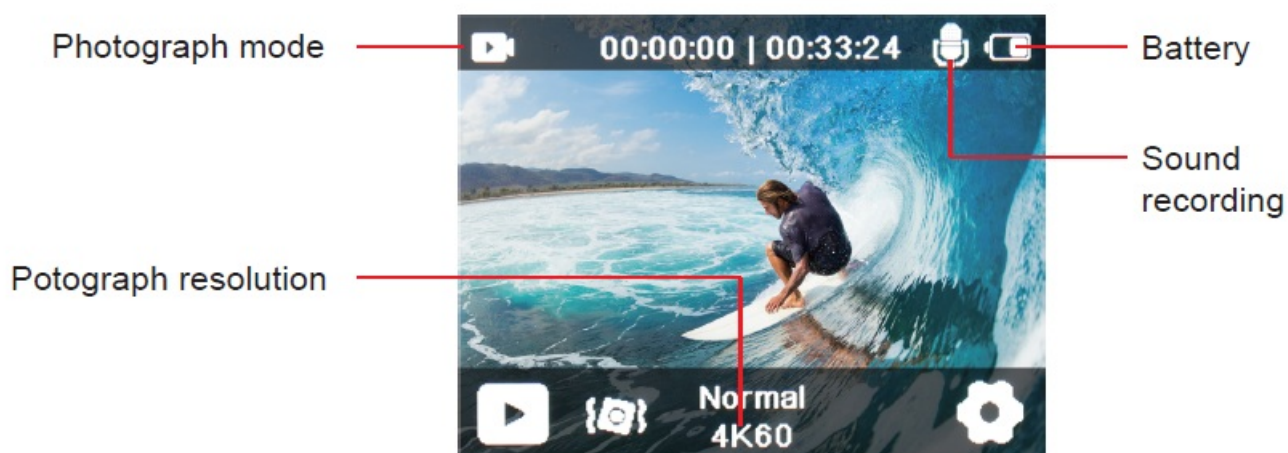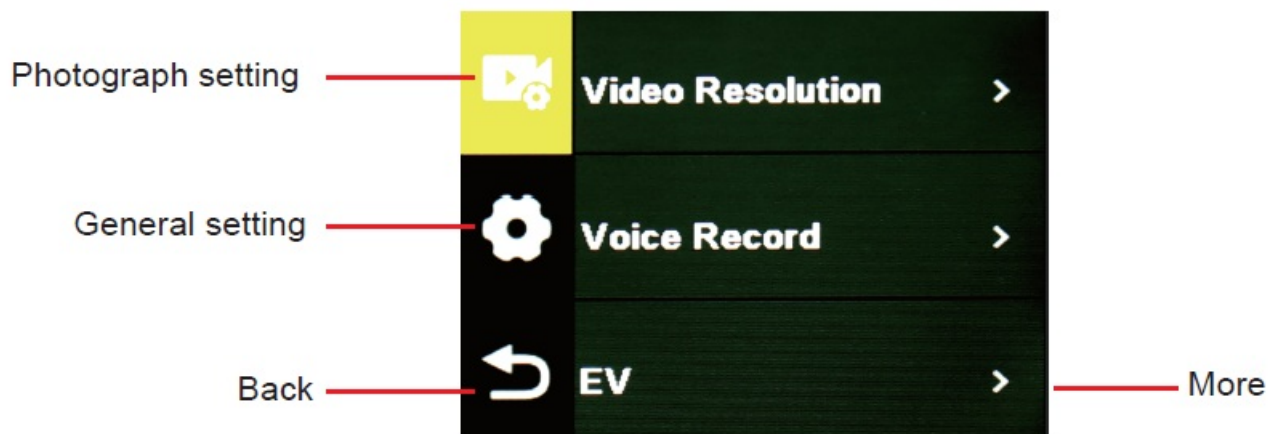

## Use operation instructions

### Insert Micro SD card

**Note:** Please select the brand MicroSD card, formatted on the computer and then use, ordinary neutral card can not guarantee the normal use of work.

### Install and remove the battery

- Pull the cover down can open the battery cover.

- According the battery marked positive and negative symbols and arrows indicate direction, the correct battery into the camera until the installation is in place.
- Battery power indicator: please refer to the icon.
- Remove the battery, removed out of the battery after open battery cover .

## **Battery charging**

- with USB line connection to computer or power adapter ,the camera can be charged.
- Can charge while recording.
- shutdown state can also charge.

## **Camera on / off**

Long press the mode key 3-5 seconds can turned on / off the camera.

### **turn WiFi on/off**

Turn on WiFi: Short press the Down key to open the wifi, the wifi symbol will show at the right up corner, and wifi information will show on the screen .

Turn off WiFi: after opening WiFi, short press the Down key to turn off the wifi.

## **mode conversion**

Long press the mode button to turn on, then it will automatically jump to the video mode, short press mode button to switch between video / photo mode.

In the mode of video/photo,long press OK button to enter the video setting.

### **how to set video and video options**

Switch camera into the video mode, press the OK button to start recording, press OK button again to stop recording.

In the mode of video/photo,long press the OK button to enter the setting interface :

## **Photo and photo settings**

Switch the camera to photo mode,short press the OK button to take a photo,long press the OK button to enter the setting.

### **Playback and delete video/photo**

1. Switch the camera to playback mode,short press the OK button to playback the video/photo. Press the up/down key to select the video/photo to playback.
2. In the mode of playback , long press the OK button to delete the video/photo
3. In the mode of playback, press down button to select the " Delete"icon, then press mode button and UP/Down button to select the video that you want to delete, finally long press OK button to delete the video

## **Storage**

Take out the SD card and use the reader to copy the video/photo to computer to play

### **WiFi install and use**

Before use the WiFi function, please download and install the application "iSmart DV" on your smart phone.

**Note** search"iSmart DV"from app store for IOS ; Search"iSmart DV"from Google Play Store for android. Steps to connect wifi. A, Short press down button to turn on the WIFI, there will show WiFi information on the screen.

B,Open the WiFi on your phone, search the wifi name "sport-cameras" and connect (the original password is 1234567890); C,Open "iSmart DV" APP program ,with the APP, you can real-time preview is shooting pictures, remote video, photos, file playback/download/delete/share.



## Accessories



Waterproof Housing



Back Clip



Clip



Bicycle bracket



Switch support 1



Switch support 2



Switch support 3



Fixed base




Pedestal 2



Waterproof housing base with screw



Commutator

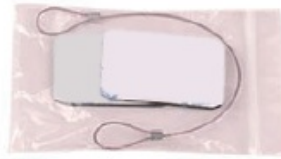

3M mat&Wire cable



Ribbon



Shell



Helmet pedestal




Bandage



USB Cable

## Assembly diagram

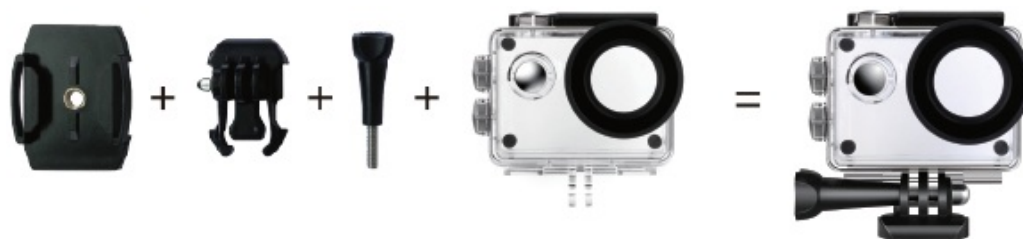

## Basic specification of the camera


LCD	2.0 inch IPS HD screen
Color	Black
WIFI	Support
Lens	170 wide angle lens
Image resolution	20MP/16MP/14MP/10MP/8MP/5MP

Video resolution	4K 60/30fps
	2.7K 60/30fps
	1080P/60/30fps
	720P/120/60/30fps
Memory	Micro SD card (maximum support 128GB)
Data Connections	USB 2.0/HDMI/WIFI
Battery	Polymer lithium battery
Charging time	About 1.5 hours
EIS	Support
Dimensions	59.4*30.8*41.3mm
Language	Chinese, German, English, Spanish, French, Italian, Japanese,

	Portuguese, Russian, Traditional Chinese
Accessories	back clips, bike bracket, waterproof case, long stand, short stand,
	vertical stand, arc stand, round stand, bandages, tie, wire rope,
	3M stickers, dust cover, USB cable, cleaning clothes, manual,etc.
Application	Extreme sports, outdoor sports, cycling, diving, driving records, etc.

**Note:** Specifications could be subject to modification due to updating, please regard the actual product as the standard form.

## Documents / Resources

	<a href="#">K F AT-Q40C Action Camera</a> [pdf] User Manual AT-Q40C, Action Camera, AT-Q40C Action Camera
---	--