



KAIDENG WVC-700 WVC Series Communication type Intelligence Micro grid-Connected Inverter User Manual

[Home](#) » [KaiDeng](#) » KAIDENG WVC-700 WVC Series Communication type Intelligence Micro grid-Connected Inverter User Manual 

KAIDENG WVC-700 WVC Series Communication type Intelligence Micro grid-Connected Inverter User Manual



WVC series communication type intelligence Micro grid-connected inverter



Contents

- [1 Features](#)
- [2 Specification](#)
- [3 System diagram](#)
- [4 Description of the connector and cable core of the micro inverter](#)
- [5 LED indicator function of micro inverter](#)
- [6 Appearance description of micro inverter](#)
- [7 Preparation before installation](#)
- [8 WVC-700 micro inverter installation drawing](#)
- [9 Inverter installation steps](#)
- [10 Wiring Diagram WVC-700 Triple Phase](#)
- [11 Distribution network preparation tool](#)
- [12 Monitoring system distribution network instructions](#)
- [13 Android client configuration](#)
- [14 OS Client configuration](#)
- [15 KDM Monitoring System](#)
- [16 Documents / Resources](#)
- [17 Related Posts](#)

Features

- Maximum power point tracking
- Reverse power transmission
- I/O. fully isolated
- No installation, no maintenance
- Adaptive voltage/frequency
- Internal high precision meter
- App monitoring system
- Forward full-bridge topology

Specification

model	WVC-700	
Maximum input power	700Watt	
Output voltage mode	120/230V Auto switch	
PV Open circuit voltage	30-60VOC	
Operating voltage range	22-60V	
Starting voltage range	22-60V	
short-circuit current	32A	
Maximum working current	28A	
Output parameters	@120V	@230V
Output peak power	700Watt	700Watt
Rated output power	680Watt	680Watt
Output current	5.9A	3.05A
AC voltage range	80-160VAC	180-280VAC
AC frequency range	48-51Hz/58-61Hz	48-51Hz/58-61Hz
Power factor	>95%	>95%
Number of branch connections.	6PCS Single	12PCS Single
Output efficiency	@120V	@230V
Static MPPT efficiency	99.5%	99.5%
Max output efficiency	95%	95%
Loss of power at night	<0.5W	<0.5W
Total current harmonics	<5%	<5%


Appearance and technical features

Temperature range	-40°C to +65°C
Size L×W×H	283mm×200mm×41.6mm
Net amount	1.56kg
Waterproof grade	Ip65 NEMA3R
Heat dissipation mode	Self-cooling
Communication mode	433MHz/WiFi
Power transmission mode	Reverse transmission, Load priority
monitoring system	Mobile phone APP Browser
Electromagnetic Detection	EN61000-6-1:2007 EN6100-6-3:2007+A1:2011+AC:2012
Power Grid standard	EN50549-1 EN 50549-2 NBR 16149:2013 UL1741
Power grid detection	IEC/EN 62109-1 IEC/EN 62109-2 IEC 62116 IEEE 1547
Certificate	CE ETL INMETRO Patented technology

Packing weight

Specifications	Each Packing	Box 5PCS
weight	2.8 G	14 G
Size	342×240×115mm	440×380×260mm

System diagram

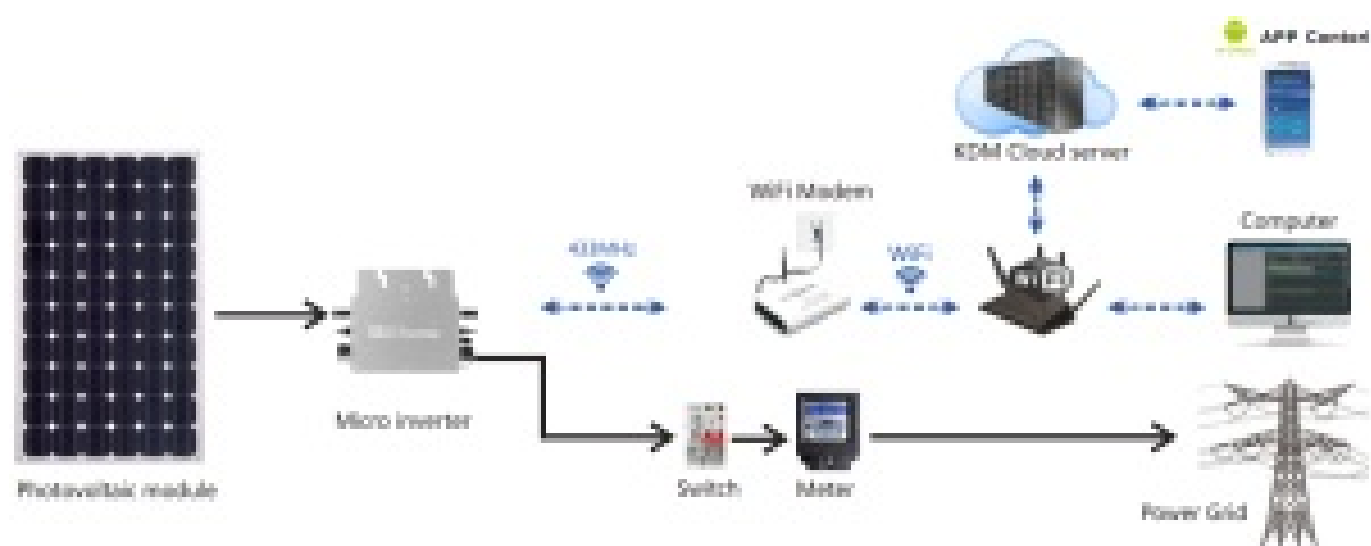

Description of the connector and cable core of the micro inverter



Note: You can purchase a professionally customized AC bus with a T-type connector.

⚠ Use this AC bus as the AC bus for each branch. Connect it hand in hand to form a modular micro-inverter branch wiring system.


LED indicator function of micro inverter

1. **Red light is on**—The micro-inverter is powered on, the red light is on, and the equipment is ready to work;
2. **Red light flashes**—The micro-inverter is fully prepared and enters the delayed startup state;
3. **Flashing green**—MPPTMaximum power point search status;
4. **Green light is on**—MPPTMaximum power point locked state;
5. **The green light turns red**—**a.** island protection; **b.** Frequency protection; **c.** AC over/under-voltage protection; **d.** DC voltage over and under voltage protection; **e.** fault f. software shutdown;

Normal working indicator flashing process:

Connect the micro-inverter to the AC and DC terminals, and then turn on the power the red light will be on for 3 seconds — the red light will flash for 30 seconds, the green light will flash quickly (MPPT maximum power point search)— The green light is on, (MPPT lock).

Appearance description of micro inverter

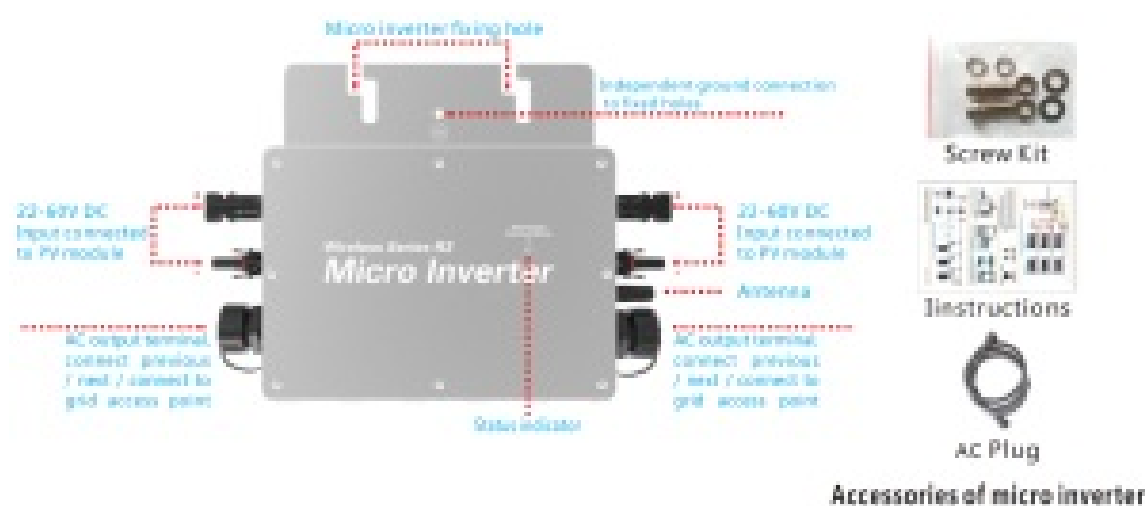

Preparation before installation

1. Please install Kaiden micro inverter series products as shown in the following figure.
2. Please note that only qualified personnel can install and / or replace Kaideng micro-inverters.
3. Before installing or using Kaideng Micro Inverter, please read all instructions and technical instructions and the warning mark system and photovoltaic array on Kay Micro inverter.

4. When installing the inverter handshake cable, please plan that your AC branch circuit cannot exceed the current limit, so that the maximum number of micro-inverters in each branch can be reasonably allocated.

Inverter model	Number of branches
WVC-295	30PCS
WVC-300	30PCS
WVC-350	25PCS
WVC-600	15PCS
WVC-700	12PCS
WVC-1000	10PCS
WVC-1200	8PCS
WVC-1400	6PCS
WVC-1600	5PCS
WVC-2000	5PCS
WVC-2400	3PCS
WVC-2800	3PCS


***Each region may be different. Please refer to local requirements to define the number of micro-inverters per branch in your area**

5. Implement all national electrical codes (NEC), ANSI / NFPA 70 in accordance with all local electrical codes and all relevant regulations.
6. Please do not try to repair Kaideng micro-inverter. It does not contain user-serviceable parts. If it fails, please

contact Kaideng customer service to obtain the ID number and start the replacement process. Tampering or opening the Kaideng micro inverter will invalidate the warranty.


7. Please make sure that the installation operation is performed before the AC power is disconnected, and do not install the kaideng micro-inverter with power on.
8. After the installation of the power station is completed, please install a ground wire on the photovoltaic support, install and use a lightning protection and / or surge suppression equipment protection system in the AC junction box. It is very important to have a switch device that automatically protects against lightning strikes and surges.
9. In addition to Kaideng Energy's WVC series micro-inverters, you must also purchase photovoltaic brackets / AC boxes / electrical cables and other related materials. The current of each channel of the WVC series micro-inverter -rs at the branch of the installed circuit cannot exceed 40 Amp, if the rated current is exceeded, it may lead to an unsafe factor.
10. Check if you still have the following related equipment: AC junction box, tools: screwdriver, wire cutter, voltmeter, torque wrench, socket and wrench for installing hardware, etc.

WVC-700 micro inverter installation drawing

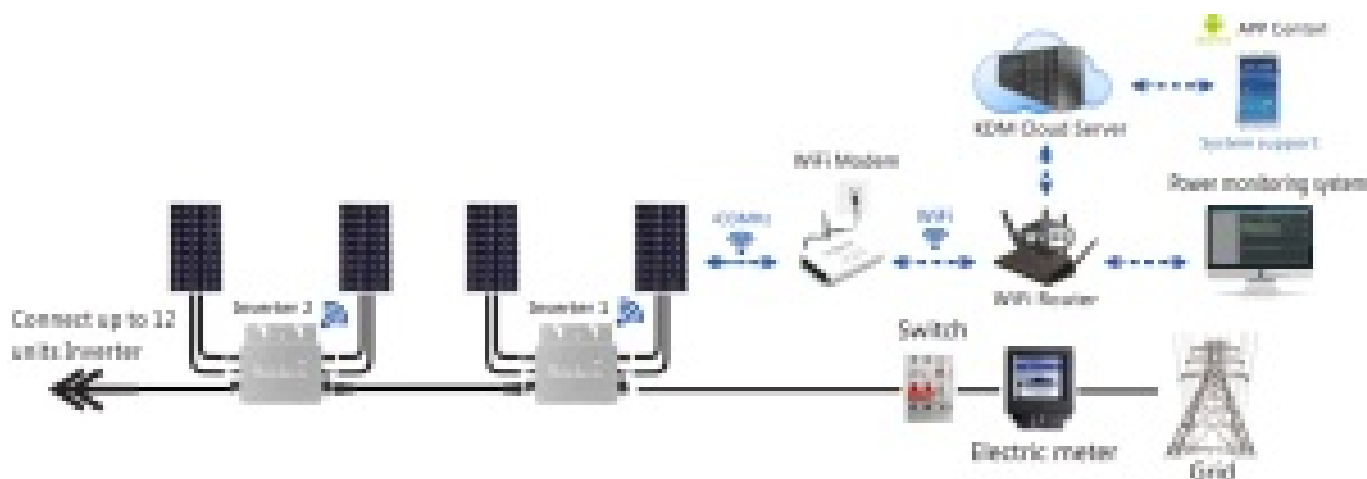


Inverter installation steps


- **Step 1** Install the inverter on the bracket of the photovoltaic panel with the screws provided with the machine, as shown in the following figure:

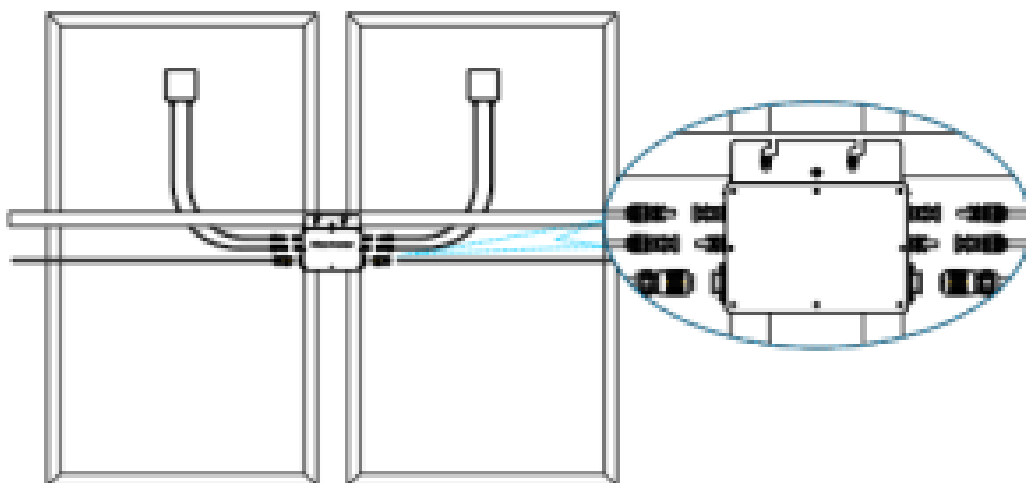


- **Step 2** Connect the positive and negative poles of the DC connection MC4 plug on the photovoltaic board to the DC input terminal of the inverter, as shown below:

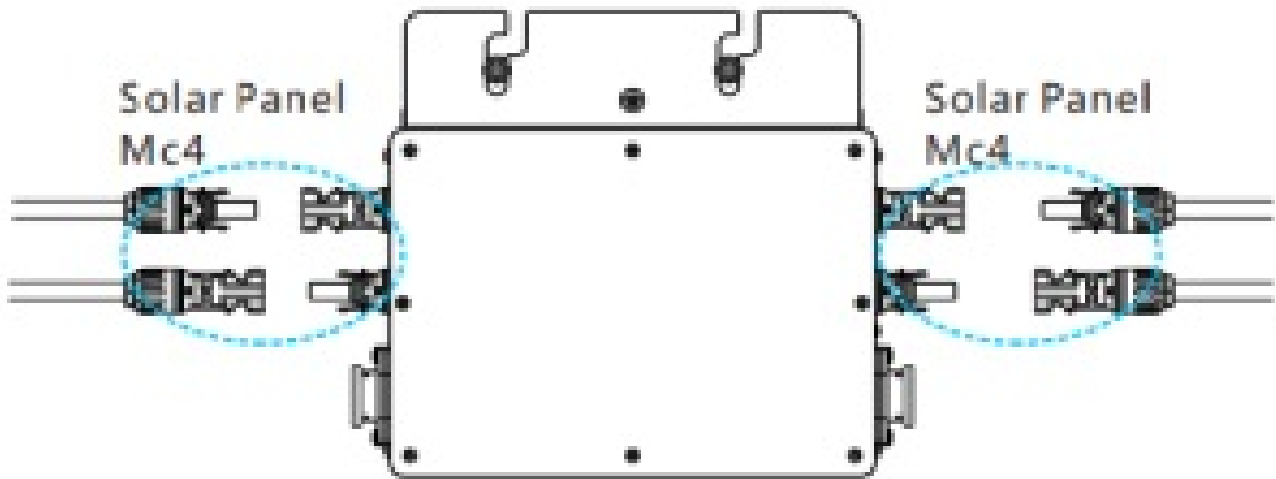

- **Step 3** Open the waterproof cover of the AC output connector of the inverter and connect the AC cable to the AC waterproof plug. The connection method is as shown in the plug connection diagram:

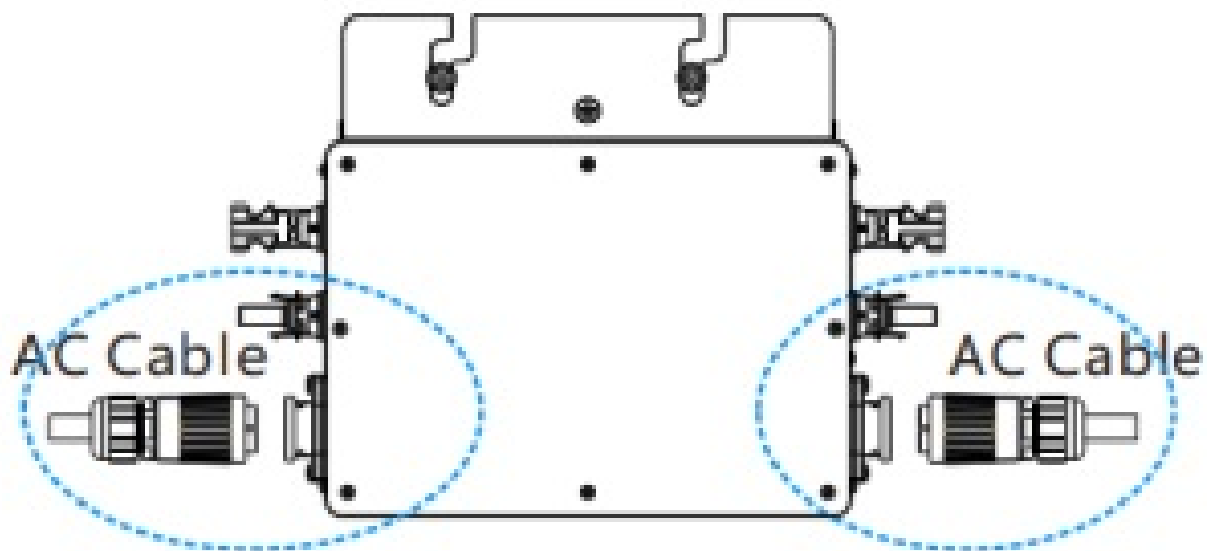

- **Step 4** Connect the AC output cable to the AC main cable;
- **Step 5** Repeat steps 1 to 3, install and connect all inverters;
- **Step 6** Connect the AC main cable to the utility grid to start your green energy journey.

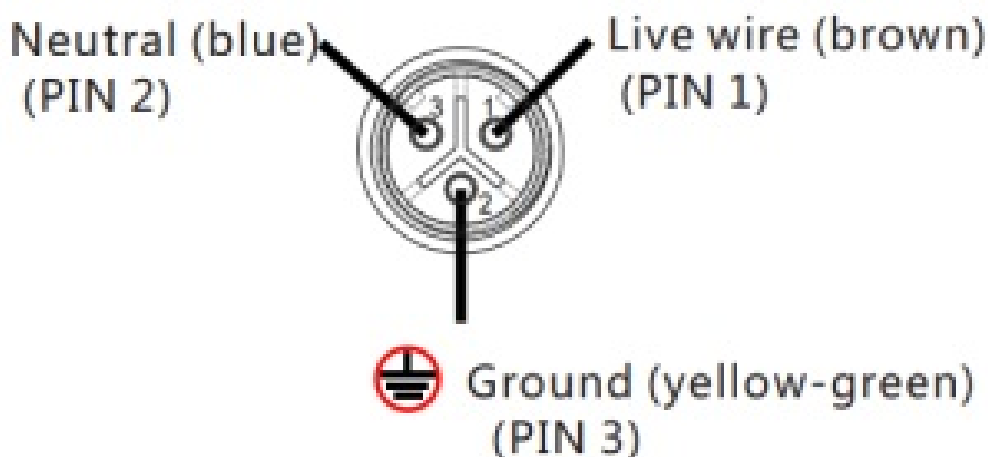


Note: Before installing WVC series micro inverter products, please read this manual and pay attention to the

installation details.

This manual contains important instructions that should be followed when installing and maintaining Reduce the risk of electric shock and ensure safe installation and operation of Kaideng Micro Inverters, Always follow the following safety symbols present in this document to indicate hazardous conditions and important safety Instructions.

Wiring Diagram WVC-700 Triple Phase

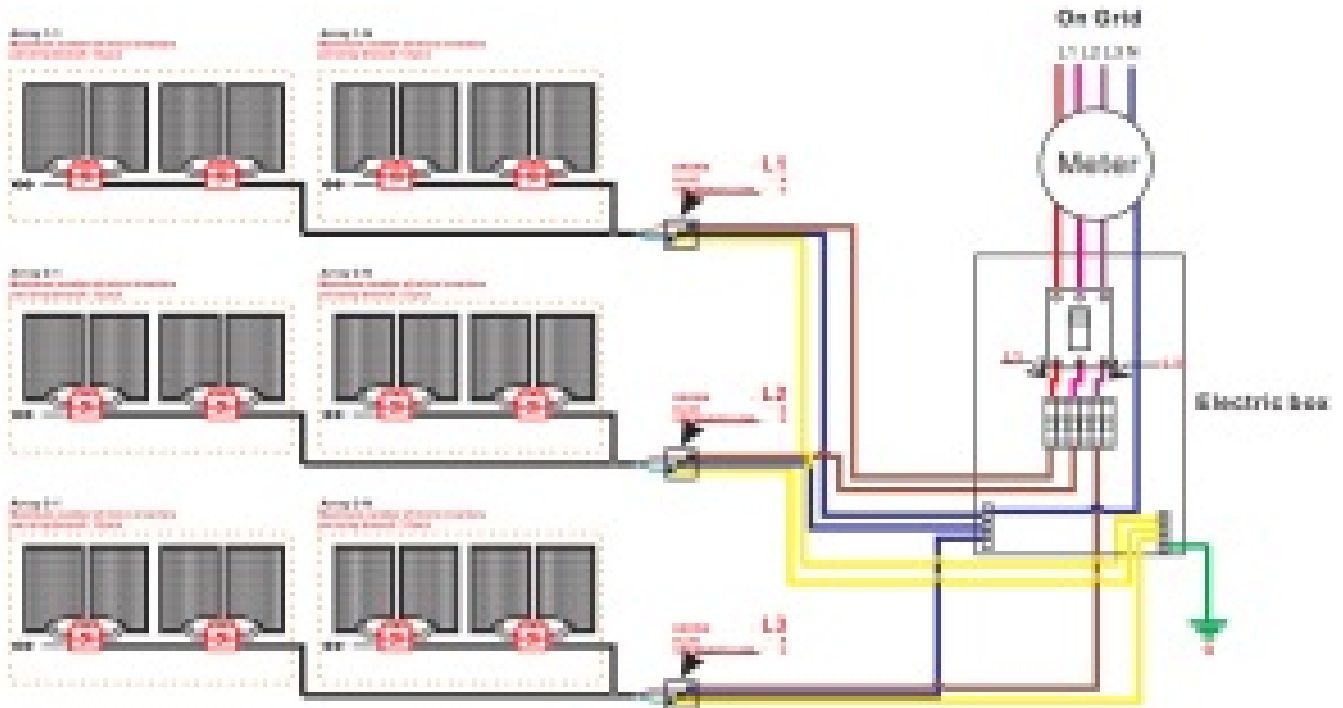

Distribution network preparation tool

When installing the KDM monitoring system, it is necessary to configure the KDM monitoring system in advance. Please use the two-dimensional scanning function to download and install the Easy Link network distribution tool.

(IOS SYSTEM Download Password:Mxchip)

Android



IOS



Monitoring system distribution network instructions

Press the reset button (A-1), release the button (A-2) when the indicator light flashes quickly, and operate in the Easy Link interface of the mobile phone. (Please explain the parameters below for Android and IOS) When the network configuration is completed, the Re-day and Link lights of the collector will become a constant light display (A-3)



Android client configuration

Connect the wireless network of your mobile phone to your home wireless signal source and open the Easy Link client B-1, fill in the wireless SSID and password in the software. When the collector is in the (A-2) state, click the send command button B-2, The system will automatically configure the network until the data string is received, and the network configuration is successful (B-3).



OS Client configuration

Open the Easy Link client, click “+” in the upper right corner C-1 to create network configuration settings and fill in the SSID and password, and select the mode as “Easy Link AWS”. When the collector flashes quickly as shown in Figure(A-2), click “Start Easy Link AWS Mode” button is like C-2. When the distribution network receives the module data and returns C-3. Click “Confirm” to complete the network configuration.



KDM Monitoring System


Ready to work:

Install the “KDM Monitoring System” tool on your Android Phone Download: <http://jzi6.cn/MiTp6q> (You can scan the QR to Download)


Note: This application only supports Android. If you have an Iphone, please operate in your browser and log in to the website: kdm.kaidengdg.com




Create account

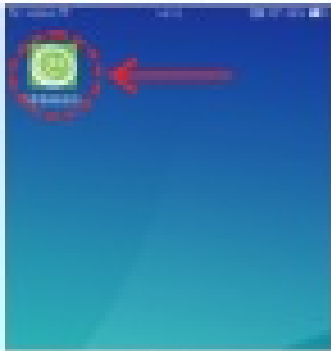

(D-1)

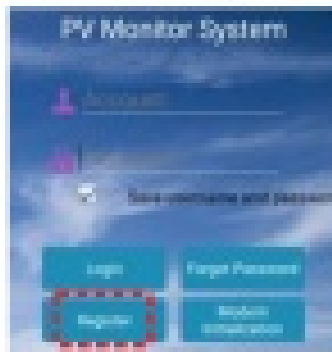

(D-2)

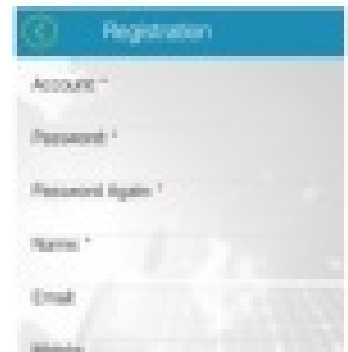


(D-3)


Open KDM software D-1, first use KDM monitoring system, please click Register D-2, register KDM account and save D-3

ADD Station


After logging account, click “Add Station” Like Figure E-1, fill in the Information and fill in the 8-digit code on the back of the Modem into the corresponding items. For example, E-2. For the electrical box option, please select “None”, and fill in “1” “Figure E-3

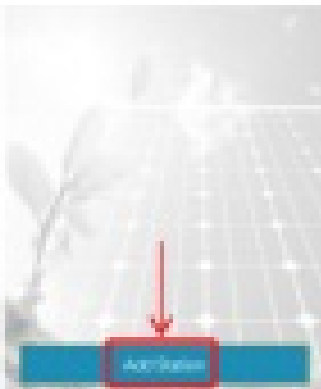

(E-1)

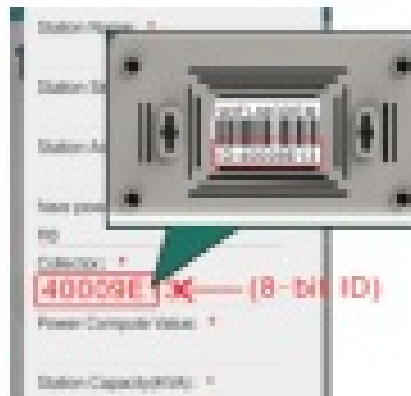

(E-2)

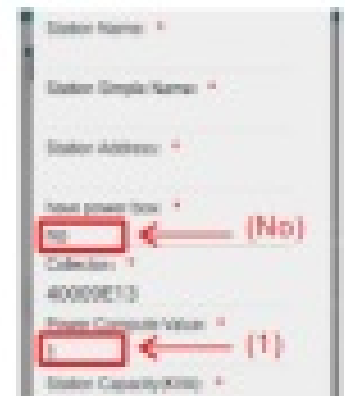

(E-3)


ADD Inverter

When the creation of the power station is completed, the page will automatically jump to the interface for adding an inverter (make sure the inverter has been installed correctly), fill in the 8-digit ID on the inverter and click Add such as F-1, after the addition is completed You can return to query the working status of the inverter F-2 and view the basic operating status of the power station F-3.



- The Wi-Fi modem changes its working mode (press and hold the reset button until the following display appears): TCP/IP mode: Release the Re-day indicator from “off→on→off”; Internet of Things mode: Release the Re-day indicator from “off→on”;

Documents / Resources

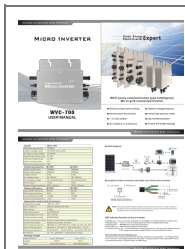

[KAIDENG WVC-700 WVC Series Communication type Intelligence Micro grid-Connected Inverter](#) [pdf] User Manual

WVC-700, WVC Series, Communication type Intelligence Micro grid-Connected Inverter