



KALDEWEI 4014 Comfort Level Plus Waste and Overflow Instruction Manual

[Home](#) » [KALDEWEI](#) » KALDEWEI 4014 Comfort Level Plus Waste and Overflow Instruction Manual 


KALDEWEI 4014 Comfort Level Plus Waste and Overflow Instruction Manual




Contents

- [1 Installation Instruction](#)
- [2 Support](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)


Installation Instruction

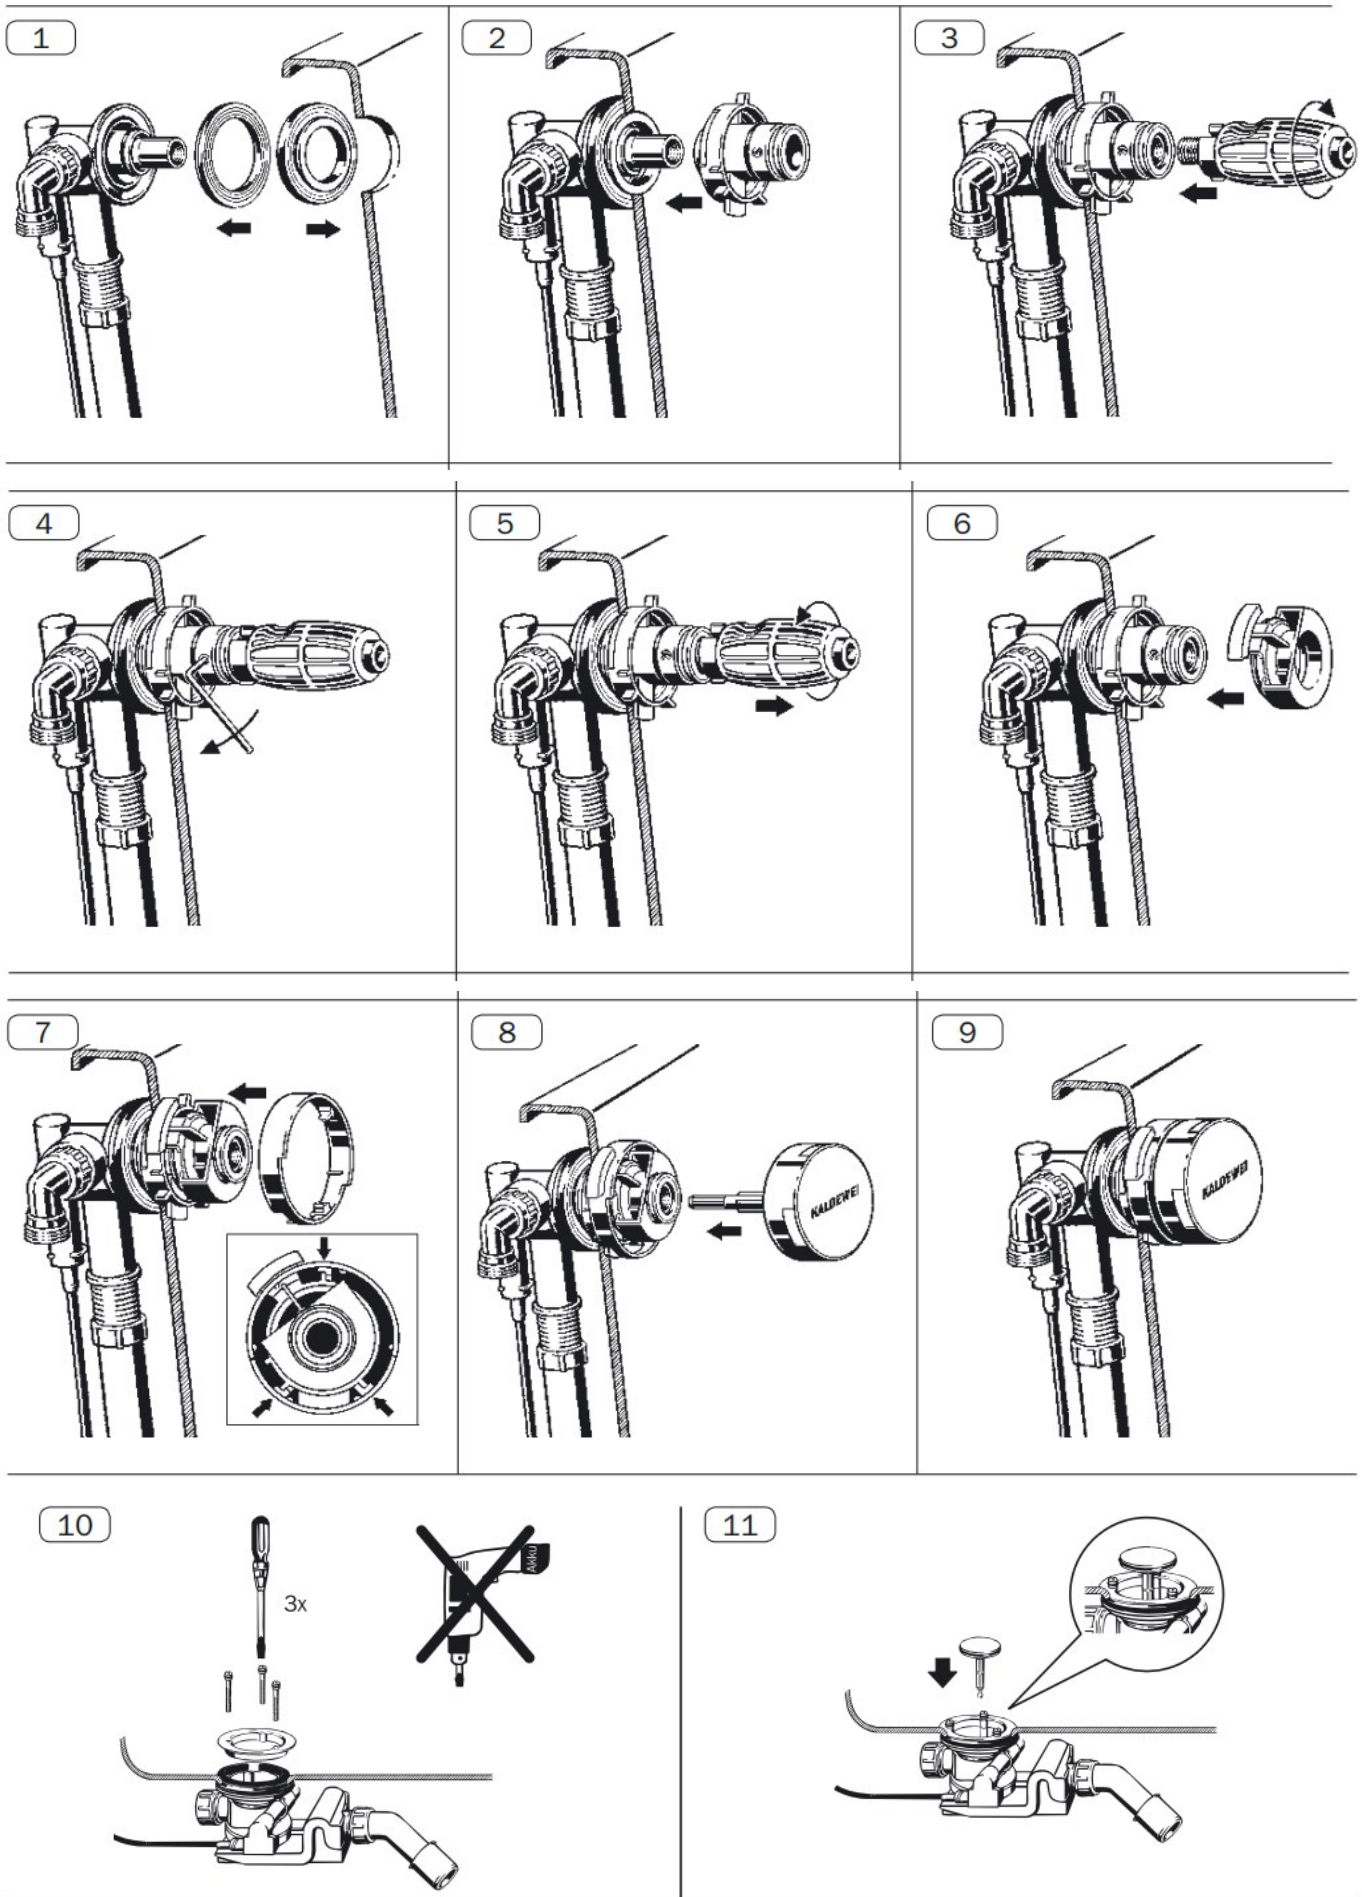


12

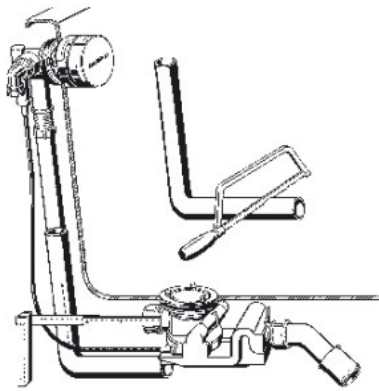


13

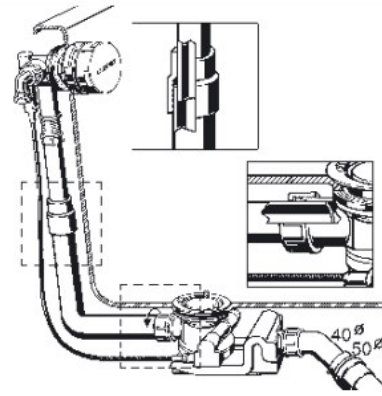


14

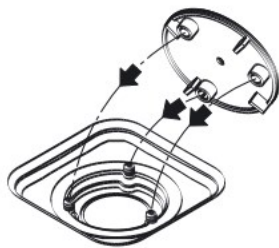

15

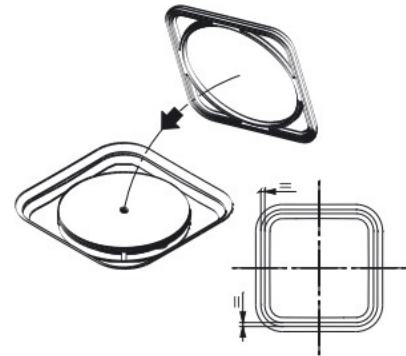


16

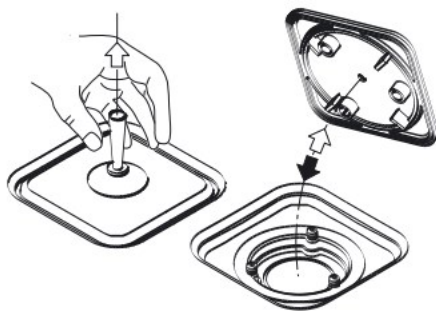

17



18

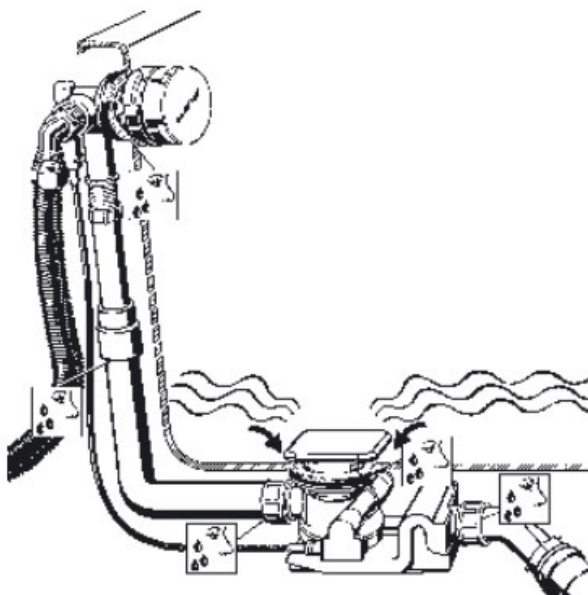



For the model 4014 a pipe interrupt or is necessary.

Support

Franz Kaldewei GmbH & Co. KG
 Beckumer Str. 33-35
 59229 Ahlen
Tel. +49 2382 785 0
Fax +49 2382 785 200
Internet: www.kaldewei.com

Documents / Resources

	KALDEWEI 4014 Comfort Level Plus Waste and Overflow [pdf] Instruction Manual 4014, Comfort Level Plus Waste and Overflow, Comfort Level Plus, Level Plus, Level Plus Waste and Overflow, Waste and Overflow
--	--

References

-  [KALDEWEI | KALDEWEI](#)