



KALORIK TO 50665 2 Slice Rapid Toaster with LCD Display User Manual

[Home](#) » [KALORIK](#) » KALORIK TO 50665 2 Slice Rapid Toaster with LCD Display User Manual 

Contents


- 1 KALORIK TO 50665 2 Slice Rapid Toaster with LCD Display
- 2 PARTS DESCRIPTION
- 3 TECHNICAL SPECIFICATIONS
- 4 IMPORTANT SAFEGUARDS
- 5 POLARIZED PLUG INSTRUCTIONS
- 6 SHORT CORD INSTRUCTIONS
- 7 BEFORE THE FIRST USE
- 8 OPERATING INSTRUCTIONS
- 9 RECIPES
 - 9.1 Avocado Toast
 - 9.2 Creamed Honey Butter Cinnamon Toast
 - 9.3 Herb Cream Cheese Toast
 - 9.4 Welsh Rarebit Egg Toast
- 10 CLEANING AND MAINTENANCE
 - 10.1 STORAGE
- 11 TROUBLESHOOTING
- 12 WARRANTY
- 13 Documents / Resources
 - 13.1 References
- 14 Related Posts

KALORIK®
Since 1930

KALORIK TO 50665 2 Slice Rapid Toaster with LCD Display



PARTS DESCRIPTION

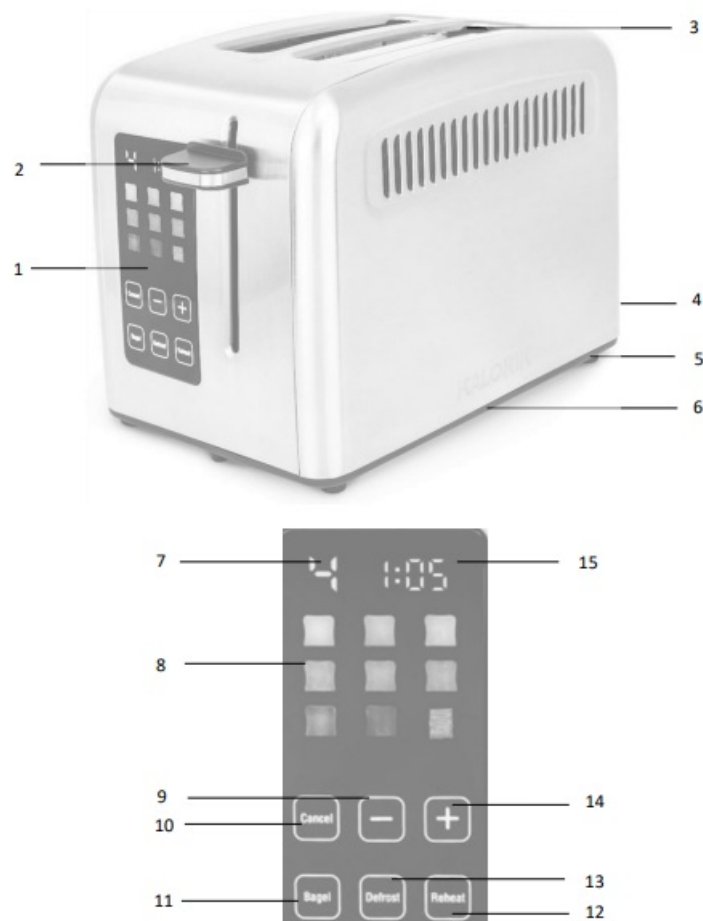

1. Control panel
2. Toasting lever
3. Toasting slots
4. Crumb tray
5. Rubber feet

6. Cord storage
7. Toast level
8. Toast Shades
9. Decrease button
10. Cancel button
11. Bagel function button
12. Reheat function button
13. Defrost function button
14. Increase button
15. Countdown timer

TECHNICAL SPECIFICATIONS

Model	Voltage	Wattage	Capacity
TO 50665 SS	120V~60Hz	1350W	2-slice

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before use.
2. Do not touch hot surfaces.
3. Warning – to protect against electric shock, fire, and personal injury:
 - do not immerse cord, plug or appliance in water or other liquids.
 - do not immerse the appliance or any electrical components in water or any other liquids.
 - always switch off and unplug the appliance before cleaning.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from wall outlet when not in use and before cleaning. Allow it to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Call our toll-free customer assistance number for information on examination, repair, or adjustment.
7. The use of accessory attachments, not recommended by the appliance manufacturer, may result in fire, electric shock, or injuries to persons.
8. Do not use outdoors or in a damp area.
9. Do not let power cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner or in a heated oven.
11. To turn off and disconnect, touch the cancel button, then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Oversized foods, metal foil packages, or metal utensils must not be inserted in the appliance as they may create a fire or risk of electric shock.
14. A fire may occur if the appliance is covered or touches flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.

15. Do not attempt to dislodge food, while the appliance is plugged in.
16. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electric shock.
17. Do not place any object made of the following materials in the appliance: paper, cardboard, plastic, metal.
18. Do not use metal utensils to remove lodged food, as this may result in personal injuries or damages.
19. Never leave the appliance unattended during operation.
20. Warning:
 - do not toast pastries with runny fillings or frosting.
 - do not toast torn slices of bread.
 - do not place buttered bread or wrapped food into the toaster.
 - do not toast small-sized bread, mini-baguettes, breadsticks, etc.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

WARNING:

DO NOT OPERATE THIS APPLIANCE, IF THE POWER CORD SHOWS DAMAGE OR IF THE APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

POLARIZED PLUG INSTRUCTIONS

This appliance is equipped with a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit into the polarized outlet only one way. If the plug does not properly fit into the outlet at first, reverse it. If it still does not fit, contact a competent qualified electrician. Do not attempt to modify the plug in any way.

SHORT CORD INSTRUCTIONS

A short power supply cord is provided to reduce the hazards of becoming entangled or tripping over a longer cord. Extension cords may be used if care is exercised in their use.

- The electrical rating of the extension cord should be at least that of the appliance. If the electrical rating of the extension cord is too low, it could overheat and burn.
- The resulting extended cord should be arranged, so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

BEFORE THE FIRST USE

- Remove all packaging materials and/or other transportation means.
- Check package content to verify it is complete and undamaged. Do not operate the appliance if the content is incomplete or appears damaged. Return it immediately.

Danger of suffocation!

Packaging materials are not toys. Always keep plastic bags, foils and foam parts away from babies and children. Packaging material could block airways and prevent breathing.

NOTE:

The appliance may produce an odor and/or emit smoke when switched on for the first time, as residues from the production process are eliminated. This is normal and does not indicate a defect or hazard.

Always use the appliance with the crumb tray.

- When using the appliance for the first time, it is recommended to operate it for at least twice on its highest temperature setting until no odor or smoke is present. During use, ensure ample ventilation.
- Let the appliance cool completely.
- Clean the appliance.

NOTE:

- The appliance has a rated power of 1350W. Before plugging it into the wall outlet, ensure that the electrical circuit is not overloaded with other appliances. This appliance should always be operated on a separate 120V ~ 60Hz wall outlet.
- Do not connect the appliance to a wall outlet unless it is fully assembled.
- Make sure no food or other objects are inside the toasting slots.
- Place the appliance on a clean, flat and heat resistant surface.
- When using the appliance on wooden furniture, use a heat resistant mat to protect the wood from damages. Ensure a minimum distance around the appliance of at least 4 inches to other objects, cupboards, and walls

WARNING:

- Only use accessories recommended by the manufacturer. Do not use any other accessories with the appliance.
- Do not cover or insert any objects into the air vents.
- Never let the power cord come in-contact with the housing of the appliance during use.
- Do not toast torn or large/thick pieces of toast/bagels, as it may become lodged in the toasting slots.
- Make sure the crumb tray is free of food residues and inserted properly. Never use the appliance without the crumb tray.
- Insert the plug into a wall outlet.
- Remove any protective wrappings from the toast/bagels before placing them in the Toasting Slots.

OPERATING INSTRUCTIONS

- Factors such as bread size, thickness, moisture or sugar content, temperature, shape, and most of all, height, can affect evenness of browning.
- If your bread gets squished during the toasting process, it may result in uneven browning, leaving some spots white and soft and some brown and crisp.
- If toasting multiple rounds of slices back-to-back, toasting time will be automatically adjusted/reduced for optimal results. This allows the user to still achieve the shade of their choice when the unit is already hot.
- This appliance can be used to toast plain, fresh or frozen toast/bagels and toaster pastries. Do not use for any other foods. Never place any objects in the toasting slots.
- After plugging the toaster, the screen will light up and off.
- Touch any button to turn screen on.
- Use the (+) and (–) buttons to choose between the 8 levels of toast, or the toaster pastry setting, according to your preferences on how dark you like your toast.

- Press the toasting lever down, until it locks in place to switch the heating elements on.
- If toasting frozen bread or bagel, select the Defrost function (this will add time to the timer shown on the screen) If toasting a bagel, select the bagel function. (This will add time to the timer shown on the screen.)

NOTE:

- The toasting lever will only remain in the downward position if the appliance is connected to an energized wall outlet.
- To stop or interrupt any cycle, touch the CANCEL button. The toasting lever and contents will pop up.
- Do not force the toasting lever up. Always use the CANCEL button to switch the appliance off.

Danger of burns!

Always pay special attention when placing or removing contents from the toasting slots. Toasted food and toasting slots get hot, pay attention when removing toasted food. Use suitable non-metal utensils if required.

- Once the toasting cycle is completed, the toasting lever and contents of the toasting slots will pop up and the CANCEL Button will turn off.

NOTE:

This appliance is equipped with a lift-up function to assist in removing toasts from the toasting slots. Pull the toasting lever upwards to lift the toasts for easier removal.

- Once you have finished using the appliance, remove the plug from the wall outlet.

TOASTING FUNCTION

- Place the bread slices into the toasting slots. Select the required browning level by selecting the desired shade using the (+) and (–) buttons.
- If toasting/heating a toaster pastry, select the toaster pastry setting.
- Press the toasting lever down, until it locks in place. The toasting cycle begins.
- Once the toasting cycle is completed, the toasting lever and contents will pop up.

BAGEL FUNCTION

Use the bagel function to toast bagels.

NOTE:

- Bagels must be cut in half. Do not force them into the toasting slots.
- When using the bagel function, place the inside of the bagel facing the outer sides of the appliance. Pay attention to the respective position of each bagel half in regard to each toasting slot.
- Place the bagel halves into the toasting slots. Select the required browning level using the (+) and (–) buttons.
- Press the toasting lever down and then touch the BAGEL Button, until it locks in place. The bagel cycle begins, and the BAGEL button will be illuminated.
- Once the bagel cycle is completed, the toasting lever and toasted bagel will pop up and button light will turn off.
- Place the bread slices into the toasting slots. Select the required browning level with the (+) and (–) buttons.
- Press the toasting lever down and then touch the DEFROST Button, until it locks in place. The DEFROST

button will be illuminated.

- Once the cycle is completed, the toasting lever and toasts will pop up and button light will turn off.

NOTE:

- Bagel and defrost functions can be combined by touching the BAGEL button before or after the DEFROST button.

REHEAT FUNCTION

Use the reheat function to reheat plain toast/bagels. For bagels, please also refer to the Bagel function.

- Place the bread slices into the toasting slots.
- Press the toasting lever down until it locks in place, and then touch the REHEAT Button. The REHEAT button will light up.
- Once the reheat cycle is completed, the toasting lever and toasts will pop up.

RECIPES

Avocado Toast

- 2 servings
- 15 minutes

Ingredients

- 2 slices of bread
- 1 large ripe avocado
- 1 to 2 tablespoons of salsa
- 2 eggs, soft boiled
- 1 teaspoon olive oil
- 1 lime, cut in half
- Salt & pepper, to taste

Equipment

- Small bowl

Directions

1. In a small bowl combine avocado, 1 tablespoon of salsa, and the juice of half a lime. Mash to combine, adding remaining tablespoon of salsa if desired. Season with salt & pepper to taste.
2. Toast bread to desired crispness.
3. Slice remaining lime half into wedges.
4. Generously spread avocado mix onto toast, top each slice with a soft-boiled egg, cut in half. Drizzle with olive oil and serve with a lime wedge.

Chef's Tip:

Top this savory toast with cotija or feta cheese for added flavor!

Creamed Honey Butter Cinnamon Toast

- 4 servings
- 5 minutes

Ingredients

- 4 ounces cream cheese, softened
- 2 ounces unsalted butter, softened
- 1 to 2 teaspoons of honey, extra for garnish
- ¼ teaspoon cinnamon
- 4 slices cinnamon swirl bread

Equipment

- Hand mixer

Directions

1. In a small bowl whip cream cheese and butter together until well combined and fluffy.
2. Add honey and cinnamon, mix until well incorporated.
3. Toast cinnamon swirl bread to desired level of crispness.
4. Generously spread with creamed honey butter, top with added honey if desired.

Chef's Tip:

Top cinnamon toast with apple slices for a crisp bite!

Herb Cream Cheese Toast

- 4 servings
- 10 minutes

Ingredients

- 4 slices of bread
- 1 to 2 radishes, sliced thinly
- 1 small cucumber sliced thinly 1 lemon, cut into wedges
- 1 teaspoon olive oil
- 4 ounces cream cheese
- ½ teaspoon fresh oregano, finely chopped
- ½ teaspoon fresh dill, finely chopped

- ½ teaspoon fresh mint, finely chopped
- ½ teaspoon fresh parsley, finely chopped
- 1 teaspoon fresh chives, finely chopped
- ¼ teaspoon lemon zest
- ¼ teaspoon white pepper

Equipment

- Hand mixer

Directions

1. In a small bowl add cream cheese, whip with hand mixer until light and fluffy.
2. Add in finely chopped herbs, pepper and lemon zest, and whip until well incorporated.
3. Toast bread to desired level of crispness.
4. Generously spread cream cheese mixture onto toast, top with radish and cucumber slices. Add a drizzle of olive oil and a lemon wedge.

Chef's Tip:

Switch out radish and cucumber for heirloom tomatoes for a summery twist!

Welsh Rarebit Egg Toast

- 4 servings
- 20 minutes

Ingredients

- 2 tablespoons butter
- 2 tablespoons all-purpose flour 1 teaspoon Dijon mustard
- 1 teaspoon Worcestershire sauce
- ½ teaspoon kosher salt
- ½ teaspoon white pepper
- ½ cup Guinness beer
- ¾ cup heavy cream
- ¾ cup sharp cheddar cheese 2 to 3 dashes Tabasco sauce 4 slices rye bread
- 8 slices bacon, fully cooked 1 beefsteak tomato, sliced
- 4 eggs, fried or poached Chives, minced

Equipment

- Small heavy bottom sauce pot

Directions

1. In a small heavy bottom pot, combine butter and flour. Cook for 2 to 3 minutes until lightly toasted.
2. Whisk in Dijon, Worcestershire sauce, salt and pepper. Whisking quickly, add in Guinness beer. Bring to a simmer and whisk in cream. Bring back to a simmer and whisk until smooth and bubbly.
3. Add in cheese and a few dashes of Tabasco, remove from heat, whisking continuously until all cheese is melted.
4. Toast rye bread until desired level of crispness is reached.
5. Layer a tomato slice, two slices of bacon, and an egg onto each slice of toast.
6. Generously top each layered toast with rarebit cheese sauce. Top with minced chives.

Chef's Tip:

This delicious beer-cheese sauce is excellent served with warm pretzels or fresh bread for a simple hearty snack!

CLEANING AND MAINTENANCE

Proper maintenance will ensure many years of service from your appliance. Clean the appliance after every use. The appliance contains no user serviceable parts and requires little maintenance. Leave any services or repairs to qualified personnel.

WARNING:

Always ensure the appliance is switched off. Disconnect the plug from the wall outlet before cleaning. Allow all parts of the appliance to cool down completely.

NOTE:

- Do not immerse the power cord with plug or appliance into water or any other liquids.
- Do not use abrasive cleaners, steel wool or scouring pads. Dry all parts thoroughly after cleaning, before using or storing the appliance. Ensure that no water enters the appliance housing.
- Clean the surface of the appliance with a damp cloth or sponge and a mild detergent.
- Do not use metal utensils to remove lodged food, as this may result in personal injuries or damages.
- To clean the crumb tray, remove it from the appliance completely. Dispose of any crumbs. Rinse the crumb tray with water and a little detergent. Dry thoroughly with a soft cloth. Reinsert the crumb tray carefully.

NOTE:

Dry all parts and surfaces thoroughly before use. Make sure that all parts and surfaces are completely dry before connecting the appliance to a wall outlet.

STORAGE

- Before storage, always make sure the appliance is completely cool, clean, and dry.
- The power cord can be stored in the cord's storage underneath the appliance.
- It is recommended to store the appliance in a dry place.
- Store the appliance on a stable shelf or in a cupboard. To avoid accidents, ensure that both the appliance and its power cord are beyond reach of children or pets.

TROUBLESHOOTING

Problem	Cause	Solution
The appliance is not working	Appliance not plugged in	Insert the plug into the wall outlet
	Wall outlet not energized	Check fuses and circuit breaker
The appliance heats up, but the button(s) do not light up	Damaged indicator(s)	Disconnect the appliance from the wall outlet and contact qualified personnel to check and repair the appliance
The appliance heats up, but the toasting lever does not stay down	Malfunctioning appliance	Disconnect the appliance from the wall outlet and contact qualified personnel to check and repair the appliance
The toasting lever is	Malfunctioning	Disconnect the appliance from
touched down but	appliance	the wall outlet and contact
the appliance does		qualified personnel to check
not heat up		and repair the appliance
Toast/bagels are ejected very quickly	Toasting lever not locked in place	Press the toasting lever down until it locks in place. Ensure the appliance is connected to an energized wall outlet
Toast/bagels are not ejected once the function cycle is completed	Damaged toasting lever Toast/bagels stuck in the toasting slots (torn/too thick/too large)	Disconnect the appliance from the wall outlet and contact qualified personnel to check and repair the appliance Disconnect the appliance from the wall outlet and allow it to cool down
		Remove toast/bagels with non-metal utensils
The appliance produces an odor and/or emits smoke	Residues from the production process are eliminated during first use	Operate the appliance for at least twice on its highest setting, with no food, until no odor or smoke is present

	Food type not suitable for toasting Browning level is too high	Touch the CANCEL Button to stop the cycle and remove the food from the toasting slots, using suitable non-metal utensils
	Malfunctioning appliance	Touch the CANCEL Button to stop the cycle and remove the toast/bagels from the toasting slots, using suitable non-metal utensils. Reduce the browning level for the next set Disconnect the appliance from the wall outlet and contact qualified personnel to check and repair the appliance
Frozen	The DEFROST Button	Place the frozen bread, bagels
bread/bagels/waffle	was not touched	or waffles into the toasting slots.
s are not toasted to	before the toasting	Press the Toasting Lever down
the desired level	cycle	and then touch the DEFROST
		Button to start a toasting cycle
		using the defrost function

WARRANTY

We suggest that you complete and return the enclosed Product Registration Card promptly to facilitate verification of the date of original purchase. However, the return of the Product Registration Card is not a condition of these warranties. You can also fill out this warranty card online, at the following address: www.KALORIK.com

This KALORIK product is warranted in the U.S.A. and Canada for 1 year from the date of purchase against defects in material and workmanship. This warranty is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance.

During this period, if the KALORIK product, upon inspection by KALORIK, is proven defective, it will be repaired or replaced, at Kalorik's option, without charge to the customer. If a replacement product is sent, it will carry the remaining warranty of the original product.

This warranty does not apply to any defect arising from a buyer's or user's misuse of the product, negligence, failure to follow KALORIK

instructions noted in the user's manual, use on current or voltage other than that stamped on the product, wear and tear, alteration or repair not authorized by KALORIK, or use for commercial purposes. There is no warranty for glass parts, glass containers, filter basket, blades and agitators, and accessories in general. There is also no warranty for parts lost by the user.

ANY WARRANTY OF MERCHANTABILITY OR FITNESS WITH RESPECT TO THIS PRODUCT IS ALSO LIMITED TO THE ONE YEAR LIMITED WARRANTY PERIOD.

Some states do not allow limitation on how long an implied warranty lasts or do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

If the appliance should become defective within the warranty period and more than 30 days after date of purchase, do not return the appliance to the store: often, our Customer Service Representatives can help solve the problem without having the product serviced. If servicing is needed, a Representative can confirm whether the product is under warranty and direct you to the nearest service location.

If this is the case, bring the product, or send it, postage prepaid by the user (all Kalorik customers are responsible for the initial shipment back to the warranty center), along with proof of purchase and a return authorization number indicated on the outer package, given by our Customer Service Representatives. Send to the authorized KALORIK Service Center (please visit our website at www.KALORIK.com or call our Customer Service Department for the address of our authorized KALORIK Service Center).

When sending the product, please include a letter explaining the nature of the claimed defect.

If you have additional questions, please call our Customer Service Department (please see below for complete contact information), Monday through Thursday from 9:00am – 5:00pm (EST) and Friday from 9:00am – 4:00pm (EST). Please note hours are subject to change.

If you would like to write, please send your letter to:

KALORIK Customer Service Department
Team International Group of America Inc.
16175 NW 49th Avenue
Miami Gardens, FL 33014 USA

Or call:

Toll Free: (+)1 888-521-TEAM / (+)1 888-KALORIK

Only letters can be accepted at this address above. Shipments and packages that do not have a return authorization number will be refused.


For questions please contact:

KALORIK Customer Service
Team International Group of America Inc.
16175 NW 49th Avenue
Miami Gardens, FL 33014 USA
Toll Free
(+)1 888-521-TEAM / (+)1 888-KALORIK

www.KALORIK.com

User manual content and recipes courtesy of Team International Group – Do not reproduce without consent of the authors – All rights reserved

Documents / Resources

 <p>KALORIK TO 50665 2 Slice Rapid Toaster with LCD Display</p>	<p>KALORIK TO 50665 2 Slice Rapid Toaster with LCD Display [pdf] User Manual</p> <p>TO 50665 2 Slice Rapid Toaster with LCD Display, TO 50665, 2 Slice Rapid Toaster with LCD Display, Toaster with LCD Display, LCD Display</p>
----------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- **K** [Kalorik | Where Innovation Finds a Home](#)
- **K** [Kalorik | Where Innovation Finds a Home](#)