

KANOMAX 3888 Handheld Particle Counter 6 Channel User Guide

Home » KANOMAX » KANOMAX 3888 Handheld Particle Counter 6 Channel User Guide 🖺





3888 Handheld Particle Counter 6 Channel **User Guide**

Contents

- 1 3888 Handheld Particle Counter 6
- Channel
- 2 Functions
- 3 Measurement
- 4 General Setting
- 5 Documents / Resources
 - **5.1 References**
- **6 Related Posts**

3888 Handheld Particle Counter 6 Channel

Include

- · Main unit
- · USB cable
- CD-ROM: USB driver, Remote software, User manual
- Li-ion battery x 2 (installed in the unit)
- · Zero filter with tubing
- · Inlet protective cap
- · AC adapter

Functions



Note: Please do not cover or insert anything into the threaded exhaust port on back of the instrument



Opens the menus to set the unit, calendar, data, sound, language and to display instrument information

Measurement setting

Opens the menu to set the mode, alarm, save, remote and temperature/humidity

Preset

Opens the menu to set or select up to 18 Presets

History

Views the historical data or measurements

ERROR Error


Tap the Error key to display an error description

■ Noifferential

Opens the Differential display on the Main screen

Purging

Prior to using the instrument in a clean environment such as cleanrooms, it is recommended to purge the instrument with the provided zero count filter.

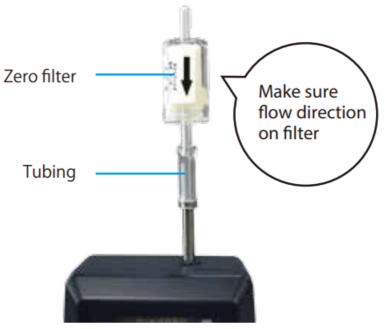

- 1. Attach the provided zero count filter to the inlet
- 2. Turn the power on and press the Start button. Perform a continuous measurement for approximately 15 minutes until the measuring count value is suitable for 10 seconds or more.
- 3. After measurement, remove the zero count filter from the inlet

Measurement

1. Select measurement mode



Measurement modes

Repeat

Repeats the measurement of configured sampling time and cycle

Single

Performs a measurement of set sampling time only once

Continuous

Continues a measurement until pressing the Stop button

Calculation

Calculates the average, standard deviation, maximum, and minimum after measurements

ISO

Performs measurements in accordance with ISO 14644

GB

Performs measurements in accordance with Chinese National Standard

2. Select measurement mode Set up location and sampli



Location

Sets measurement locations by number Ranges: from 1 to 99

Sampling time

Sets the sampling time of 1 cycle Ranges: from 6 sec to 99 min 59 sec

3. Start measurement



- ① Go to main screen by pressing Home button
- 2 Press start button to start measurement * Measurement starts after 10 seconds warm up time

General Setting

Select on the Main screen to set the unit, calendar, data, language, and sound



Unit

Select one of the following 3 options of units to reflect to the readings displayed on the Main screen and Measurement results.



Calendar

Set the date and time



Data

Confirms the information and perform operation on the entire measured data



Language

Selects a language from English, Japanese, Chinese, Spanish



Sound

Sets the operation sound ON/OFF



Information

Displays the instrument information Latest calibration date and firmware version



1.888.610.7664



Documents / Resources



KANOMAX 3888 Handheld Particle Counter 6 Channel [pdf] User Guide 3888 Handheld Particle Counter 6 Channel, 3888, Handheld Particle Counter 6 Channel, Particle Counter 6 Channel, Counter 6 Channel

References

• **Calcert**

Manuals+,